



# VARIABLE SPEED CONTROLLER

P.N. MAC-VSC1

**WIRING INSTRUCTIONS:** Variable Speed Controller plugs directly into the M3 Air Pumper Power. Red wire is connected to a constant power source and the ground source. Do not ground pumpers to chassis or common ground.

