

Cleaning:

- Do not use window cleaning fluids (Windex, 409, etc) or any solvents (gasoline, denatured alcohol, acetone, etc).
 - Never use abrasive cleaners, abrasive pads, or gritty cloths.
 - Never use razor blades, scrapers, squeegees, brushes, etc.
1. Thoroughly rinse Doors to float off dirt and mud.
 2. Using a soft cloth, or microfiber cloth, clean Doors with warm water and a gentle detergent. Baby shampoo or hand washing soap are recommended.
 3. To prevent water spots, use a chamois to blot Doors dry.

Liability Statement

SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warranted if item was not installed properly, misused, or modified.

Installing, adding, modifying, or fabricating any factory or aftermarket product to your ATV/UTV may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of certain products on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of the product. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you.

The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws and ordinances when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-855-743-3427



8:00am - 9:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

 
Read instructions and view illustrations before beginning.

Thank You


For Choosing


SUPERATV.COM[®]

Item	Description	Item	Description
A	Left Door	F	Right Bracket
B	Right Door	G	Right Striker
C	Left Male Hinge	H	Left Striker
D	Right Male Hinge	J	Clamp x 6
E	Left Bracket	K	Gas Strut x 2

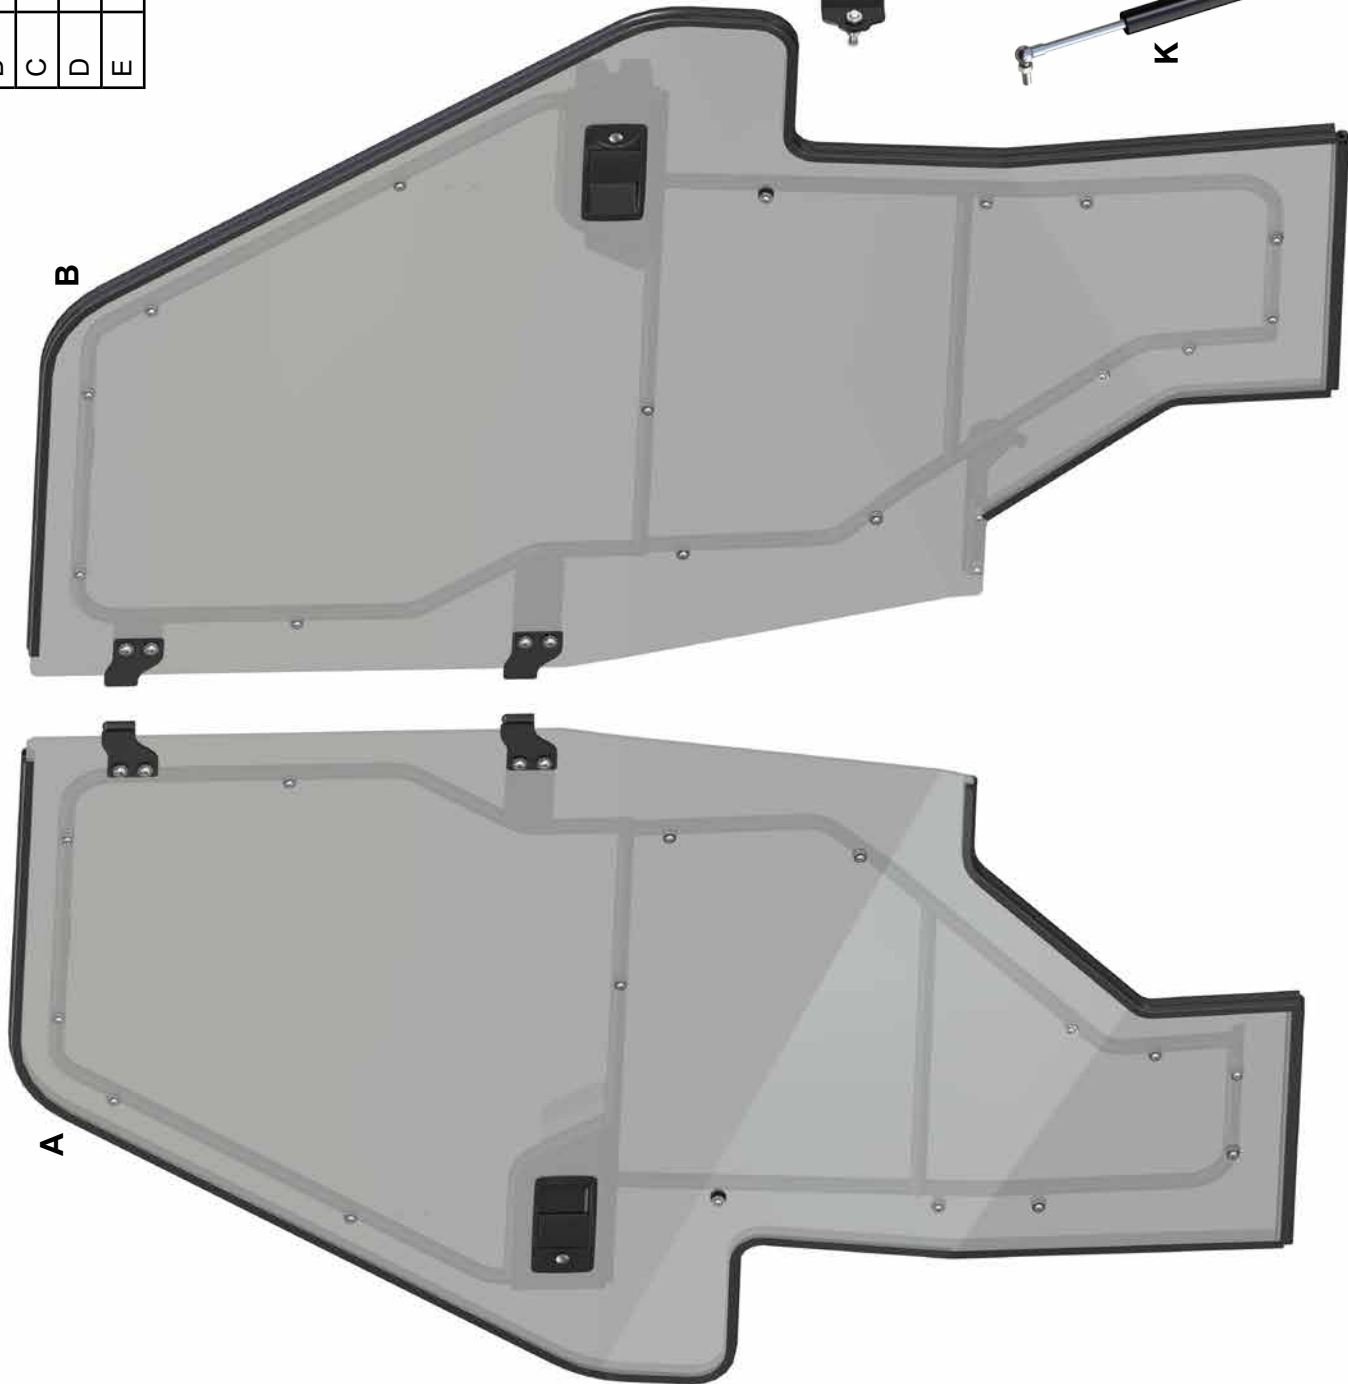

Kit contents continued

 
4x  M5-.80 Nylock Nut


4x  M8-1.25 Nylock Nut

4x  M10-1.50 Nylock Nut

4x  M12-1.75 Nylock Nut

8x  M8-1.25 Cap Nut

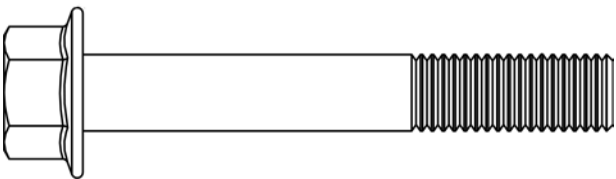
4x  M10-1.50 x 70mm FHCS Lg.

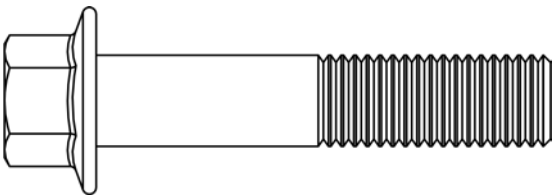 
4x  M12-1.75 x 60mm FHCS Lg.

 
12x  M6 Flat Washer


8x  M8 Flat Washer

4x  Spacer

4x  M5-.80 x 20mm Lg. FHCS


12x  M6-1.0 x 20mm Lg. BHCS

8x  M8-1.25 x 25mm BHCS Lg.

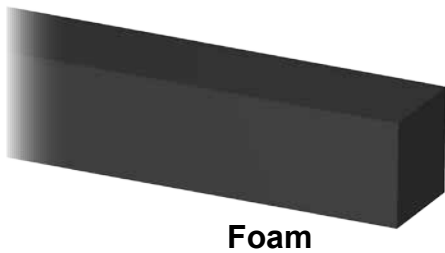 


removal

 - Remove stock Door, Hinges, and Panel.

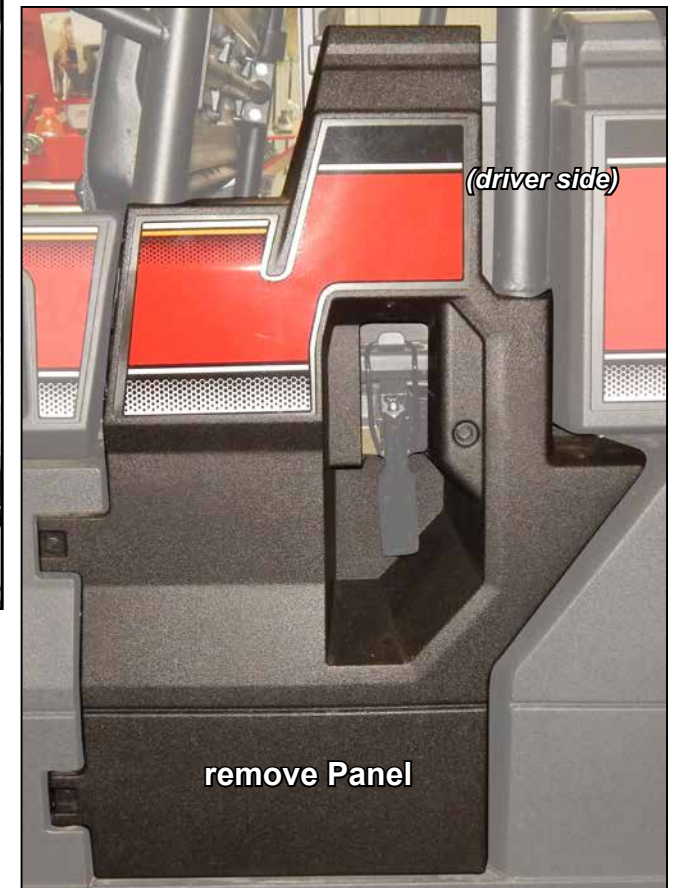

removal continued



 
- Remove stock Strikers and hardware shown.

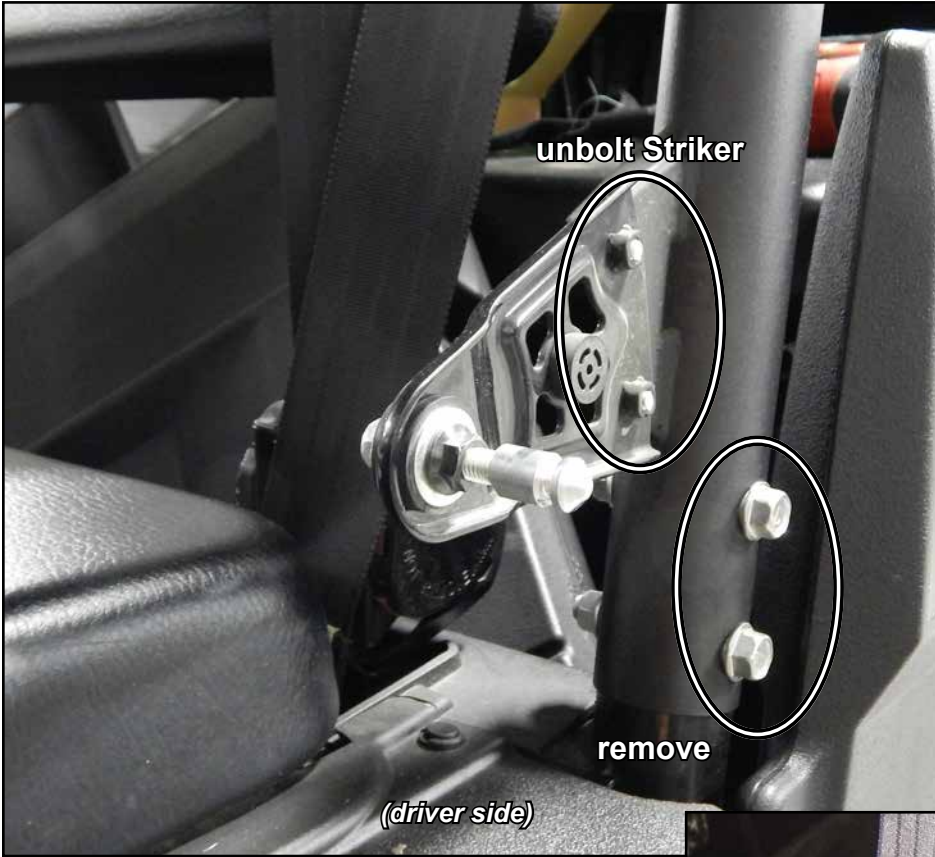

- Repeat steps for opposite side.

Front installation *Do not tighten any hardware completely unless noted.*


 
 
 
- Install Clamps (J) to Left Bracket (E) with hardware shown.

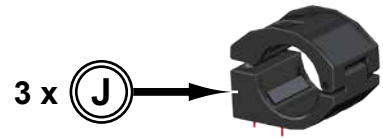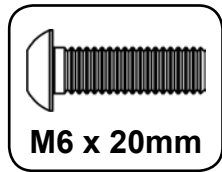


- Install Left Male Hinge (C) to Left Bracket (E) with hardware shown.

- Install Foam to Left Bracket (E) in locations shown.

    
- Remove hardware from Clamps and place in position shown.

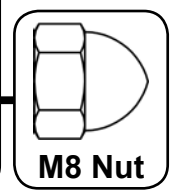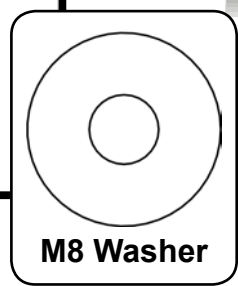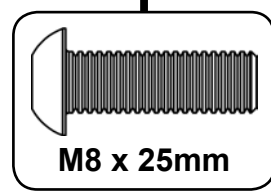

 - Install Left Striker Bracket (H) with hardware shown.

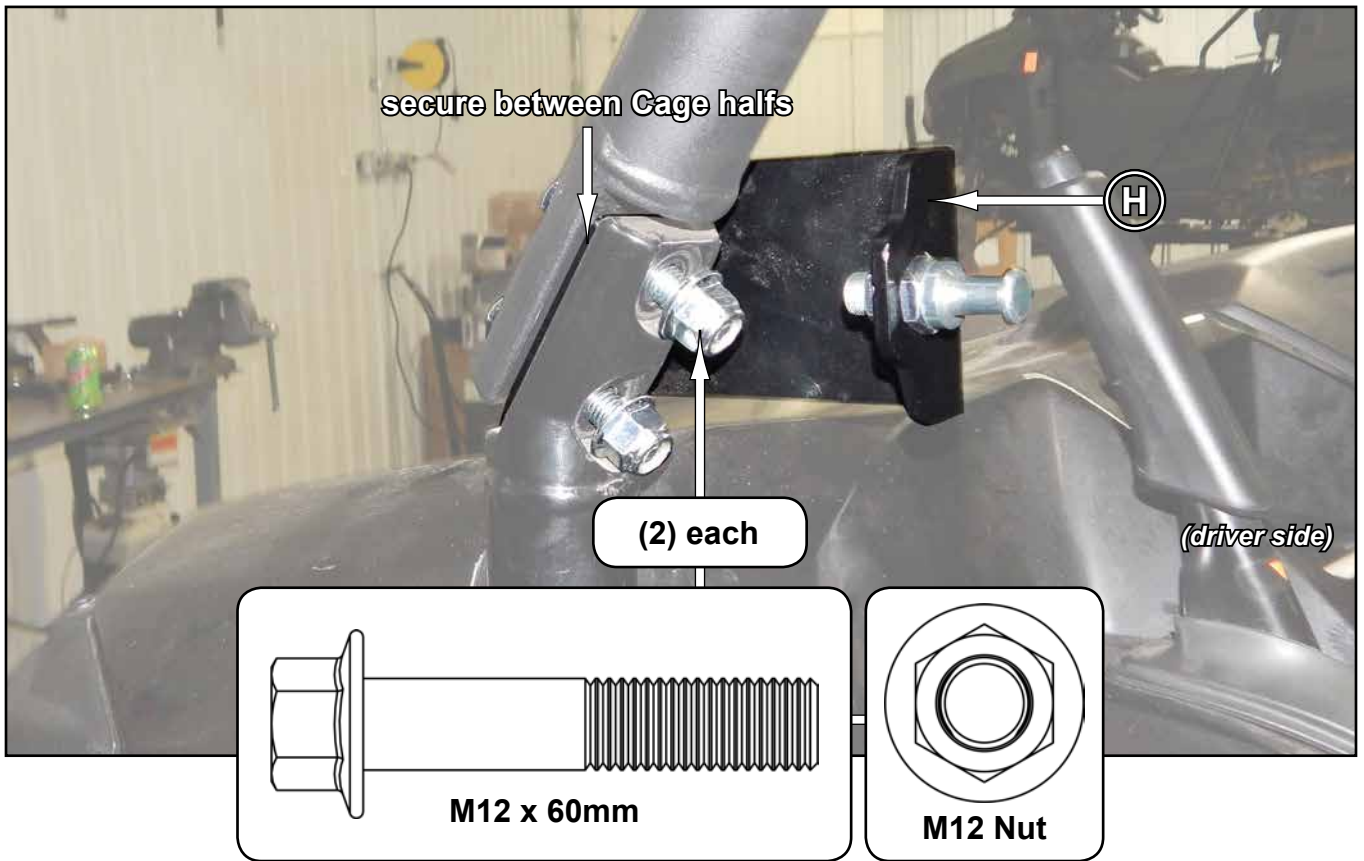

 - Place Left Bracket assembly on machine and secure Clamps (J) to cage; use previously removed Clamps (J) hardware.
- Secure lower portion of Left Bracket (E) to Cage with hardware shown.

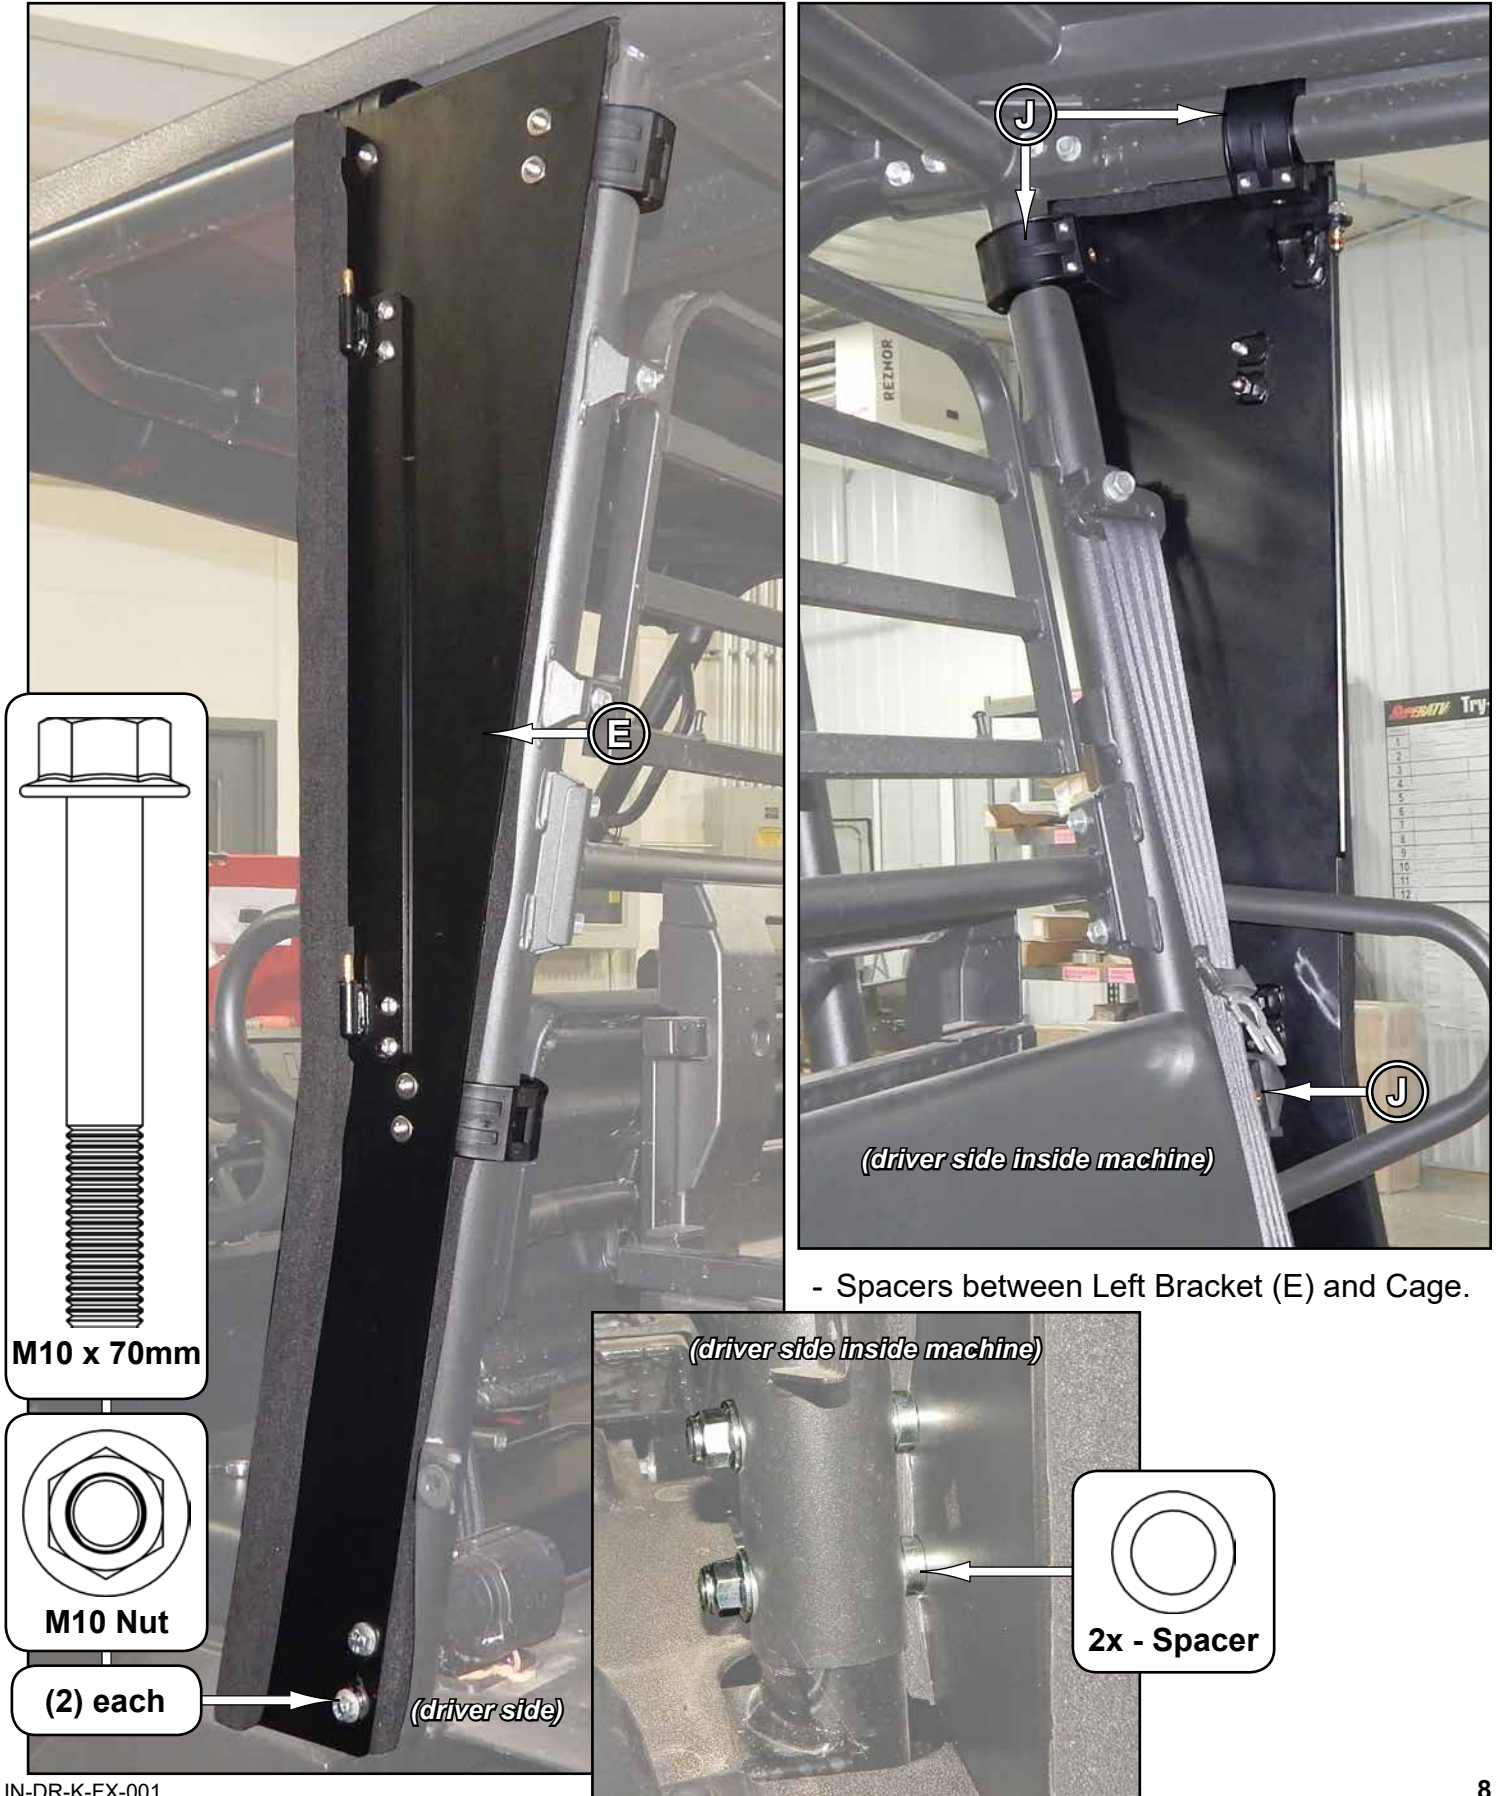


- Install Left Door (A) onto Left Male Hinge (C).



- Close Door and engage Latch.
- Align to machine and tighten all hardware completely.




 - Install Gas Strut (K) to Left Door (A) and Left Male Hinge (C) with hardware shown.

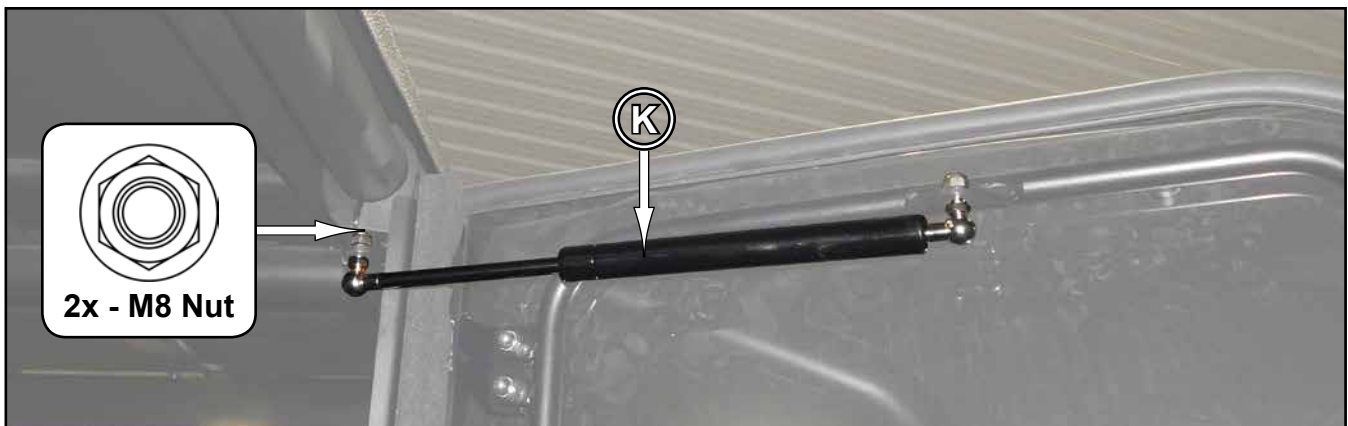


- Repeat steps for opposite side.

 Mirror →

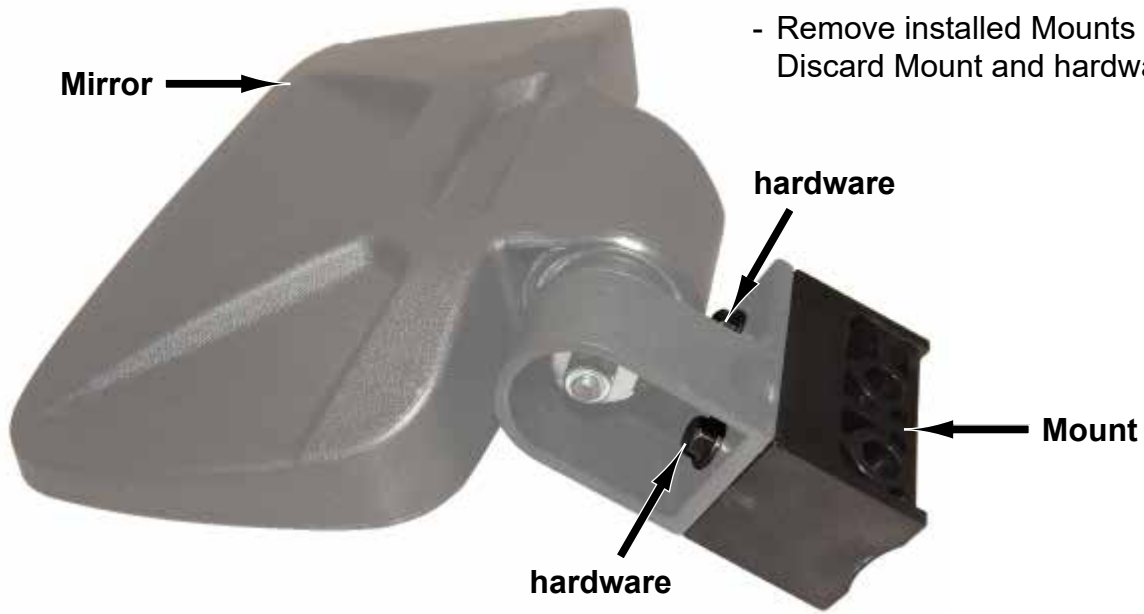


- Remove installed Mounts on Mirrors.
Discard Mount and hardware.

 
- Install Mirrors to Doors with hardware shown.

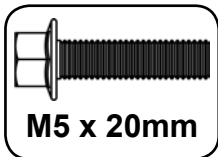


M5 x 20mm

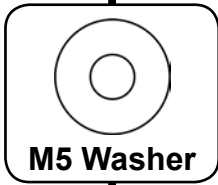 


M5 Washer

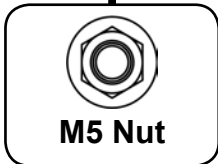 

M5 Nut

 

2 each

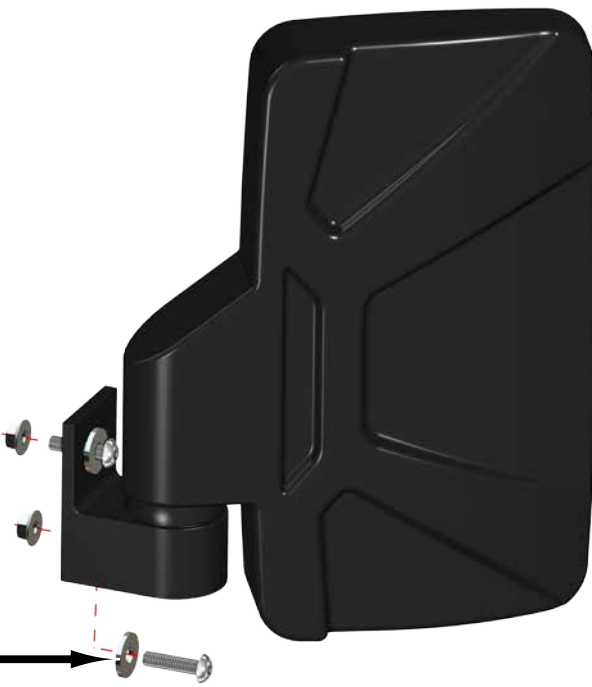 

Cargo Bed cannot be raised when vehicle is configured for 6 passenger seating.

Cleaning:

- Do not use window cleaning fluids (Windex, 409, etc) or any solvents (gasoline, denatured alcohol, acetone, etc).
 - Never use abrasive cleaners, abrasive pads, or gritty cloths.
 - Never use razor blades, scrapers, squeegees, brushes, etc.
1. Thoroughly rinse Doors to float off dirt and mud.
 2. Using a soft cloth, or microfiber cloth, clean Doors with warm water and a gentle detergent. Baby shampoo or hand washing soap are recommended.
 3. To prevent water spots, use a chamois to blot Doors dry.

Liability Statement

SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warrantied if item was not installed properly, misused, or modified.

Installing, adding, modifying, or fabricating any factory or aftermarket product to your ATV/UTV may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of certain products on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of the product. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you.

The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws and ordinances when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-855-743-3427



8:00am - 9:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

Read instructions and view illustrations before beginning.



Thank You

For Choosing


SUPERATV.COM[®]

Rear Kit


Item	Description	Item	Description
L	Left Door	T	Left Bracket
M	Right Door	U	Right Bracket
N	Bottom Seat Bracket x 2	V	Left Striker
P	Left Male Hinge	W	Right Striker
Q	Right Male Hinge	X	Z-Clamp x 8
R	Left Seat Bracket	K	Gas Strut x 2
S	Right Seat Bracket	J	Clamp x 6

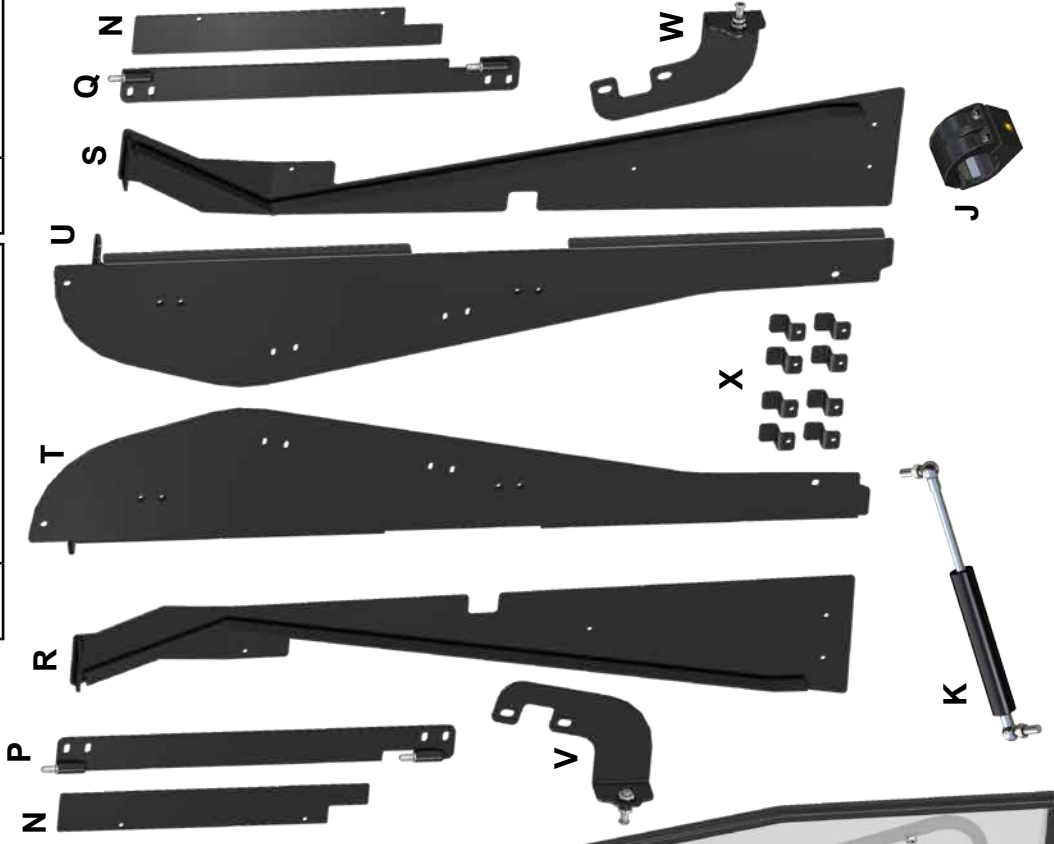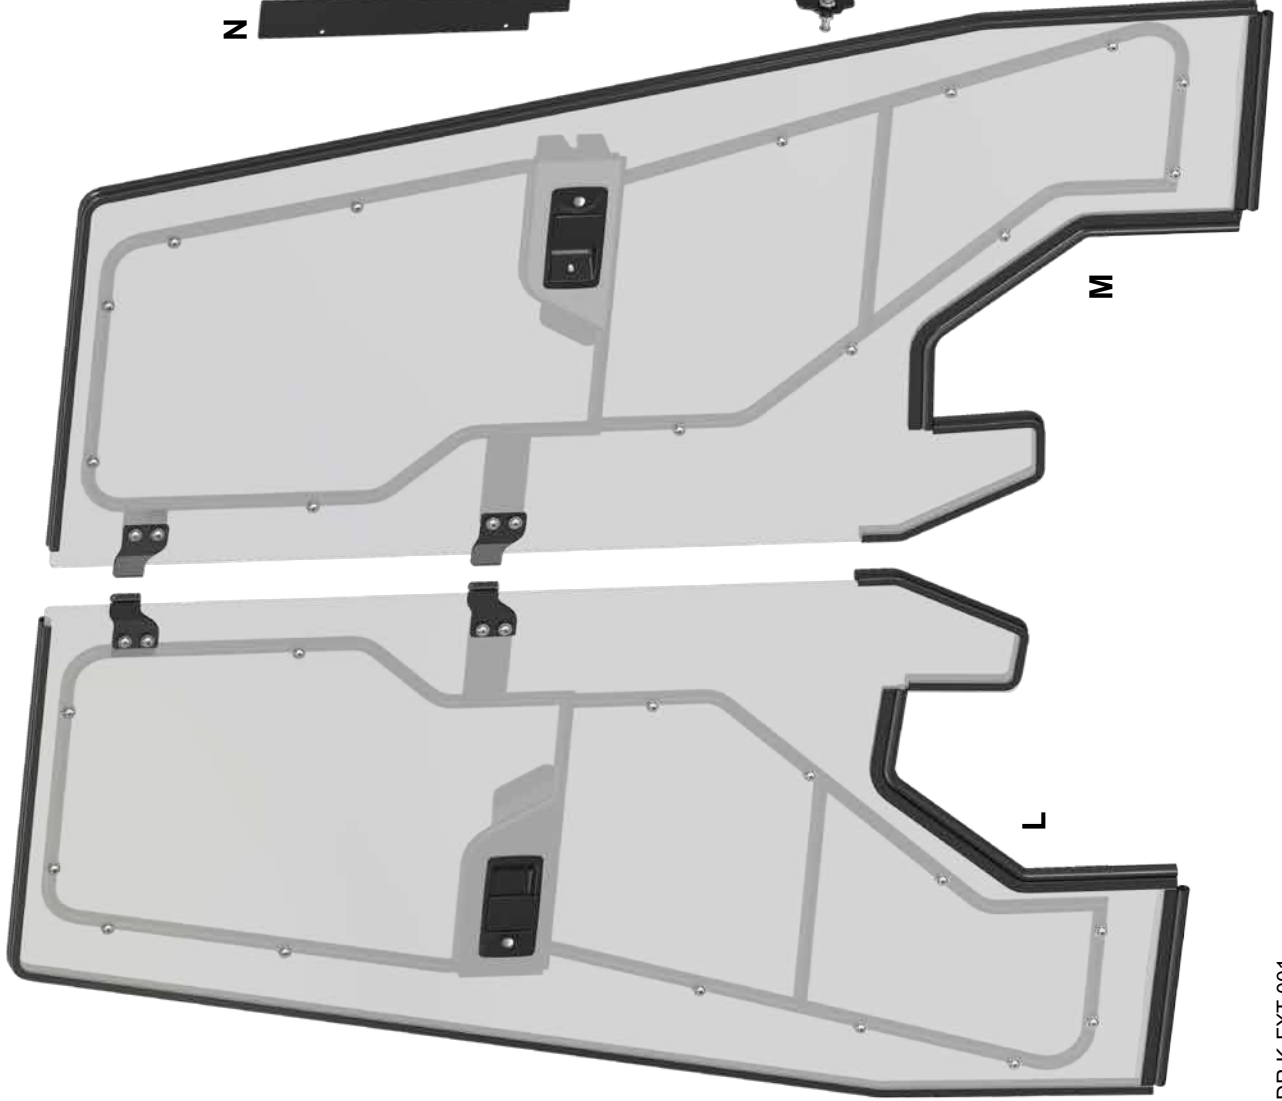  



Rear Hardware Kit


16x  M6-1.0 x 20mm Lg. BHCS

 
4x  M6-1.0 x 40mm BHCS Lg.

2x  M8-1.25 x 14mm Lg. BHCS

 
8x  M8-1.25 x 25mm BHCS Lg.

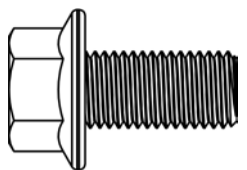 4x  M10-1.25 x 20mm FHCS Lg.

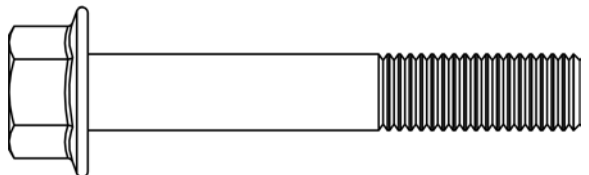 2x  M10-1.50 x 65mm FHCS Lg.

12x  M6-1.0 Nylock Nut

8x  M8-1.25 Cap Nut

4x  M8-1.25 Nylock Nut

2x  M10-1.50 Nylock Nut

8x  M6 Flat Washer

 
8x  M8 Flat Washer

2x  Spacer

4x  Large Spacer

Misc. kit contents


Flap Seal

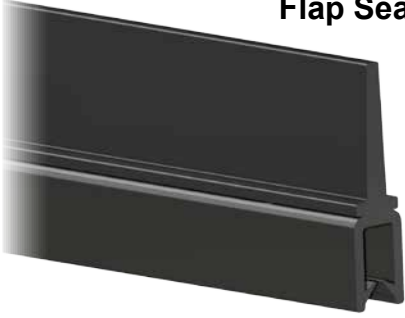

Foam A



 Foam B

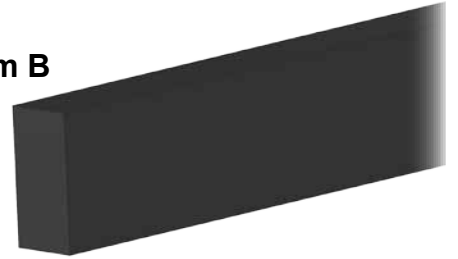

Rear removal

- Remove stock Doors and Hinges.



Rear removal continued

 
- Remove stock Strikers and hardware shown.




- Repeat steps for opposite side.

Rear installation *Do not tighten any hardware completely unless noted.*



- Install Clamps (J) to Left Bracket (T) with hardware shown.

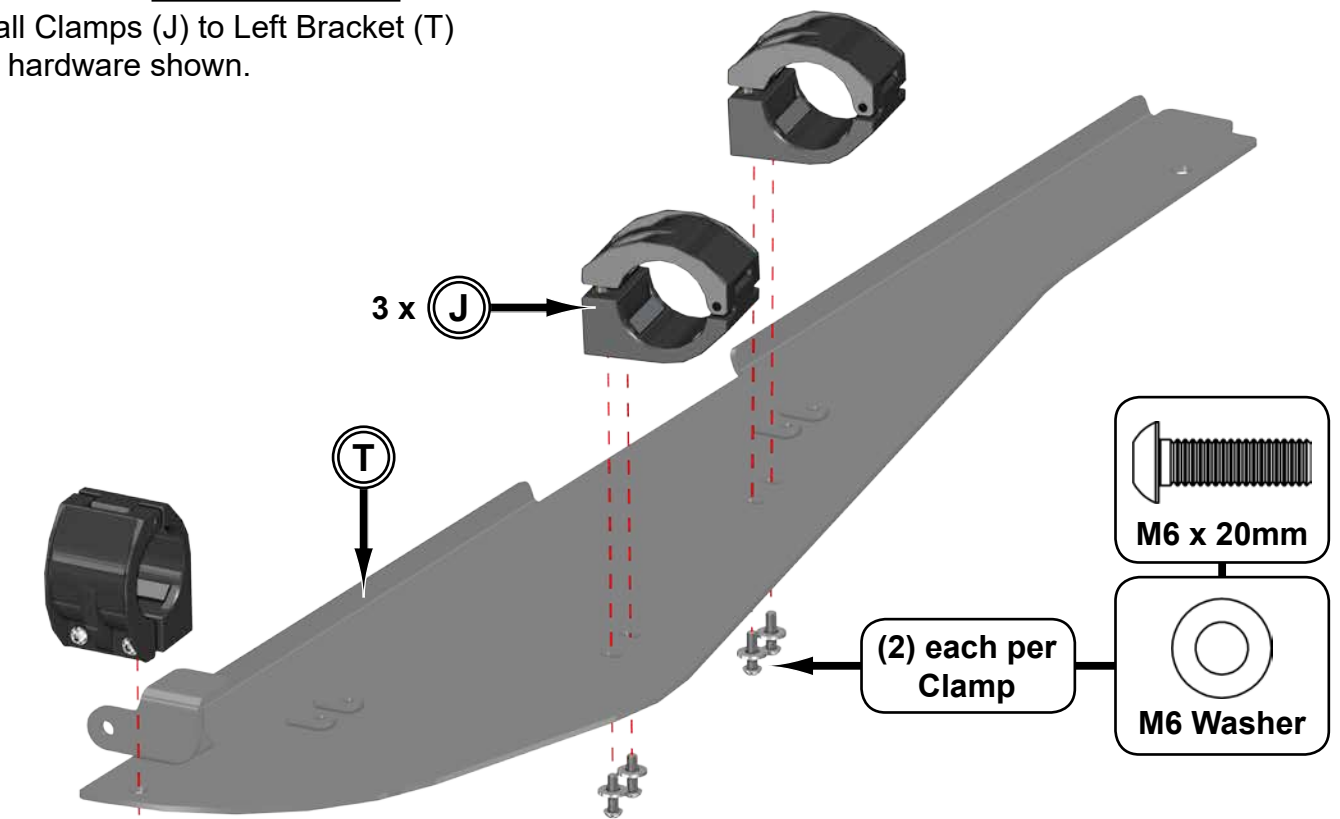

 - Install Foam A to Left Bracket (T) in locations shown.

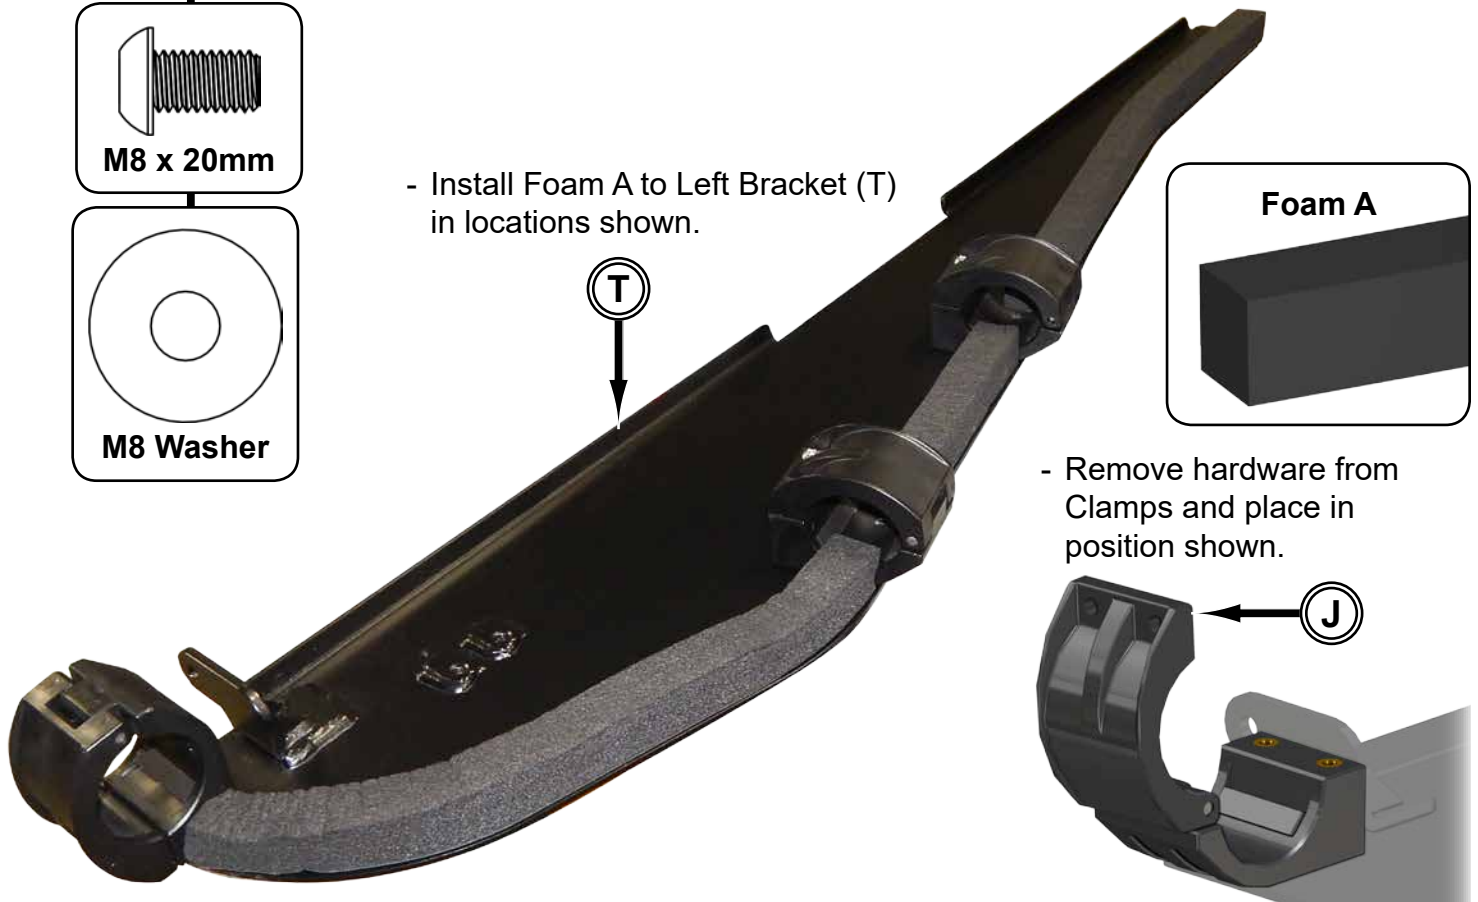

  
- Place Left Bracket (T) on machine and secure Clamps (J) to cage; use previously removed Clamps (J) hardware.
- Secure lower portion of Left Bracket (T) to Cage with hardware shown.
- Install Foam B to Left Bracket (T) in location shown.

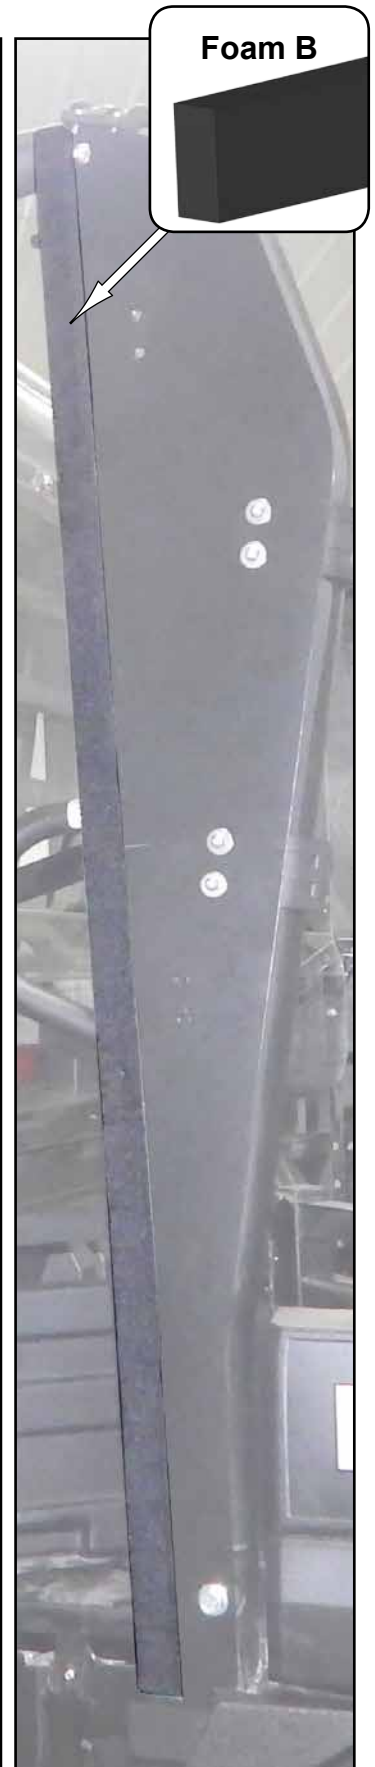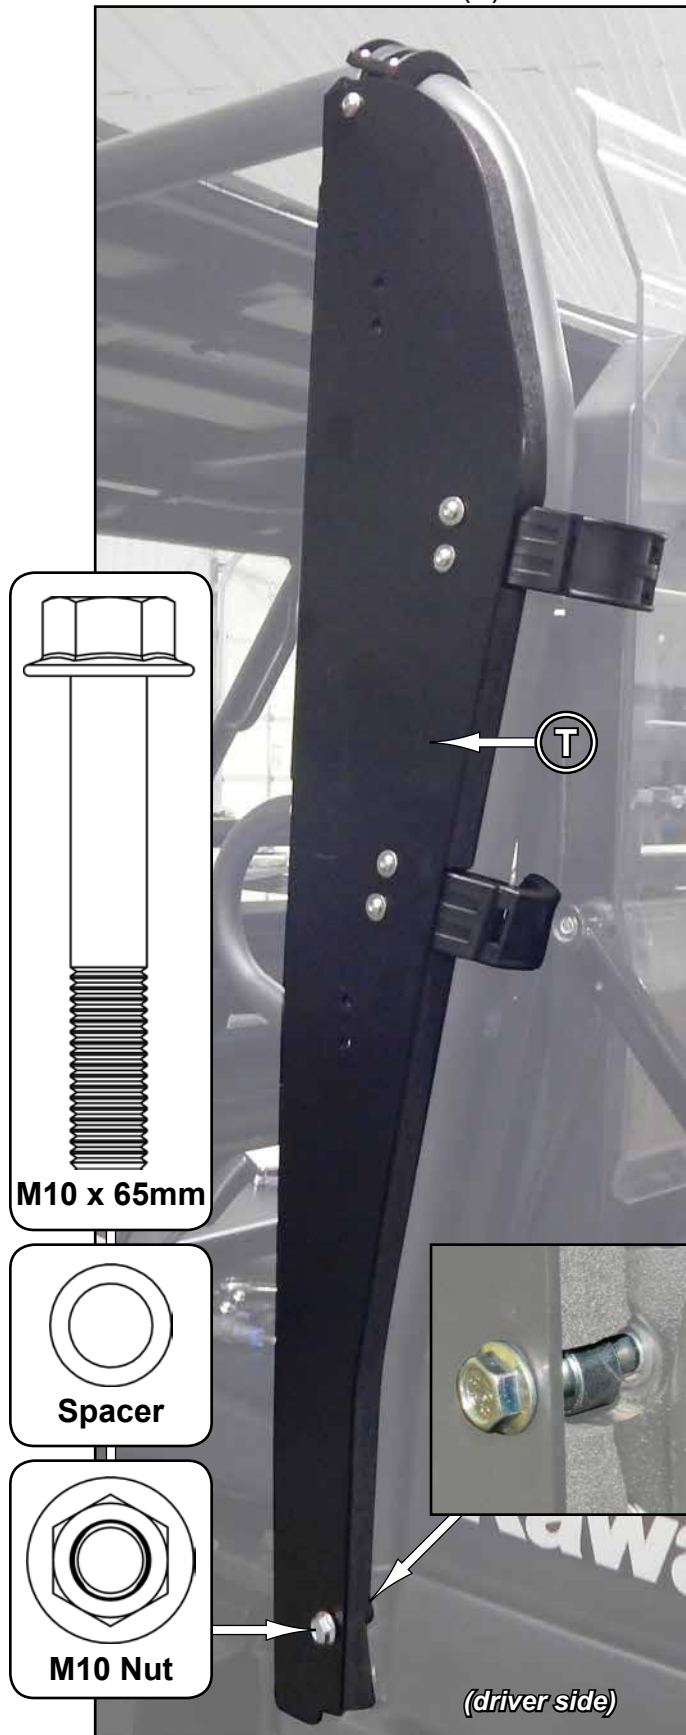


- Install Left Seat Bracket (R) to machine with hardware shown.
- Install Flap Seal to Left Seat Bracket (R).



 - Install Left Striker Bracket (V); replace stock Crossmember hardware with hardware shown.

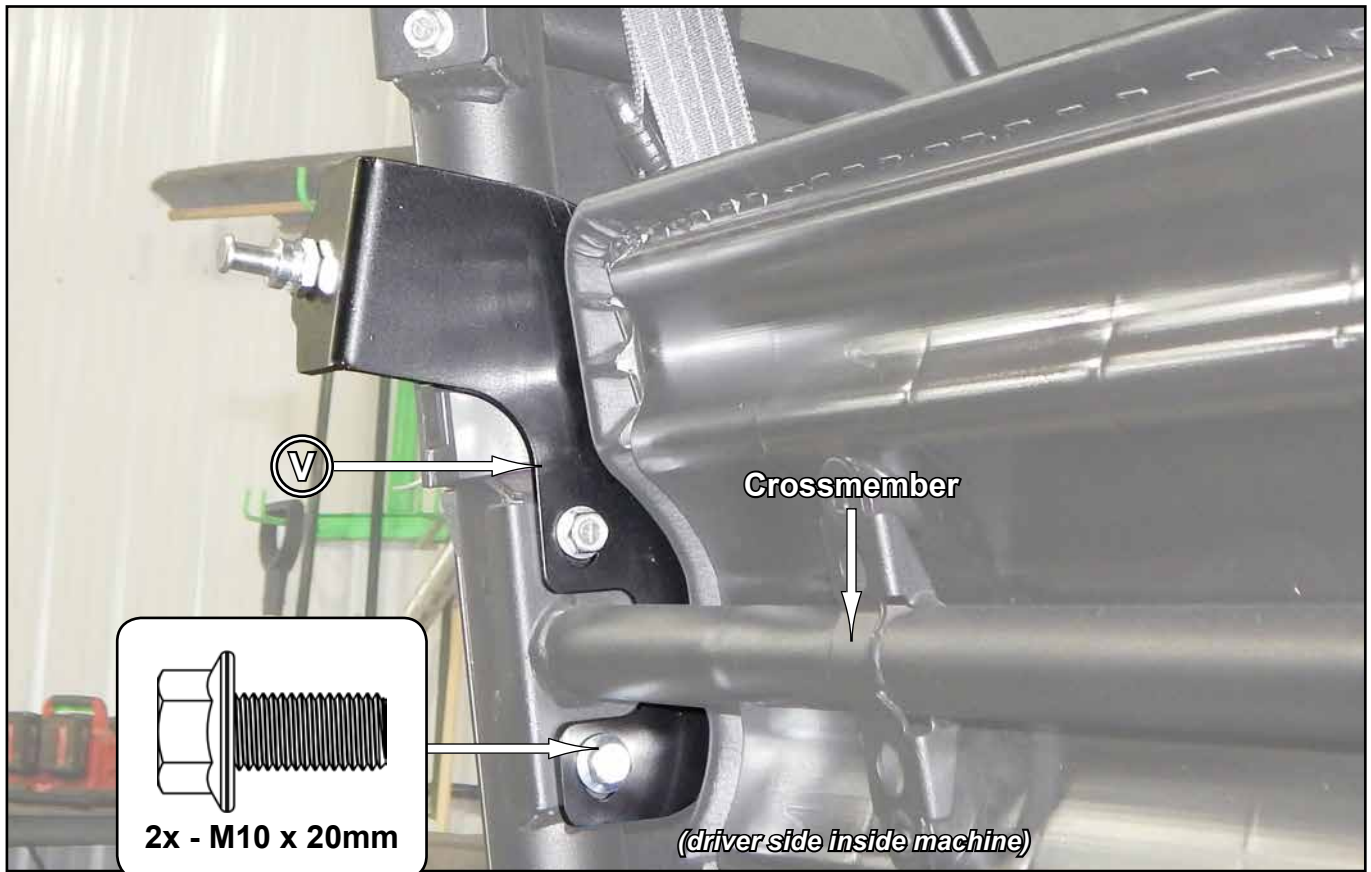

 - Install Left Seat Bracket (R) with hardware shown.

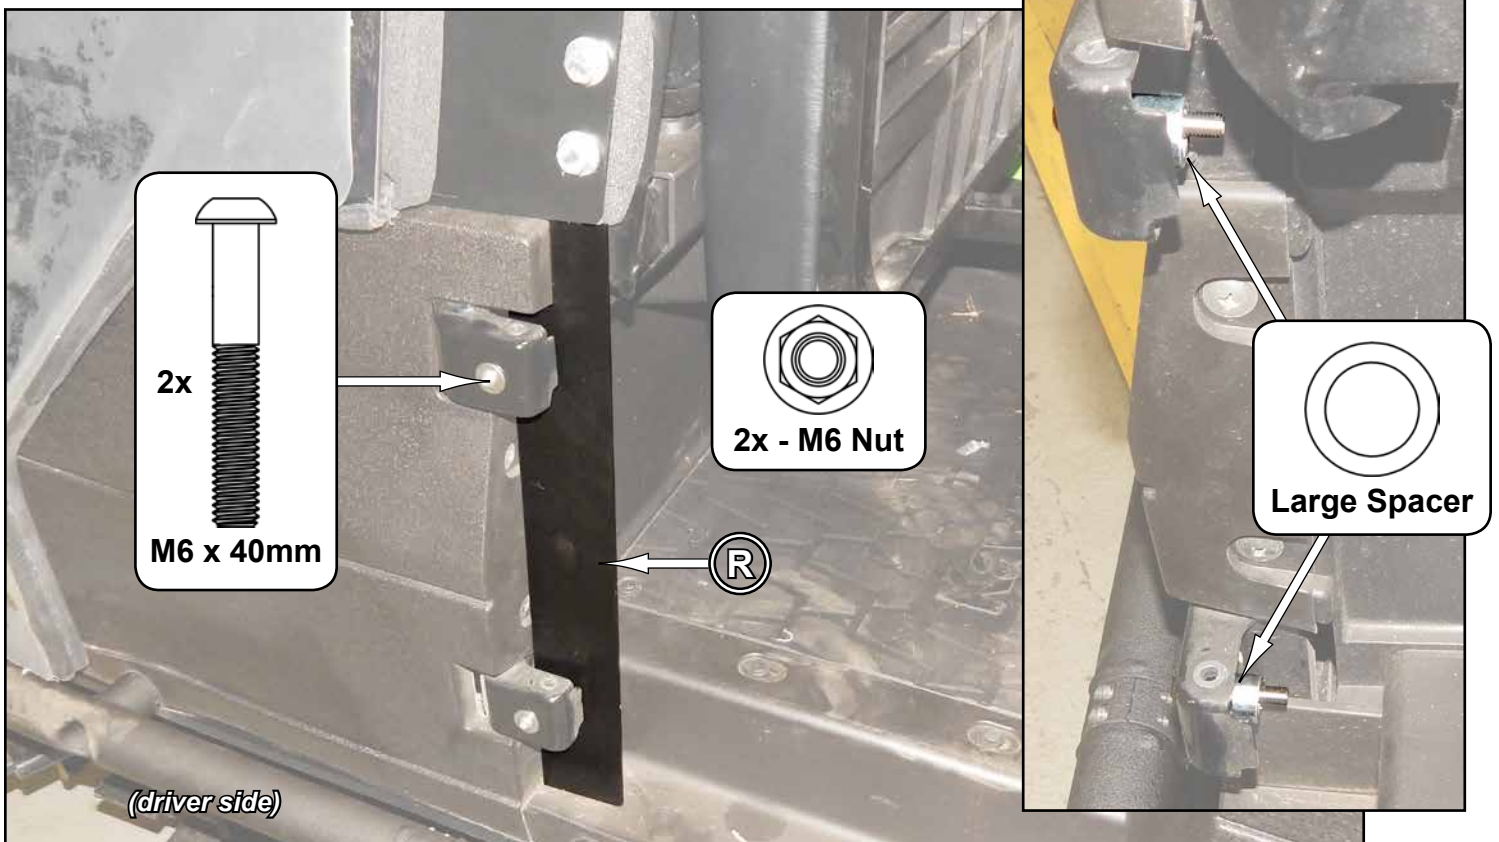

- Install Left Door (L) onto Left Male Hinge (P).



- Repeat steps for opposite side.

- Close Door and engage Latch.
- Align to machine and tighten all hardware completely.



- Install Gas Strut (K) to Left Door (L) and Left Male Hinge (P) with hardware shown.



- Install Foam A to Cage in location shown.



- Repeat steps for opposite side.

- Install approximately 9" of Foam A to location shown
- Repeat for opposite side.

