


INSTALLATION INSTRUCTIONS

In-Dash Heater Kit:

for Polaris RZR® XP Turbo and multiple RZR® Trail models

- Do not discard packaging until product has been successfully installed.
- HTR-P-RZRT-ID installation shown.

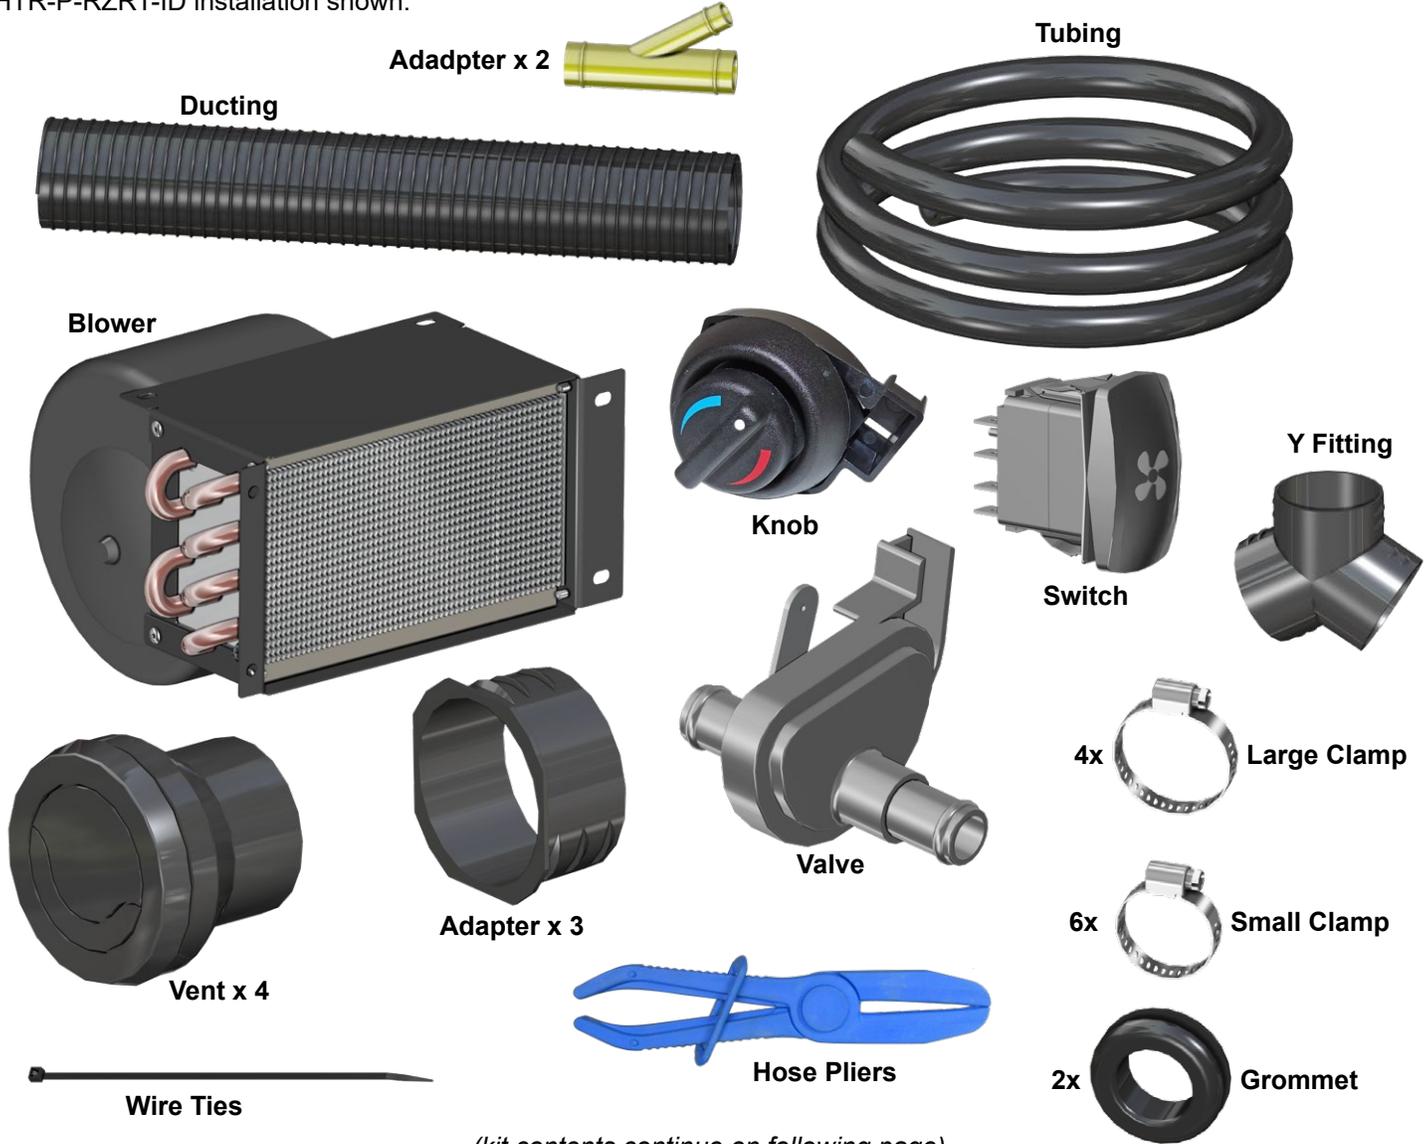

(kit contents continue on following page)

- Check behind areas being drilled for interference.
- Avoid burns and scalding by working on cool vehicles.
- Secure components away from rotating objects.
- Do not tighten mounting hardware until all components are in place.
- Use manufacturers recommended coolant.
- Avoid sharp bends when installing Tubing.
- Verify that no leaks are present after installation.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-855-743-3427




8:00am - 8:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

Read instructions and view illustrations before beginning.


Thank You
For Choosing




(kit contents continued)

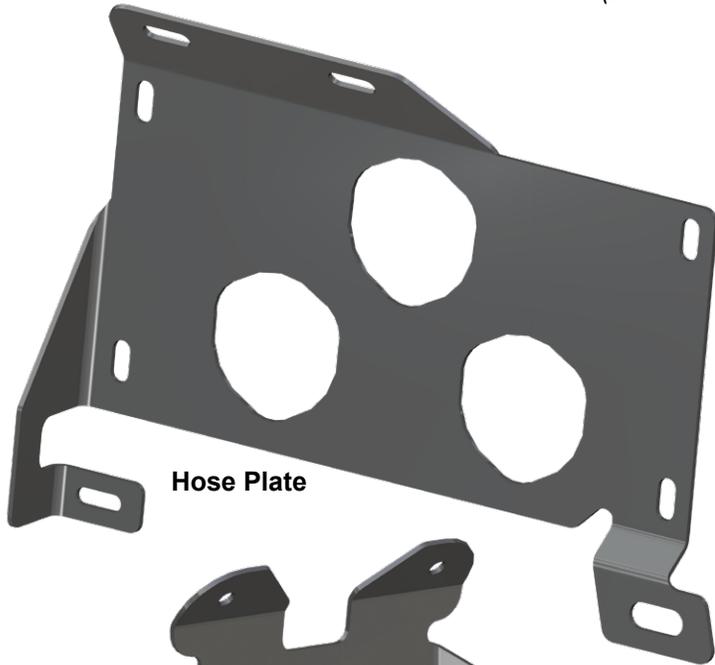


Hose Plate

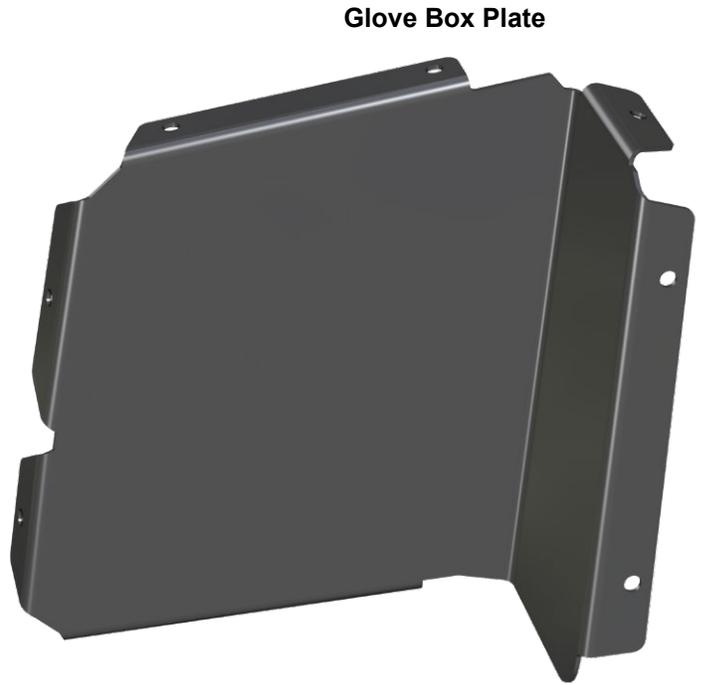

Glove Box Plate

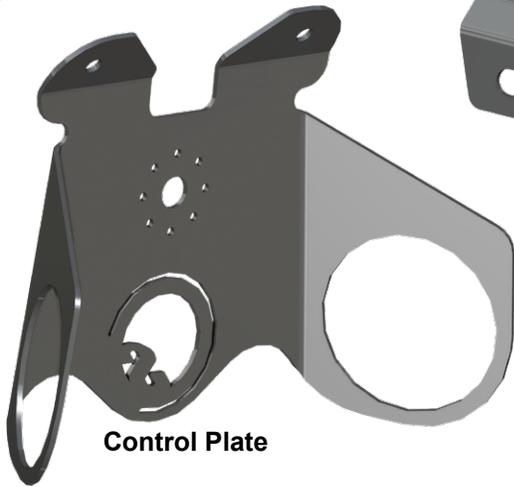


Control Plate


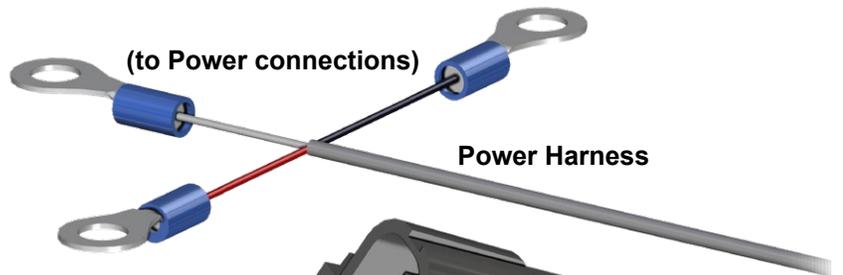


(to Power connections)

Power Harness

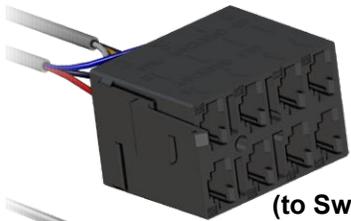


(to Switch)

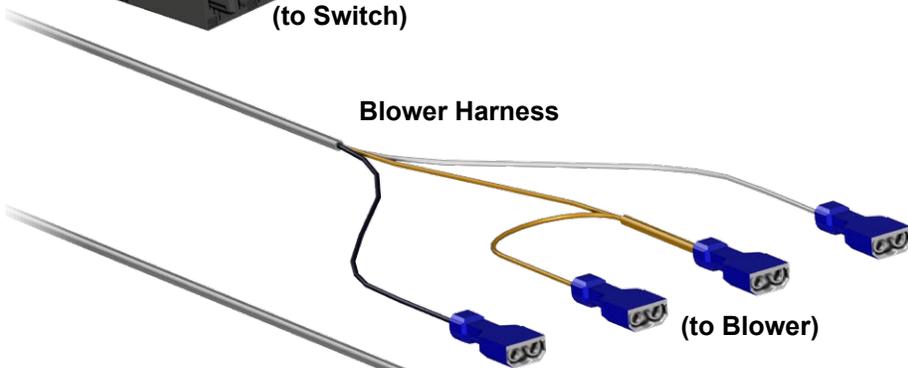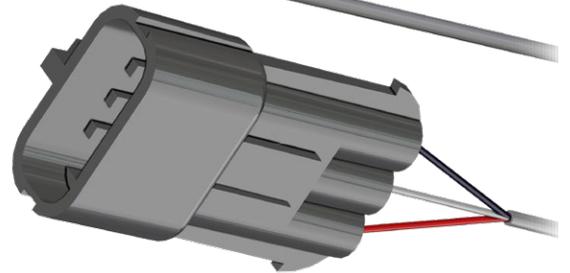


Blower Harness


(to Blower)

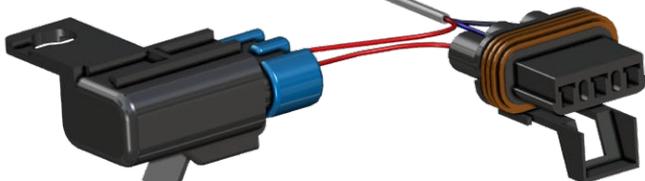

(to Power Harness)

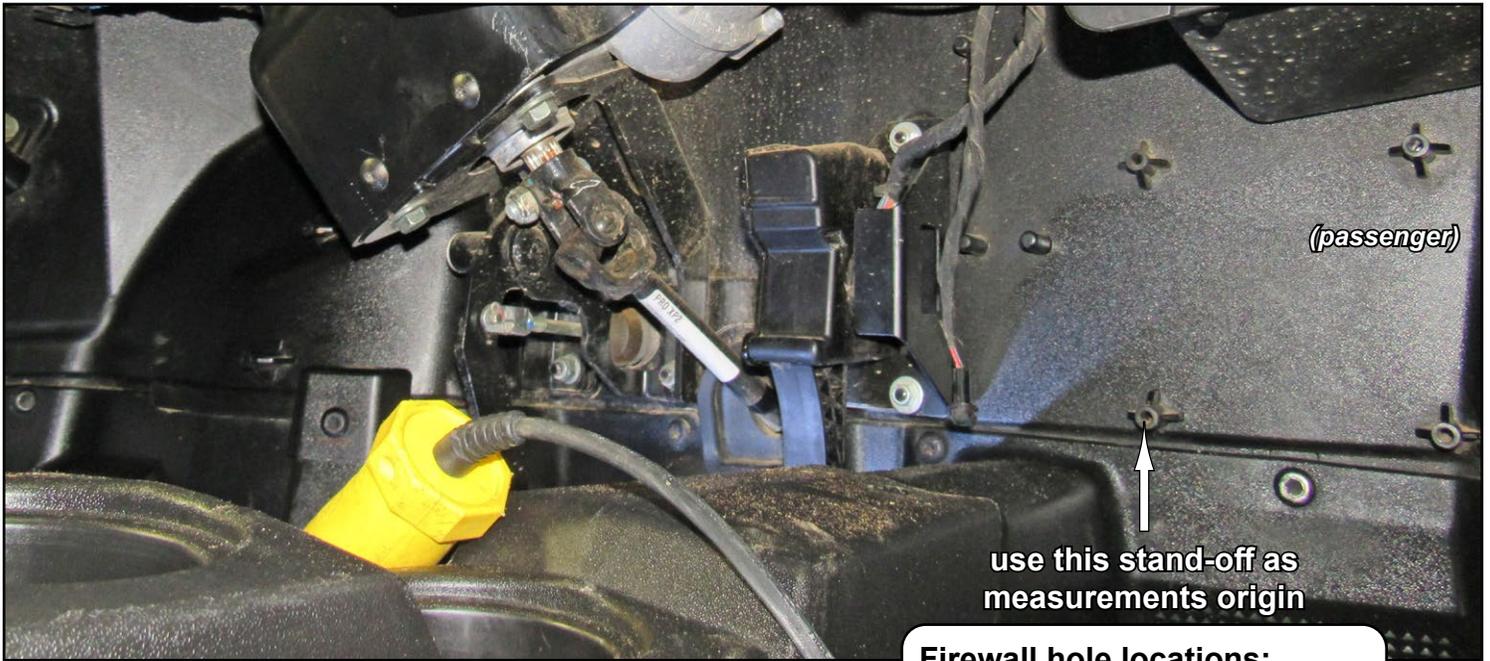


Firewall hole locations:
measure UP 20mm and LEFT 30mm
measure UP 30mm and LEFT 50mm

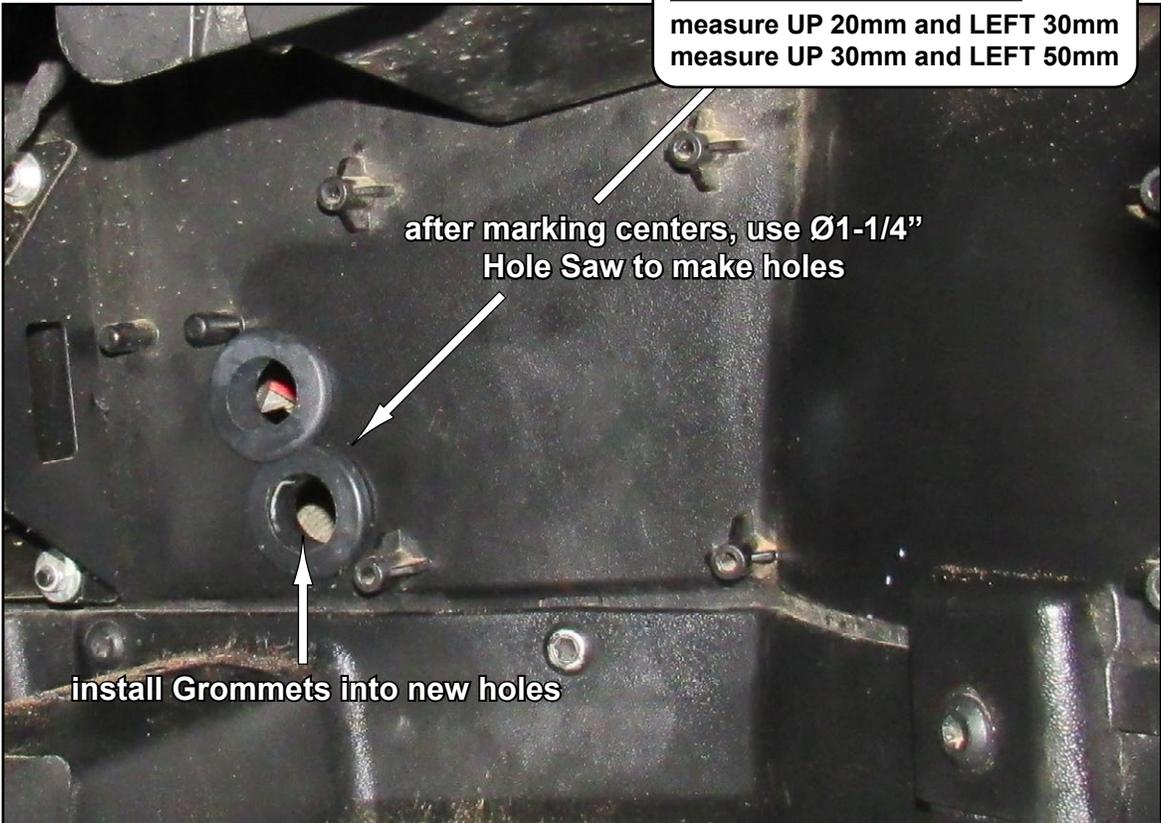


this page intentionally blank

- Follow profile and cut template.
- Attach to location shown on pages 16 and 17 with tape.

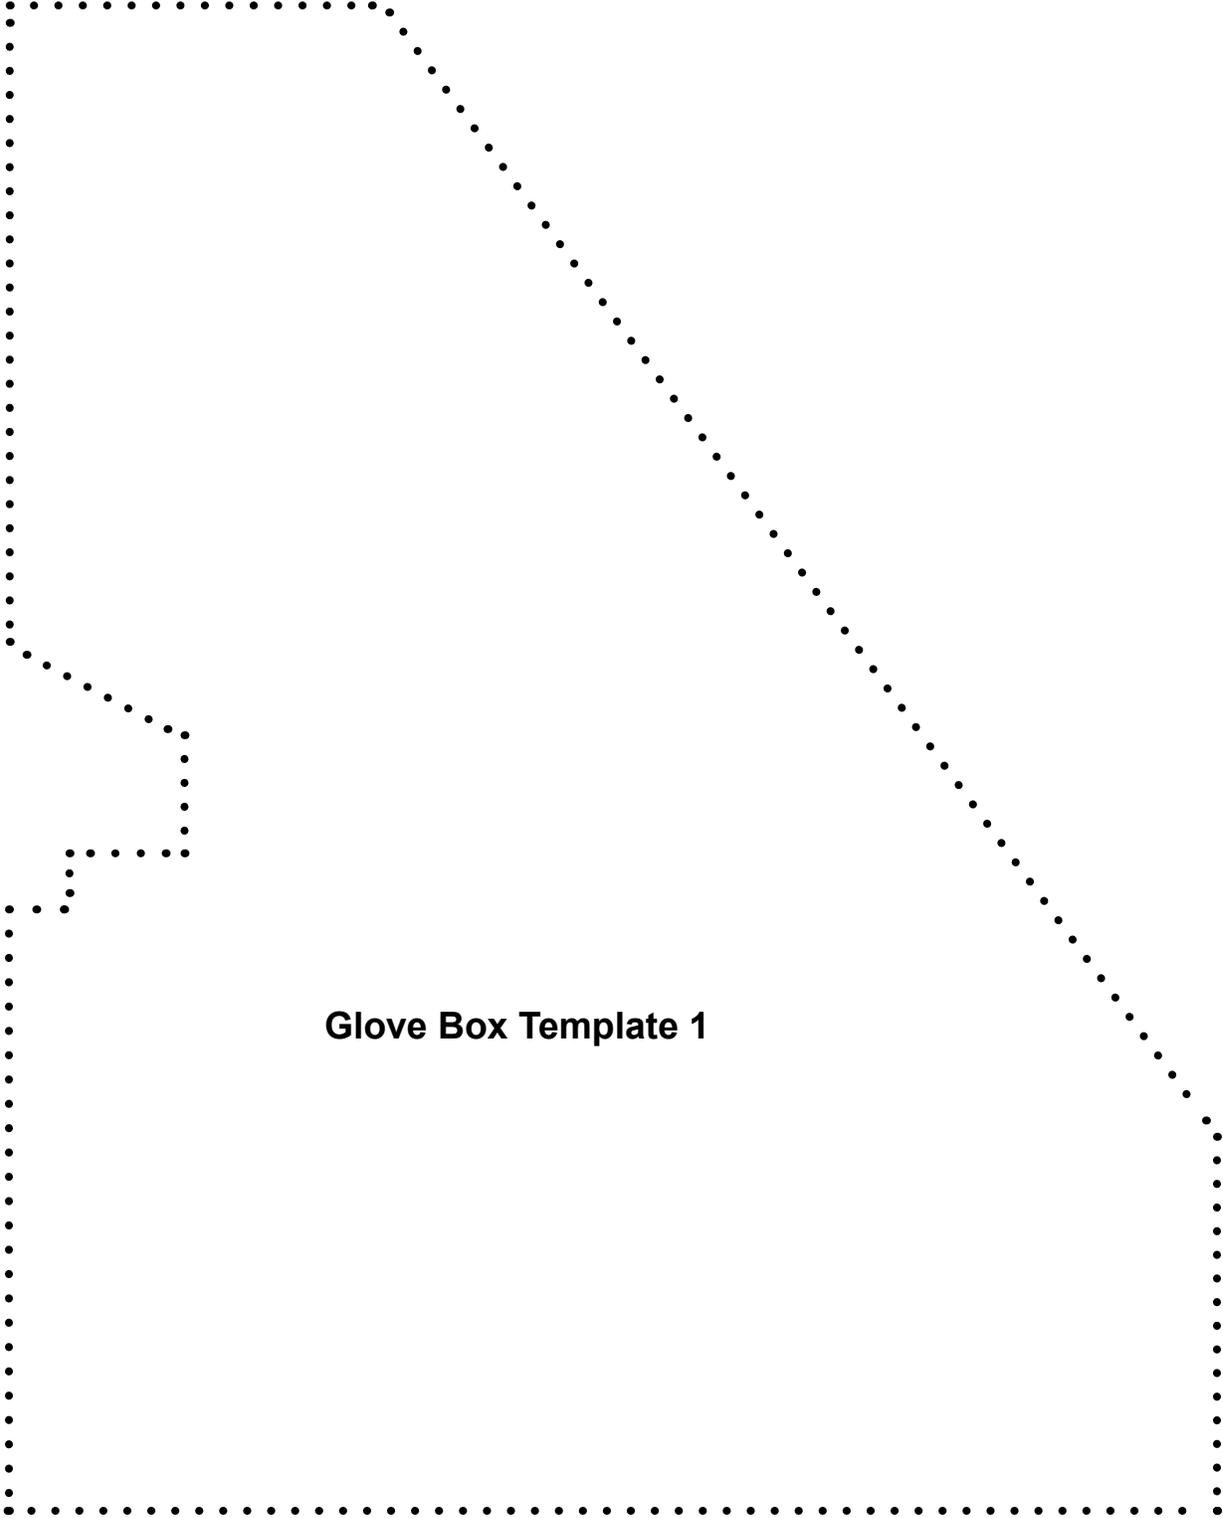

this page intentionally blank


- Follow profile and cut template.
- Attach to location shown on page 16 with tape.

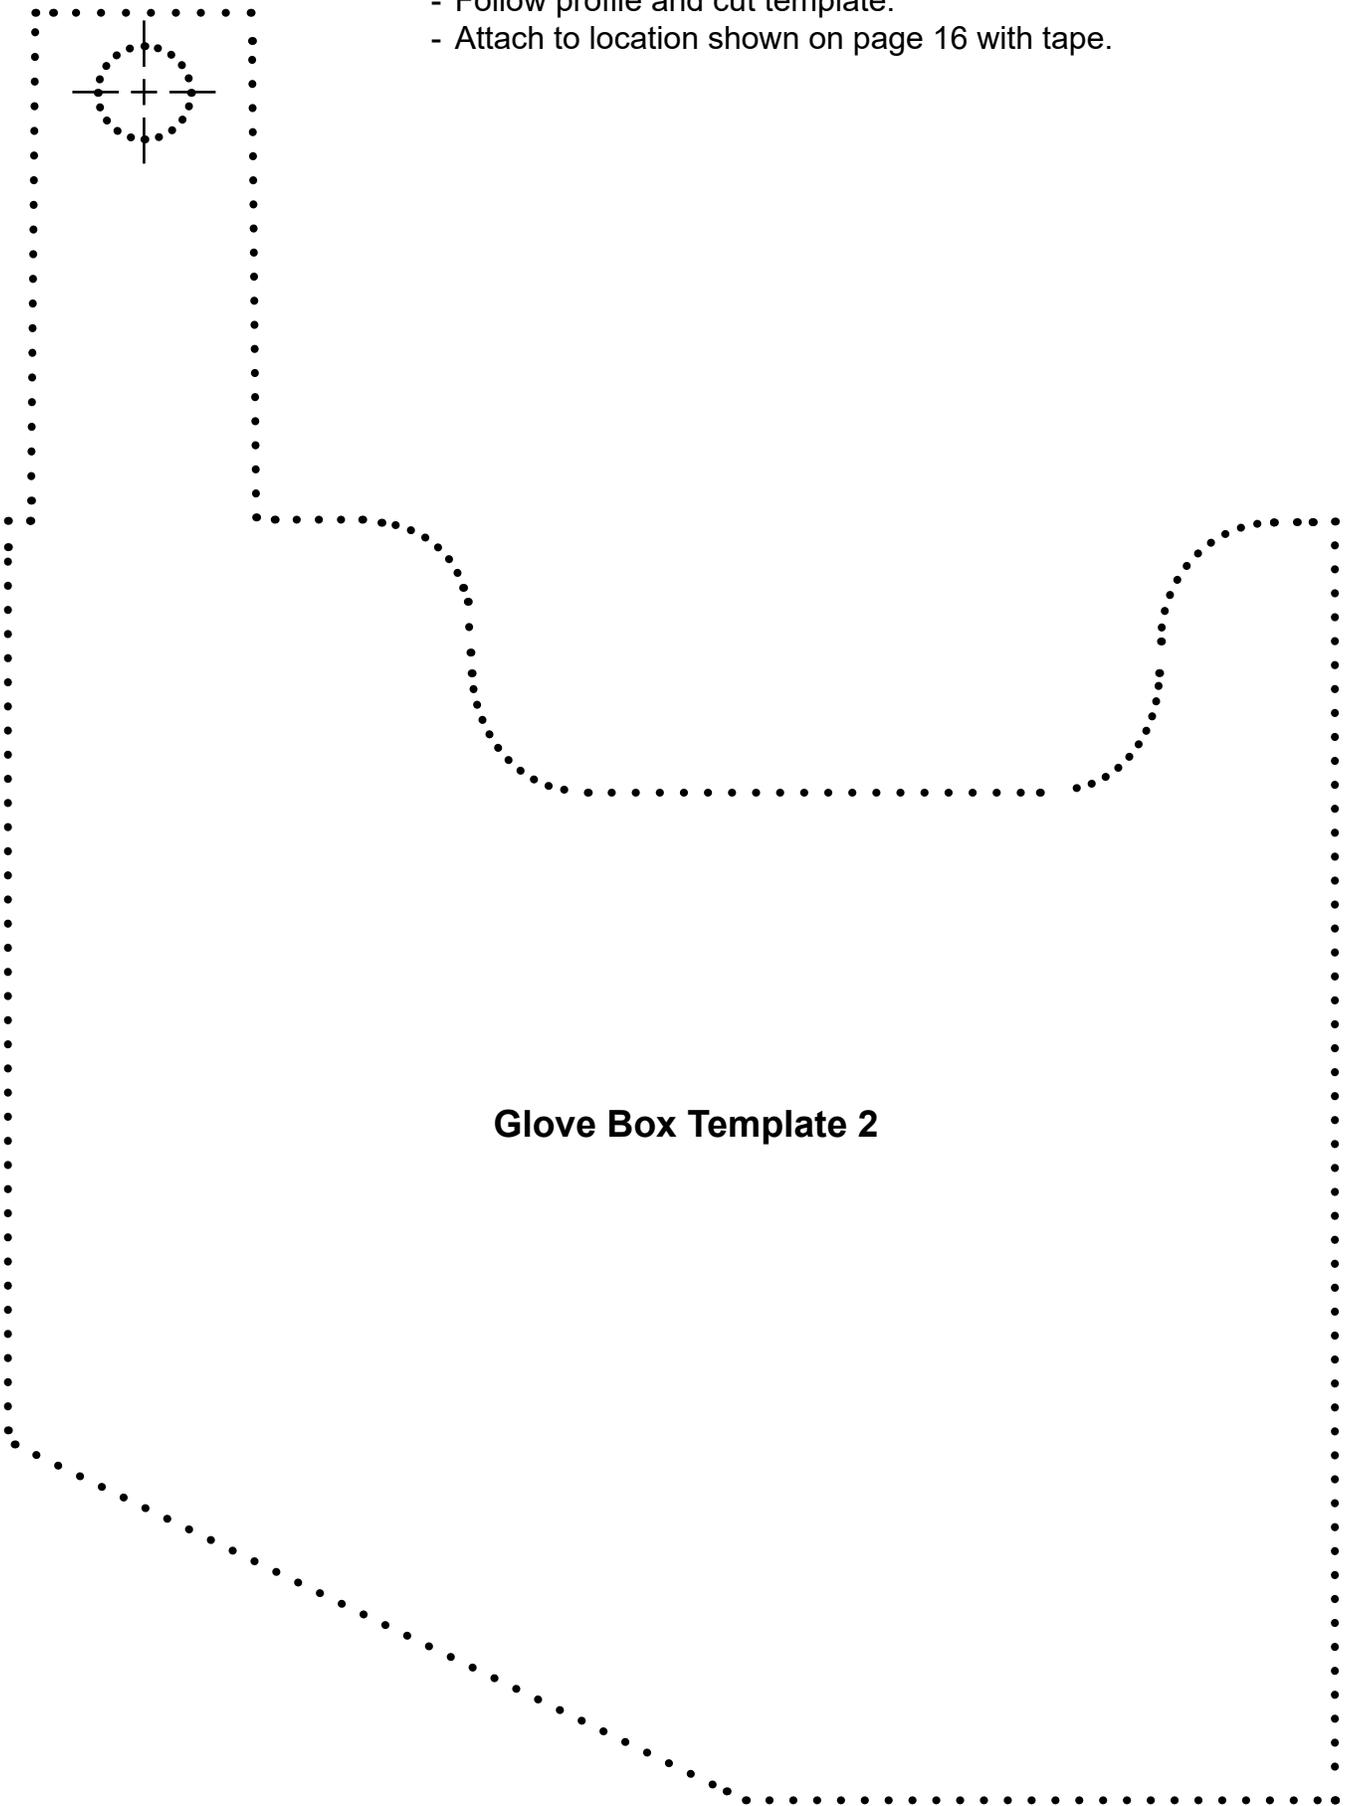

Glove Box Template 2

this page intentionally blank


- Follow profile and cut template.
- Attach to location shown on pages 16 and 17 with tape.

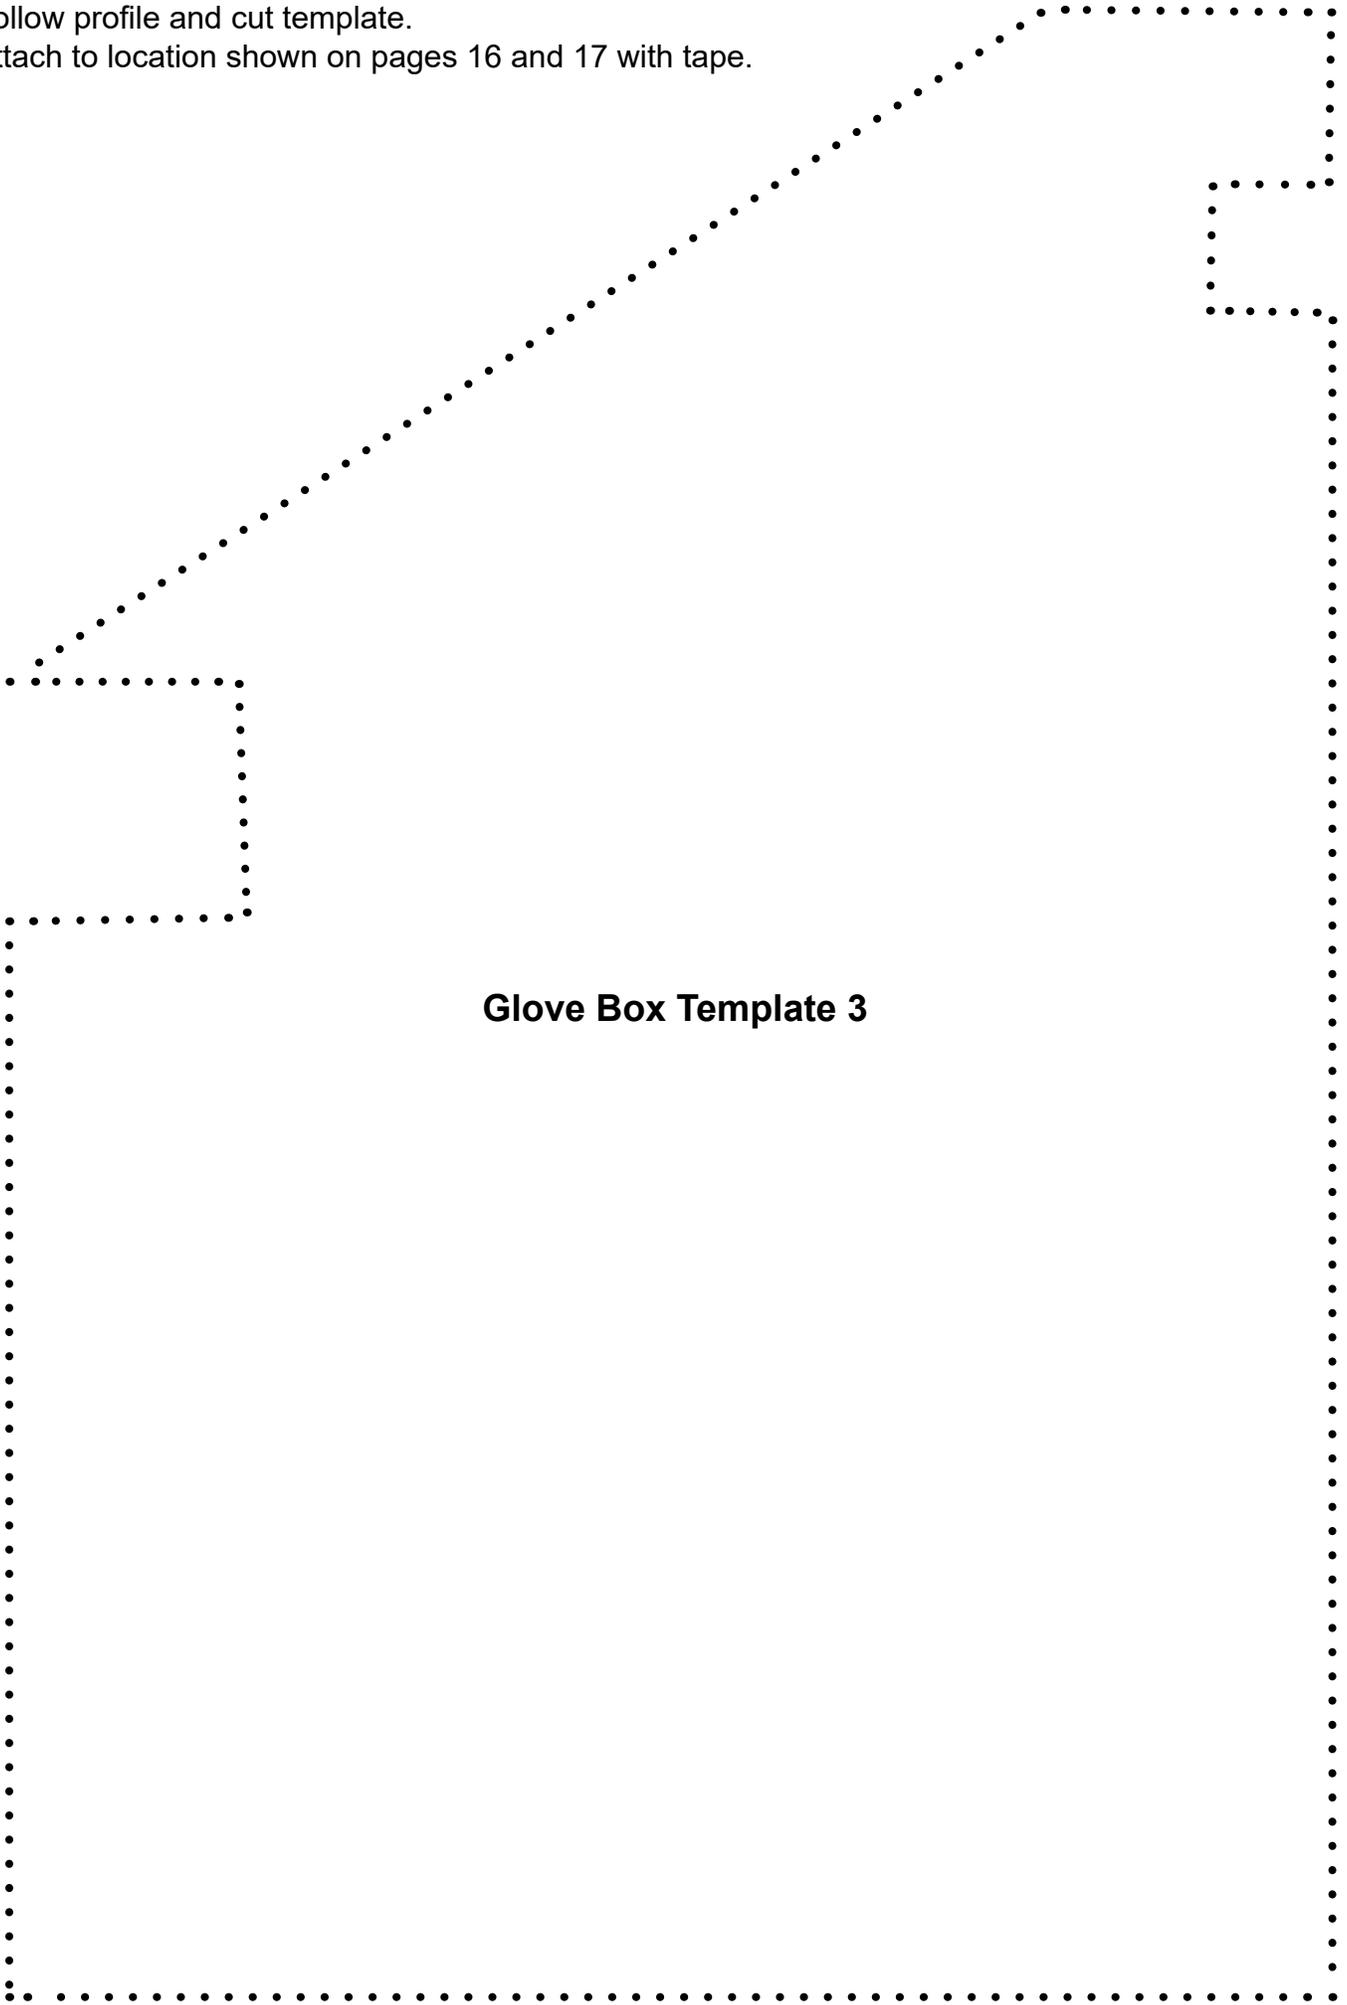


Glove Box Template 3

this page intentionally blank


- Follow profile and cut templates.
- Attach to location shown on pages 26.

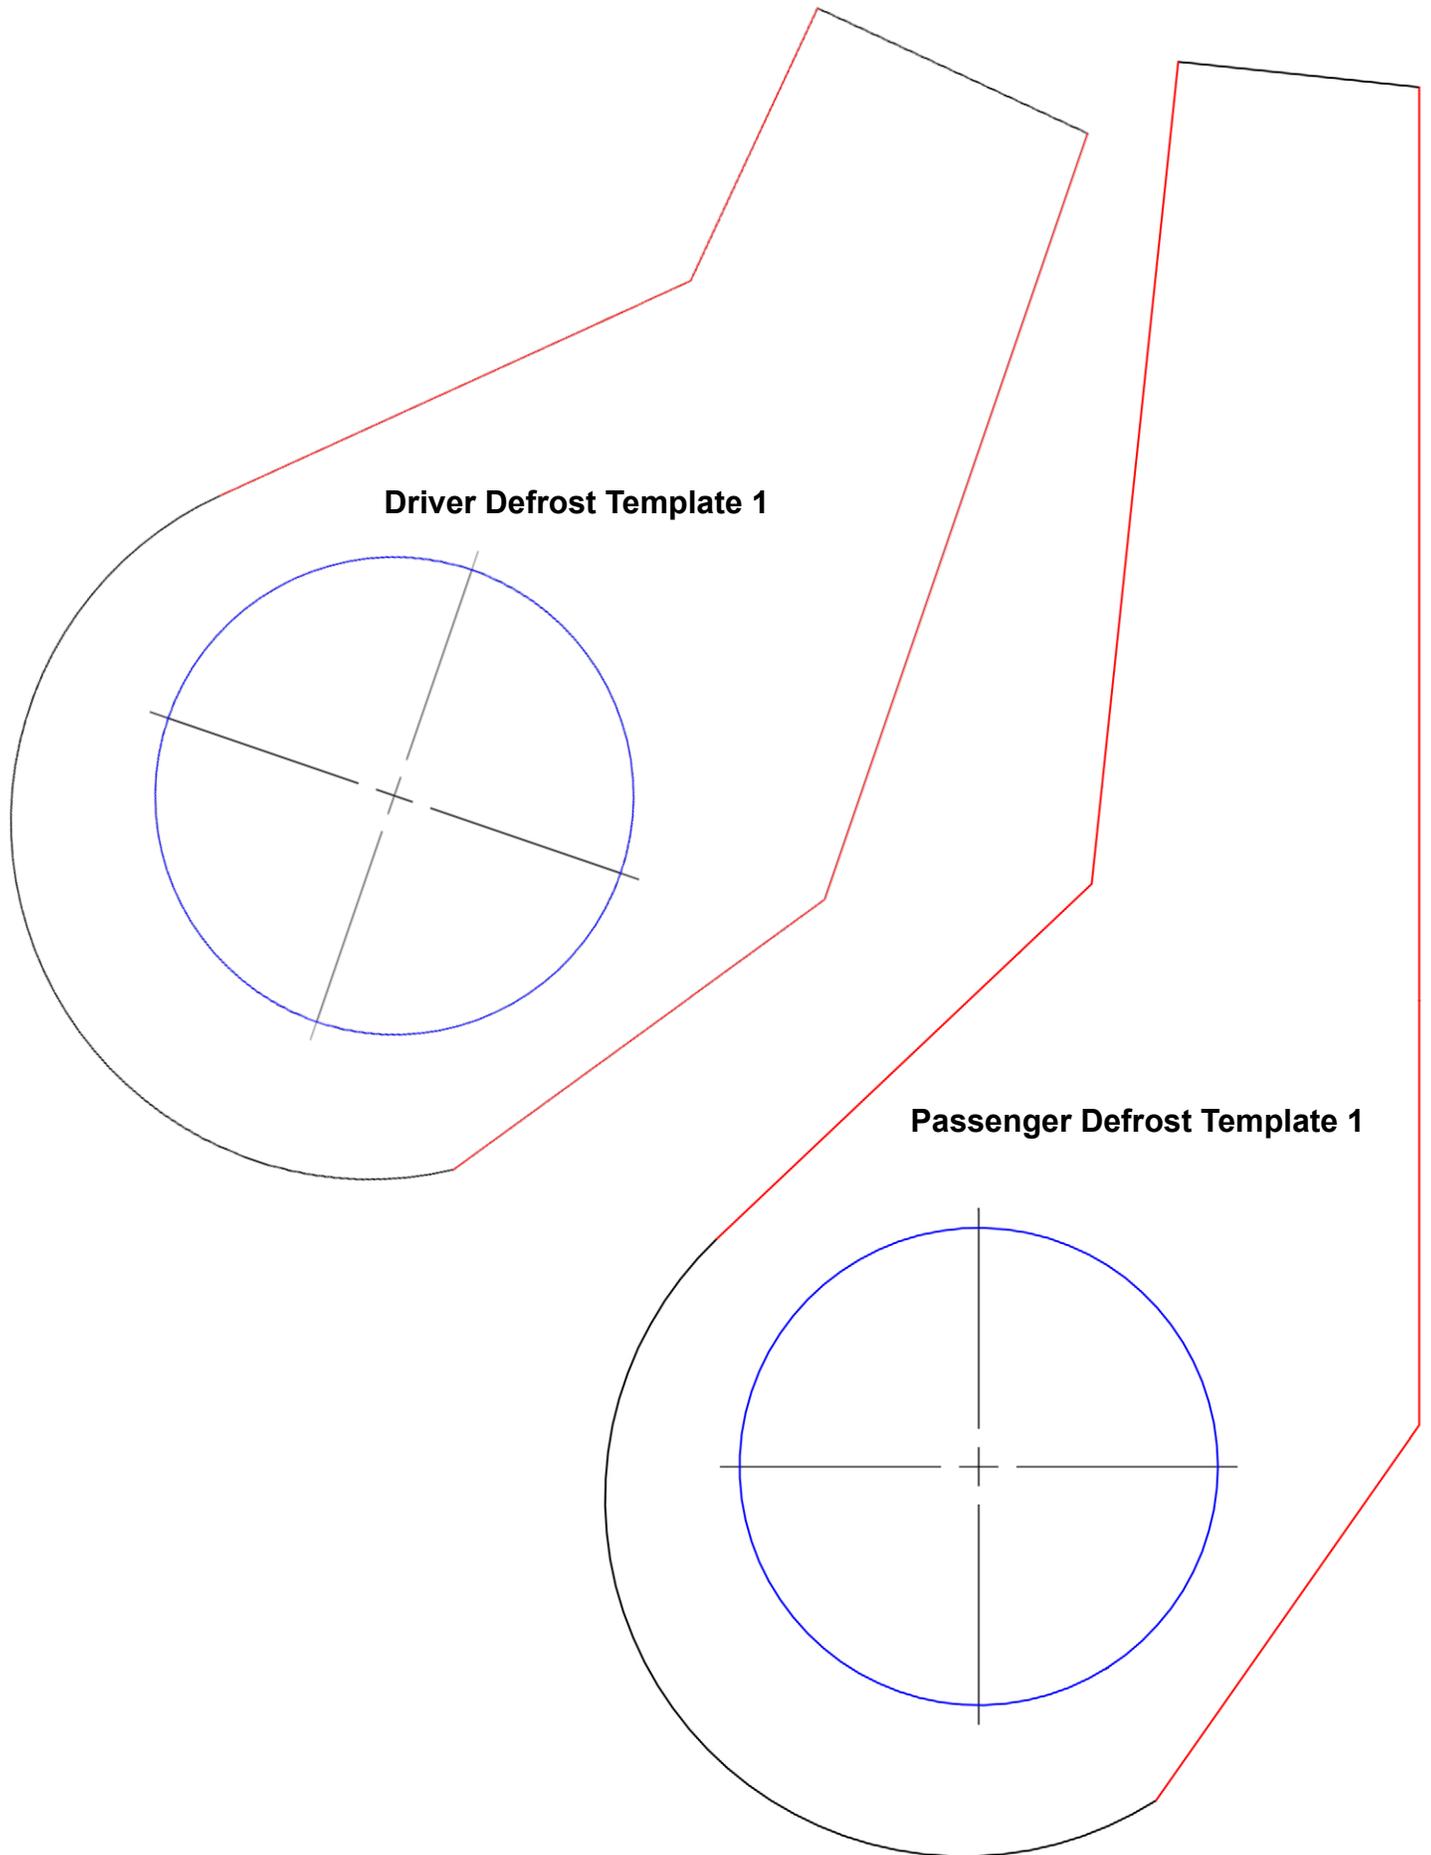


this page intentionally blank

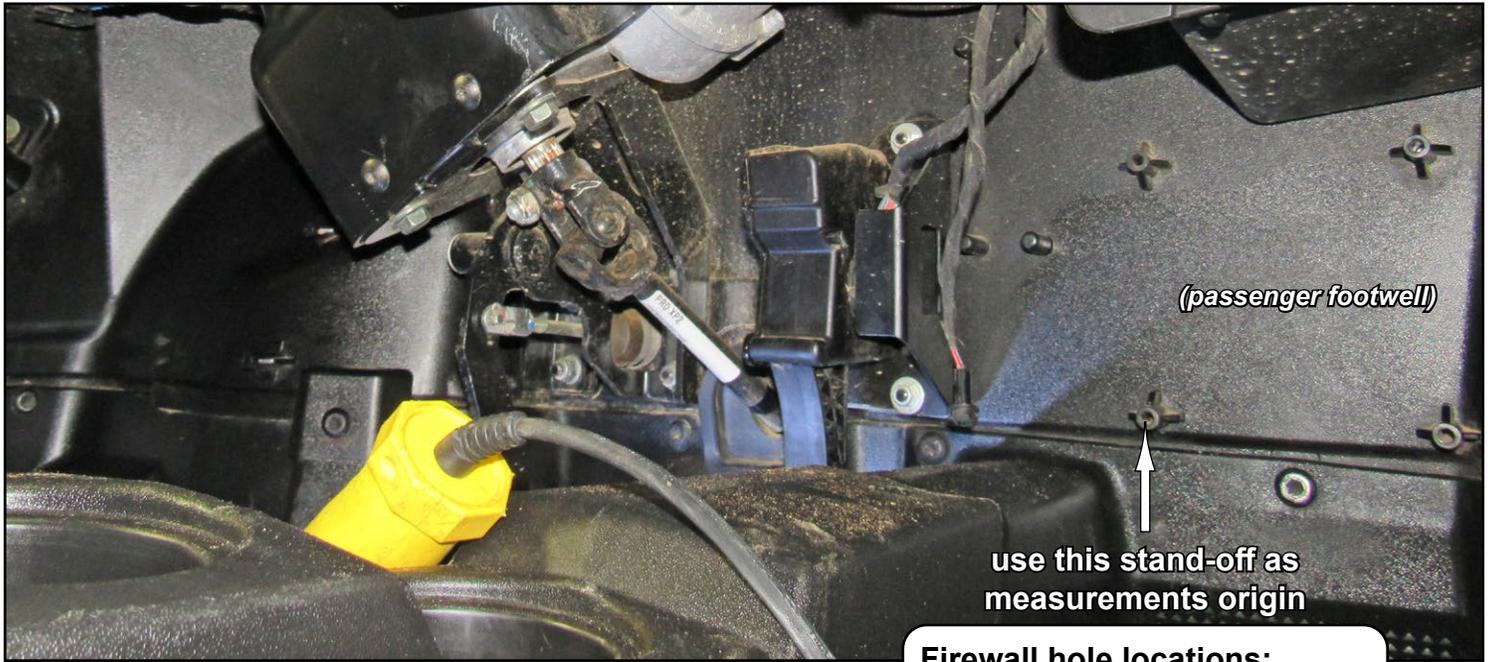

Firewall hole locations:
measure UP 20mm and LEFT 30mm
measure UP 30mm and LEFT 50mm

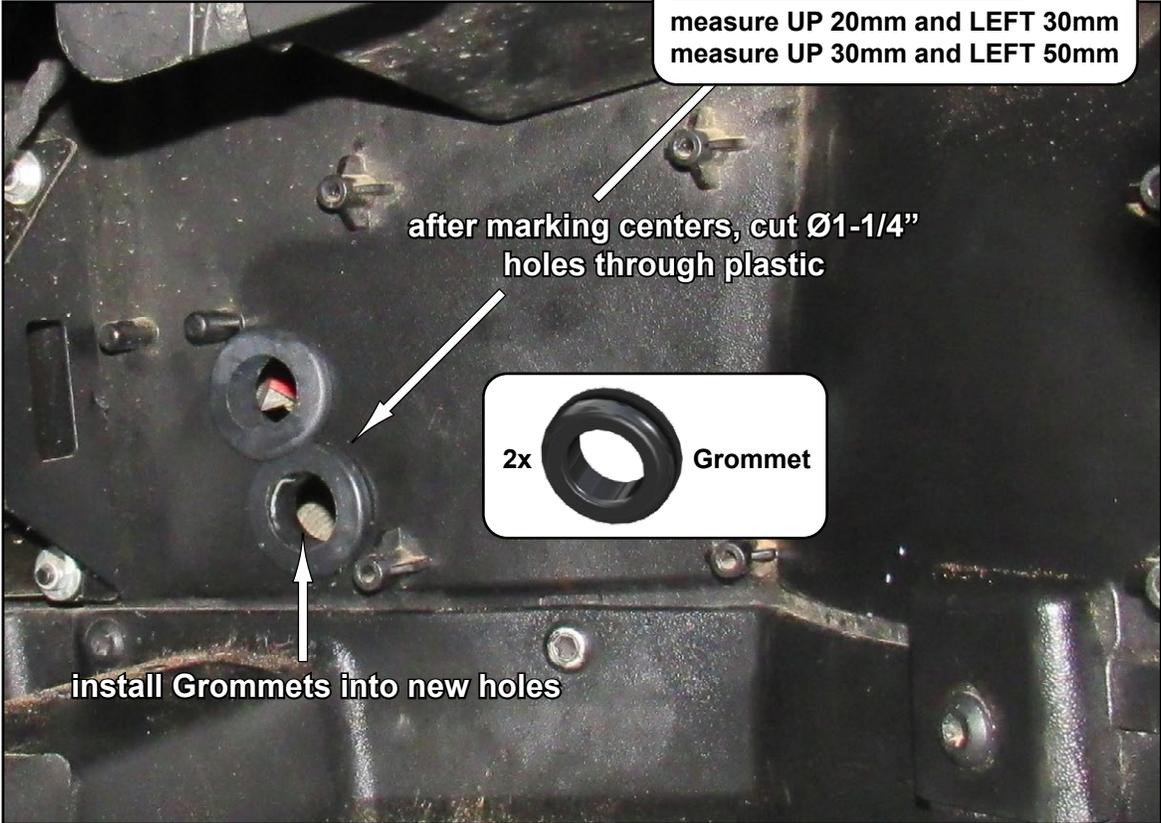



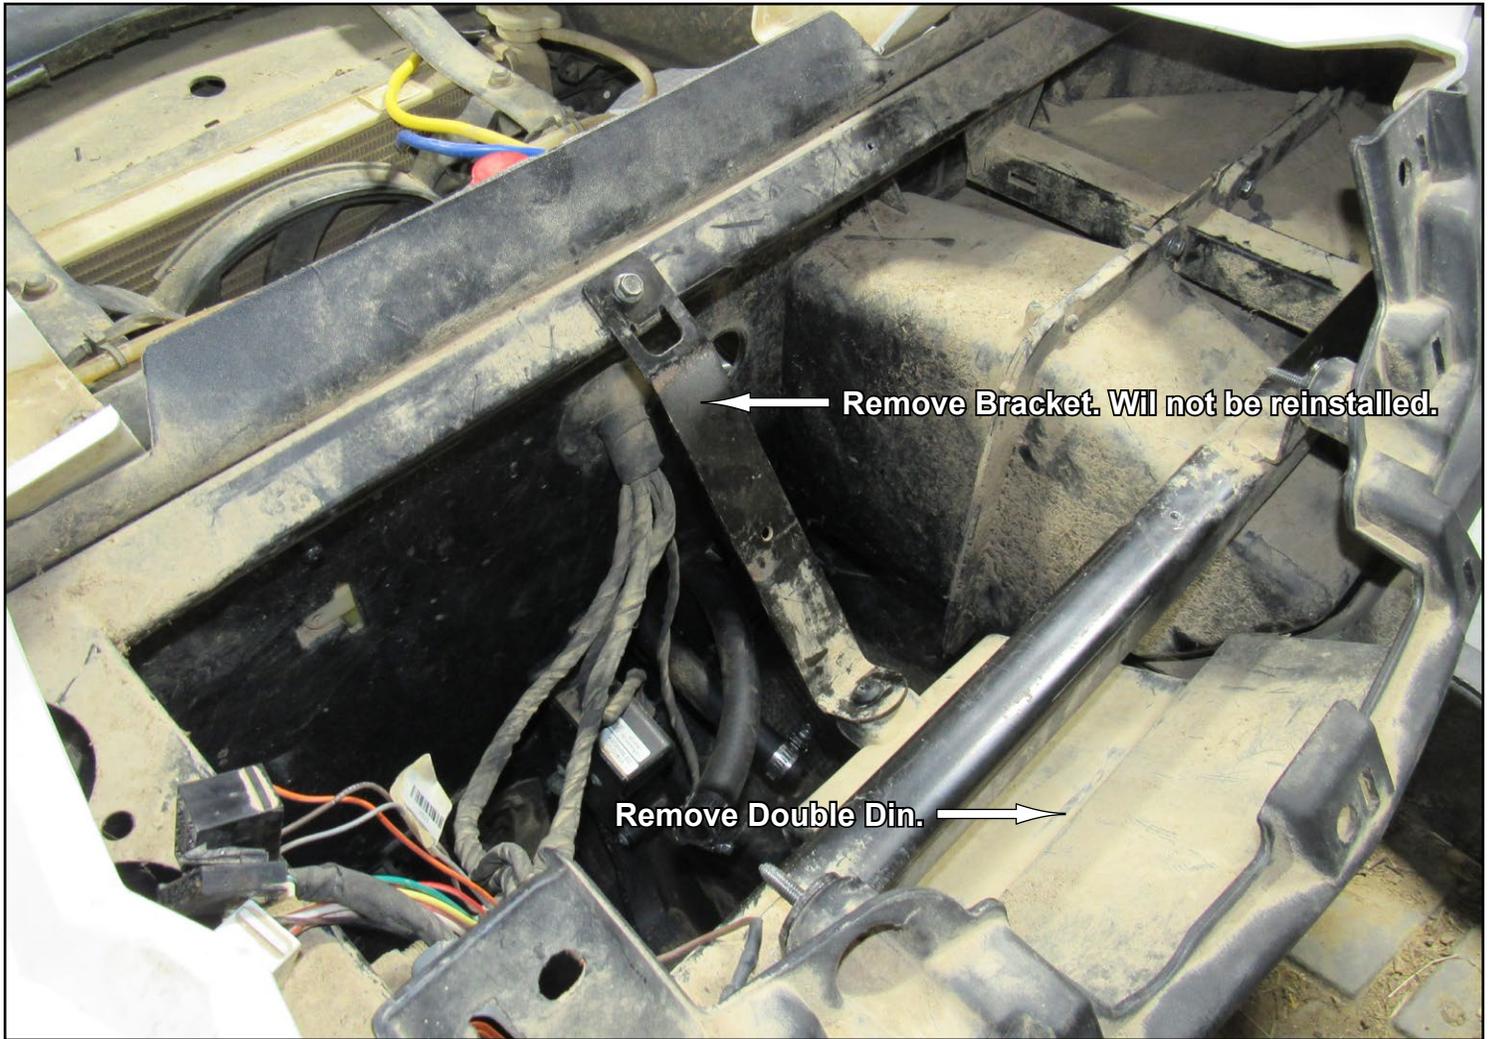


Remove Bracket. Will not be reinstalled.

Remove Double Din.




Remove Glove Box.

- Tape Templates 2 and 3 into position.
- Use a straight edge and marker to make lines as shown.

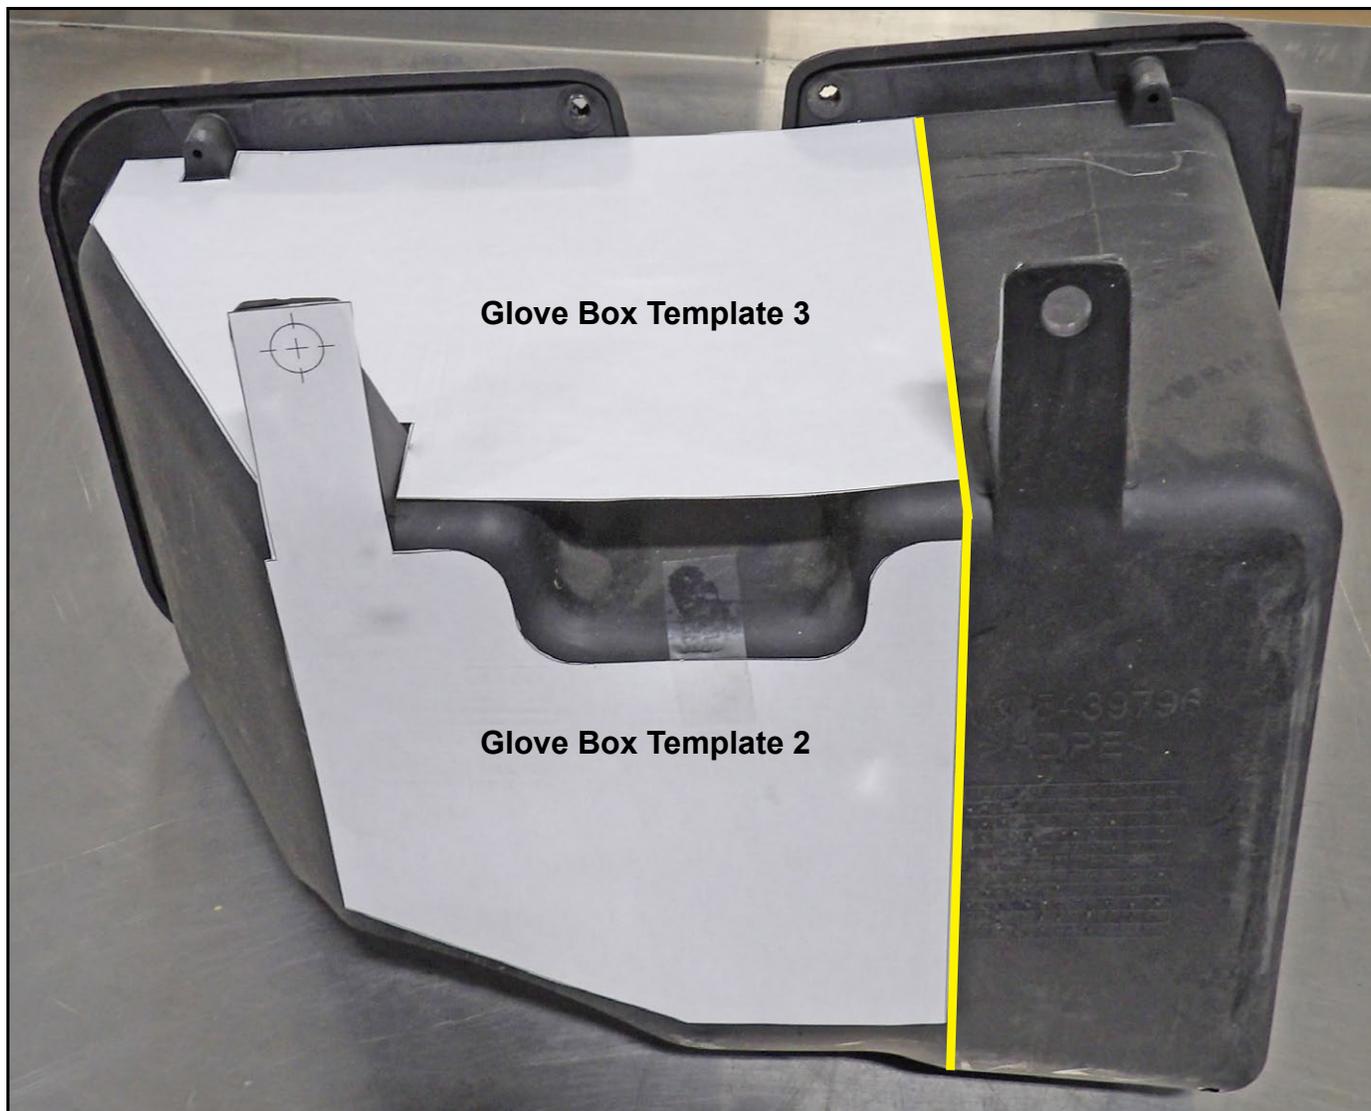


- Tape Template 1 into position.
- Use a straight edge and marker to make lines as shown.
- Remove Templates and cut away material; see following page for what Glove Box should look like after cutting.

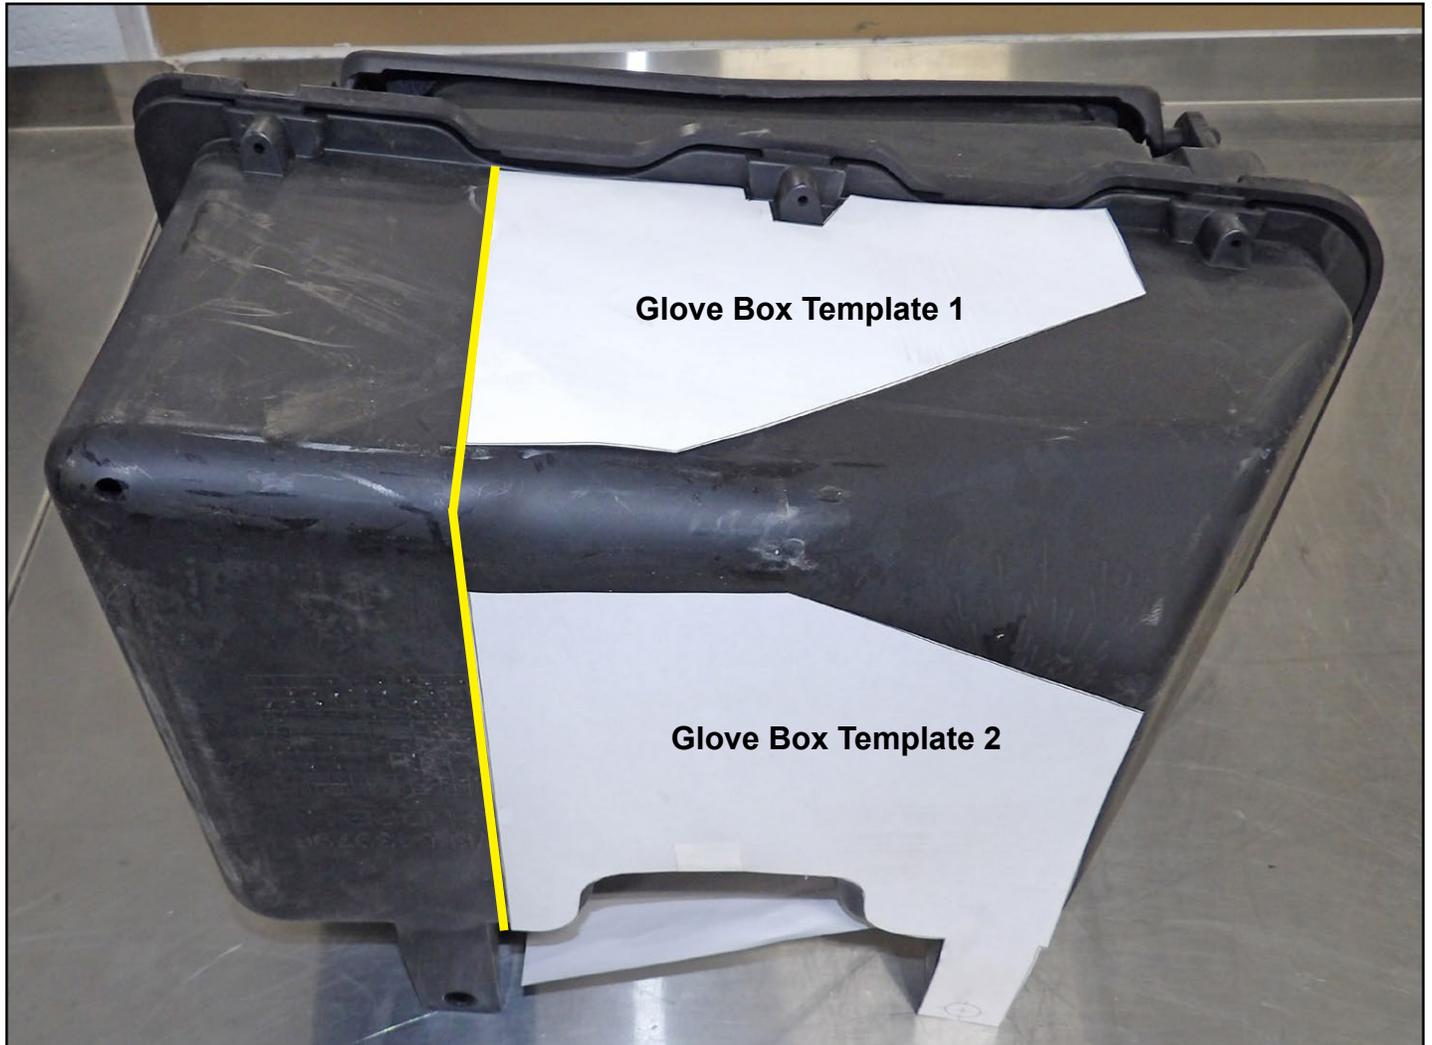





- Install Glove Box Plate to Glove Box with hardware shown.

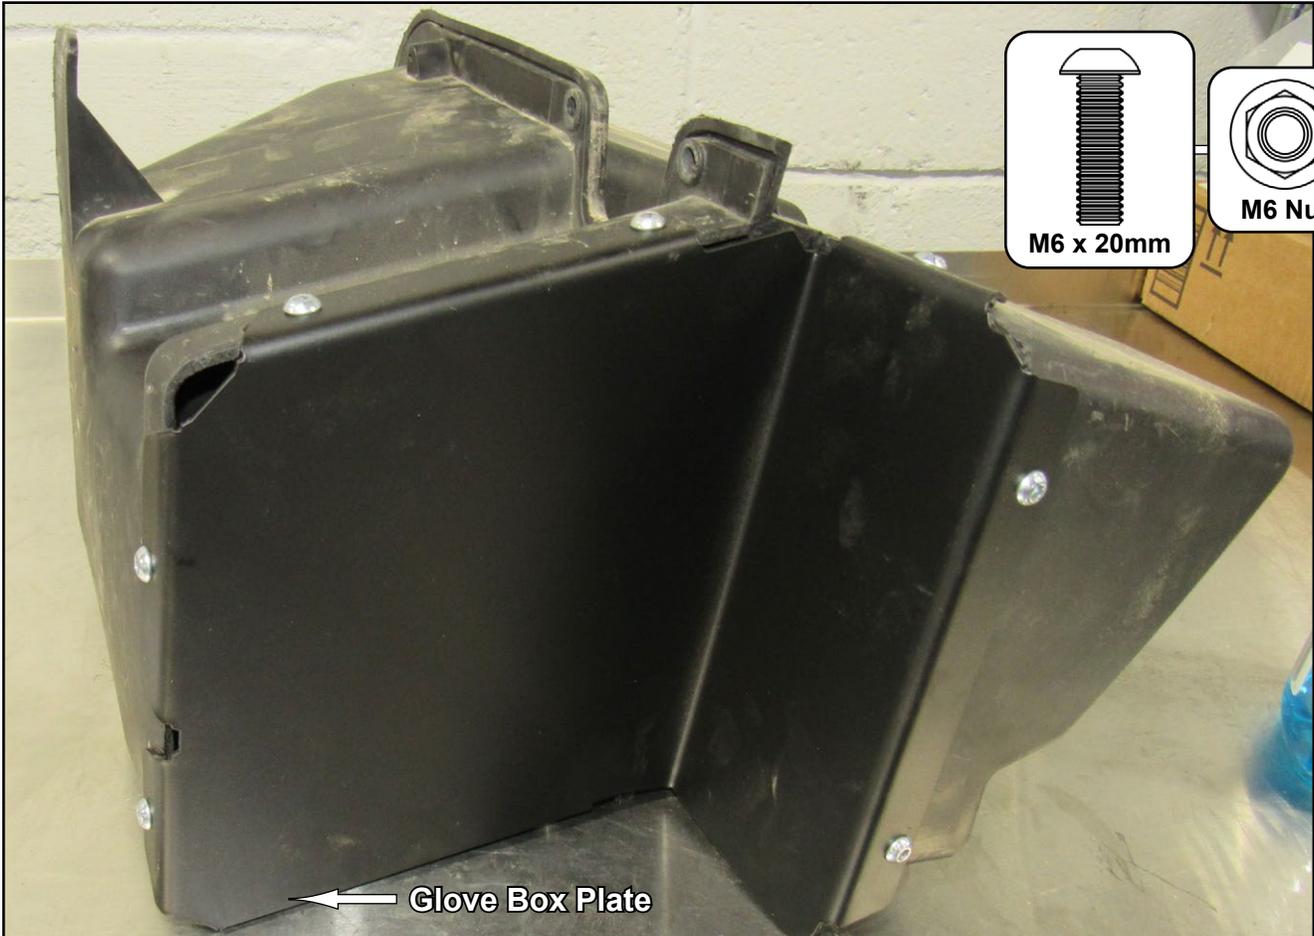



- Install Adapters into Hose Plate.

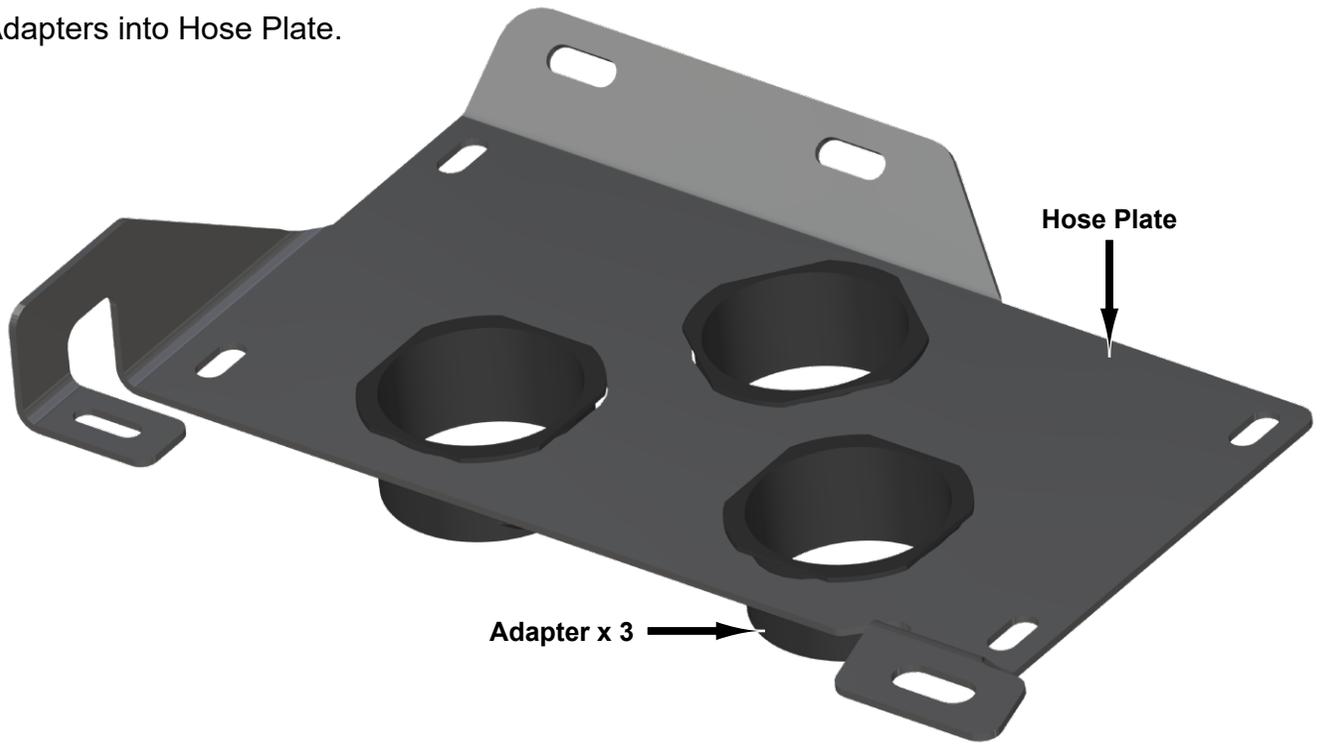

- Install Hose Plate to Blower with hardware shown; tighten.

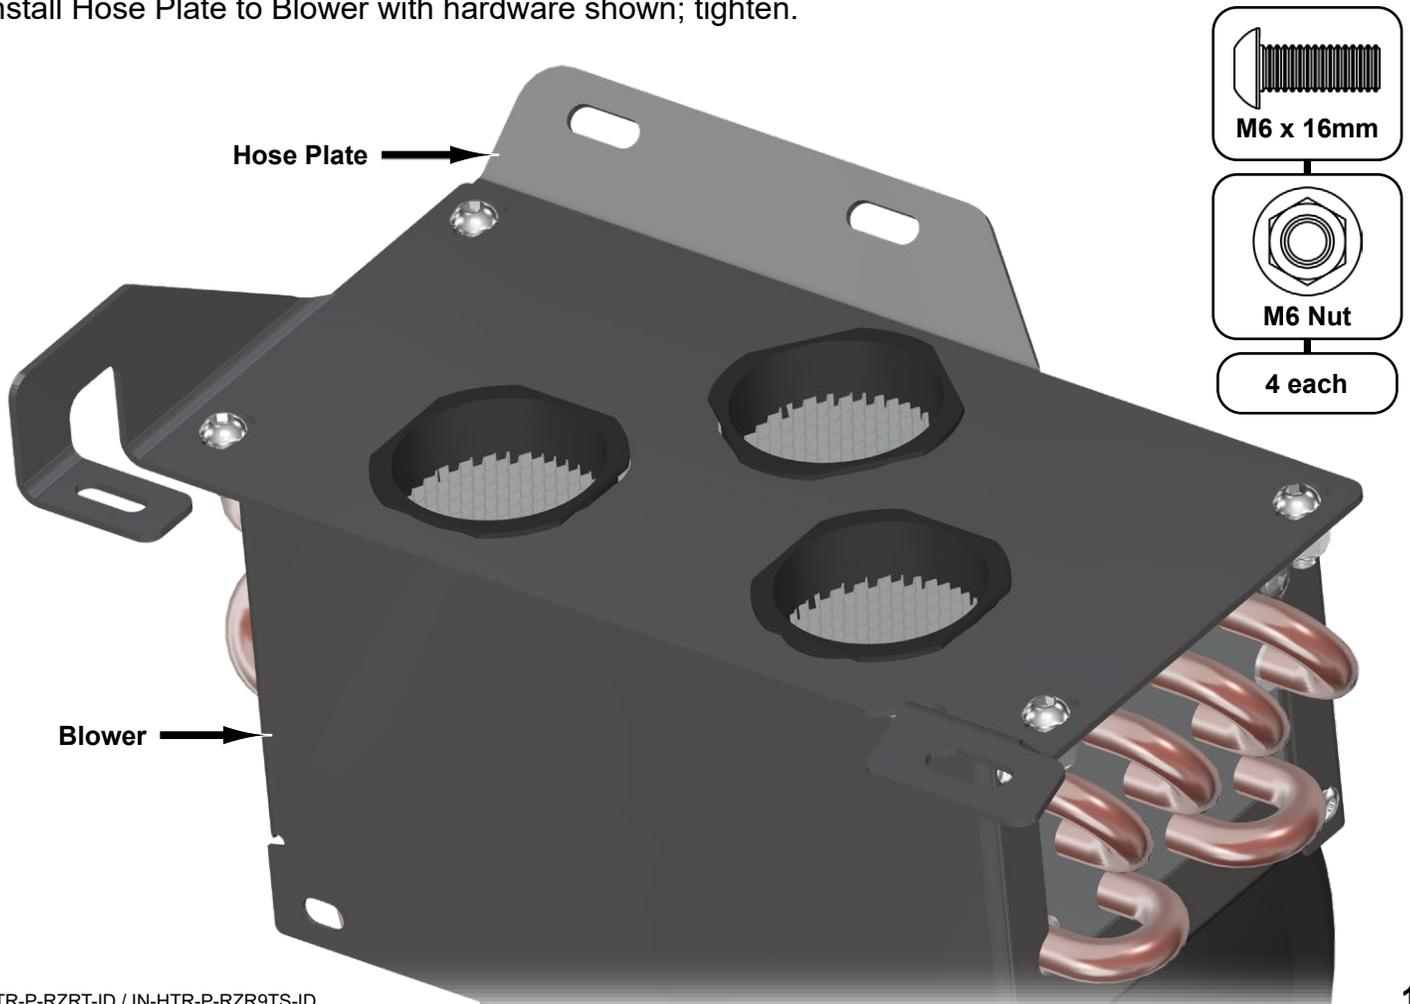

- Connect Blower Harness to Blower.

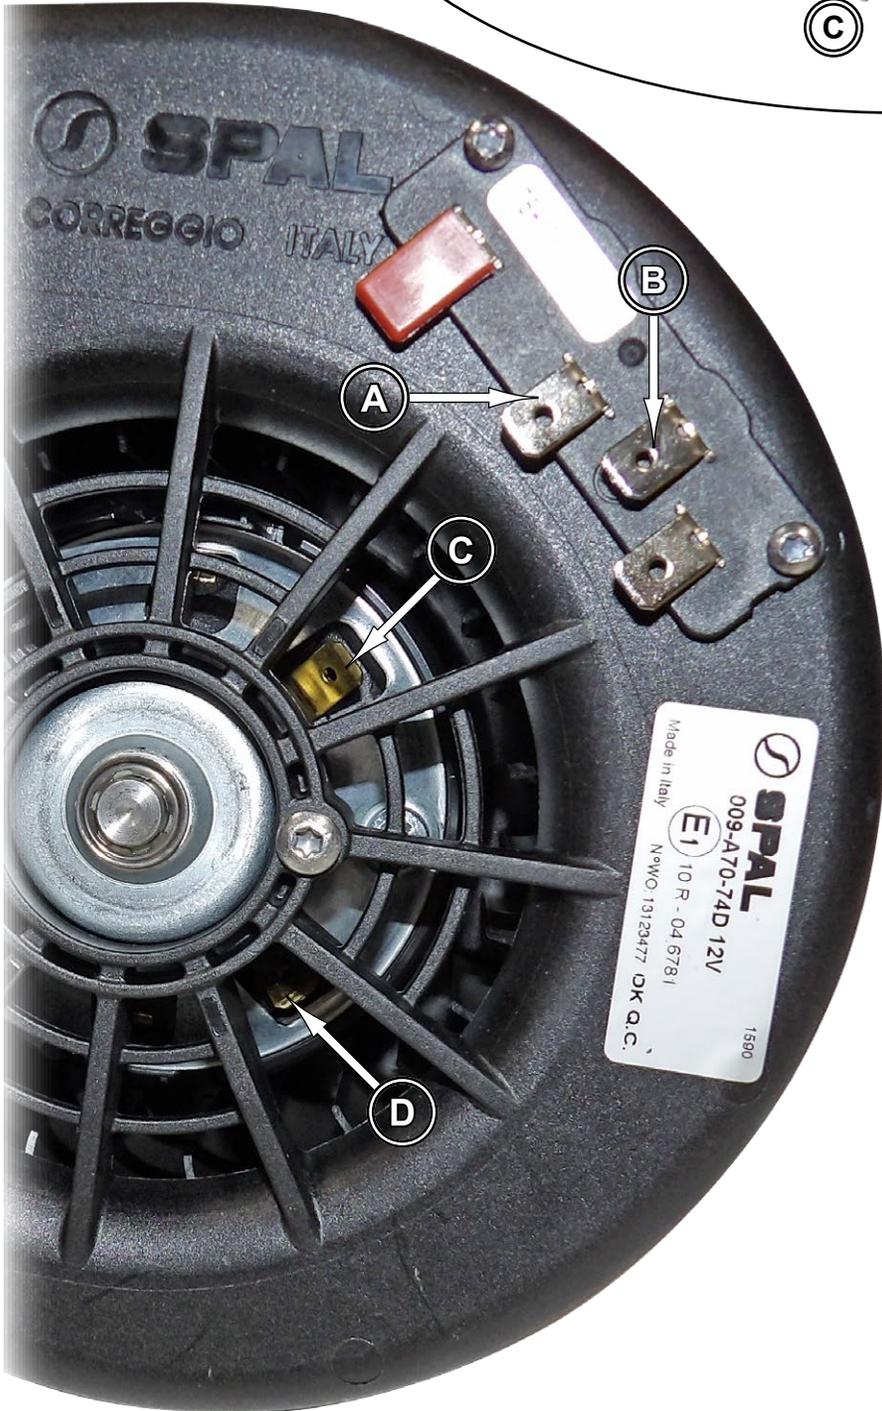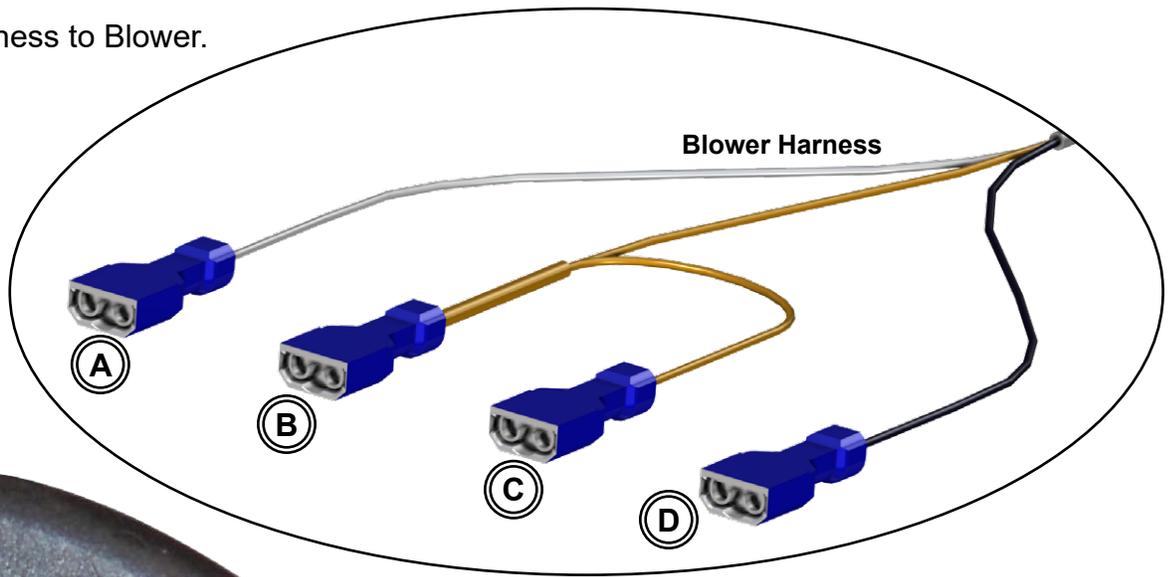

- Place Control Plate onto Double Din and mark hole locations.
- Drill through plastic. Holes to be large enough for Ø6mm hardware.




- Separate Knob and install to Control Plate.

- Separate Vents and install to Control Plate.




Connect Cable, from Valve, to Knob.



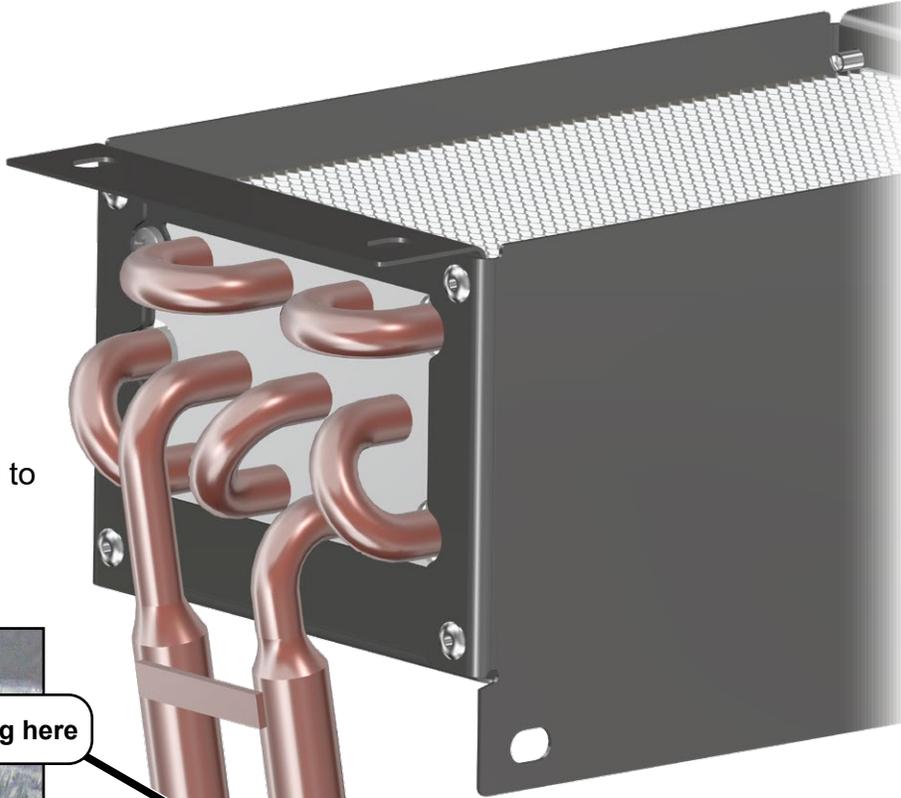


- Cut Tubing to lengths shown and install to Valve. Secure with Clamps.
- Install Elbow as shown.
- Connect to Blower.

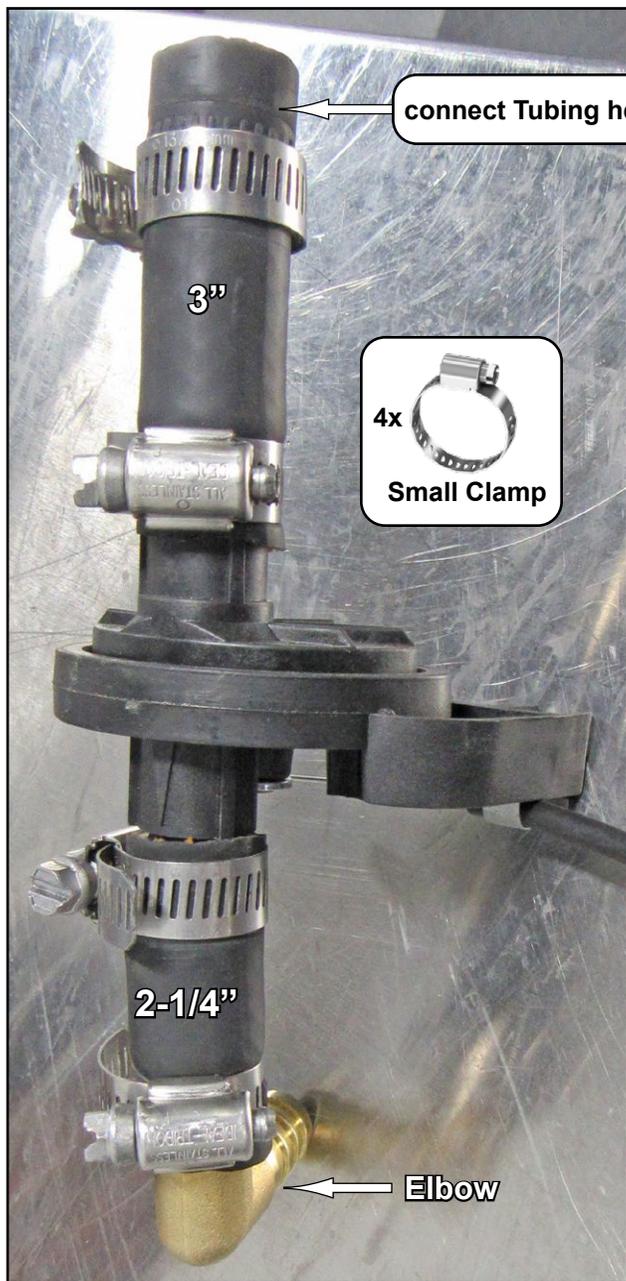




- Cut Ducting to lengths shown and install to Vents.
- Install Y-Fitting to Ducting.
- Secure Ducting with Wire Ties.



- Secure Hose Plate to Frame with hardware shown; tighten.

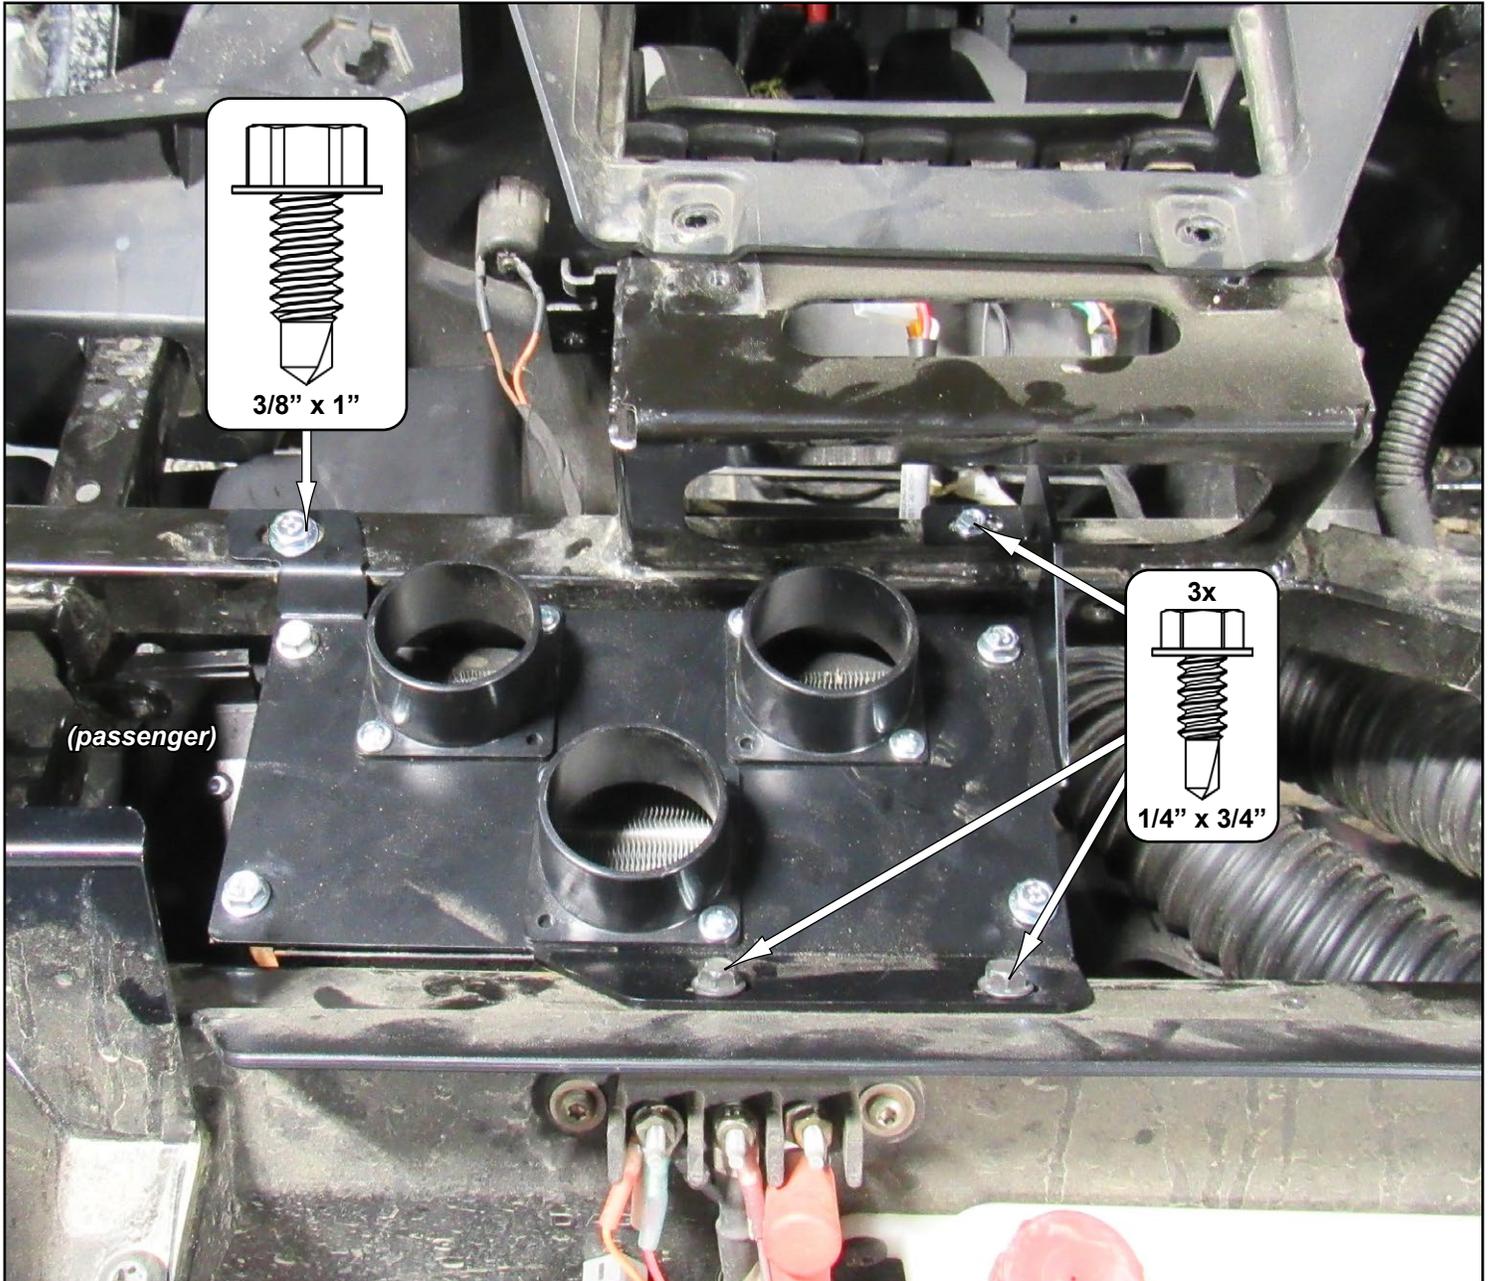


- Tape Templates onto Dash and mark hole locations.
- Remove Templates and cut (2) Ø2-1/2" holes.

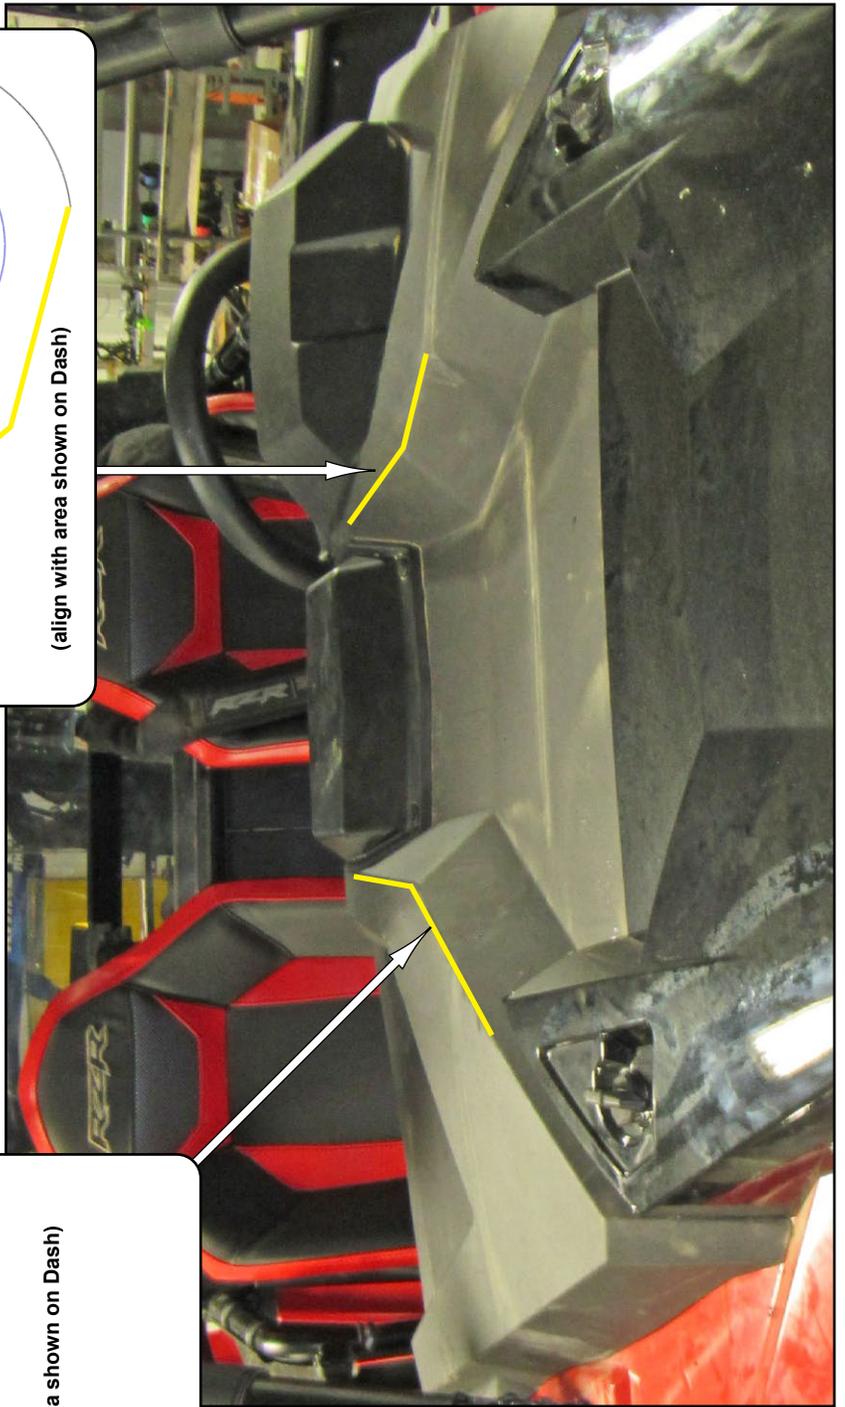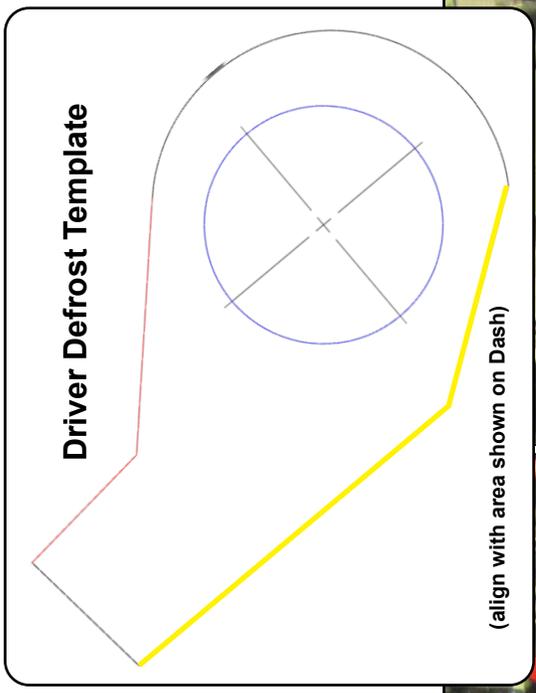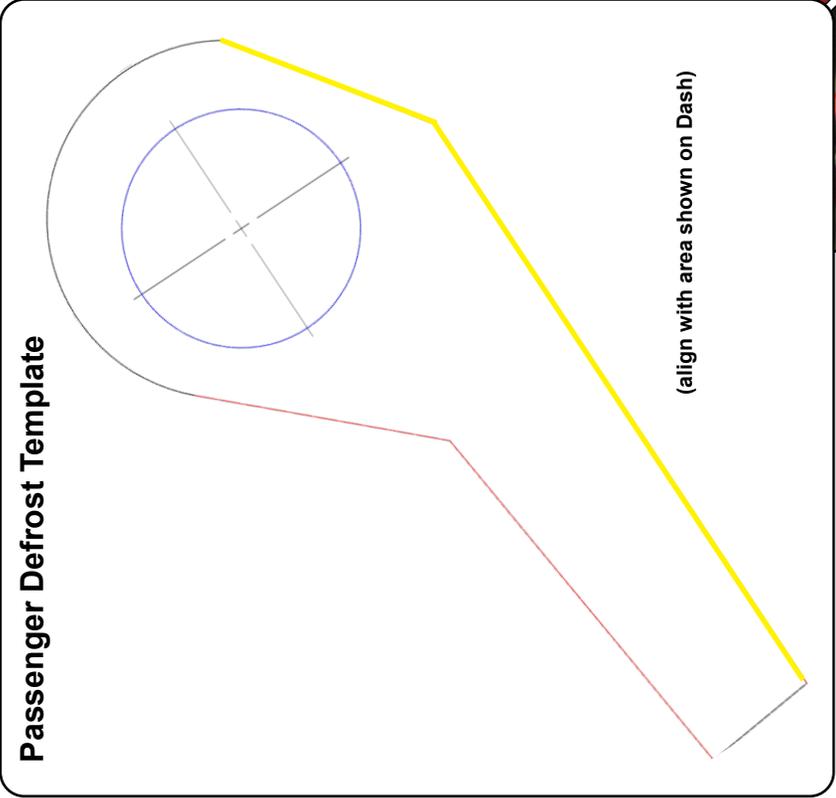




- Install Vents to Dash.

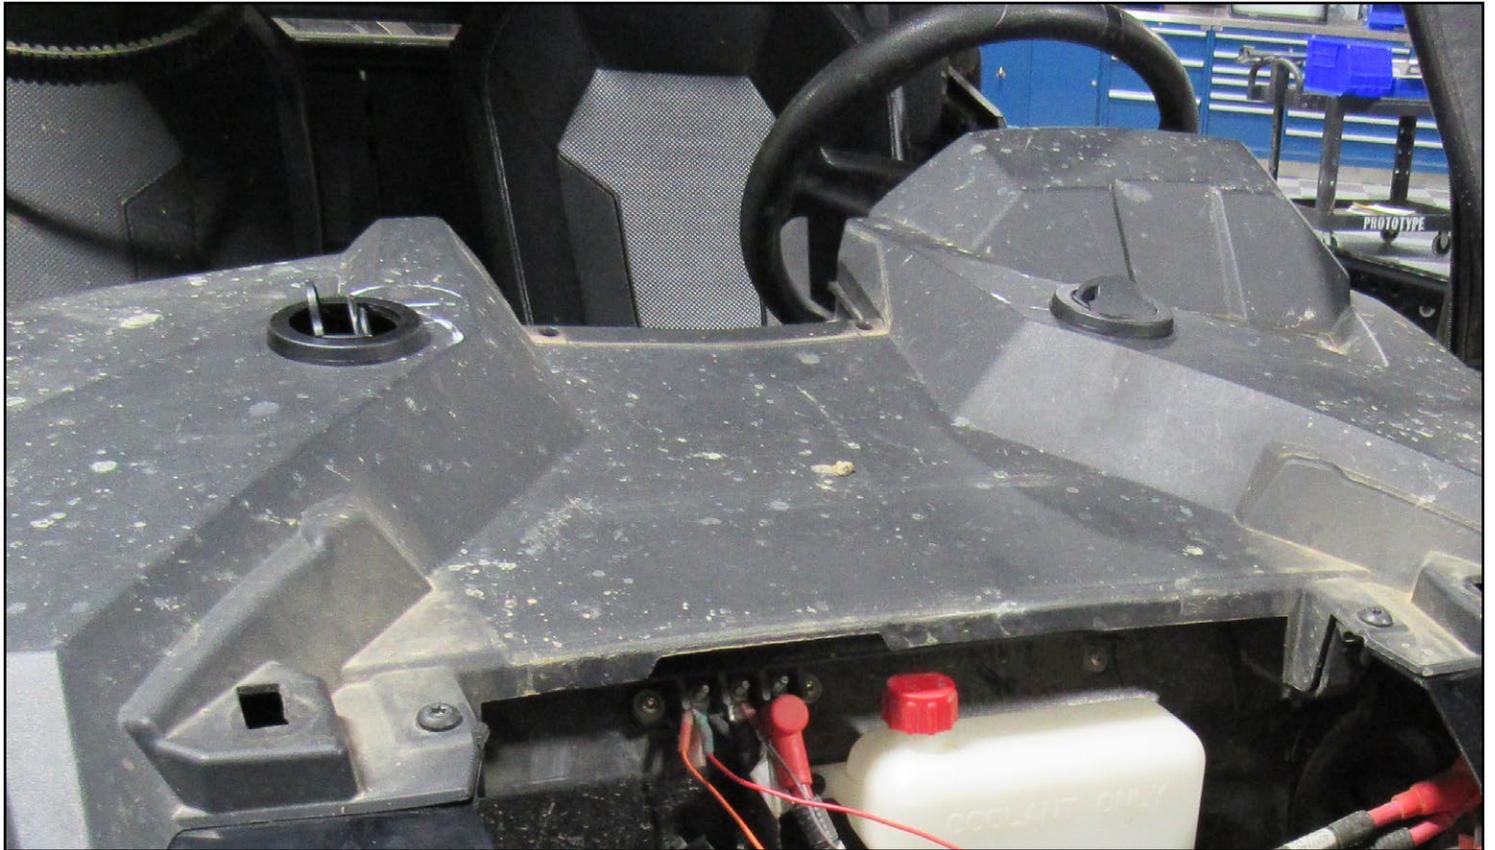

- Install Control Plate and Back Plate to Lower Dash with hardware shown; tighten.

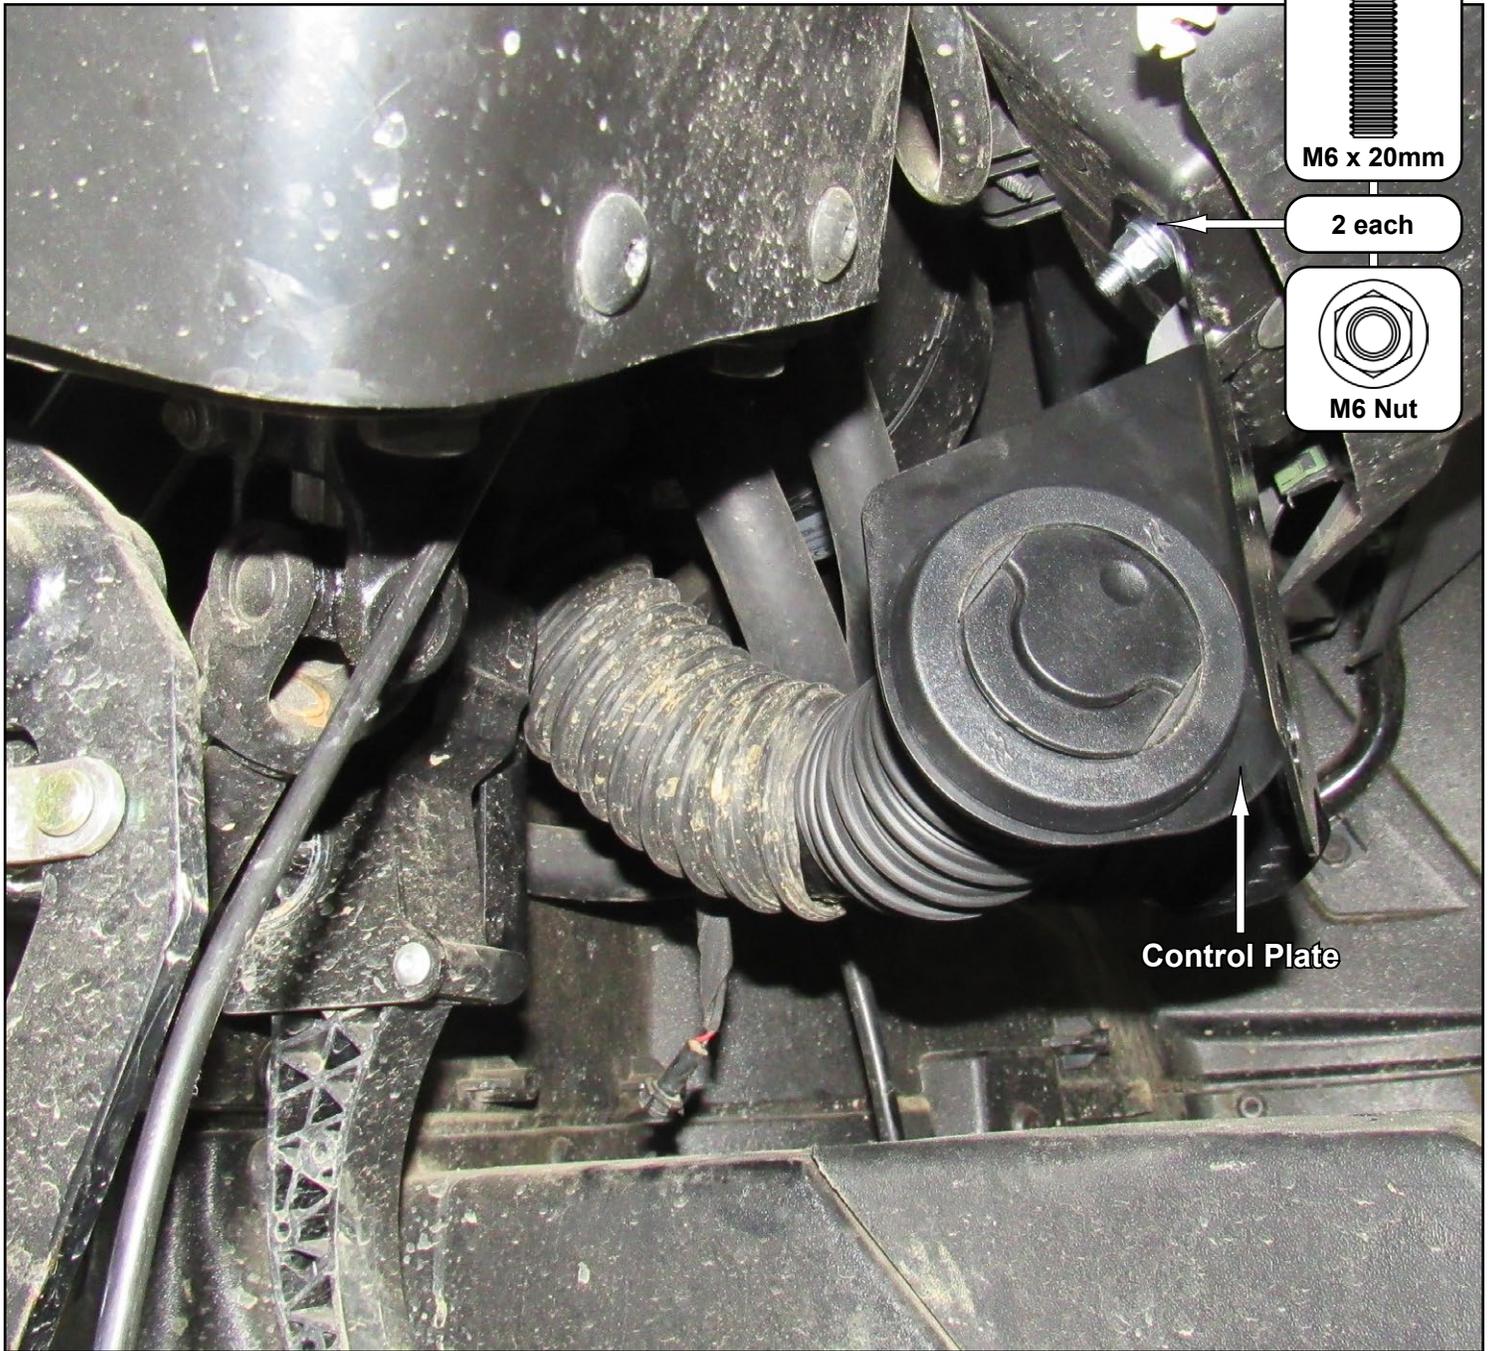

- Cut and install Ducting to Vents, Y-Fitting, and Adapters. Secure with Wire Ties.




- Connect Power Harness to stock ACC Power Supply.
- Connect opposite end to corresponding plug on Blower Harness.


- Raise front of vehicle and place on jack stands.
- Remove Lower Radiator Hose and drain coolant.

To prevent stock Radiator Hoses from being cut short, use provided Adapters as templates.





- Mark locations on stock Outlet Hose to be cut.
- Cut and secure to Adapter with provided Large Clamps.

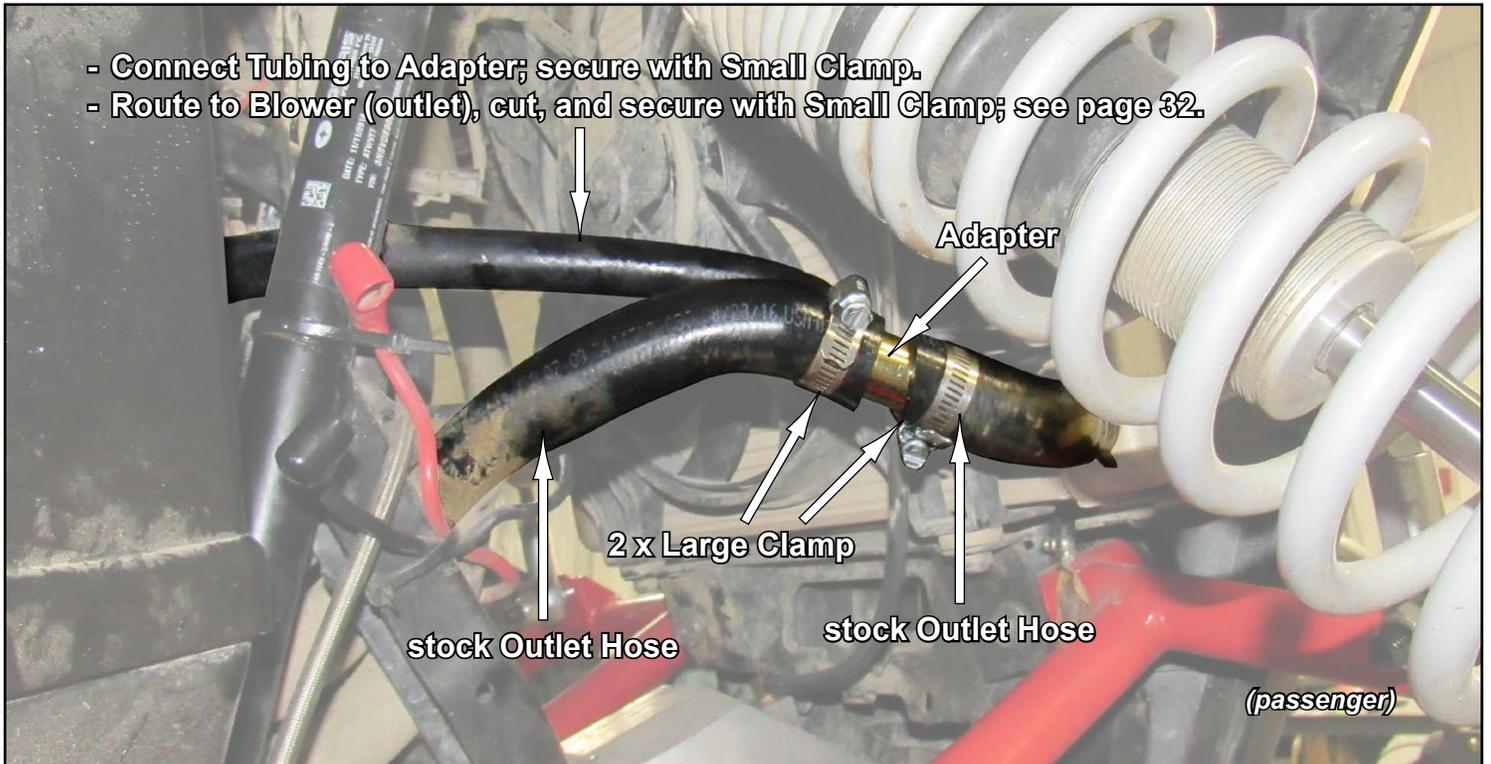

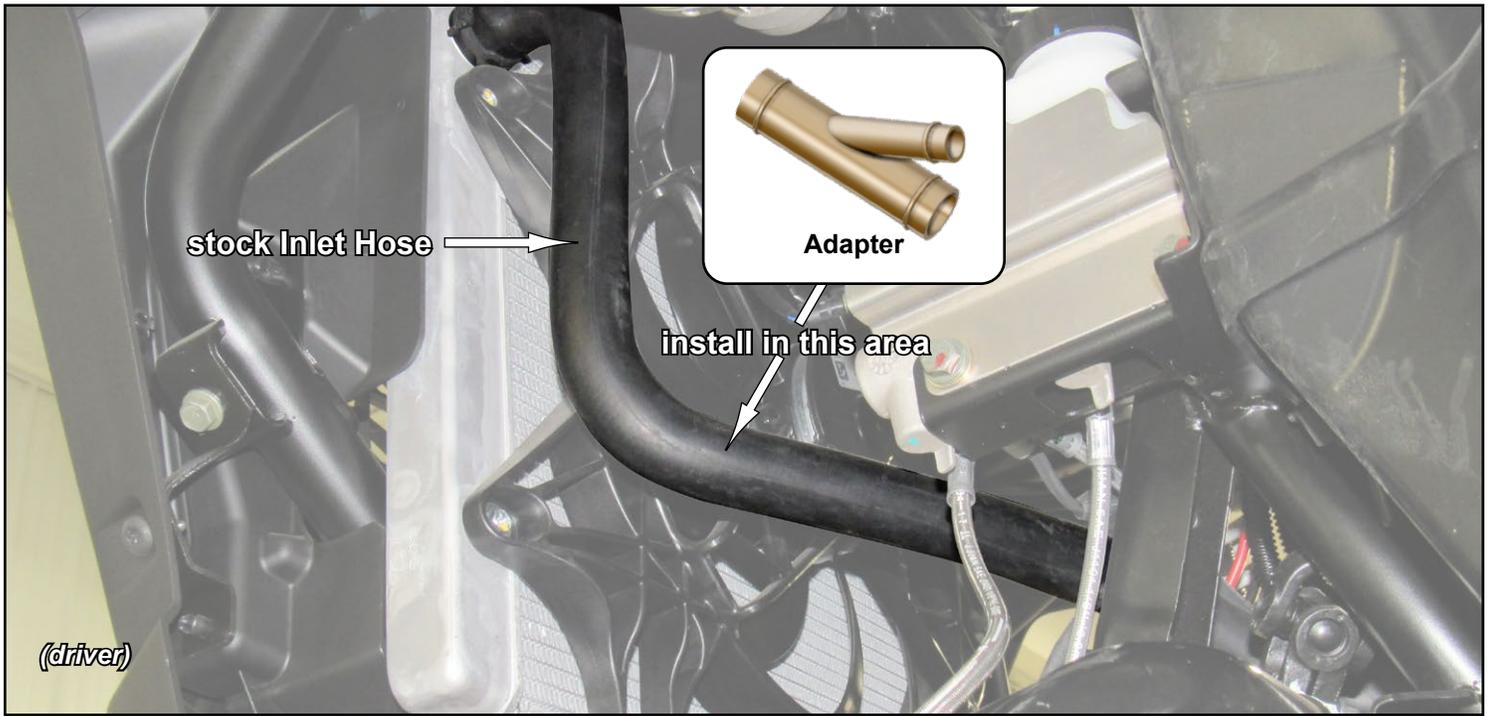


- Mark locations on stock Inlet Hose to be cut.
- Cut and secure to Adapter with provided Large Clamps.

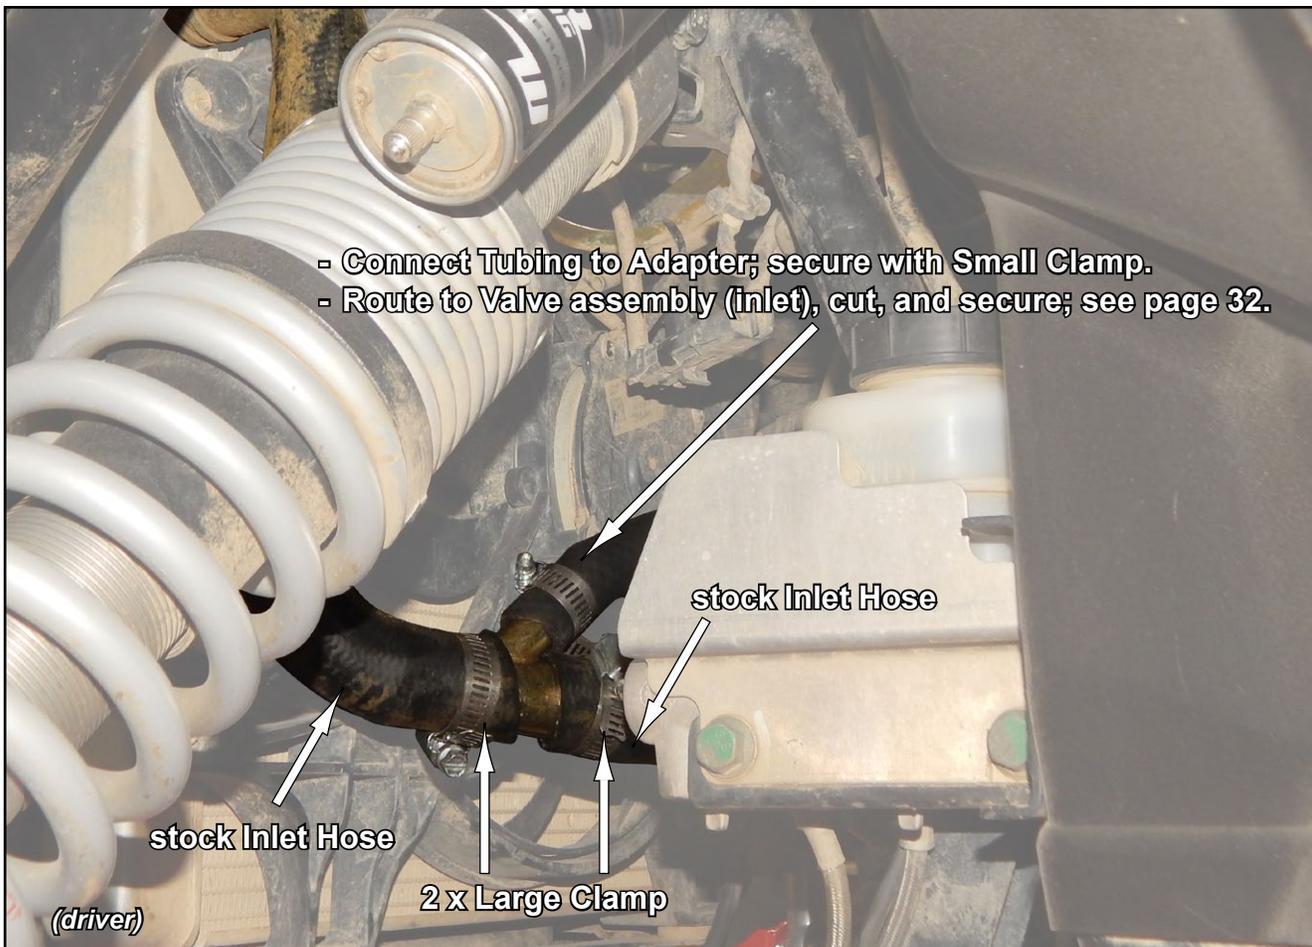


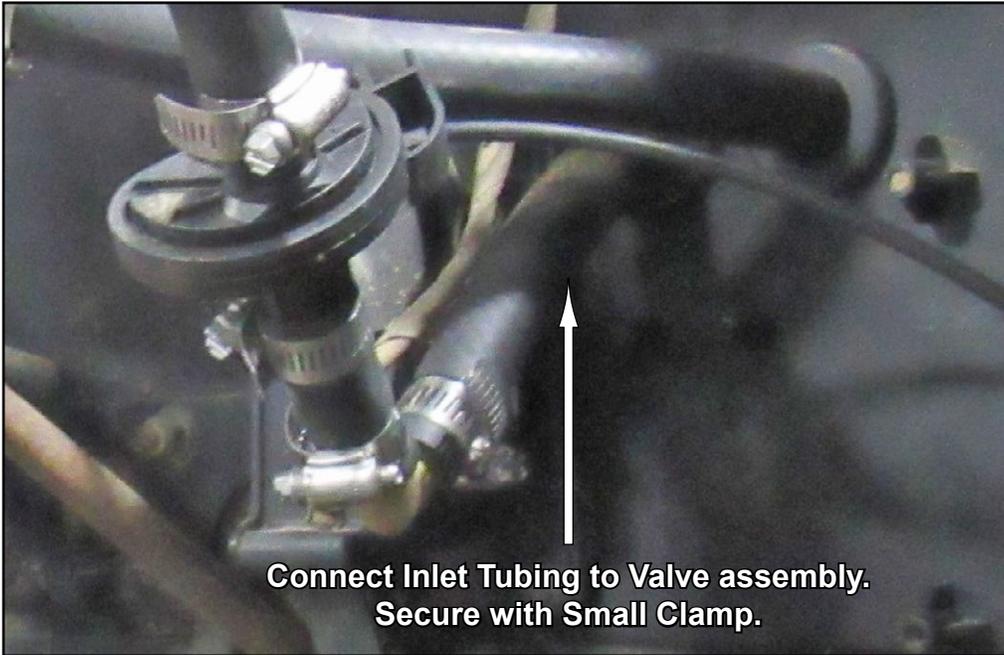


Connect Inlet Tubing to Valve assembly.
Secure with Small Clamp.

- Use Small Clamps to connect and secure Tubing to Blower.

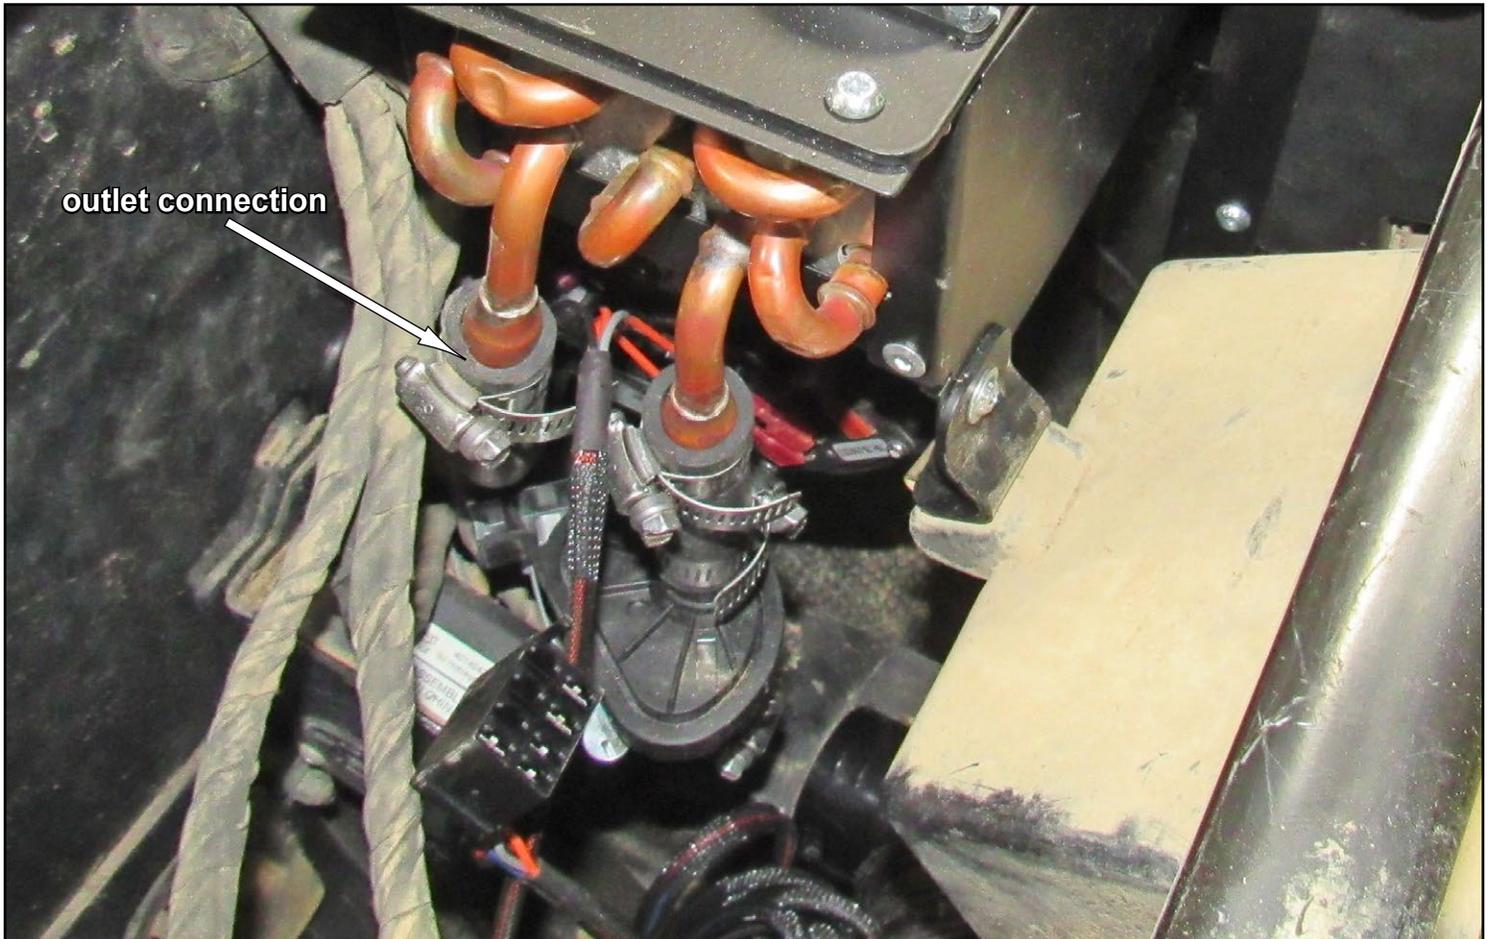


- Install Switch and connect Blower Harness.

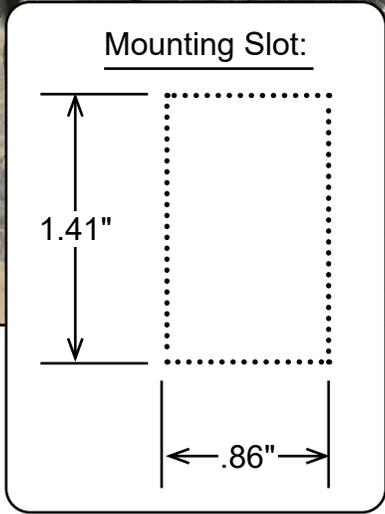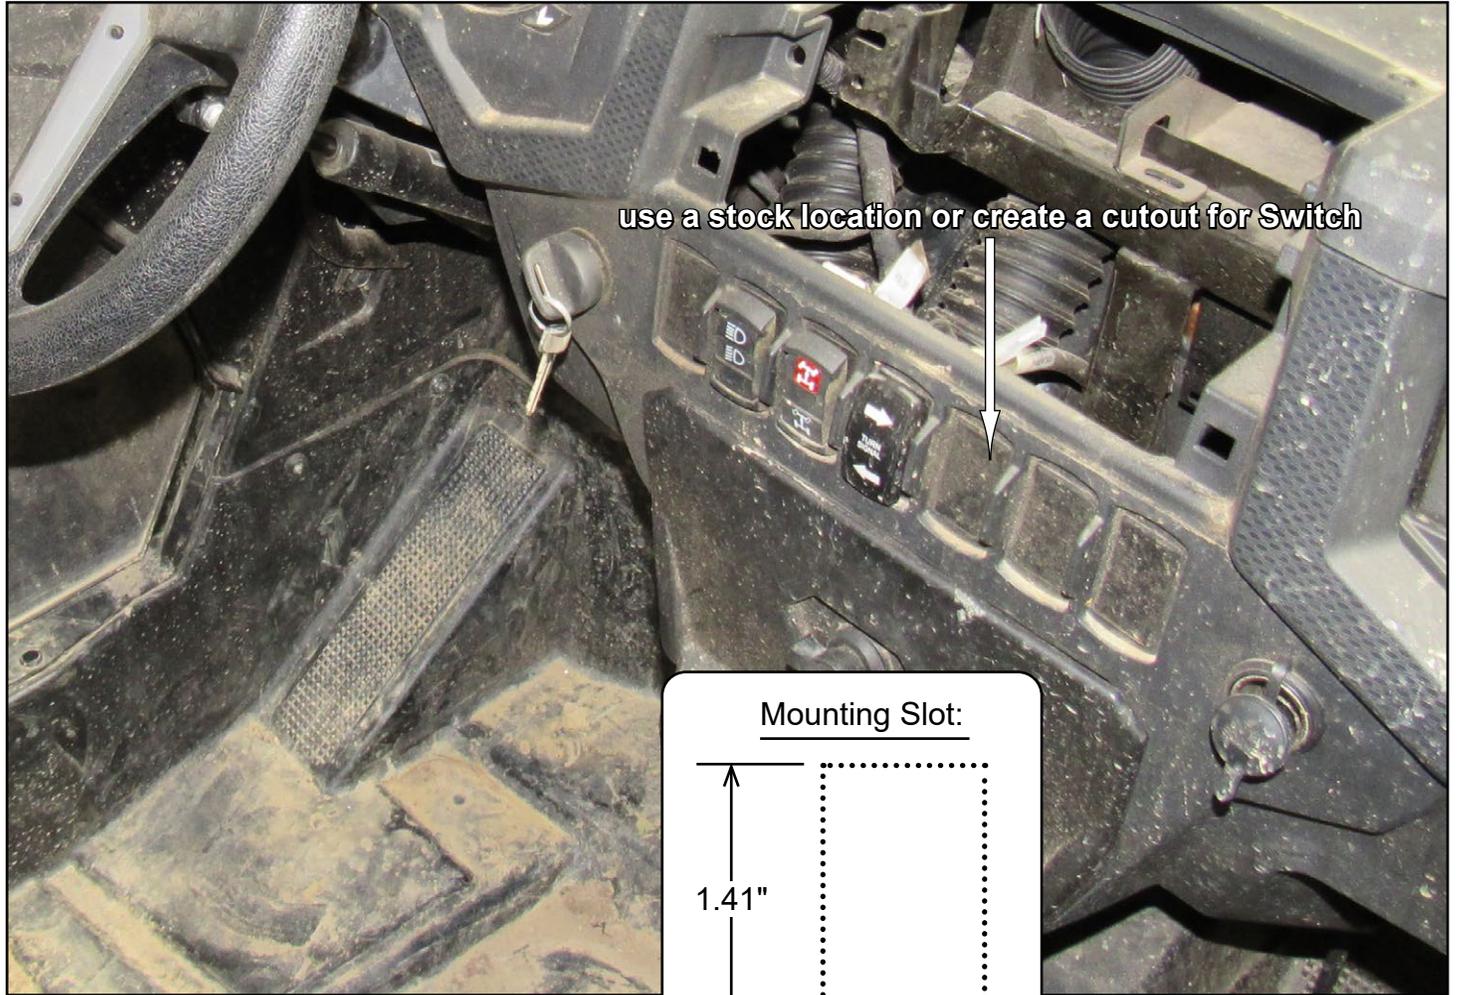


SKU: HTR-P-RZR9TS-ID

- Relocate Amplifier to provided Bracket with provided hardware; tighten.
- Secure to location shown with stock hardware.

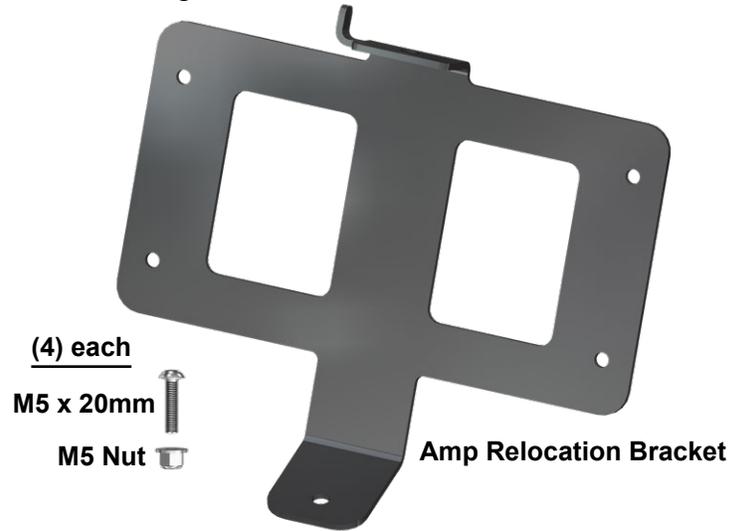

- Fill coolant level to manufacturers recommended setting.
- Start machine and run at 3000 RPM until engine is hot.
- Use provided Hose Pliers and pinch off Inlet Hose as shown below.

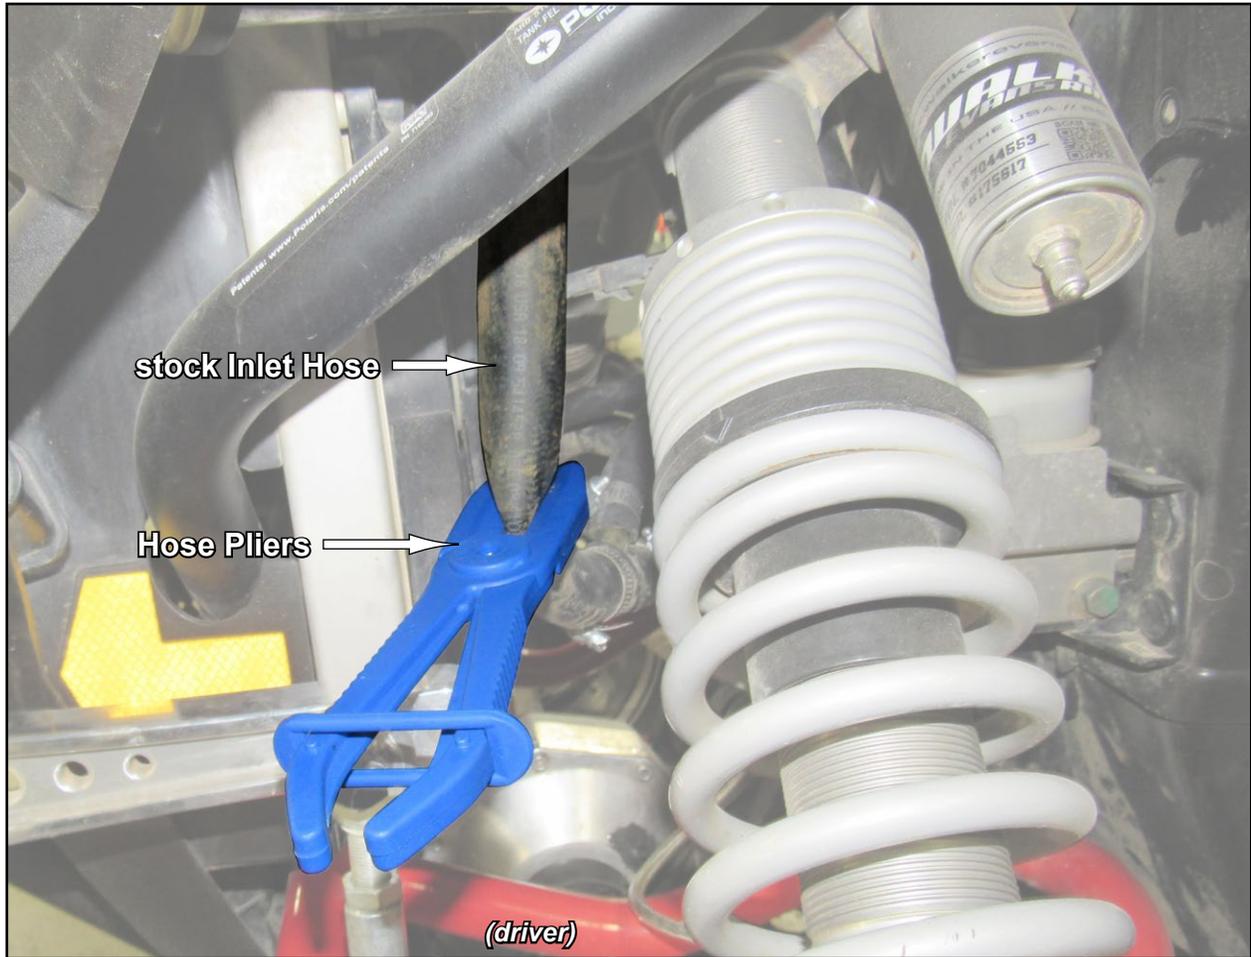

- Remove Hose Pliers after Radiator Fan turns ON.
- After Radiator Fan turns OFF, pinch Inlet Hose again and remove after Radiator Fan turns ON.
- Turn machine off and let engine completely cool; may take several hours.
- Check Coolant Level in Radiator and Reservoir; adjust as needed.
- Start machine and repeat “pinch” steps again.

CUSTOMER NOTIFICATION AND DISCLAIMER LIABILITY

This product is a modification for utility task vehicles and all terrain vehicles. Use this product at your own risk.

Warranty and Liability Limitations. The Buyer hereby assumes all risks associated with the use and/or installation of this product. Buyer waives all liability claims against SuperATV® of any kind or nature, including, but not limited to, liability for penalties, fines, property damage, personal injury or death, to the fullest extent permitted by law. Buyer acknowledges and agrees that SuperATV® is not liable for any direct, indirect, incidental, consequential or special damages, including but not limited to, damage, loss of life, loss of property or equipment, loss of profits or revenue, injury, or claims from any individual or entity arising from the use of this product.

The warranty for this product, if any, may give you (“Buyer”) specific legal rights, and Buyer may also have other rights which may vary from state to state. The installation of this product may void or otherwise adversely affect your factory warranty.

Consult your vehicle warranty before using this Product. Under no circumstances will SuperATV® be liable for the voidance of the Buyer’s vehicle warranty. Buyer assumes all risk and responsibility if a manufacturer and/or dealer voids the Buyer’s vehicle warranty due to use of this Product.

Safety and Laws. Operate your vehicle at all times in a safe manner. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you. The installation of this product may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of this product on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of this product. In no case will SuperATV® be held liable if Buyer violates the law or uses the product in an unsafe manner.

The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.

Installation. The installation of this product on your vehicle indicates that you have had the opportunity to inquire about applicable local, state, and federal laws and ordinances and that you have read and understand, and accept all of the terms of, this Disclaimer.

SuperATV® shall not be responsible for the proper installation, use, and service of this product. Rather, the Buyer shall be solely responsible for the installation of the product and any damage that may be done to the vehicle or vehicle components as a result of modifications made by the Buyer.