

Heater Kit: for Polaris Ranger® 570

Do not discard packaging until product has been successfully installed.



(kit contents continue on following page)

Need help with your installation?



sales@superatv.com



www.superatv.com



1-855-743-3427




8:00am - 8:00pm EST M-Th
 8:00am - 7:00pm EST Friday
 9:00am - 2:00pm EST Saturday

Read instructions and view illustrations before beginning.

*Thank You
 For Choosing*



(kit contents continued)

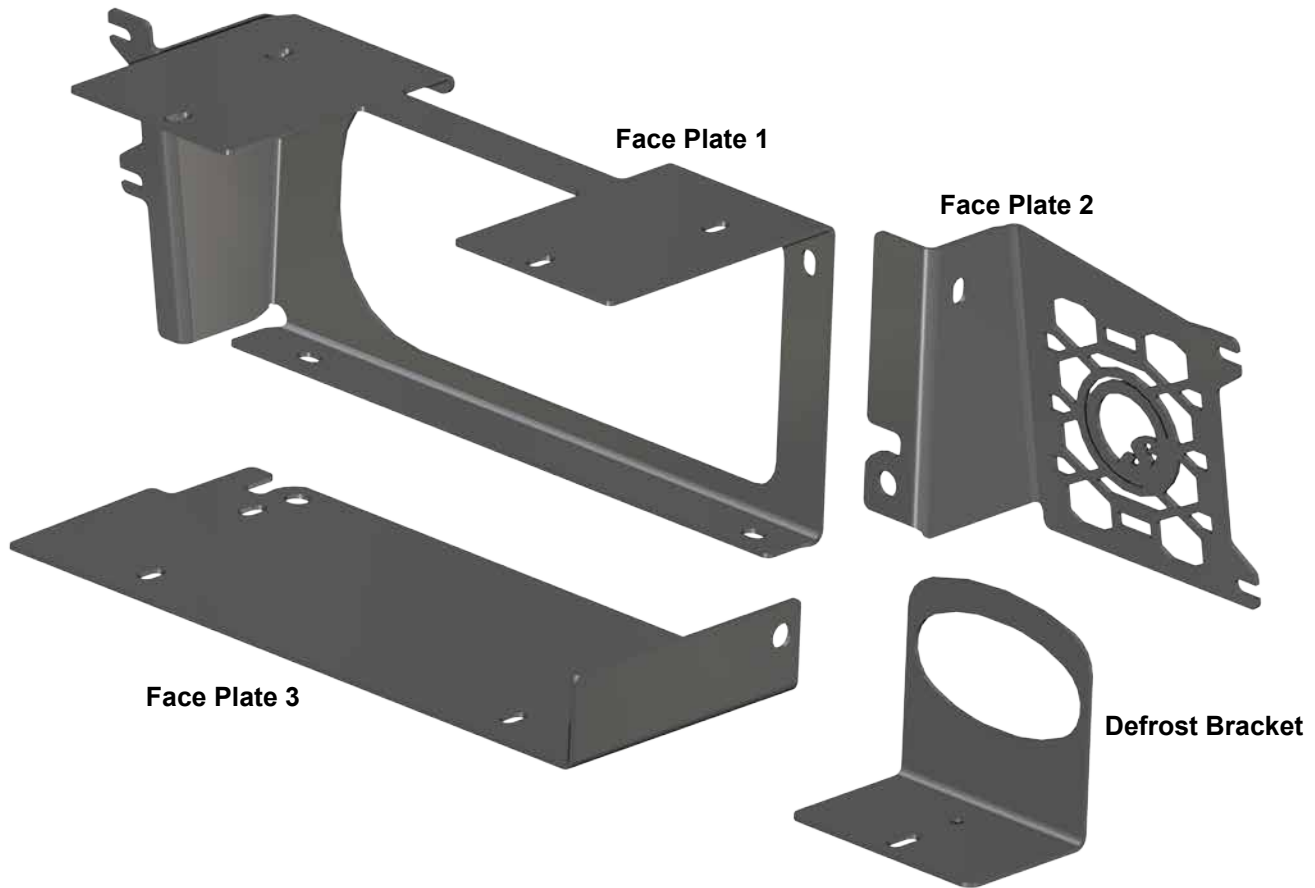

- *Tube and Duct lengths are SuperATV recommended. User may install components in other locations. Verify lengths before final installation.*
- *Check behind areas being drilled for interference.*
- *Avoid burns and scalding by working on cool vehicles.*
- *Secure components away from rotating objects.*
- *Do not tighten mounting hardware until all components are in place.*
- *Use manufacturers recommended coolant.*
- *Avoid sharp bends when installing Tubing.*
- *Verify that no leaks are present after installation.*

CUSTOMER NOTIFICATION AND DISCLAIMER LIABILITY

This product is a modification for utility task vehicles and all terrain vehicles. Use this product at your own risk.

Warranty and Liability Limitations. The Buyer hereby assumes all risks associated with the use and/or installation of this product. Buyer waives all liability claims against SuperATV® of any kind or nature, including, but not limited to, liability for penalties, fines, property damage, personal injury or death, to the fullest extent permitted by law. Buyer acknowledges and agrees that SuperATV® is not liable for any direct, indirect, incidental, consequential or special damages, including but not limited to, damage, loss of life, loss of property or equipment, loss of profits or revenue, injury, or claims from any individual or entity arising from the use of this product.

The warranty for this product, if any, may give you ("Buyer") specific legal rights, and Buyer may also have other rights which may vary from state to state. The installation of this product may void or otherwise adversely affect your factory warranty.

Consult your vehicle warranty before using this Product. Under no circumstances will SuperATV® be liable for the voidance of the Buyer's vehicle warranty. Buyer assumes all risk and responsibility if a manufacturer and/or dealer voids the Buyer's vehicle warranty due to use of this Product.

Safety and Laws. Operate your vehicle at all times in a safe manner. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you. The installation of this product may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of this product on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of this product. In no case will SuperATV® be held liable if Buyer violates the law or uses the product in an unsafe manner.

The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.

Installation. The installation of this product on your vehicle indicates that you have had the opportunity to inquire about applicable local, state, and federal laws and ordinances and that you have read and understand, and accept all of the terms of, this Disclaimer.


SuperATV® shall not be responsible for the proper installation, use, and service of this product. Rather, the Buyer shall be solely responsible for the installation of the product and any damage that may be done to the vehicle or vehicle components as a result of modifications made by the Buyer.

Verify wiring shown below is connected before installing.

- Open Vent, insert finger, and pull Controls away from Base.



- If not connected, connect orange wire to Tab shown.

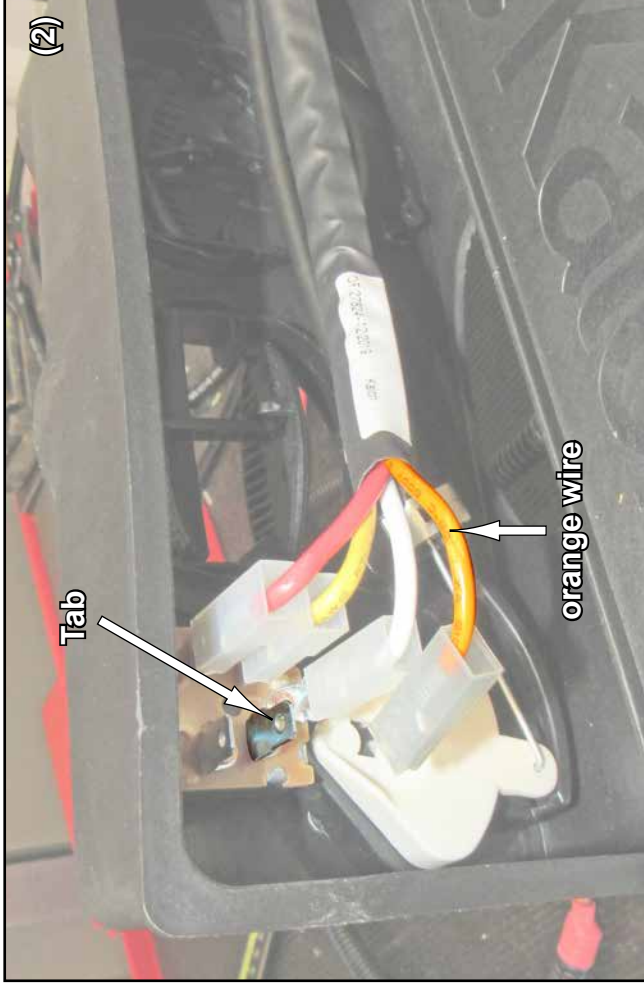


- Verify that all connections shown are connected and secure.
- Push Controls back into Base.







- Install provided Clip Nuts to Face Plate 3 and Face Plate 2

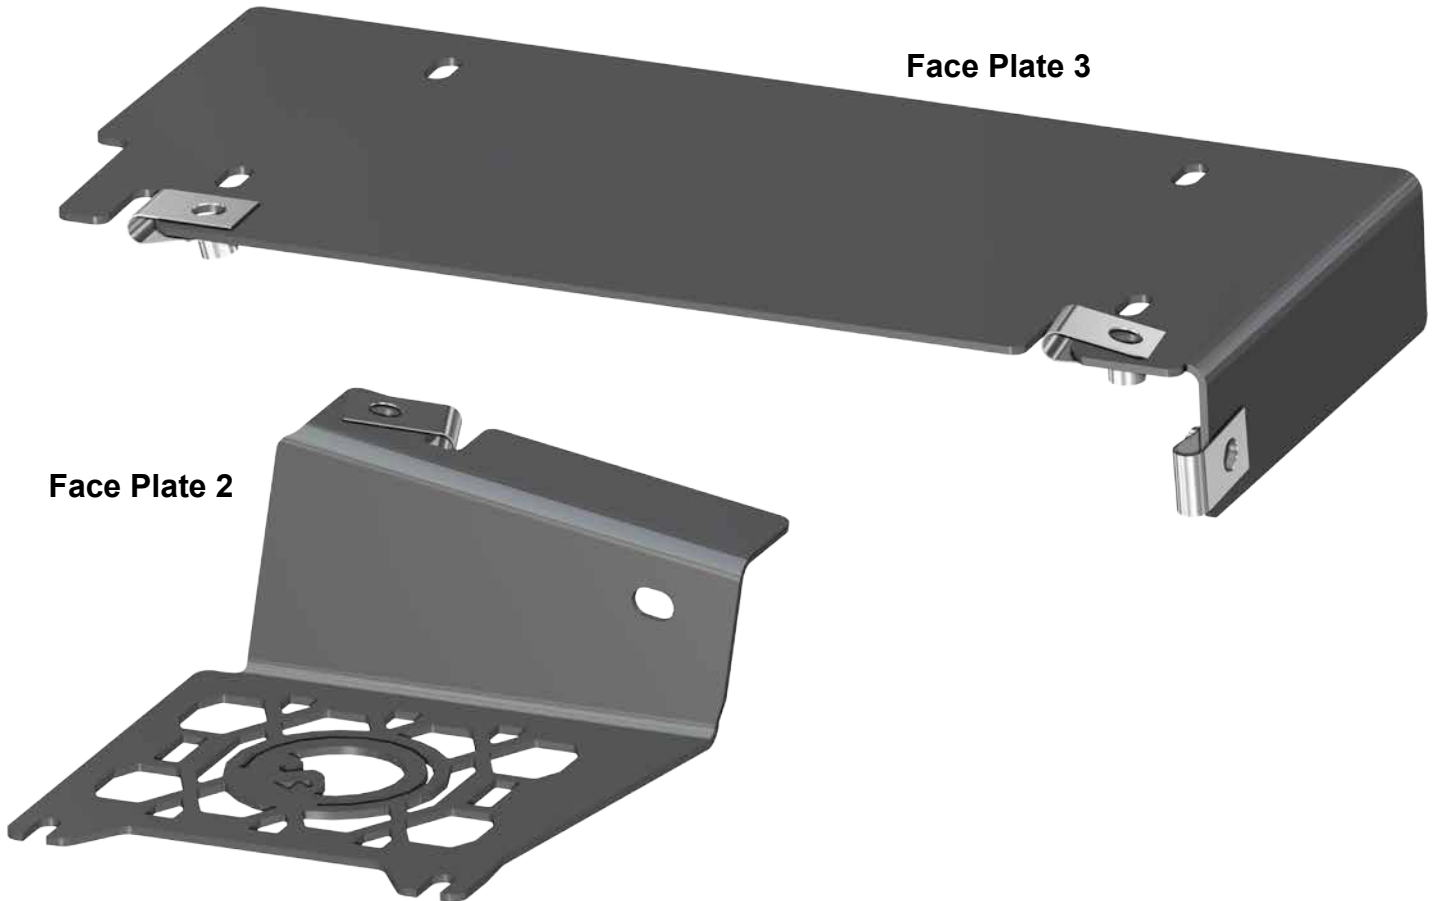


- Install Face Plate 1 to Blower with hardware shown; tighten.

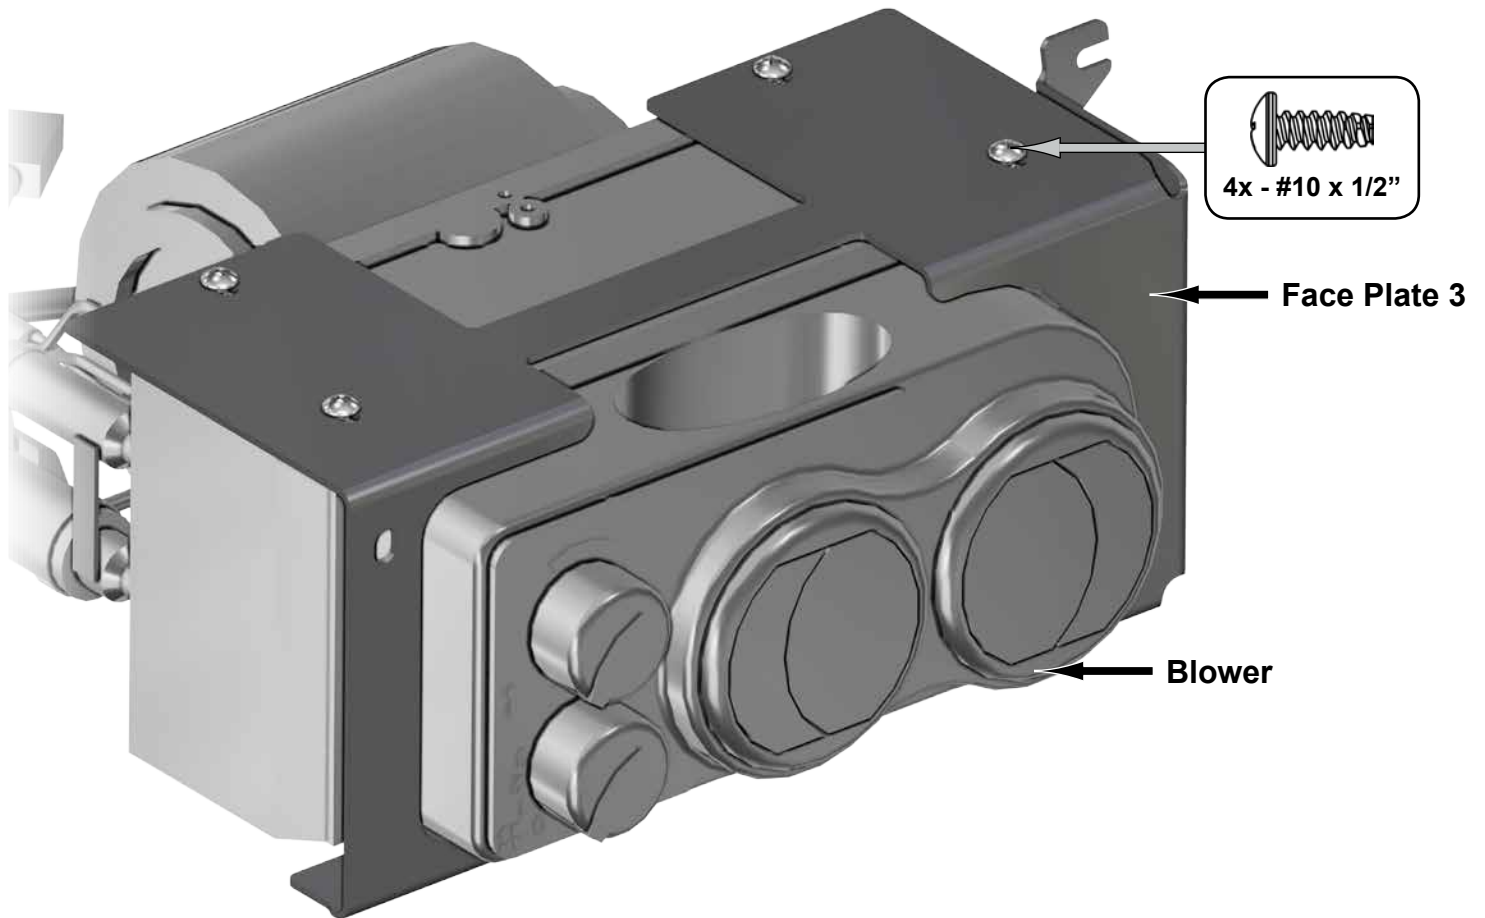


- Install Face Plate 3 to Blower and Face Plate 1 with hardware shown; tighten.

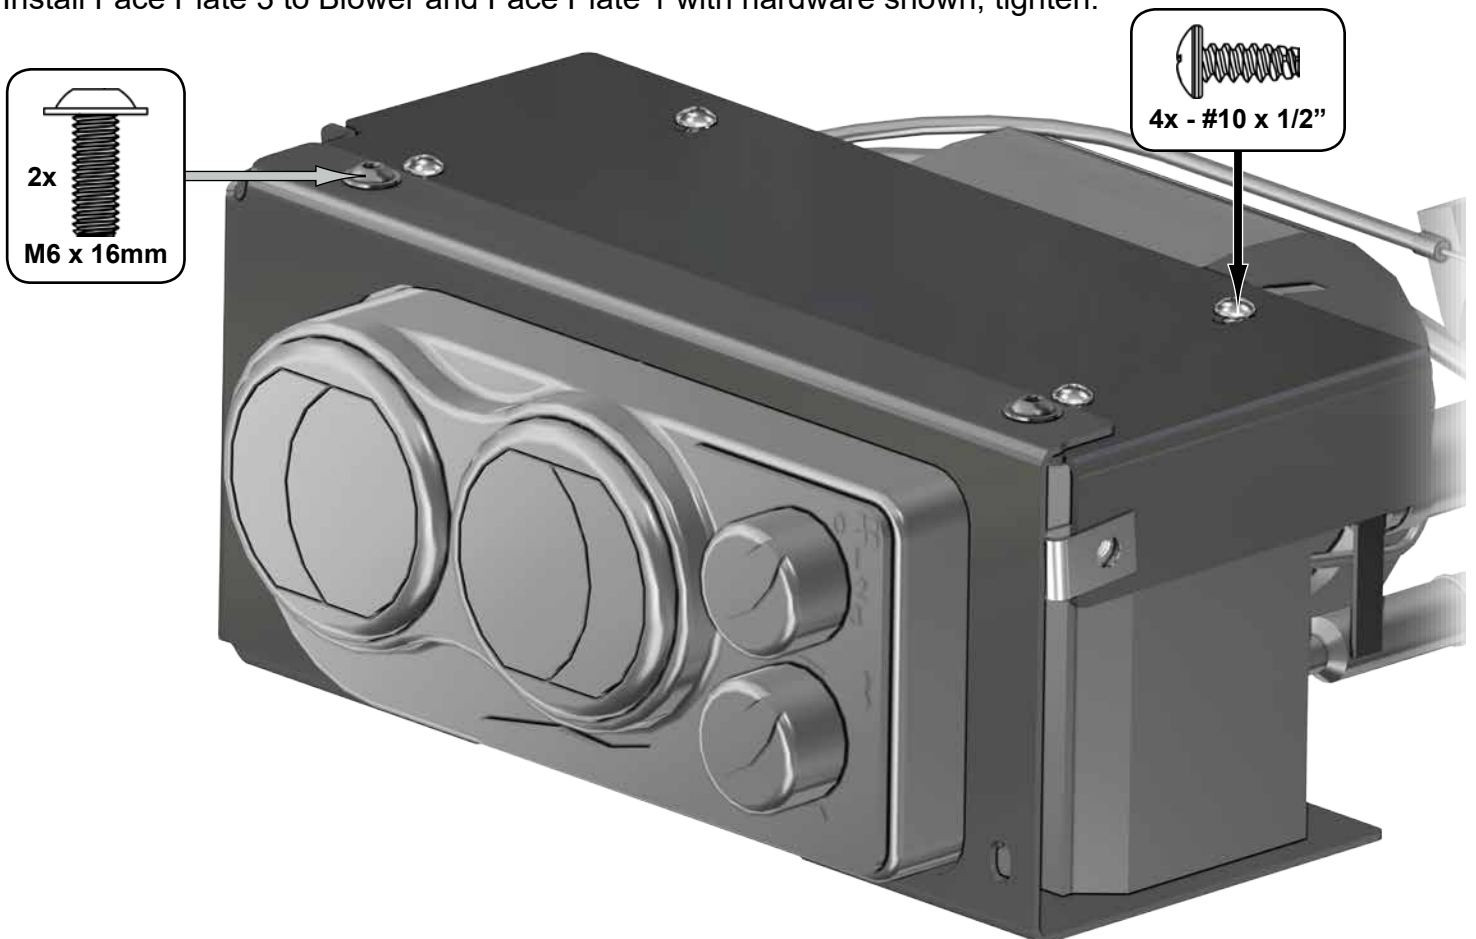

- Install Elbow into Blower.
- Place Defrost Bracket onto Elbow. Secure to Blower with hardware shown; tighten.

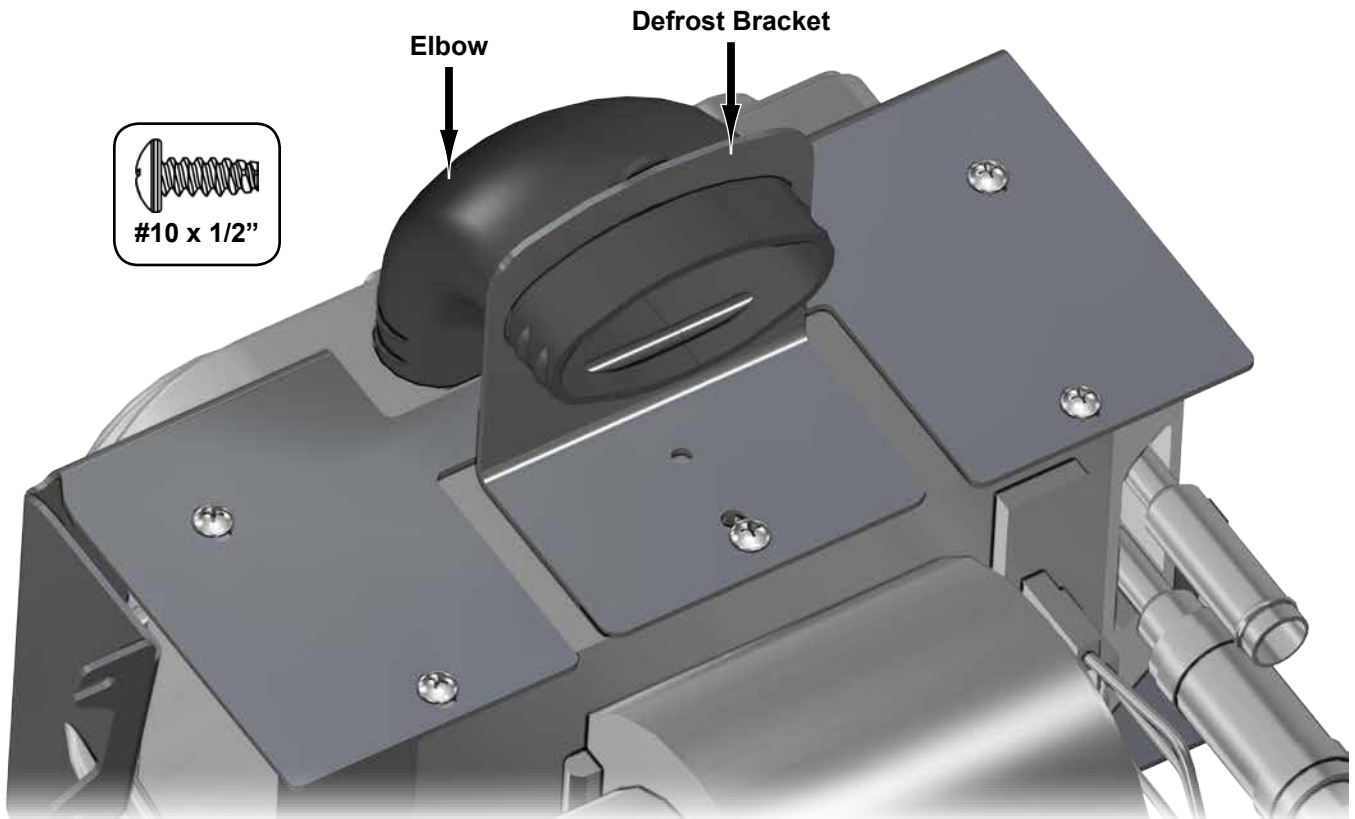

- Install Face Plate 2 to Face Plate 1 with hardware shown; tighten.

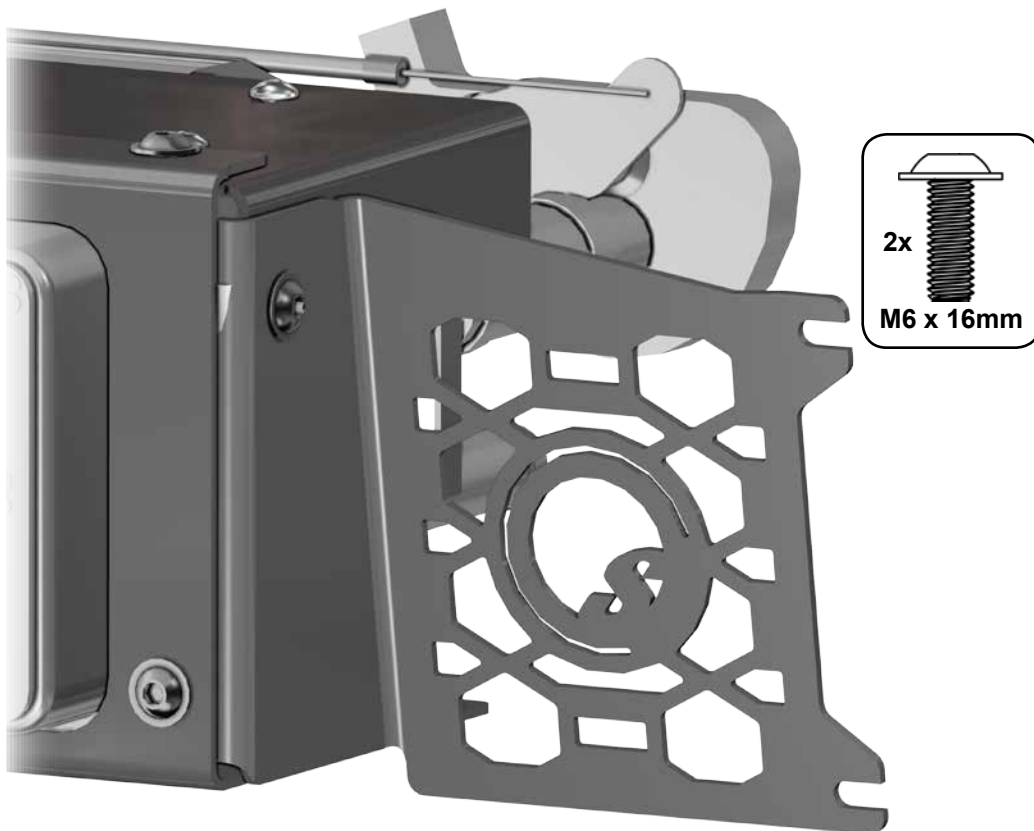

- Cut and install Tubing to Blower.
- Secure with provided Clamps.



Remove Panel. Reinstall after Heater installation is complete.



- Place Grommet onto Firewall and next to Frame.
- Mark inside hole of Grommet onto Firewall.
- Use provided Hole Saw (32mm) and drill through plastic.
- Install Grommet.
- Repeat steps for remaining hole.





- Use provided Hole Saw (32mm) and drill through plastic.
- Install Snap-In Grommet.
- Cut a small slit in Snap-In Grommet.



Cut and attach Ducting to Y Fitting. Secure with Wire-Ties.





- Mark center onto lower Firewall.
- Use provided Hole Saw (76mm) and drill through plastic.

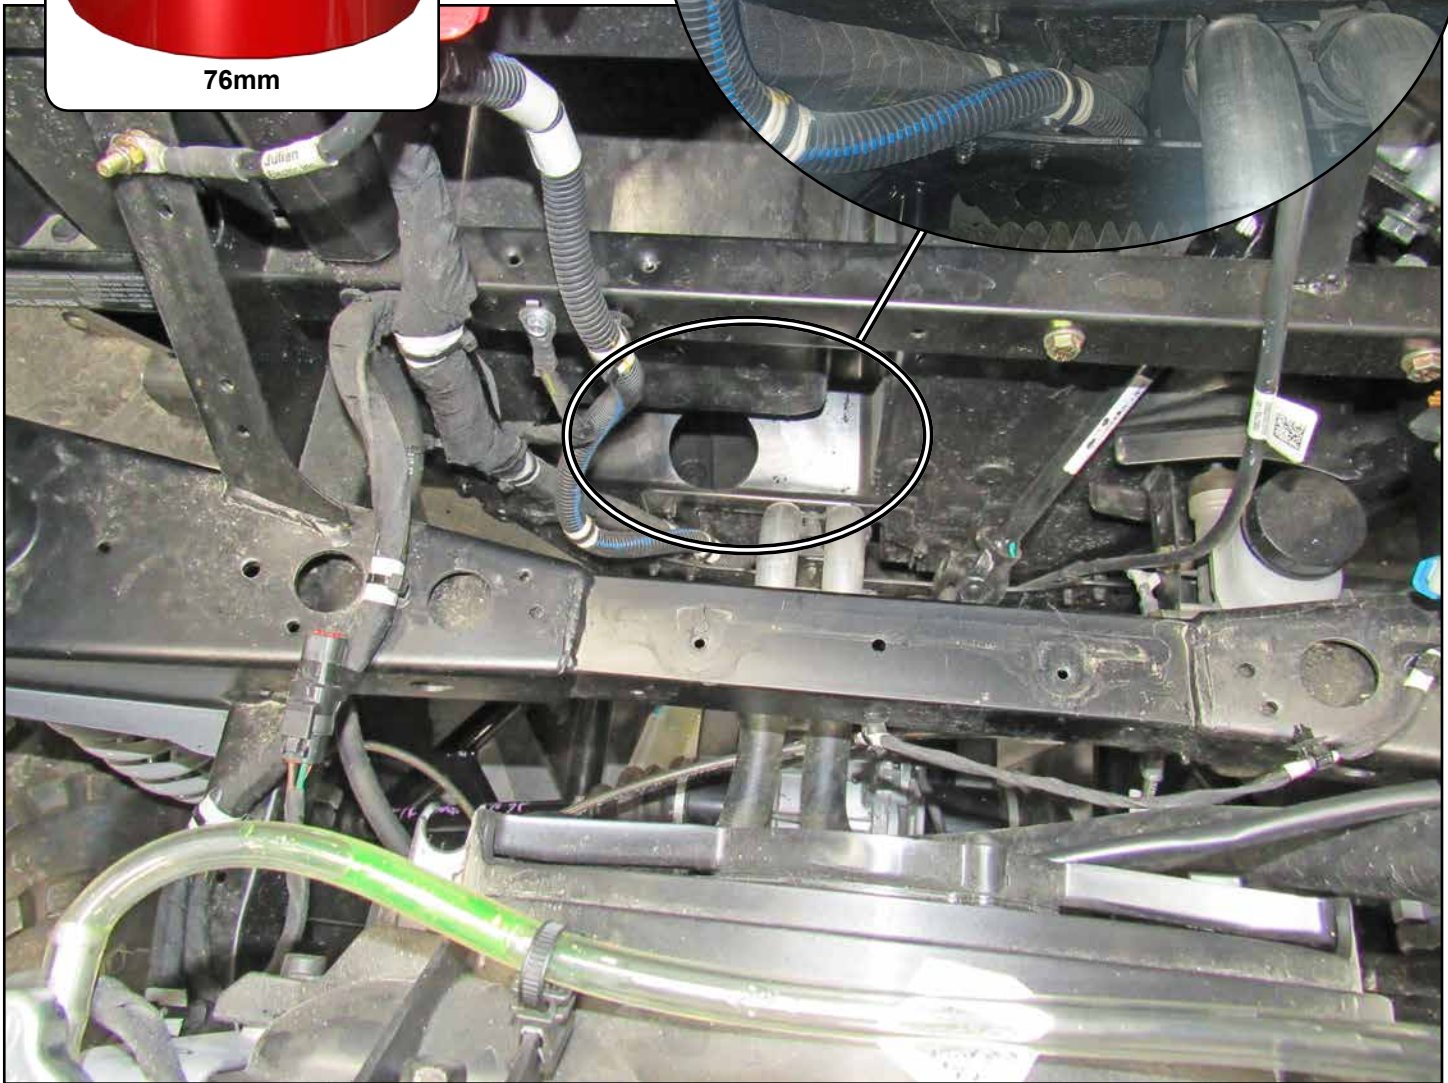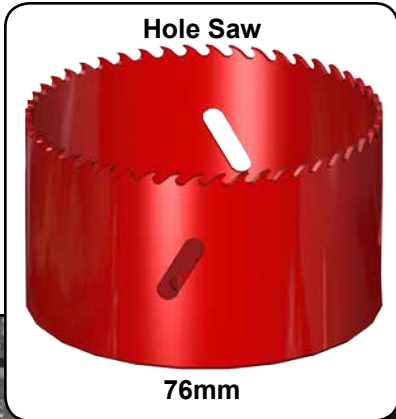




- Cut Ducting to approximately 33".
- Insert into hole in Fire Wall.
- Route up towards Dash as shown.

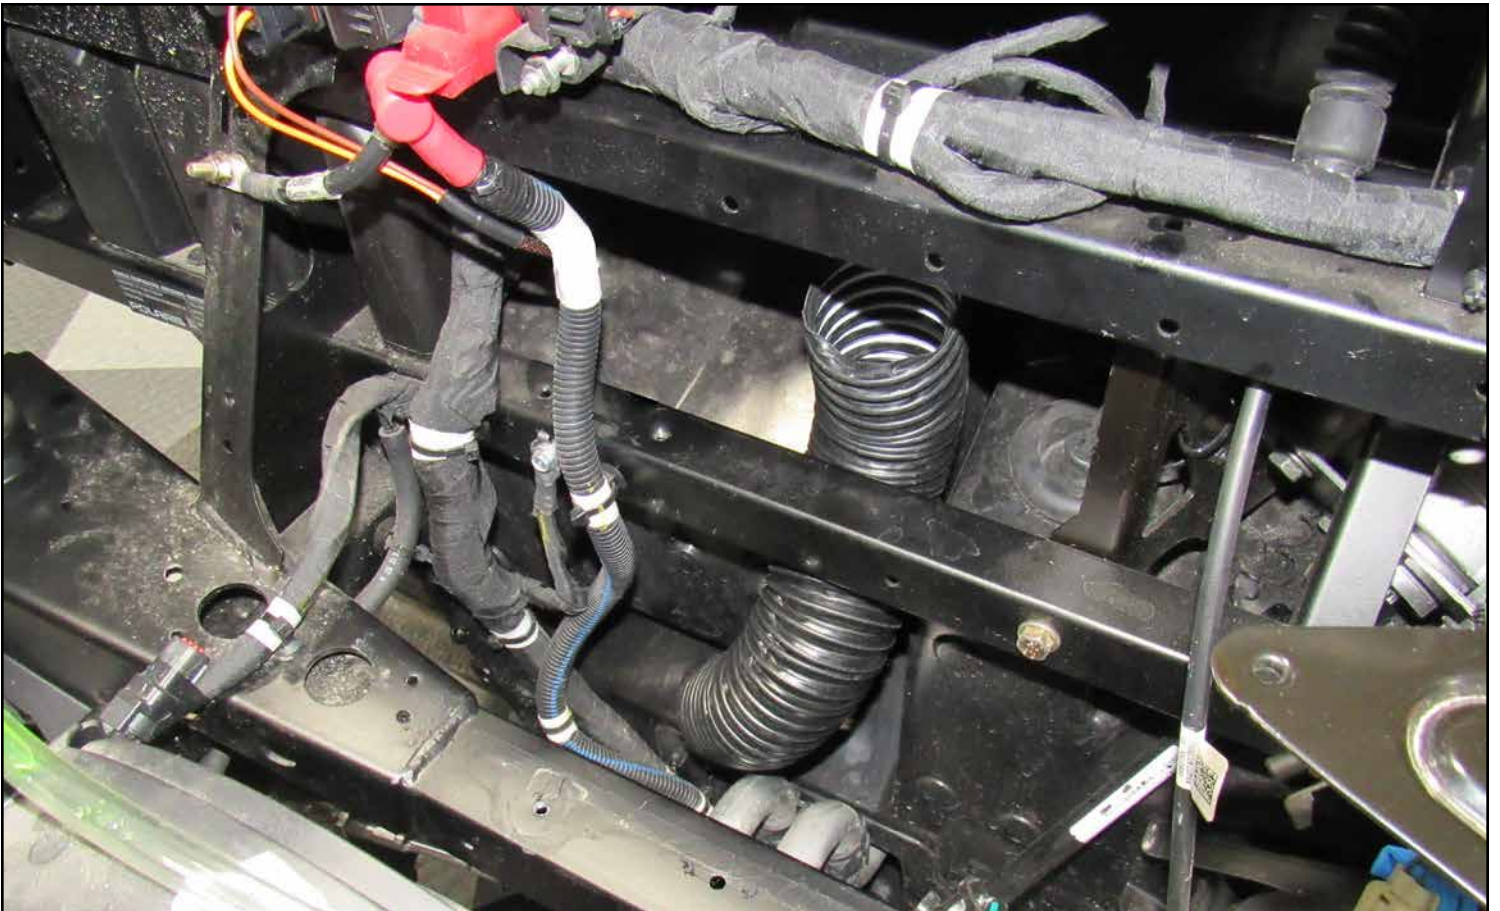

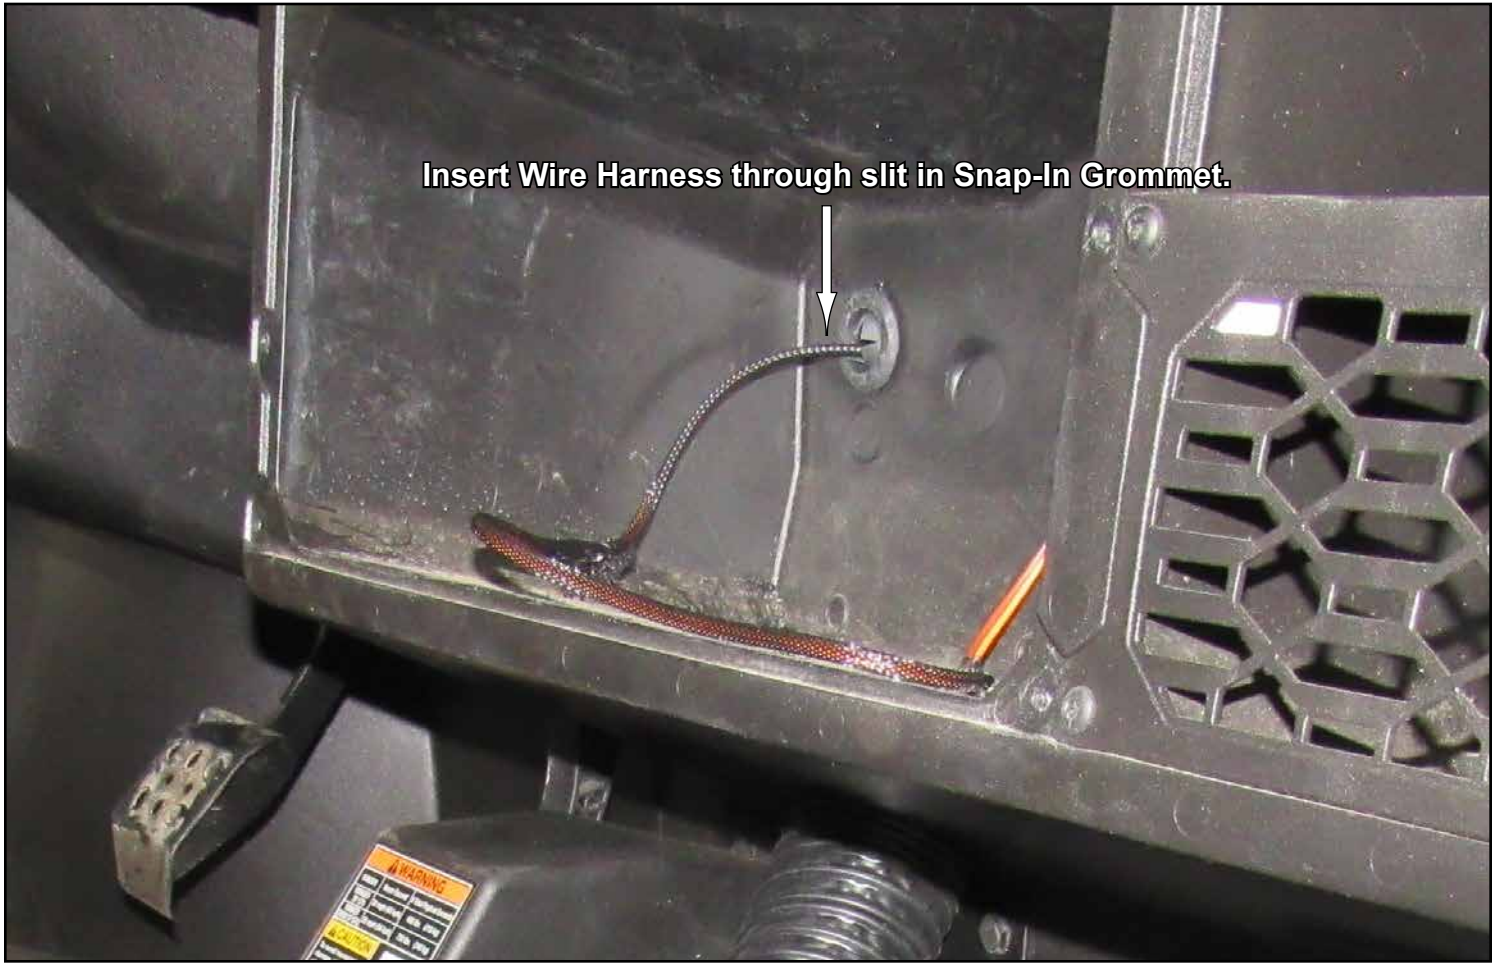

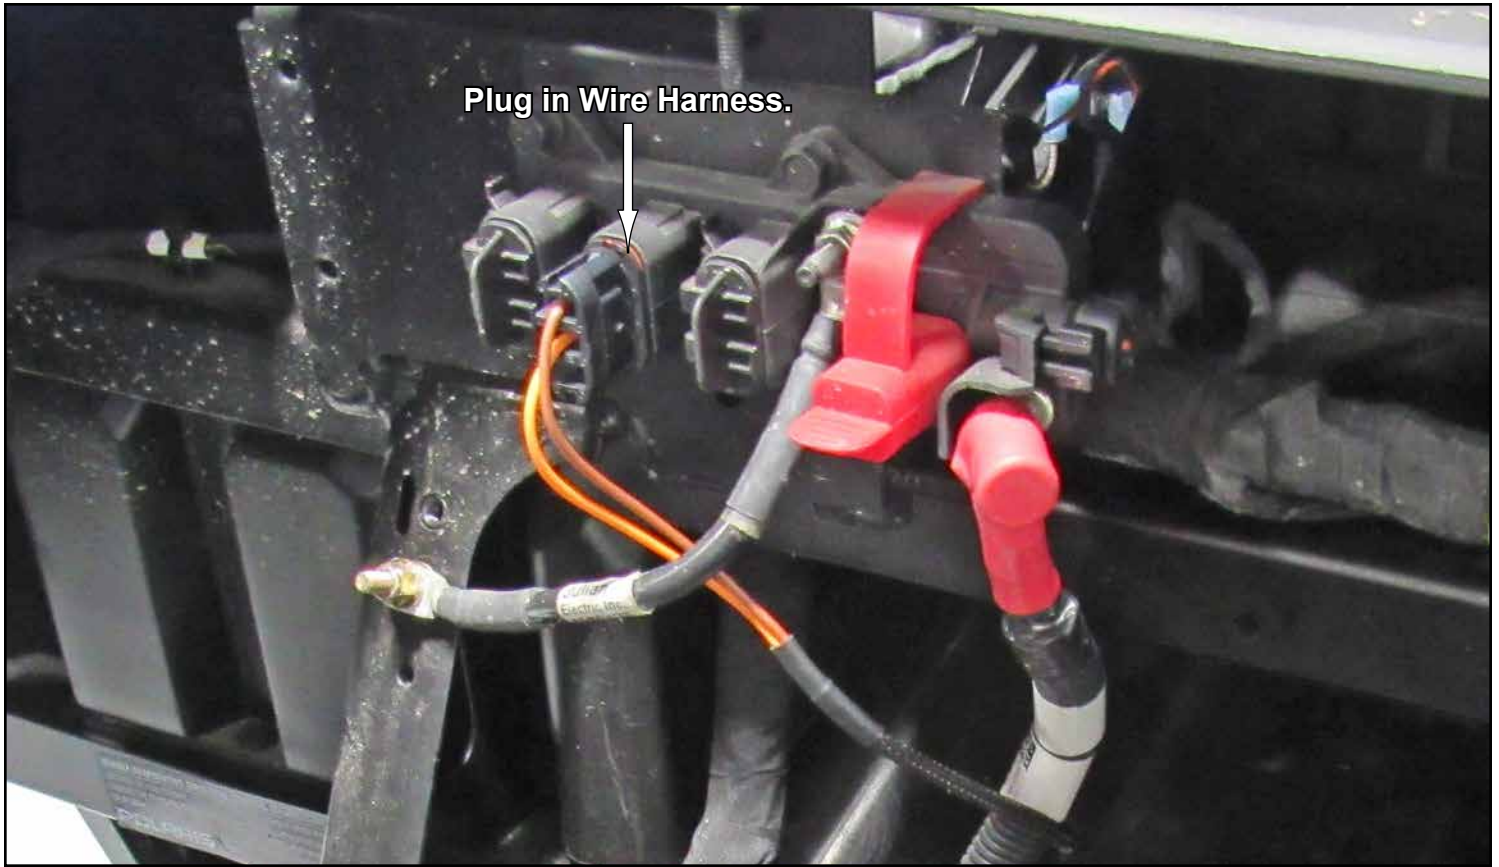

Plug in Wire Harness.



Secure Face Plate 2 with stock hardware.

Connect Tubing to Elbow. Secure with Wire-Tie.



Secure Face Plate 1 with stock hardware.



Install and secure components shown to Tubing.



2 each




Clamp




90° Elbow

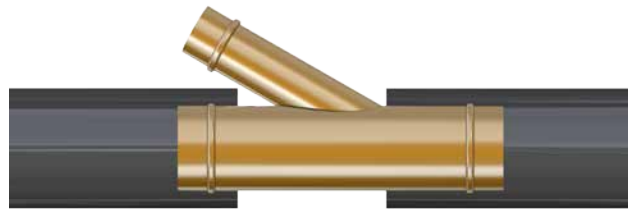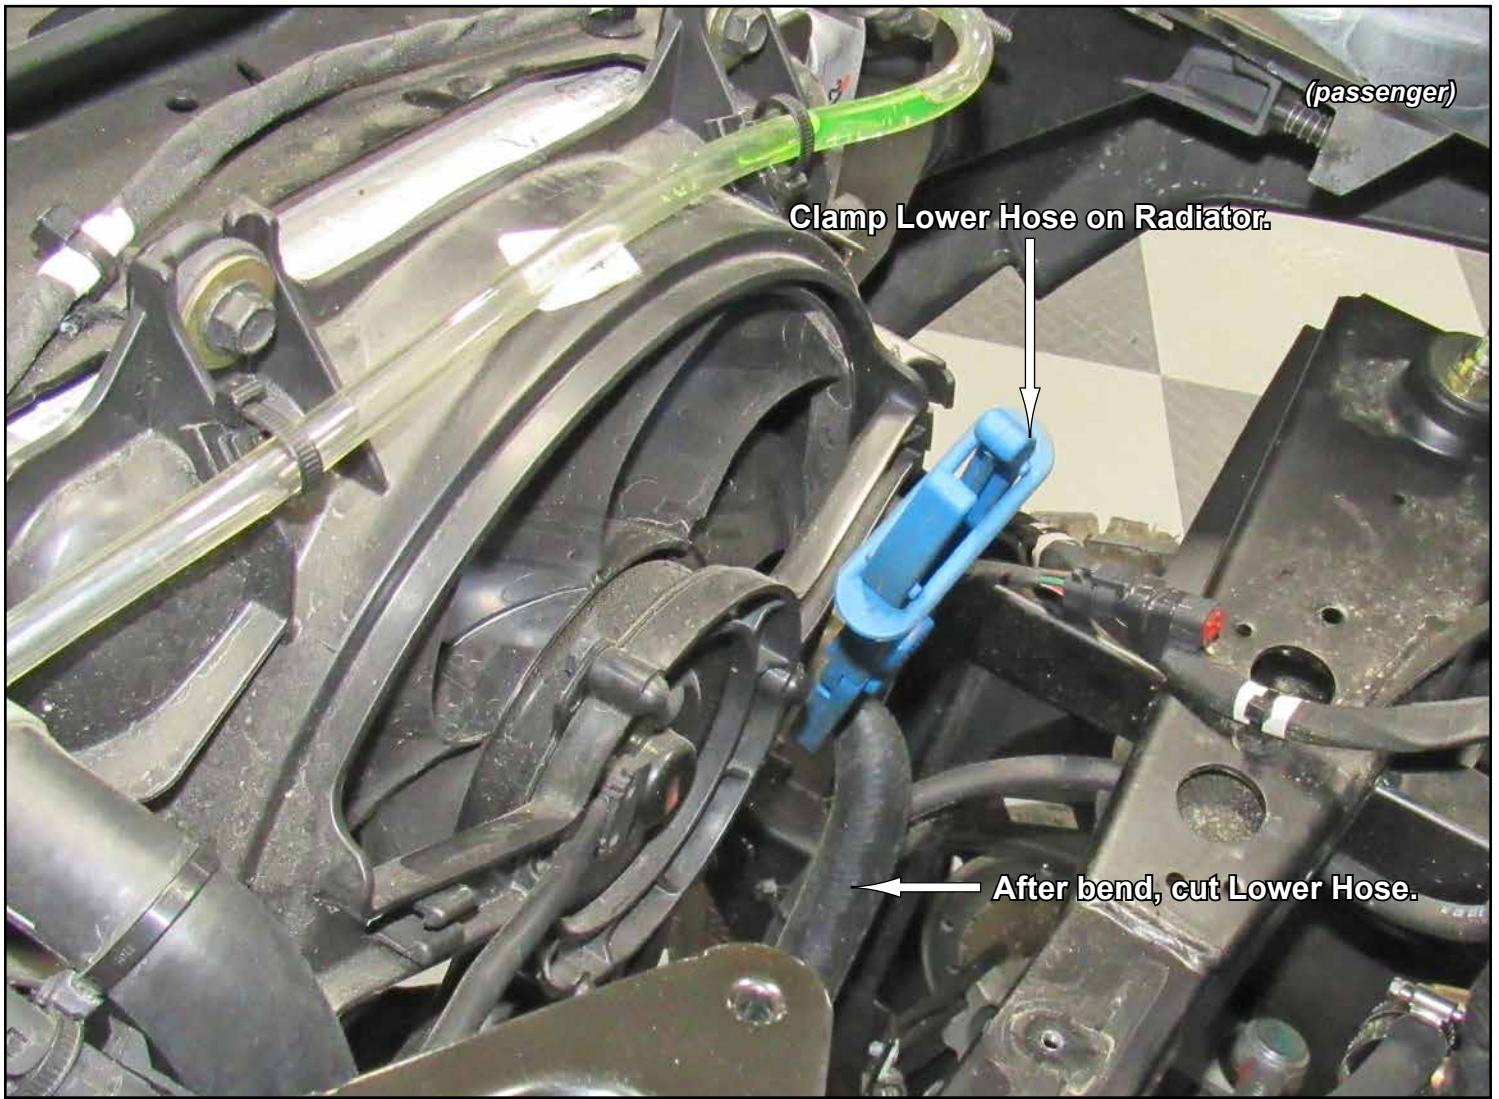


To prevent stock Radiator Hoses from being cut short, use provided Adapters as templates.

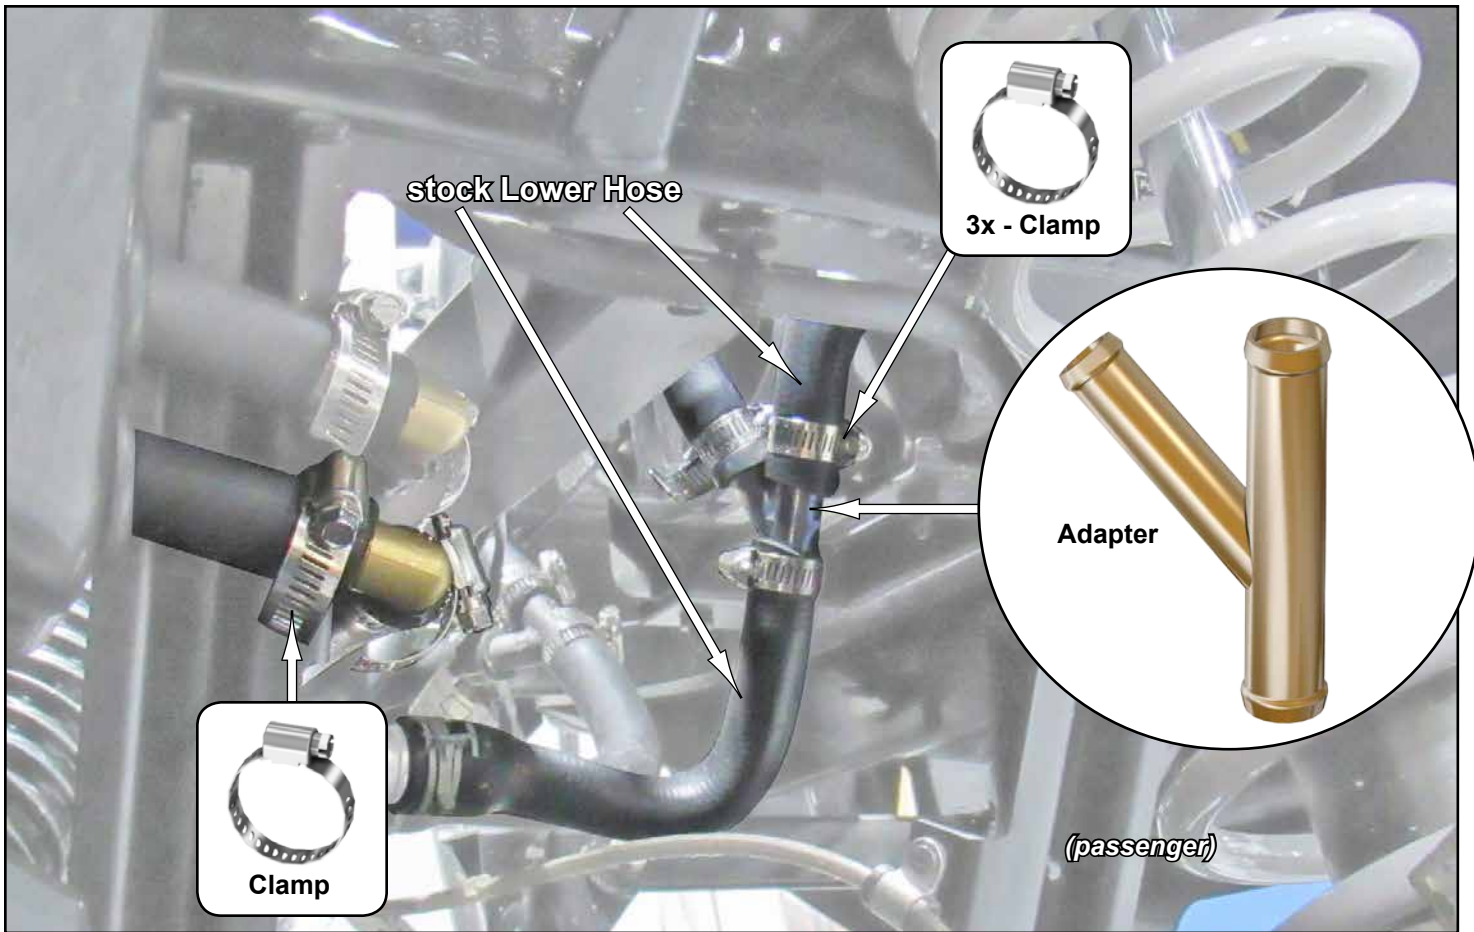

- Install Clamps and Adapter onto Lower Hose as shown.
- Connect Clamp and Tubing to lowermost 90° Elbow from Blower.
- Route up to Adapter, cut, and secure to Adapter with Clamp.

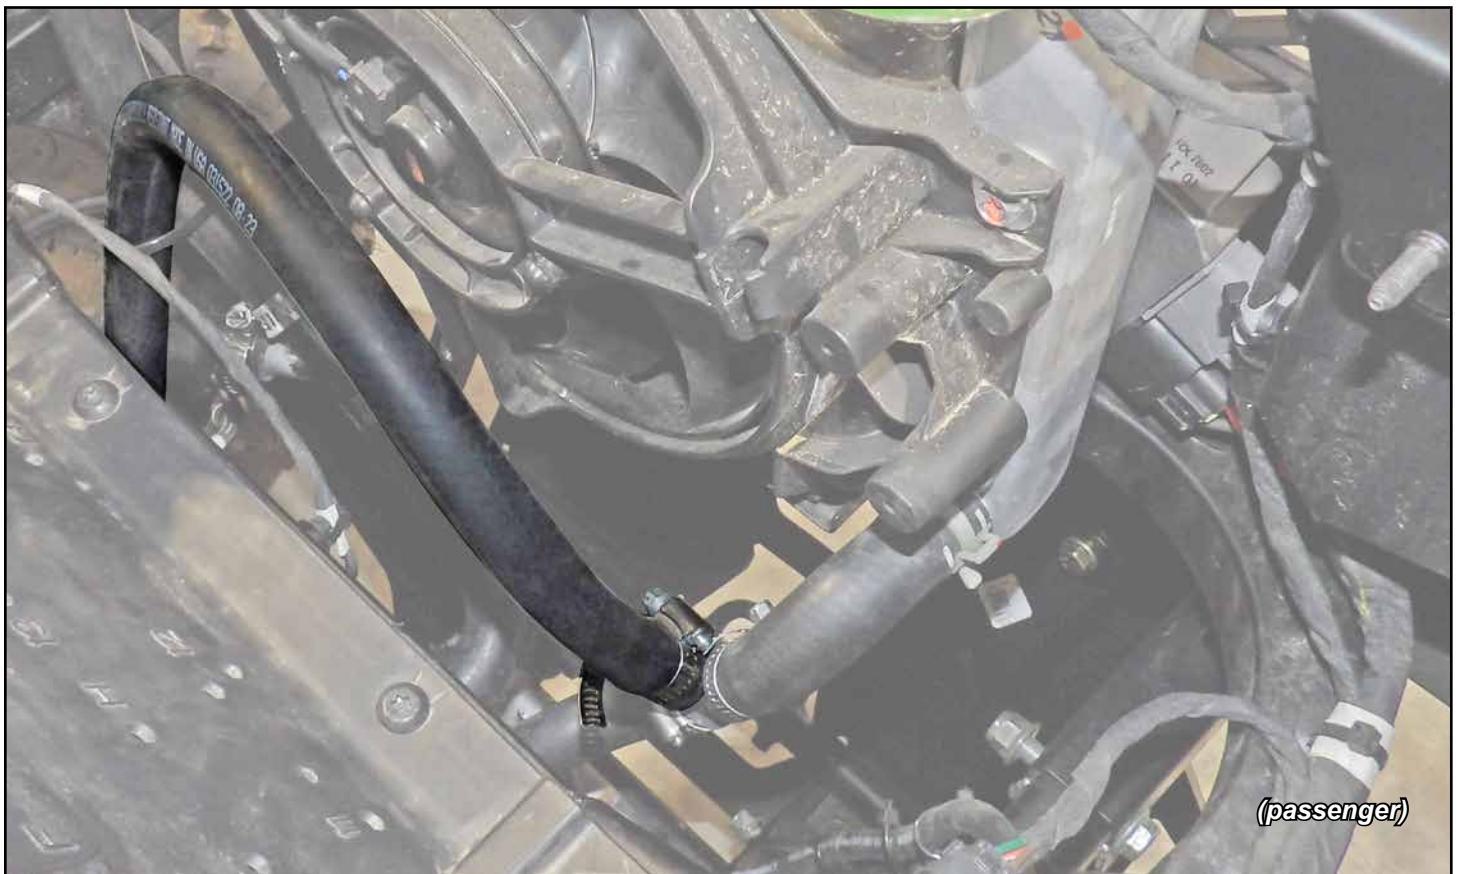

- Install Clamps and Adapter onto Upper Hose as shown.
- Connect Clamp and Tubing to uppermost 90° Elbow from Blower.
- Route up to Adapter, cut, and secure to Adapter with Clamp.

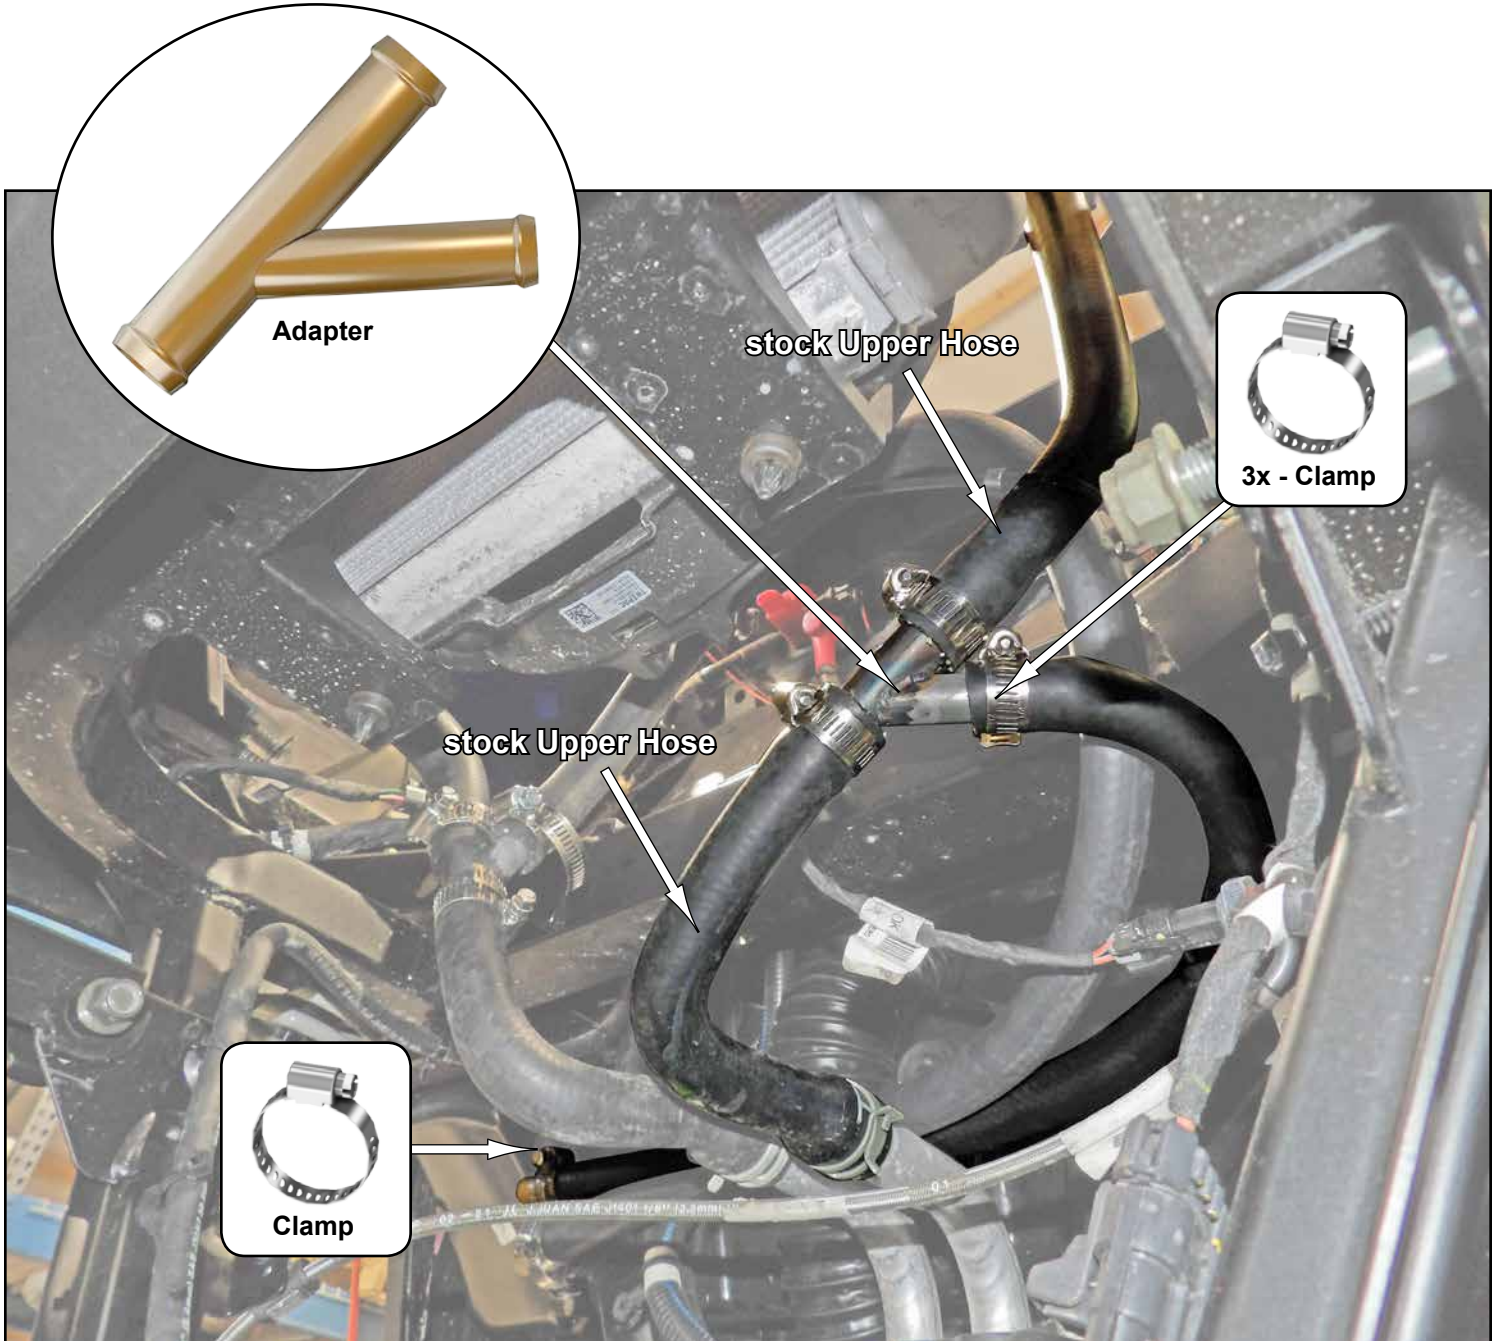

To prevent stock Radiator Hoses from being cut short, use provided Adapters as templates.



- Mark each Vent center onto Dash.



- Use provided Hole Saw (64mm) and drill through plastic.




- Separate Vents and install to Dash; tighten.



DRIVER SIDE ONLY: Vent Shim must be installed between nut, on Vent, and Dash; tighten.

- Connect Y Fitting to Ducting. Secure with Wire Tie.

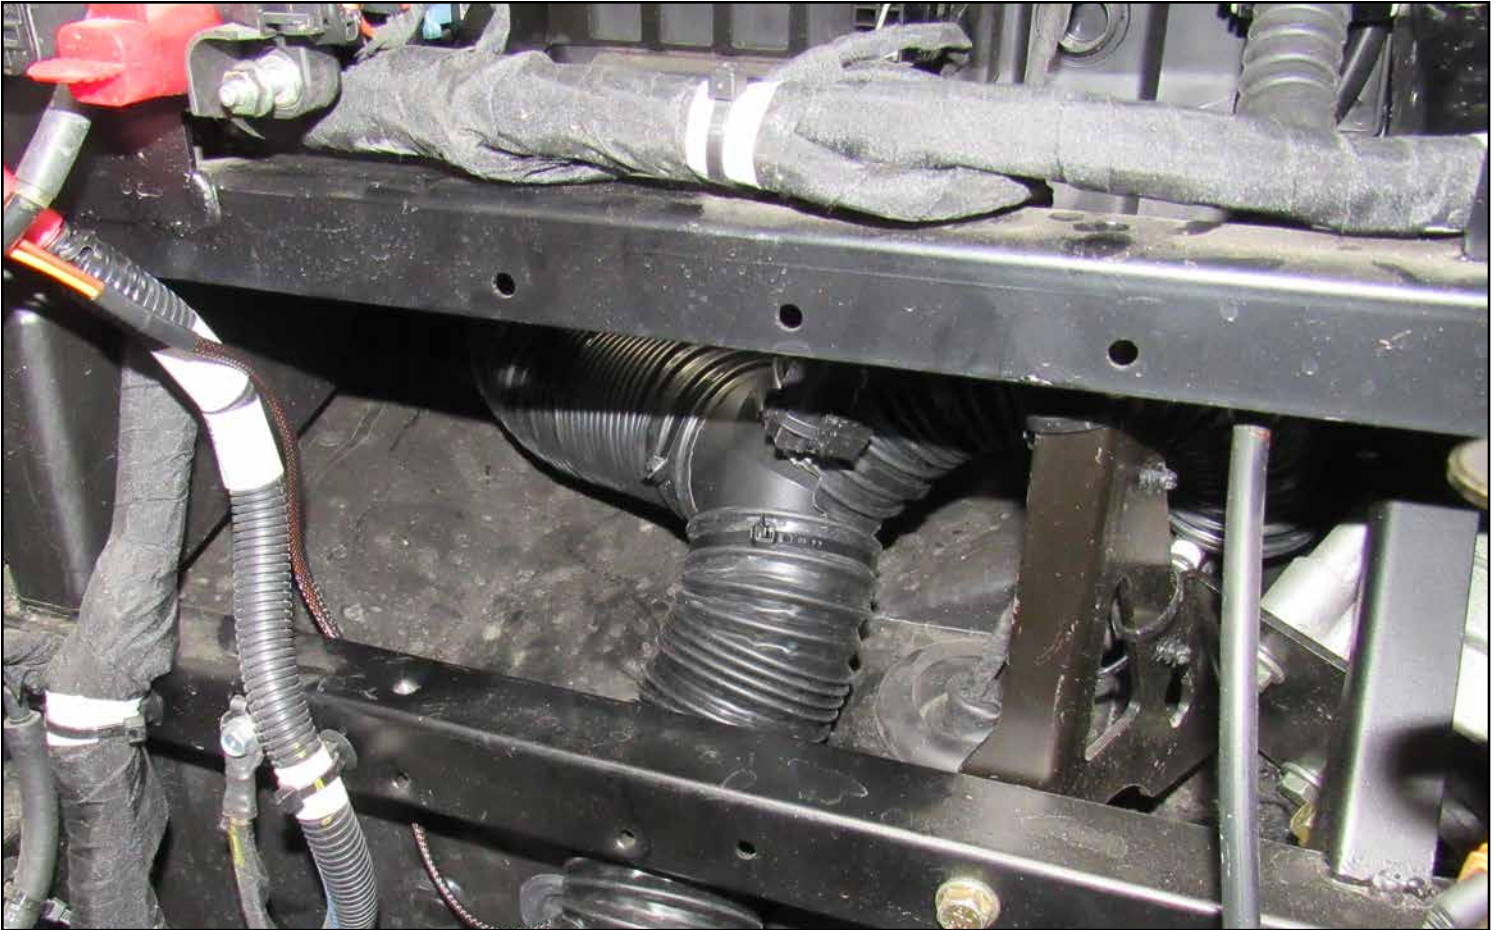

- Connect Ducting to Vents. Secure with Wire Ties.



- Fill coolant level to manufacturers recommended setting.
- Start machine and run at 3000 RPM until engine is hot.
- Use provided Hose Pliers and pinch off Inlet Hose as shown below.



- Remove Hose Pliers after Radiator Fan turns ON.
- After Radiator Fan turns OFF, pinch Inlet Hose again and remove after Radiator Fan turns ON.
- Turn machine off and let engine completely cool; may take several hours.
- Check Coolant Level in Radiator and Reservoir; adjust as needed.
- Start machine and repeat "pinch" steps again.