


INSTALLATION INSTRUCTIONS
Speed Calibration Kits

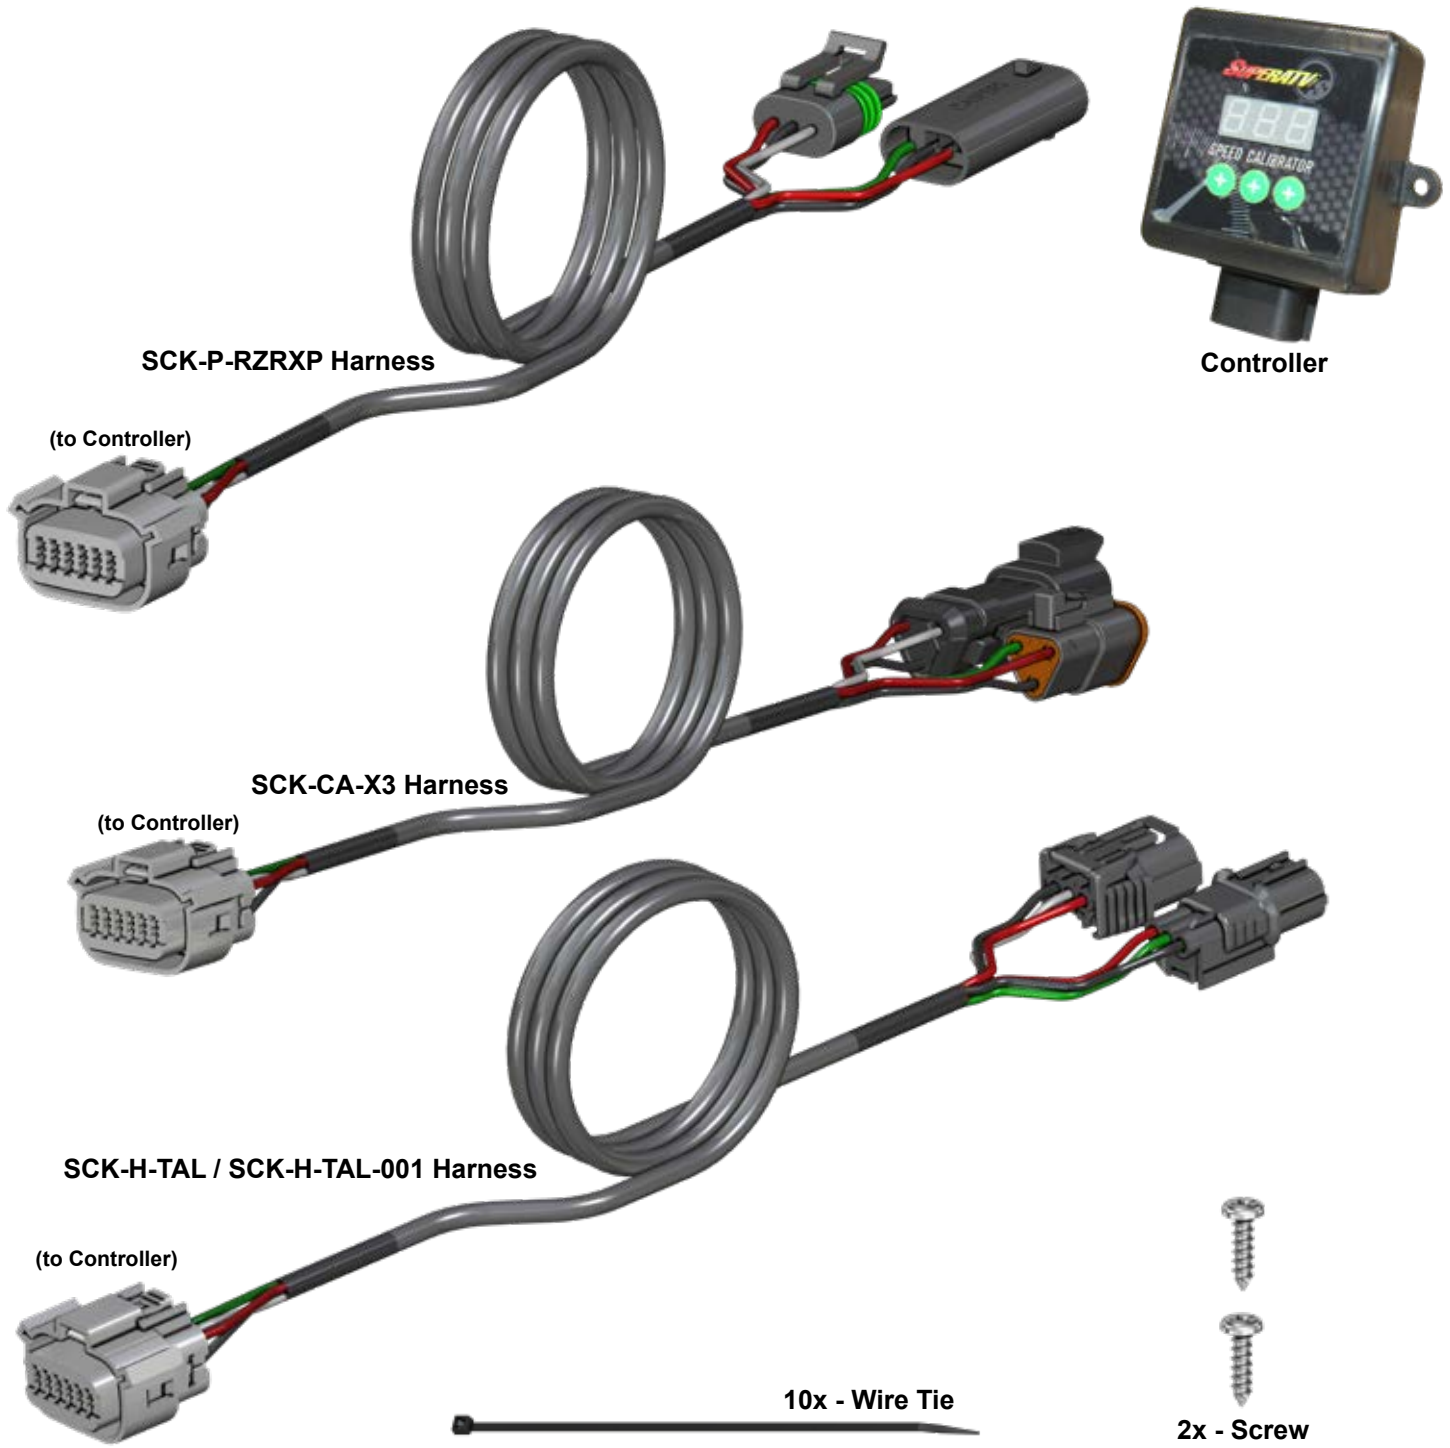

SCK-P-RZRXP Harness

Controller

(to Controller)

SCK-CA-X3 Harness

(to Controller)

SCK-H-TAL / SCK-H-TAL-001 Harness

(to Controller)

10x - Wire Tie

2x - Screw


Need help with your installation?

✉ sales@superatv.com 🌐 www.superatv.com

☎ 1-855-743-3427 🕒 8:00am - 8:00pm EST M-Th
 8:00am - 7:00pm EST Friday
 9:00am - 2:00pm EST Saturday

Read instructions and view illustrations before beginning.

*Thank You
 For Choosing*
SUPERATV.COM[®]

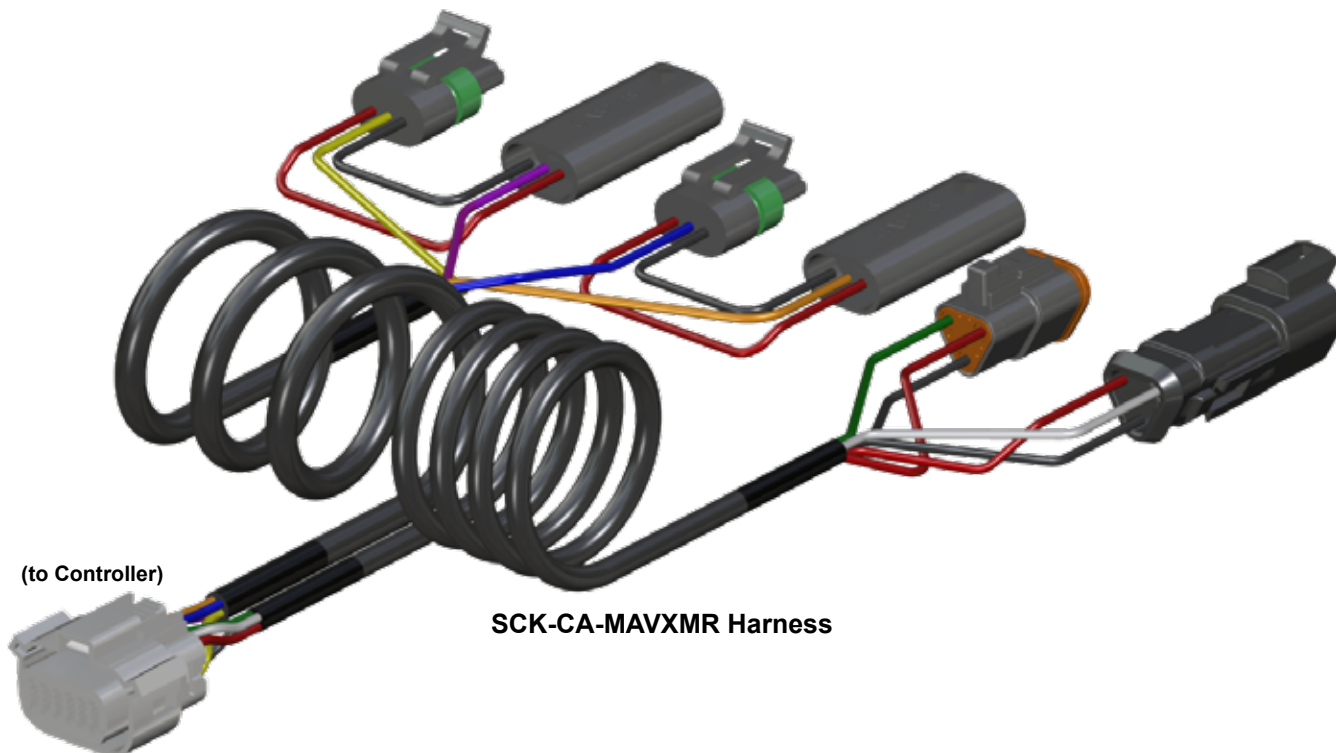

Notes:

- Do not discard packaging until product has been successfully installed.
- Controller mounting locations shown are SuperATV's recommendation; user may secure in a different location.
- Verify that Harness will reach Controller's final mounting location.
- When routing Harness, use provided Wire-Ties and secure away from rotating and/or hot parts.

Liability Statement

SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warranted if item was not installed properly, misused, or modified.

Installing, adding, modifying, or fabricating any factory or aftermarket product to your ATV/UTV may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of certain products on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of the product. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you.

The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws and ordinances when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.

Follow steps before installing Speed Calibrator:

Failure to have a passenger assist during this process could result in injury or contribute to an accident.

1. Have a passenger open any GPS speed app on a phone.
2. Drive machine at 30MPH on Speedometer.
3. Have passenger note actual ground speed displayed via GPS speed app.
4. Park and turn off machine.

Install Speed Calibrator Kit:

5. Connect Harness to Differential Connection; see following pages for machine specific location.
6. Secure Controller, route Harness to Controller and connect.
7. Turn key on to power up Controller.
8. Hold any button down for 5 seconds. Display will flash once.
9. Default value is 30.0. Use buttons to change value to previously noted GPS speed app.

Repeat steps 1-3 to verify that Speedometer and GPS speed app values match.
Correct if necessary.

Polaris RZR XP's




Polaris RZR XP's continued



Controller mounted to Rear Firewall.

Can-Am X3 and XMR:

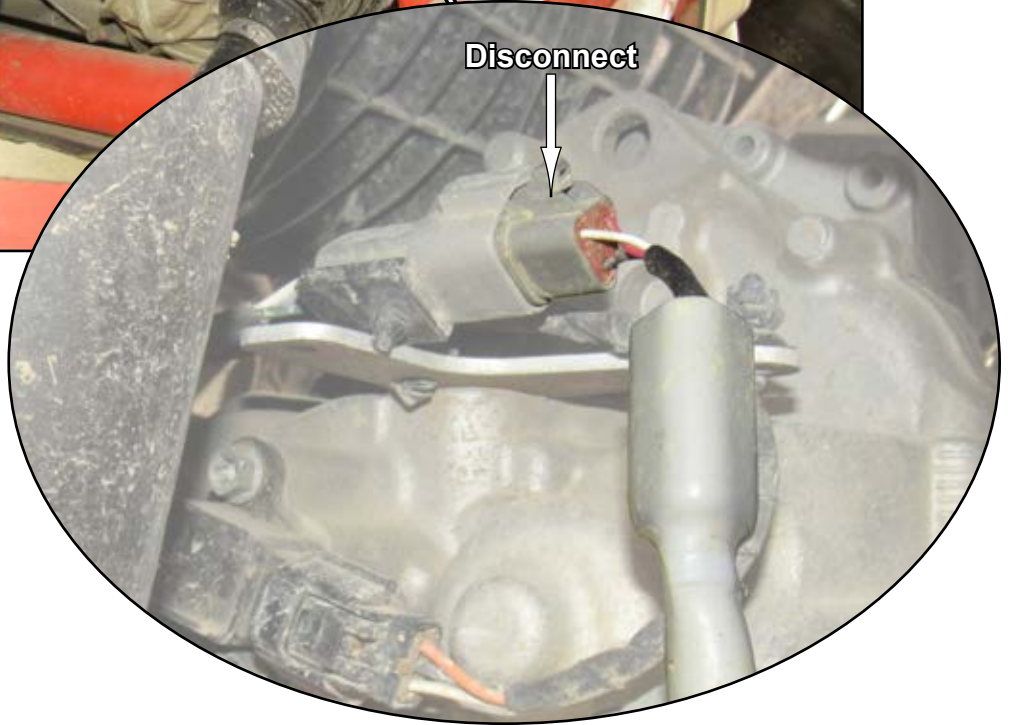



Can-Am X3 continued and XMR:




Controller mounted to Rear Firewall.

(driver side)

Can-Am X3 XMR only:

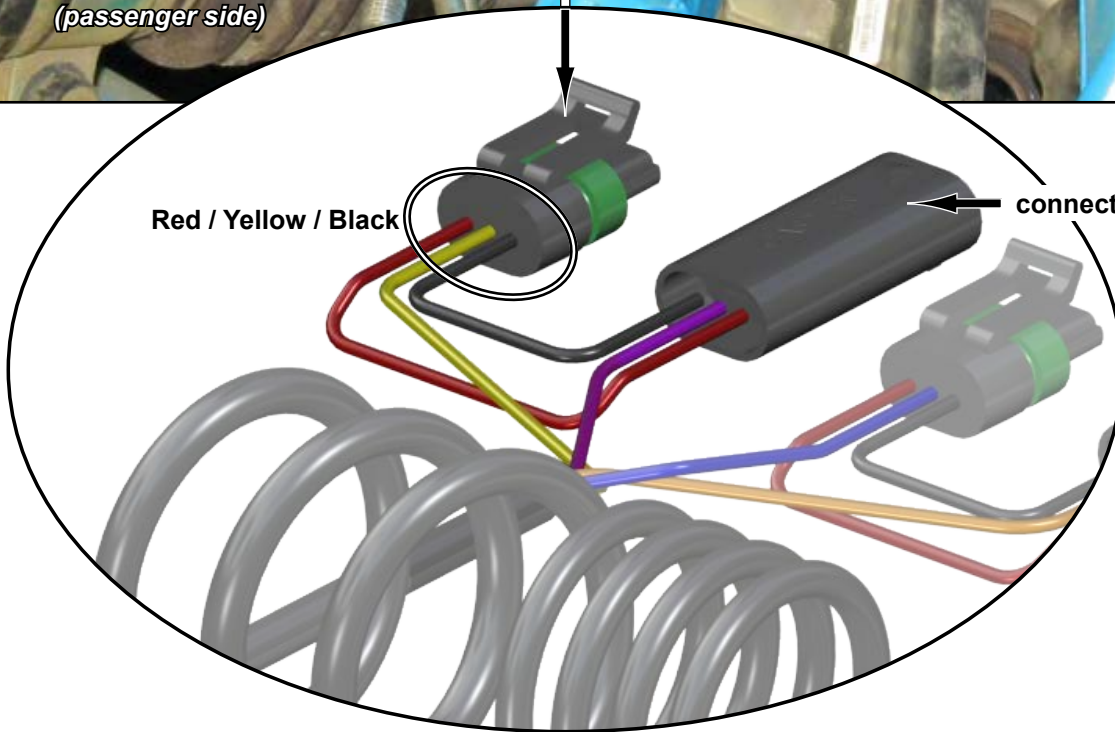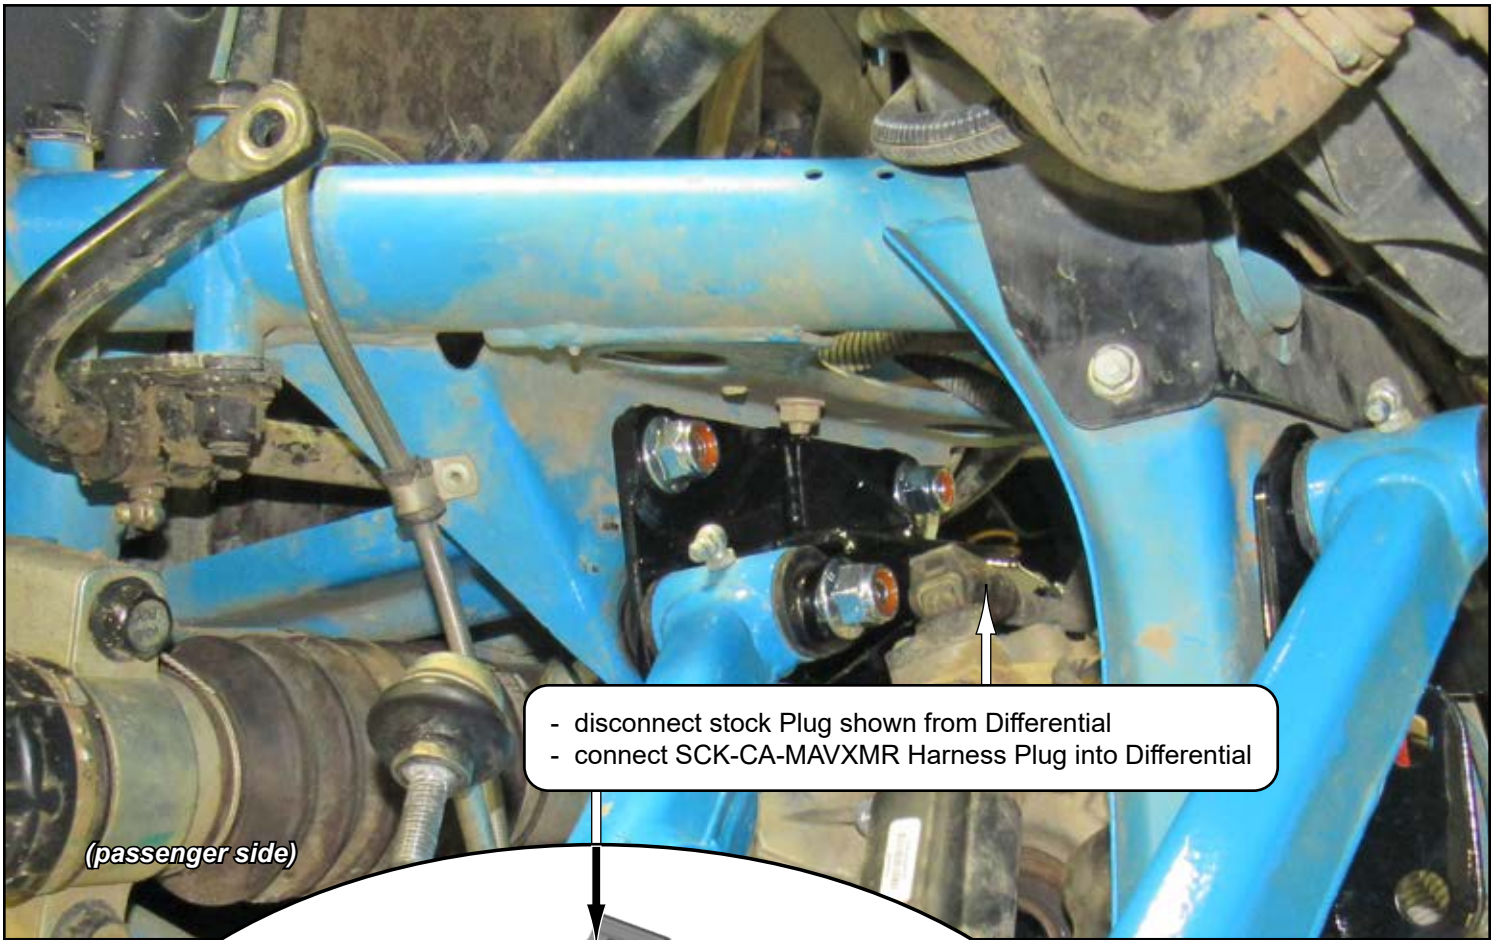


Can-Am X3 XMR only continued:

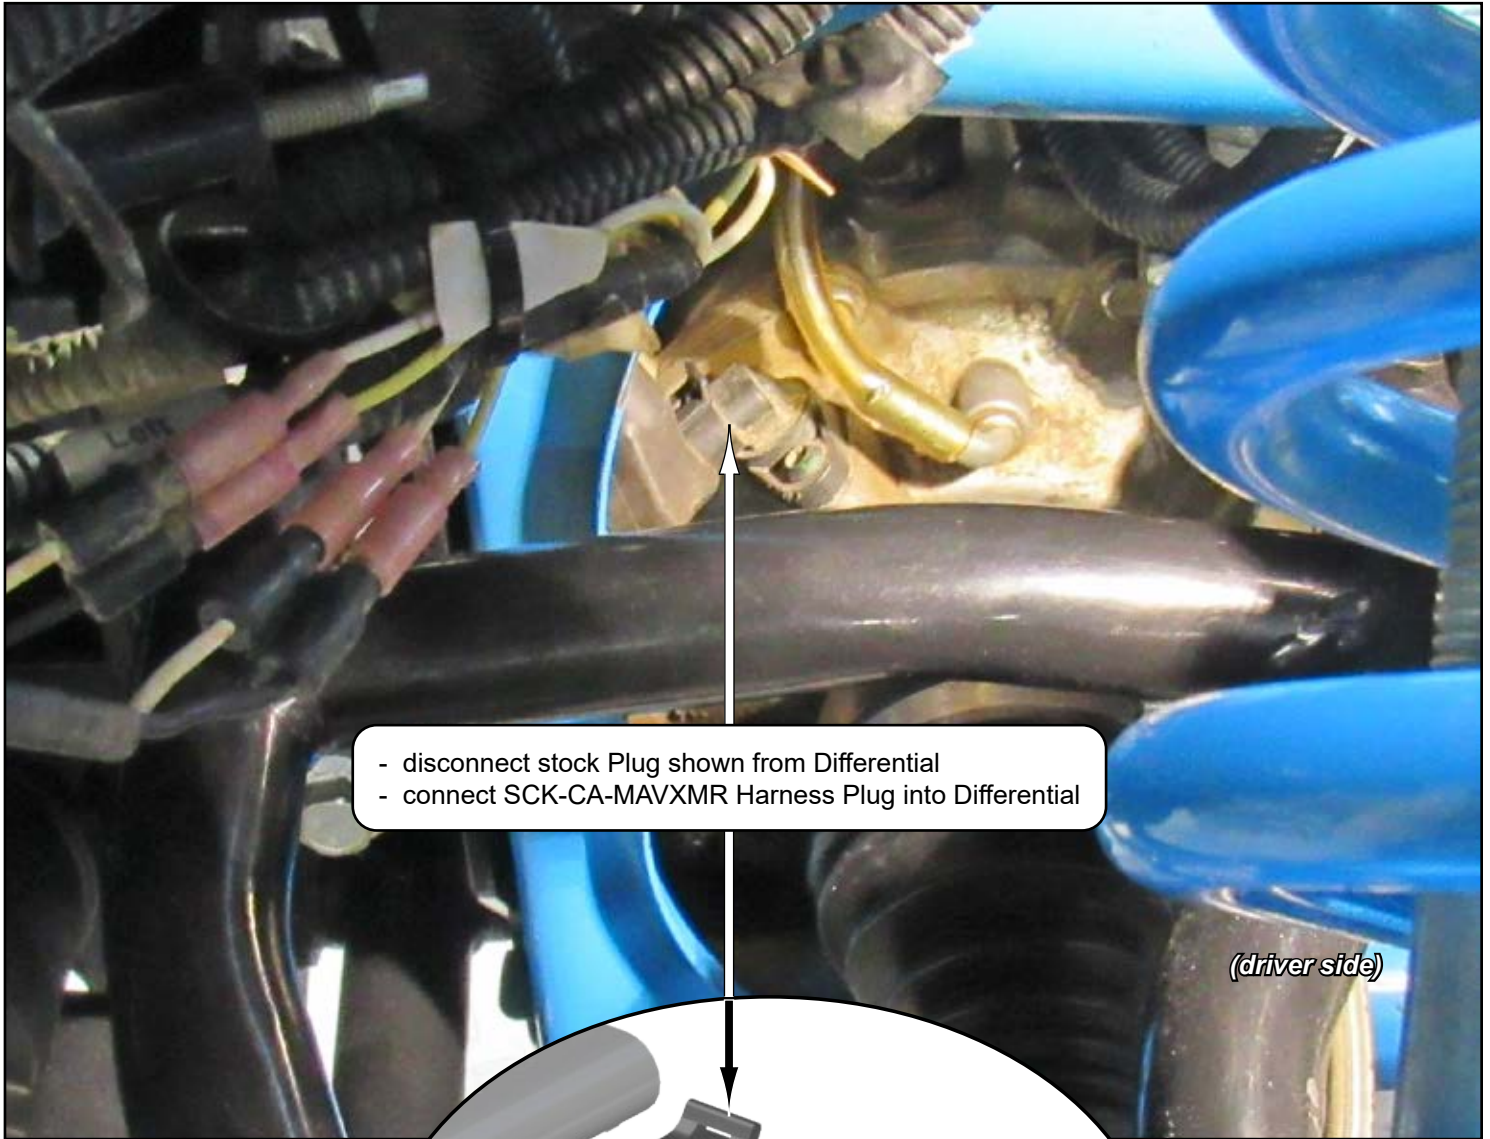


- disconnect stock Plug shown from Differential
- connect SCK-CA-MAVXMR Harness Plug into Differential

(driver side)

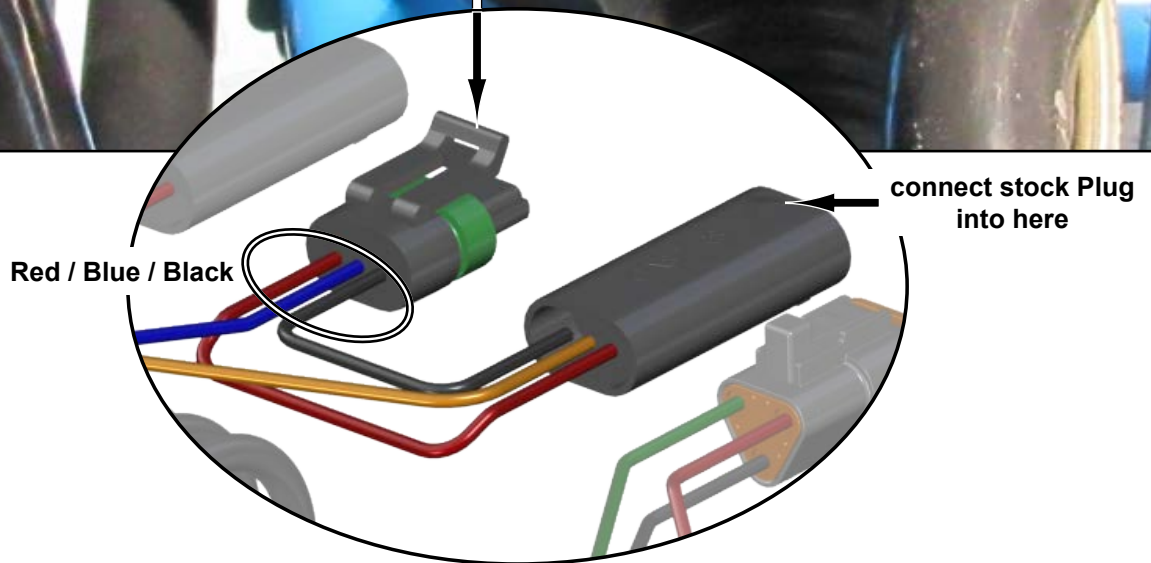

Honda Talon's

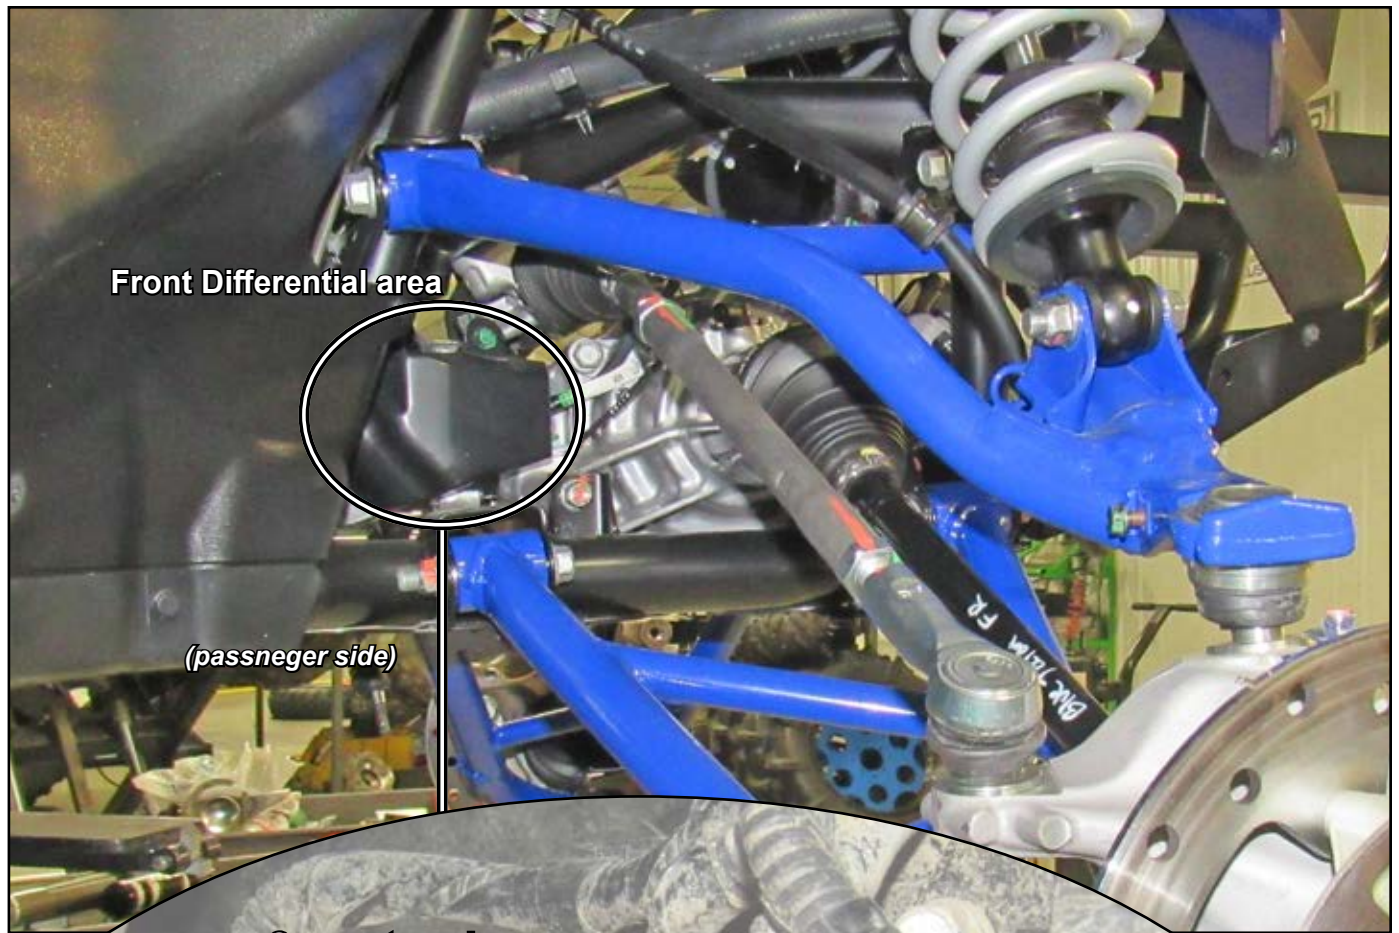

Honda Talon's continued:

