


Notes:

- Hook and Loop Fasteners should be applied at a temperature of 70°F or above.
- Thoroughly clean and dry any area where Hook and Loop Fasteners will be installed.
- Installing and adjusting Soft Cab is easier with two people.
- When cleaning Soft Cab, use soap and water only. Do not use detergent, window cleaner, solvents.
- Do not fold Soft Cab before storing. Roll Soft Cab to store.
- Do not discard packaging until product has been successfully installed.
- SuperATV does not recommend keeping Roof installed while transporting on an open air trailer.

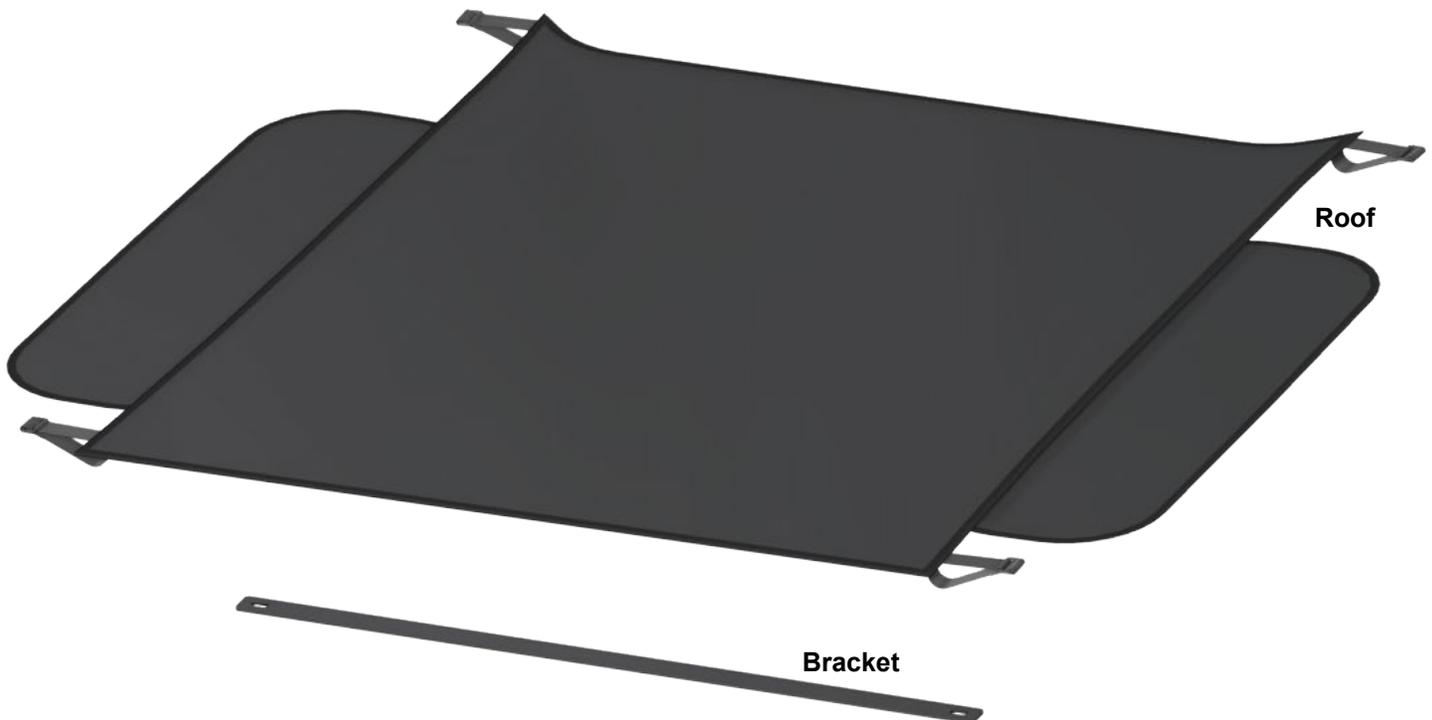

- *If no Windshield is present, Bracket must be installed.*
- *SuperATV strongly recommends Bracket installation regardless.*

Need help with your installation?



sales@superatv.com



www.superatv.com



1-855-743-3427



8:00am - 8:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

Read instructions and view illustrations before beginning.


Thank You

For Choosing

SUPERATV.COM[®]

Disregard this page if Bracket is going to be installed. Go to “Hook and Loop to Cage Installation” and page 5.

- Place Roof onto machine.
- Center Roof side-to-side and front-to-back.
- Install a piece of Hook and Loop to Windshield where Front Flap will fasten to.

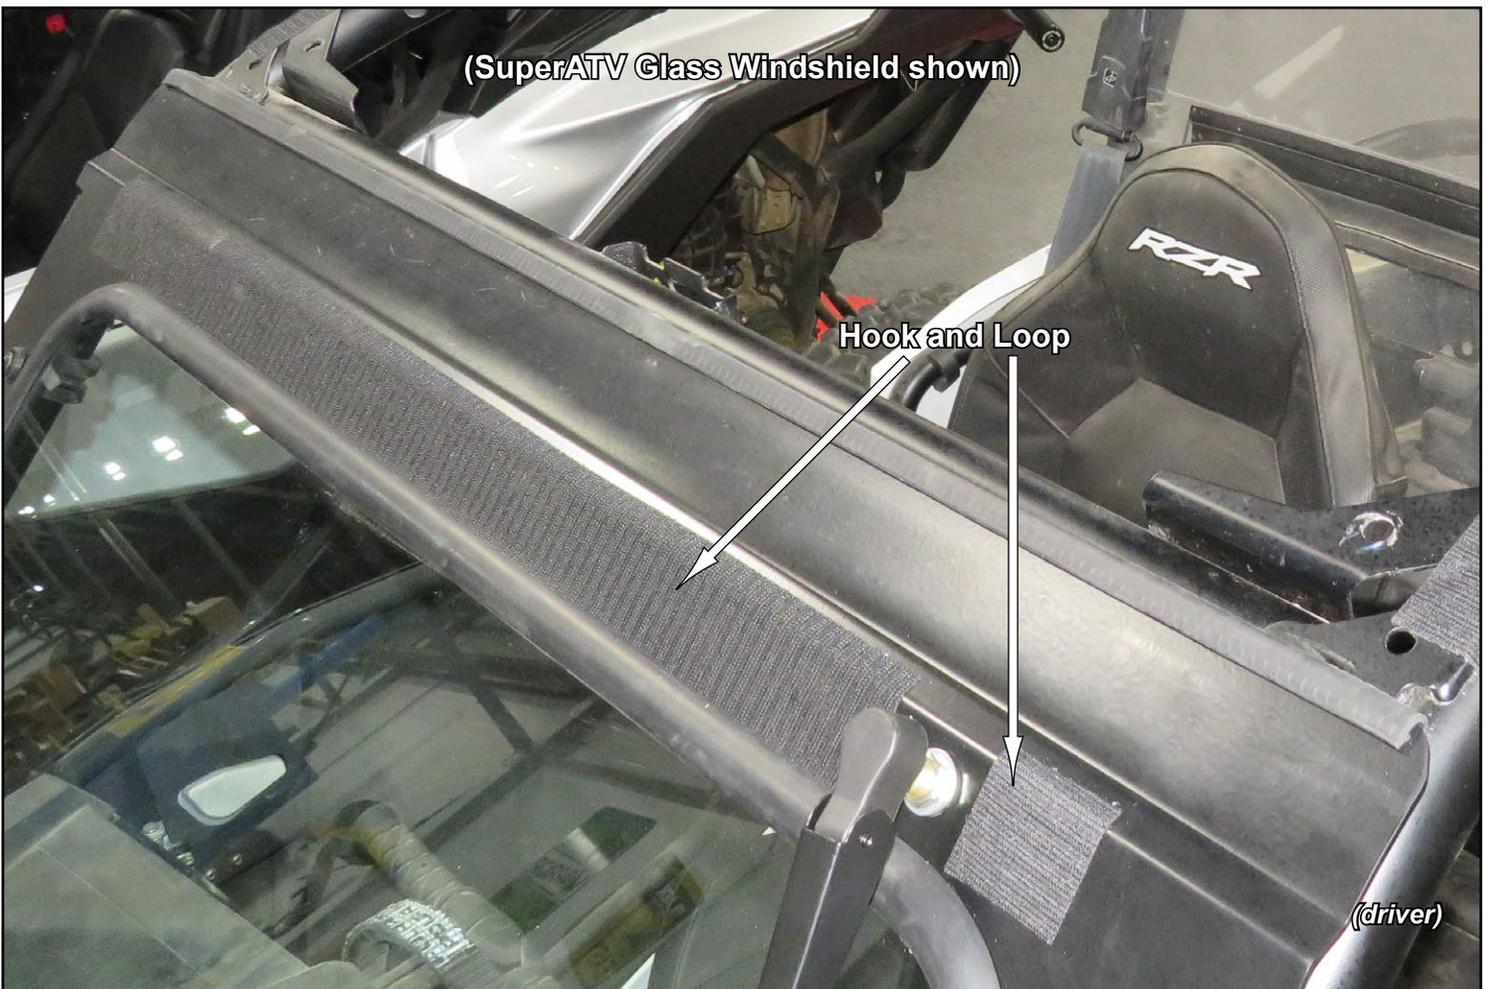

- Secure Front Flap of Roof to Hook and Loop.

Disregard this page if Bracket is going to be installed. Go to “Hook and Loop to Cage Installation” and page 5.

- Place Roof on Windshield / Hood as shown.



Hoop and Loop to Cage Installation

- Install Hook and Loop to Cage.




Go to page 9 if Bracket is NOT going to be installed.

Bracket installation

- Install Hook and Loop to Bracket in location shown.

Edge of Hook and Loop should be in-line with edges of Slots in Bracket.

- Trim Hook and Loop as shown.

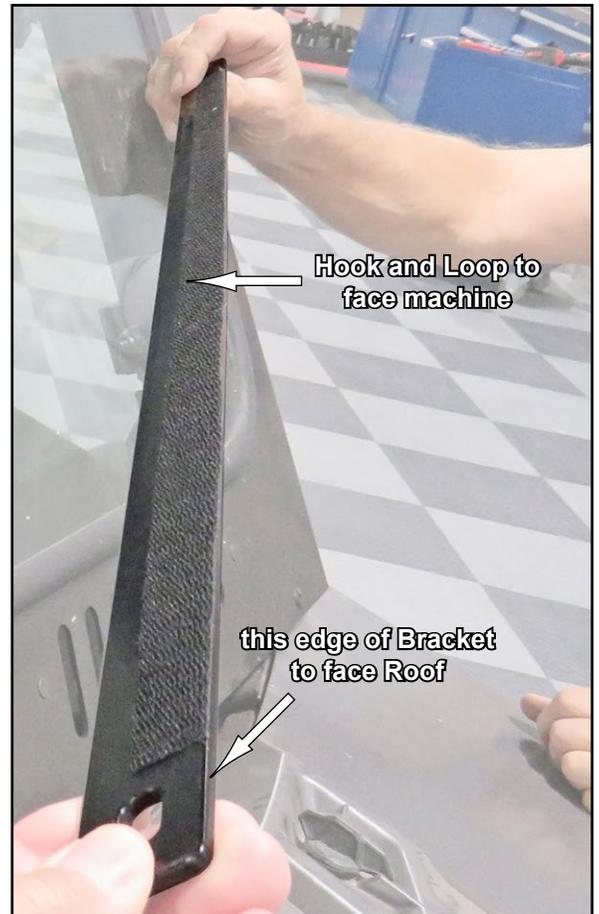

Bracket installation continued



See following page if machine has a SuperATV Windshield.

- Install Bracket to machine with hardware shown; tighten.




Bracket to Windshield mounting

- SuperATV Full and Glass Windshields will require (2) holes for Bracket mounting.
- Place Bracket onto Windshield. Center, measure, and mark hole locations.
- Remove Bracket and drill holes. Holes should be large enough for Ø8mm bolts.
- Return to previous page.

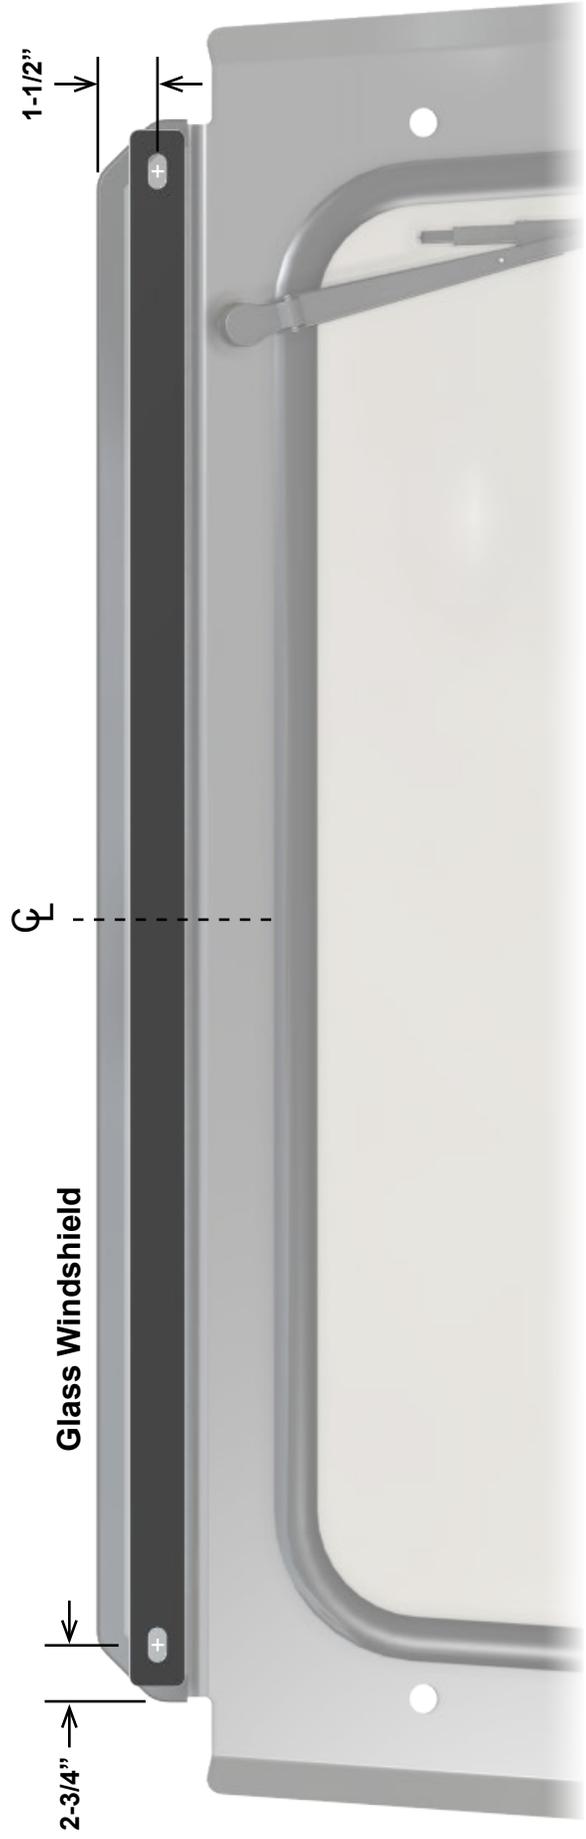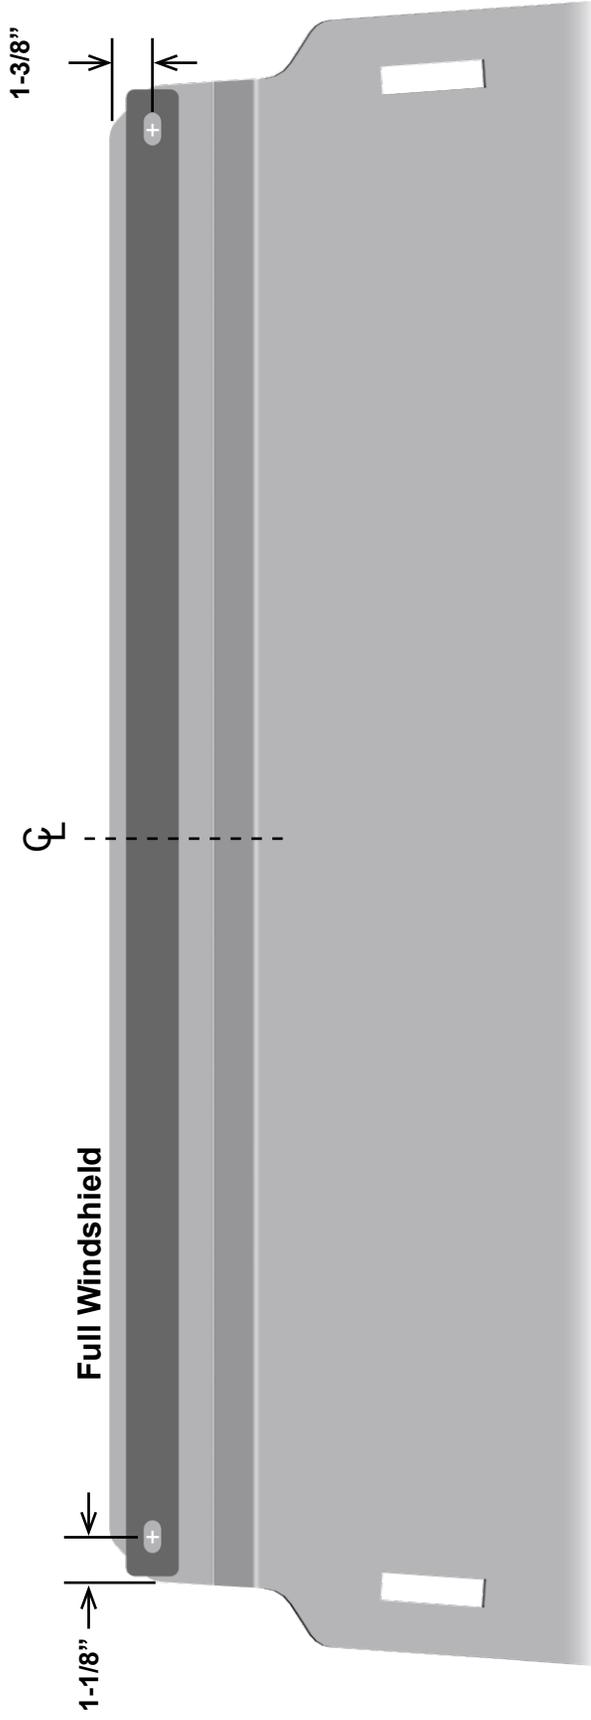

- Hook Trimlok to Bracket.

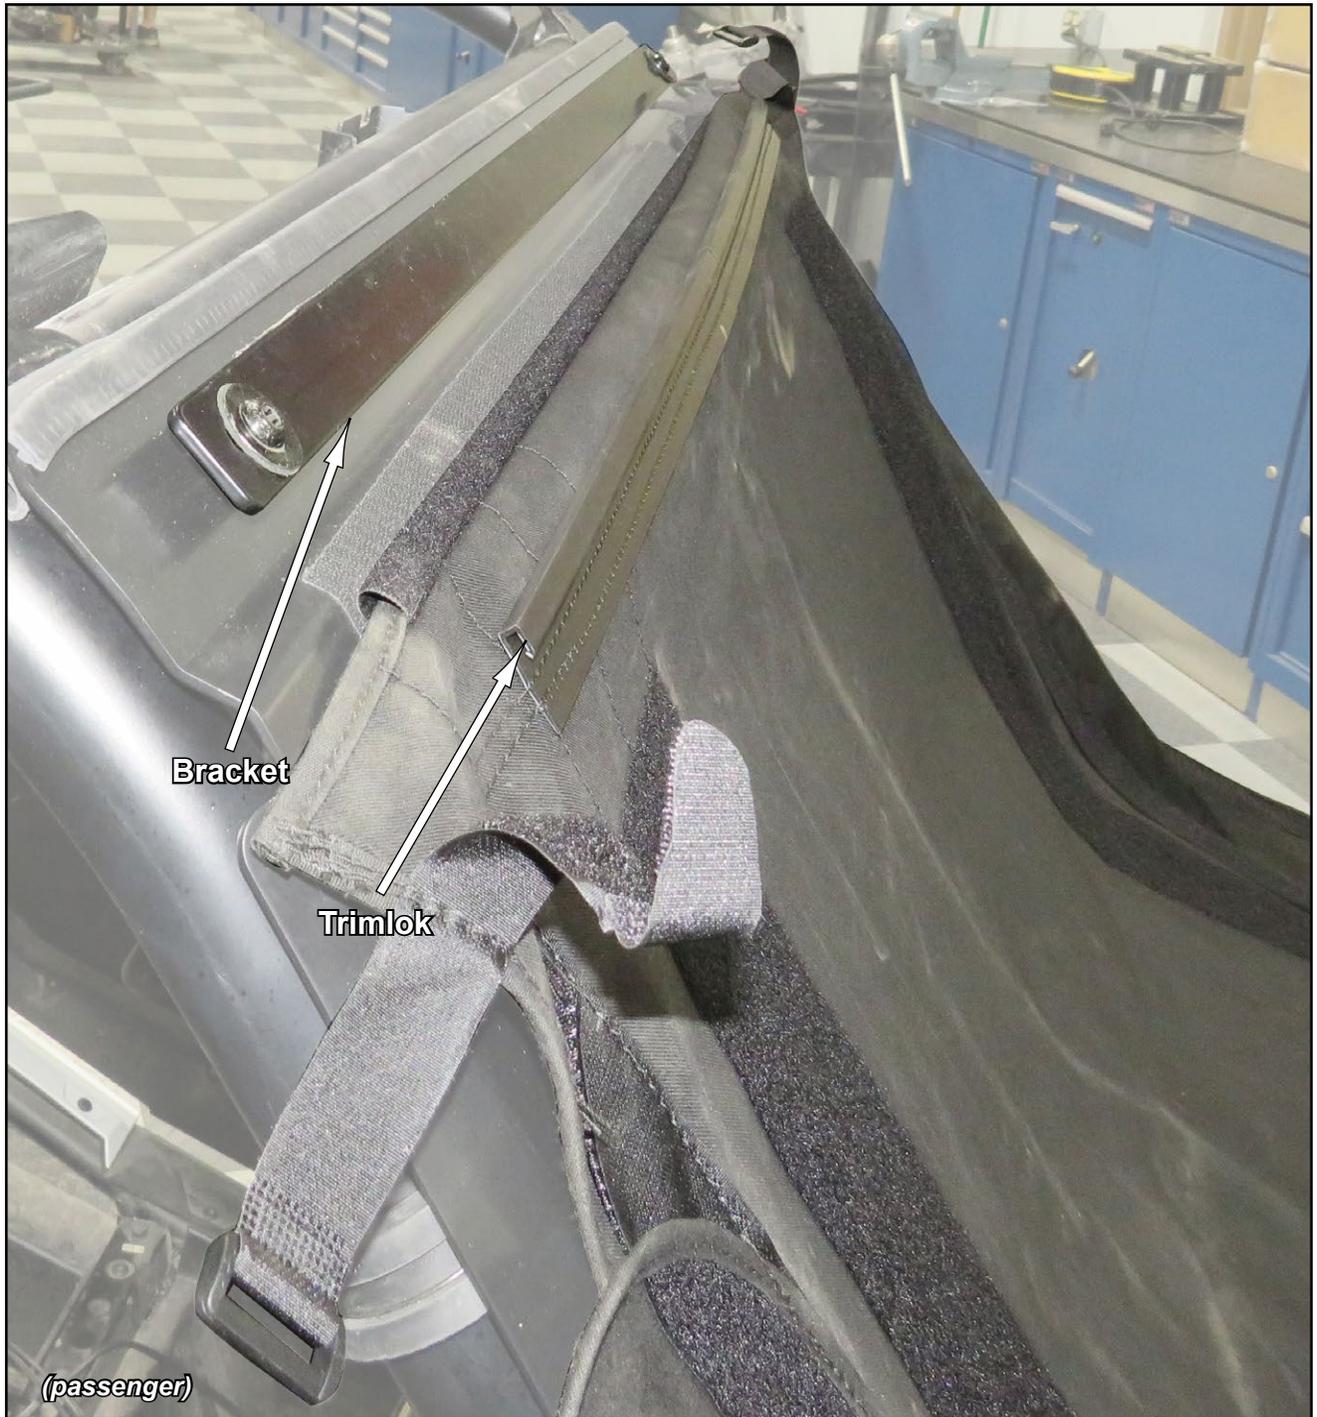

- Pull Roof to back of machine.



- Fasten rear of Roof to previously installed Hook and Loop. Roof should be pulled tight.



- Secure Flaps to Hook and Loop on Roof. Roof should be pulled tight.



- Cinch all Straps tight.

- If Bracket was installed, tuck Front Flap under Bracket and secure to Roof.

Liability Statement

SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warrantied if item was not installed properly, misused, or modified.

Installing, adding, modifying, or fabricating any factory or aftermarket product to your ATV/UTV may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of certain products on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of the product. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you.

The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws and ordinances when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.