

## IRATE DIESEL WIRING

This wiring will work with either the Irate Diesel Competition system or Irate Diesel Standard fuel system. The YELLOW wire is the trigger wire to activate the relay on 99 and up you can wire this to the factory positive wire off the old pump, on the OBS trucks we suggest pushing the wire with ANY key on fuse from under the hood. On the Fuelab Fuel pumps only, you will wire the center terminal to the negative terminal to put it in "low speed mode" for continuous (Street) use.

