


INSTALLATION INSTRUCTIONS

Snorkel Kit: for Polaris Ranger[®] XP 900

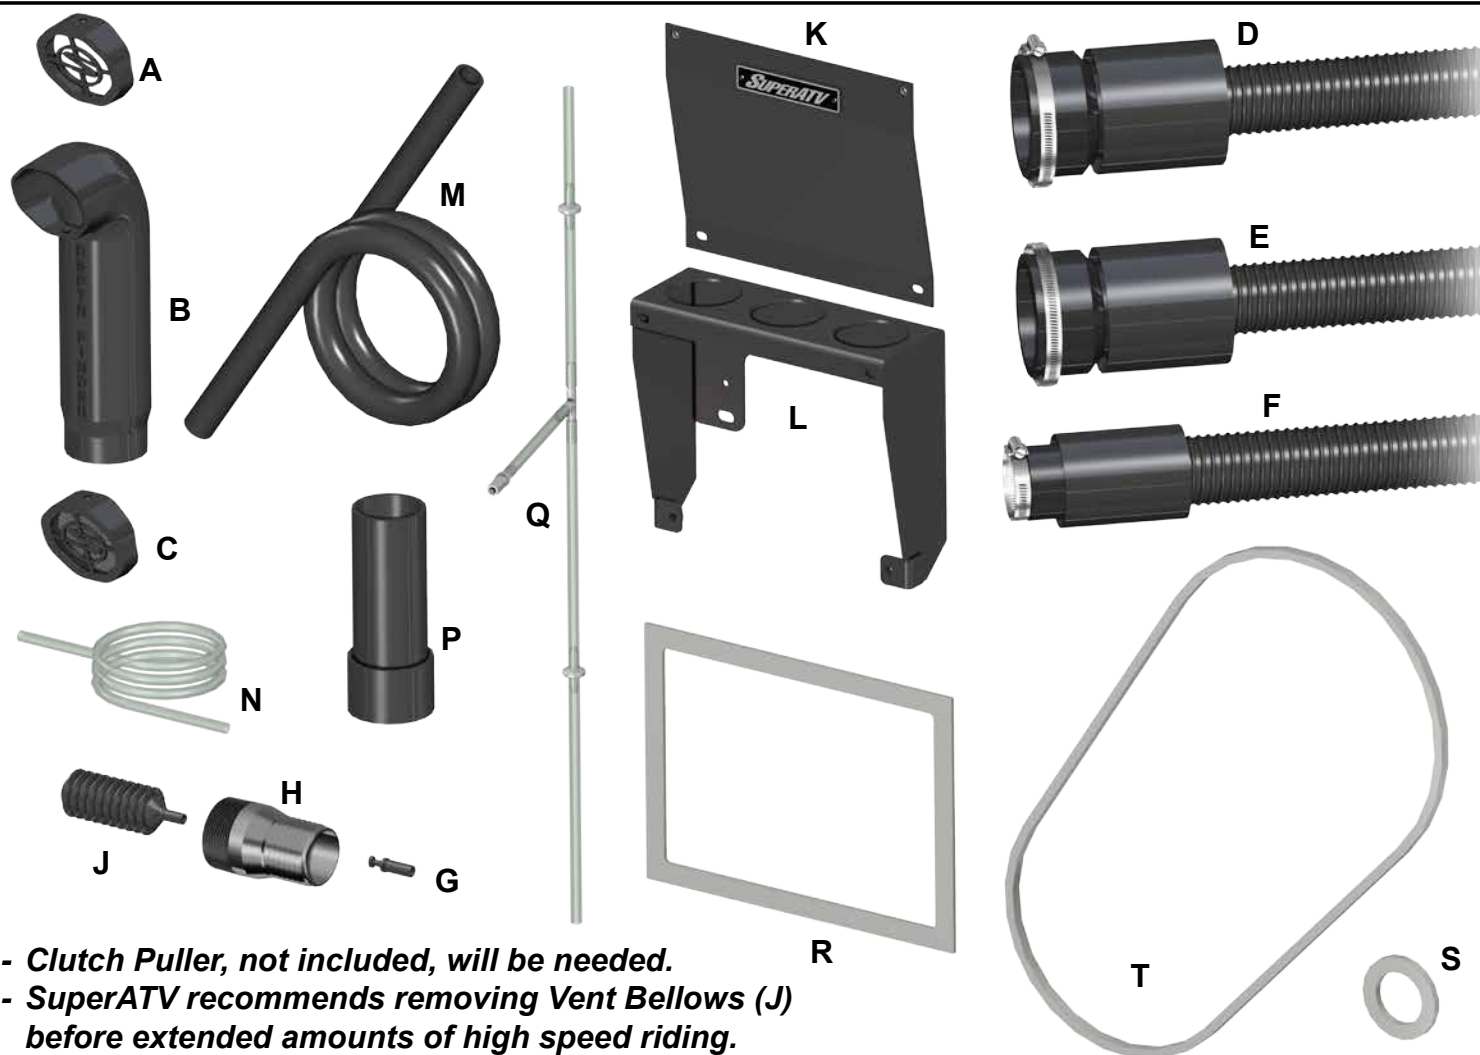

- **Clutch Puller, not included, will be needed.**
- **SuperATV recommends removing Vent Bellows (J) before extended amounts of high speed riding.**

Item	Description	Item	Description
A	Faceplate (no mesh)	K	Cover
B	Snorkle Riser x 3	L	Bracket
C	Faceplate Assembly x 2	M	Hose
D	Belt Exhaust Snorkle	N	Tubing
E	Belt Intake Snorkle	P	Riser Pipe Assembly x 3
F	Airbox Snorkle	Q	Gas Tank Vent Hose Assembly
G	Plug x 2	R	Air Box Gasket
H	Fitting x 3	S	Clutch Backing Plate Gasket
J	Vent Bellow x 2	T	Clutch Housing Gasket

(Kit Contents continue on following page)

Need help with your installation?



sales@superatv.com



www.superatv.com



1-855-743-3427



8:00am - 8:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

Read instructions and view illustrations before beginning.

Thank You
For Choosing

SUPERATV.COM[®]

(Kit Contents continued)



Liability Statement

SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.


SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warrantied if item was not installed properly, misused, or modified.

Installing, adding, modifying, or fabricating any factory or aftermarket product to your ATV/UTV may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of certain products on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of the product. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you.

The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws and ordinances when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.






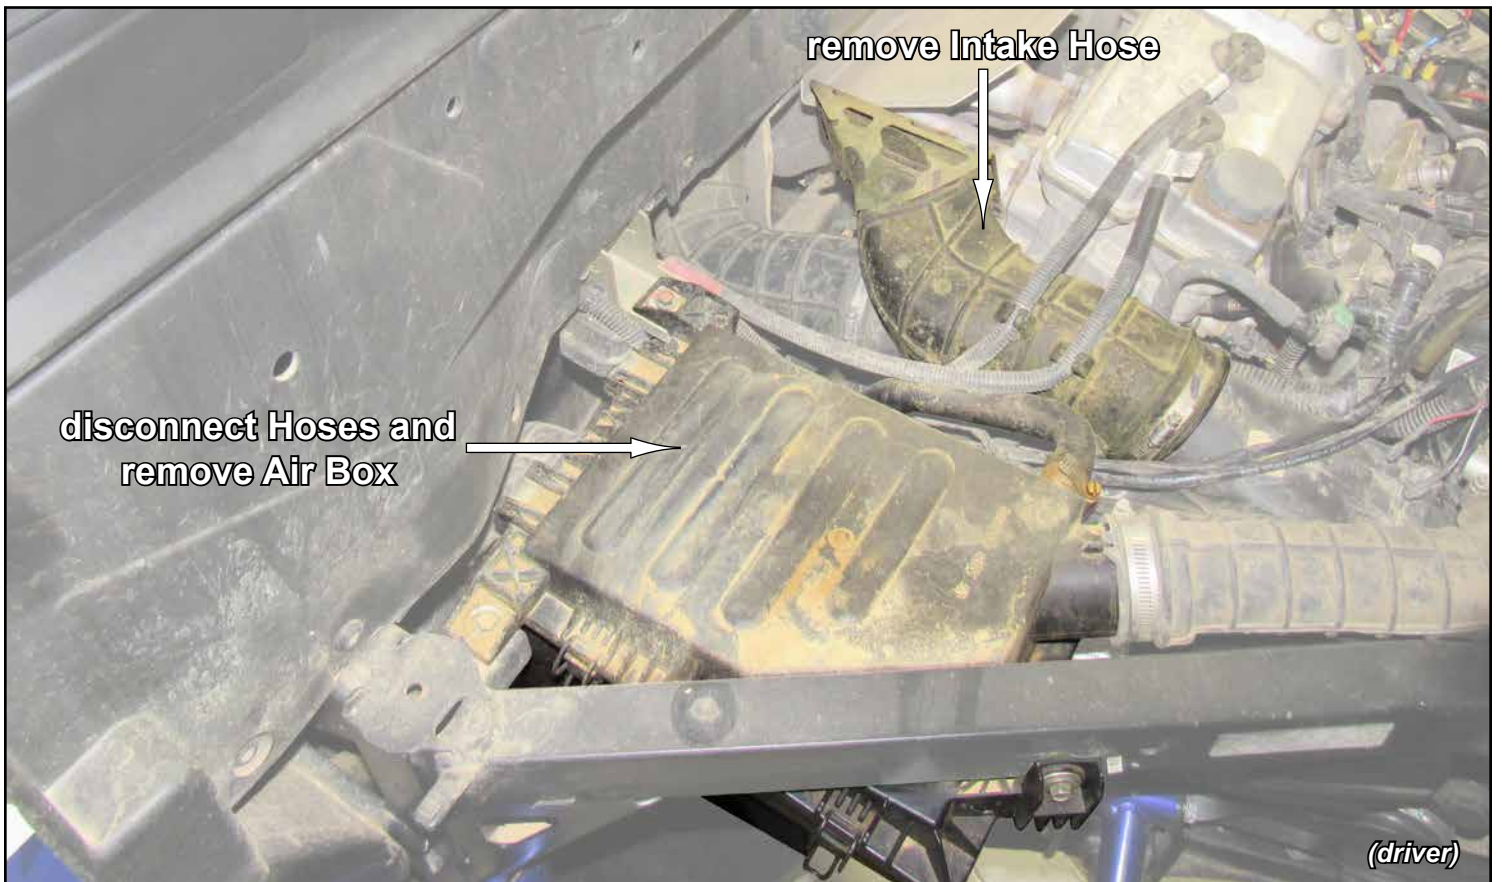




Clutch Removal

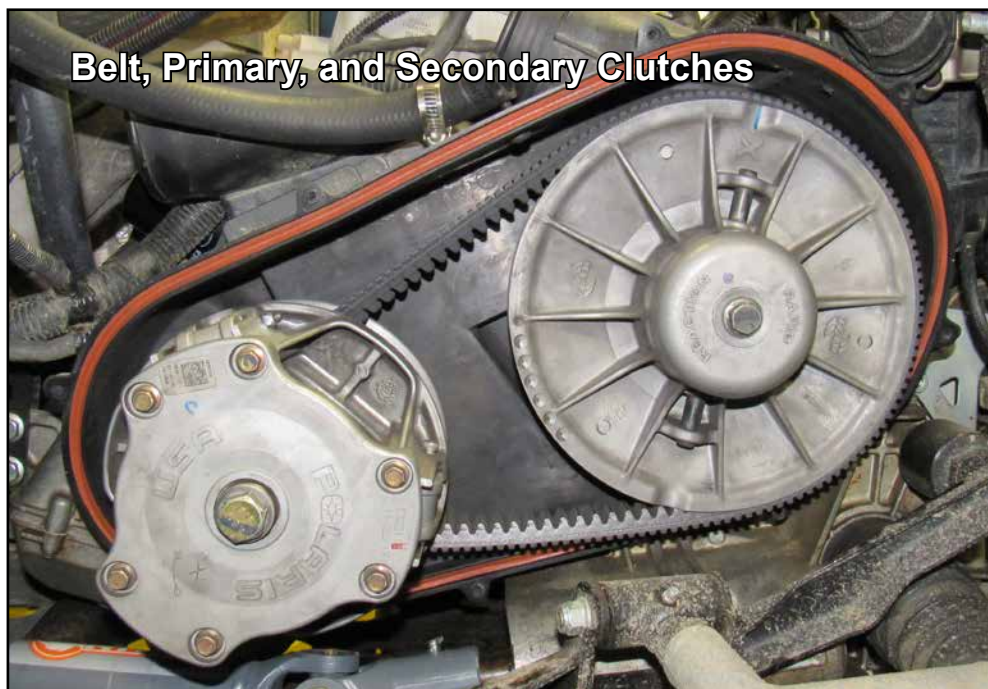

Clutch Housing Modifications


remove Ducts and apply black RTV
100% Silicone to Clutch Cover

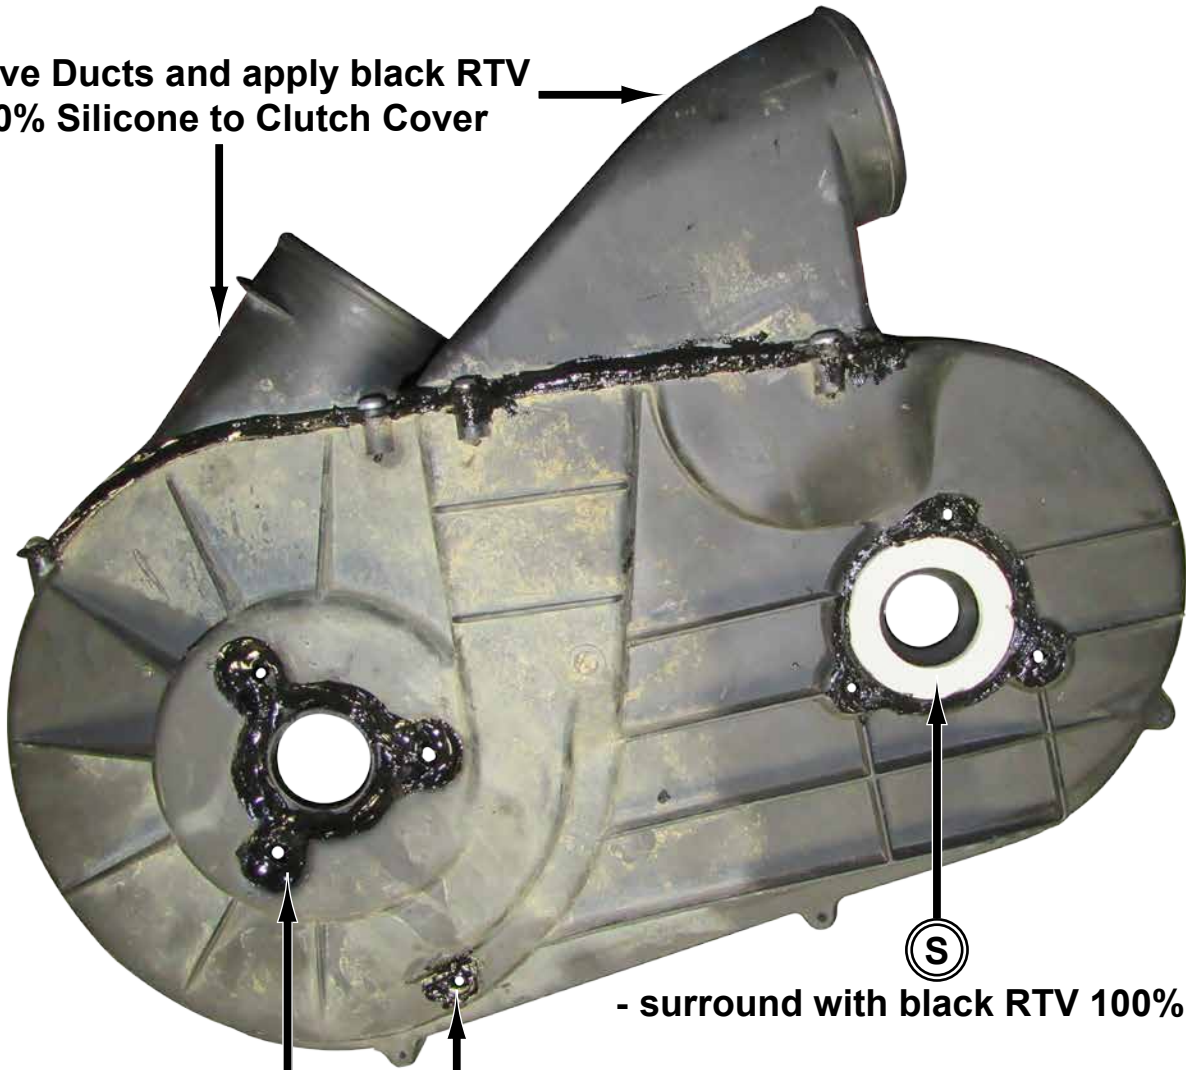

- surround with black RTV 100% Silicone


apply black RTV 100% Silicone

apply black RTV 100% Silicone
around all screw holes

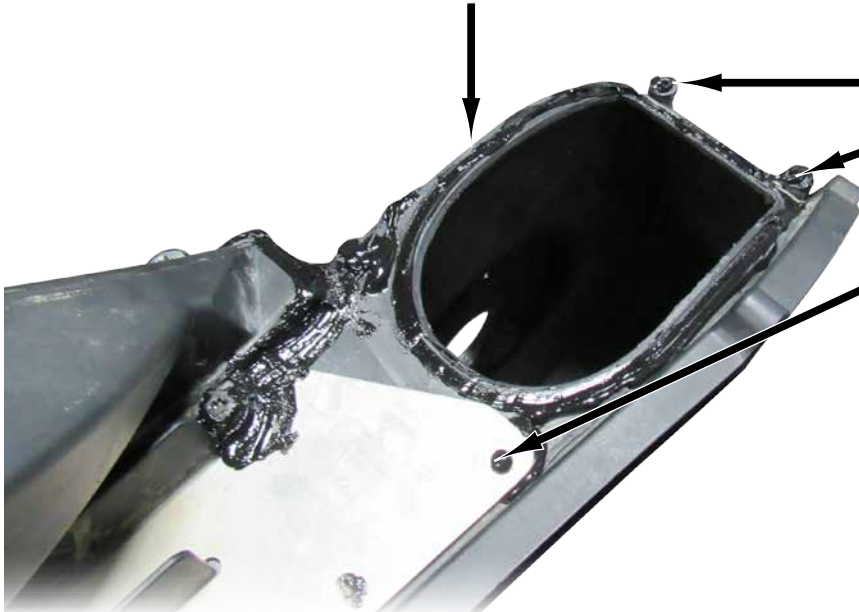


Clutch Install

- install Clutch Housing Gasket (T) and reinstall all Clutch components

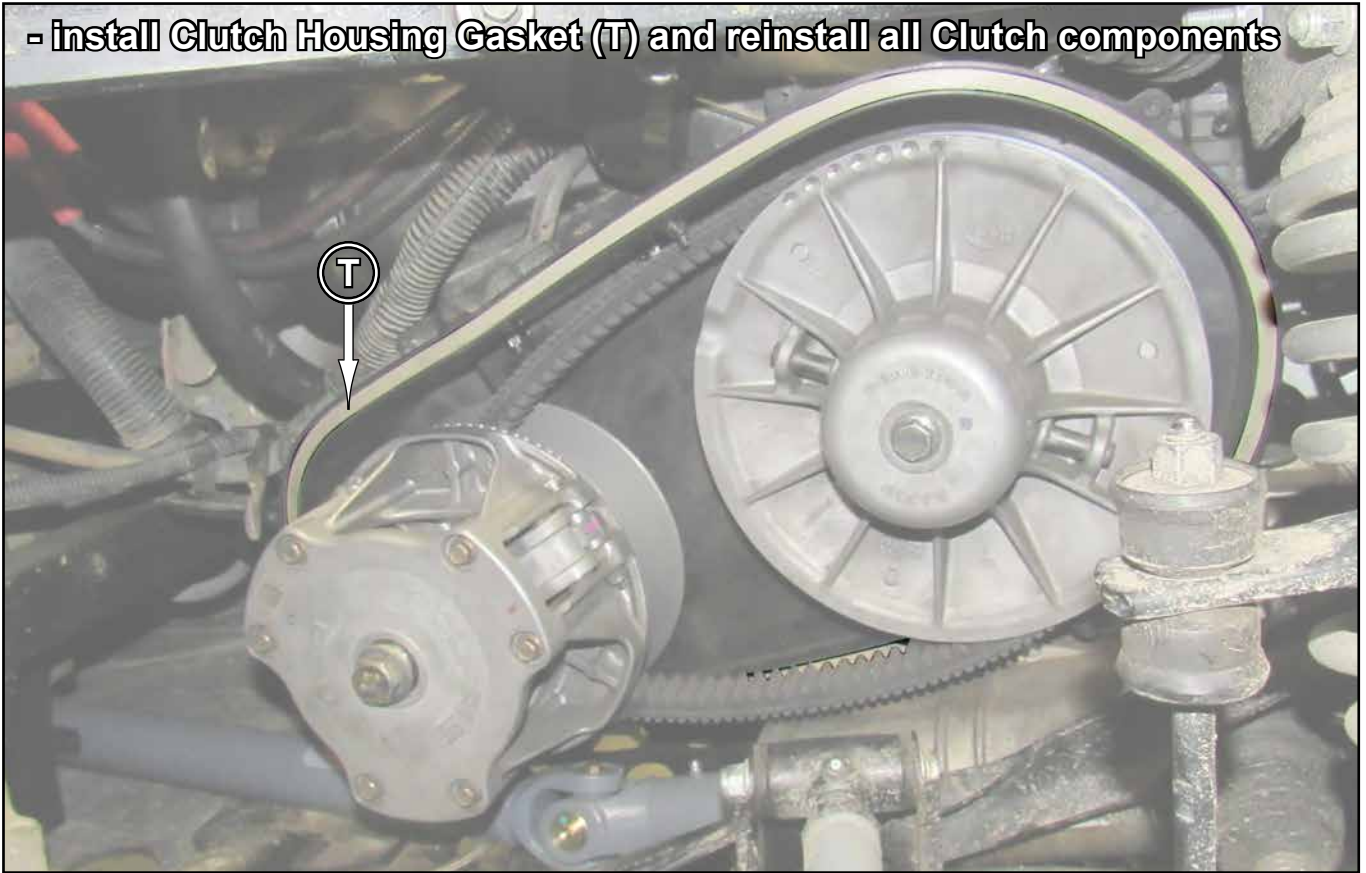

Coolant Vent Hose

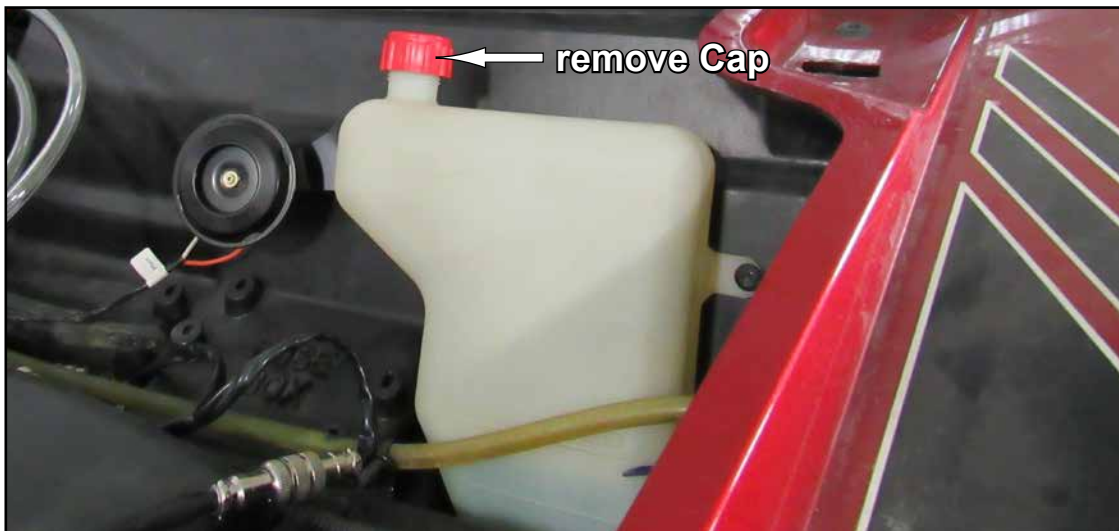

install 90° Connector and surround with black RTV 100% Silicone




- reinstall Cap in orientation shown
- connect Tubing
- coil Tubing 3 loops and secure with Wire-Ties



Airbox Modifications

- drill a Ø5/8" hole in bottom of Air Box
- install Grommet and surround with black RTV 100% Silicone

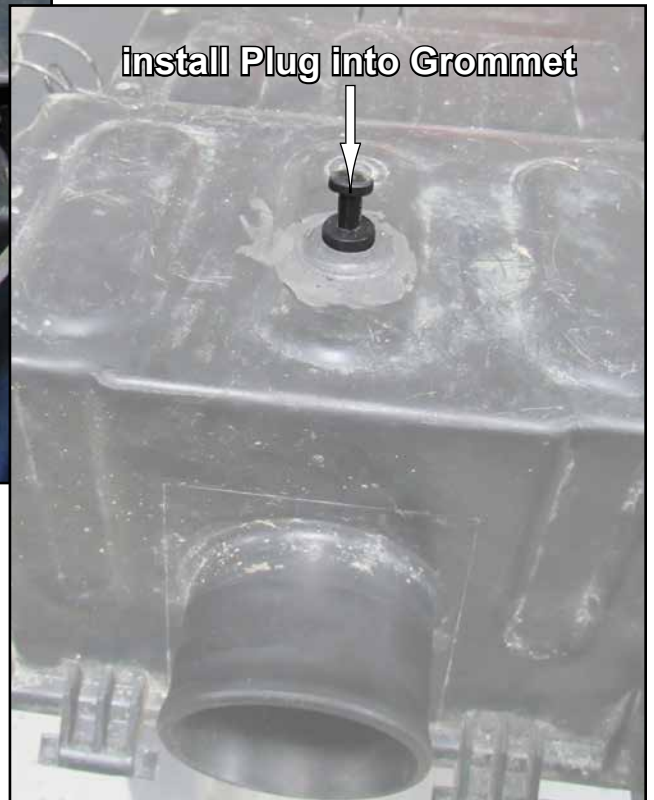

- drill a Ø3/8" hole in top of Air Box
- install 90° Connector and surround with black RTV 100% Silicone

Airbox Modifications continued






- Reassemble Airbox and install to machine.

Bracket Installation



- Remove Firewall.

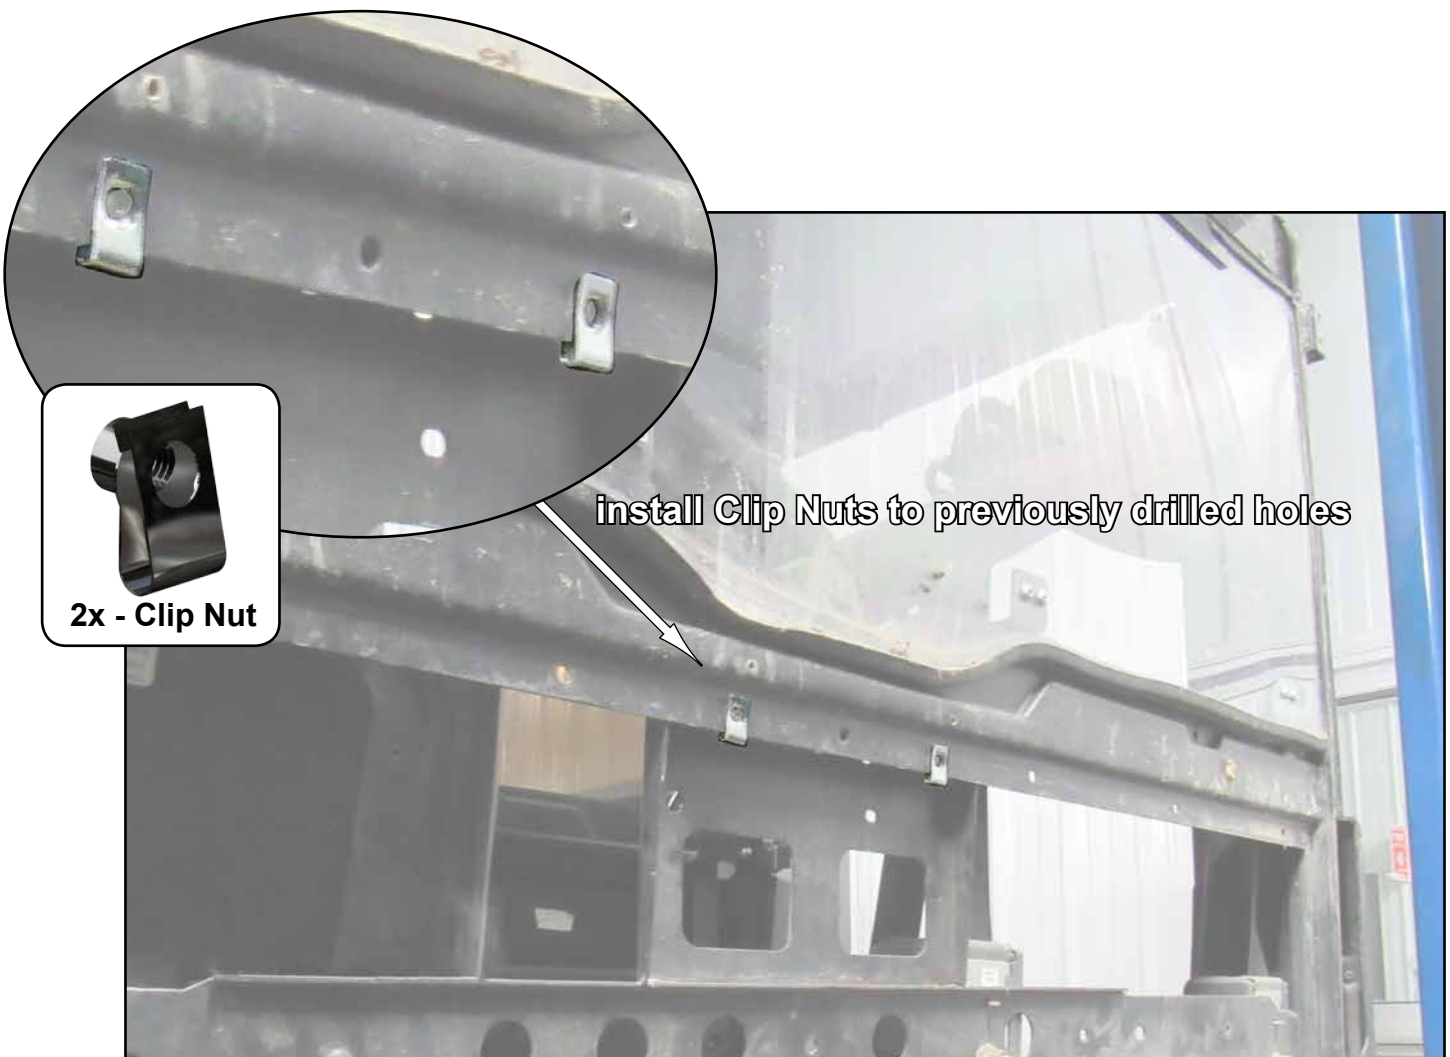

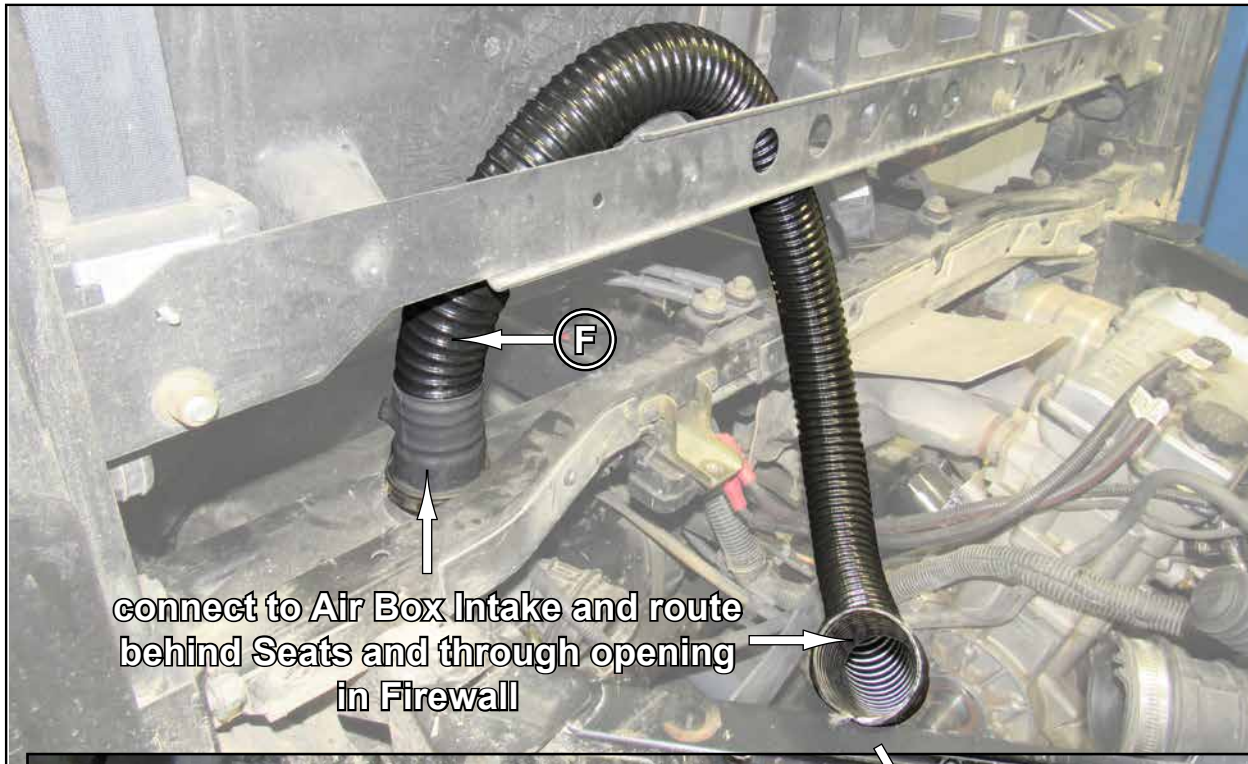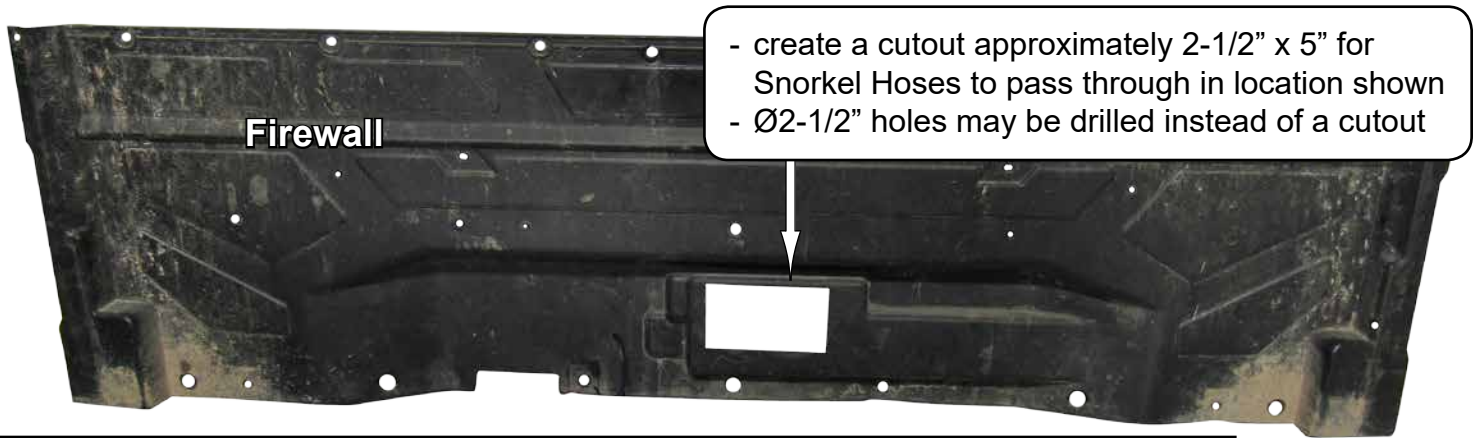

Bracket Installation continued



Small Spacer

M8 x 30mm




**vehicles with Rear Windshield
see following page**

M8 Lock Washer

M8 Fender Washer

- complete Bracket (L) installation with hardware shown

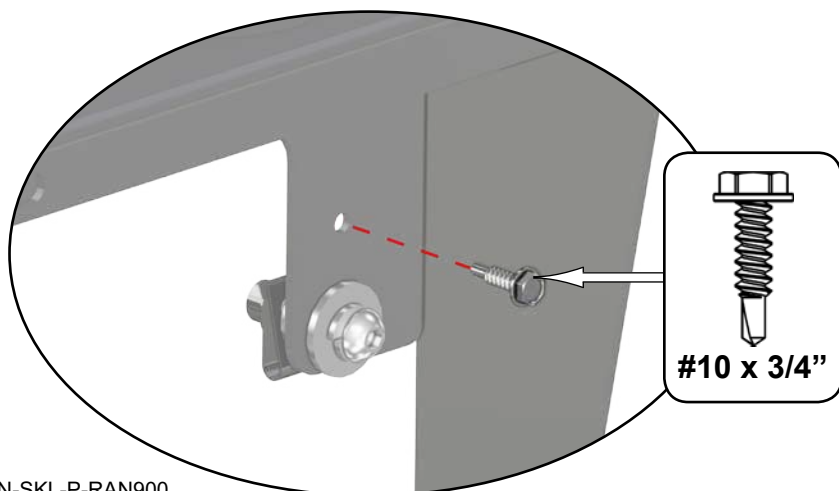

Bracket Installation with Rear Windshield



install Bracket (L) with hardware shown
(tighten completely)

Small Spacer

+


Large Spacer

M8 x 35mm

M8 Lock Washer

M8 Fender Washer

- complete Bracket (L) installation with hardware shown

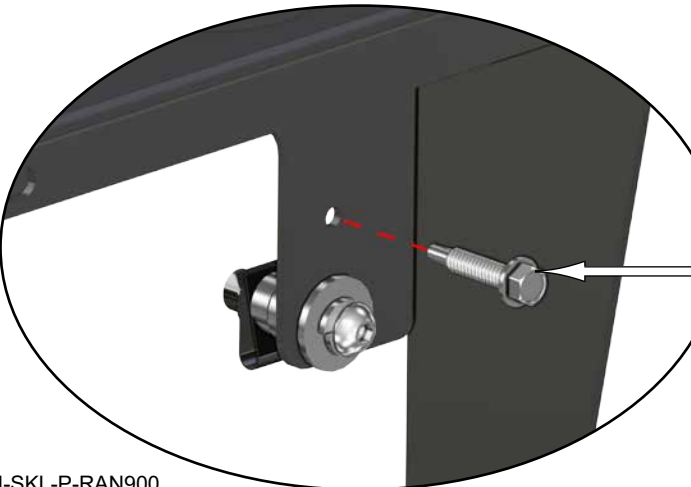


1/4 x 1-1/4"




Riser Pipes


- install Locknut to bottom of threads on Fitting (H)

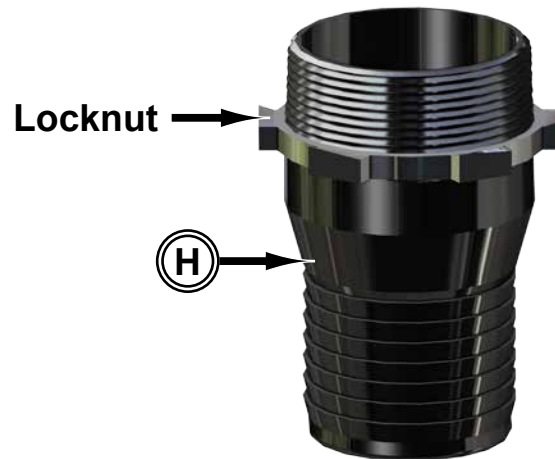

- install Riser Pipe (P) and Fitting (H) to Bracket (L)
- tighten components completely


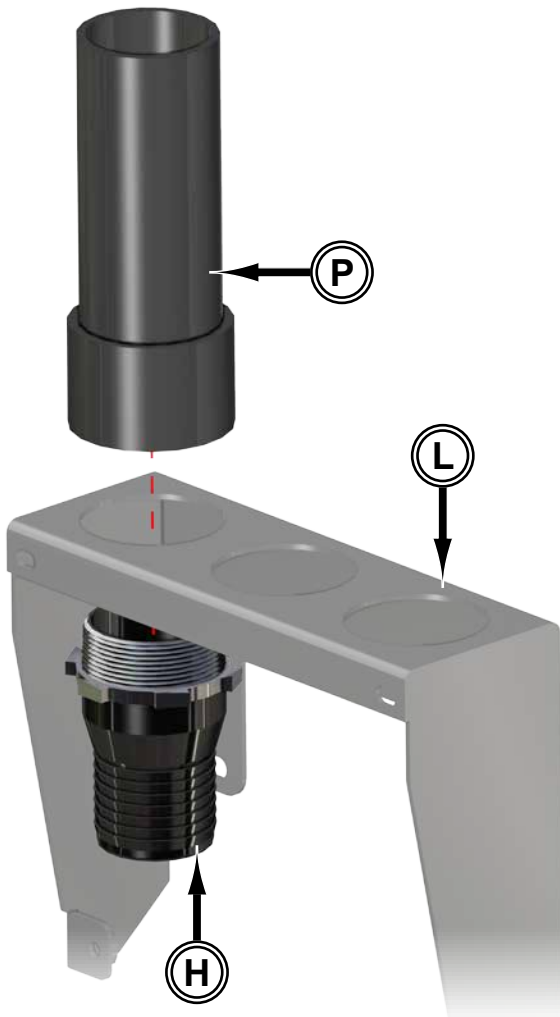


- remove any remaining slack by rotating Locknut up until tight against Bracket (L)

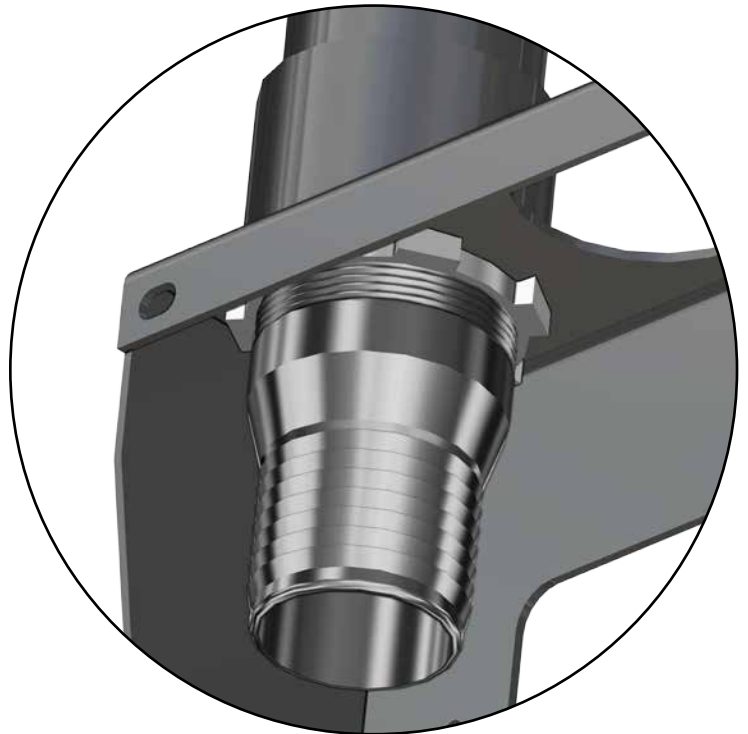

repeat steps for remaining Riser Pipes

- Install Belt Exhaust Snorkle (D) and Belt Intake Snorkle (E) to Clutch Cover.

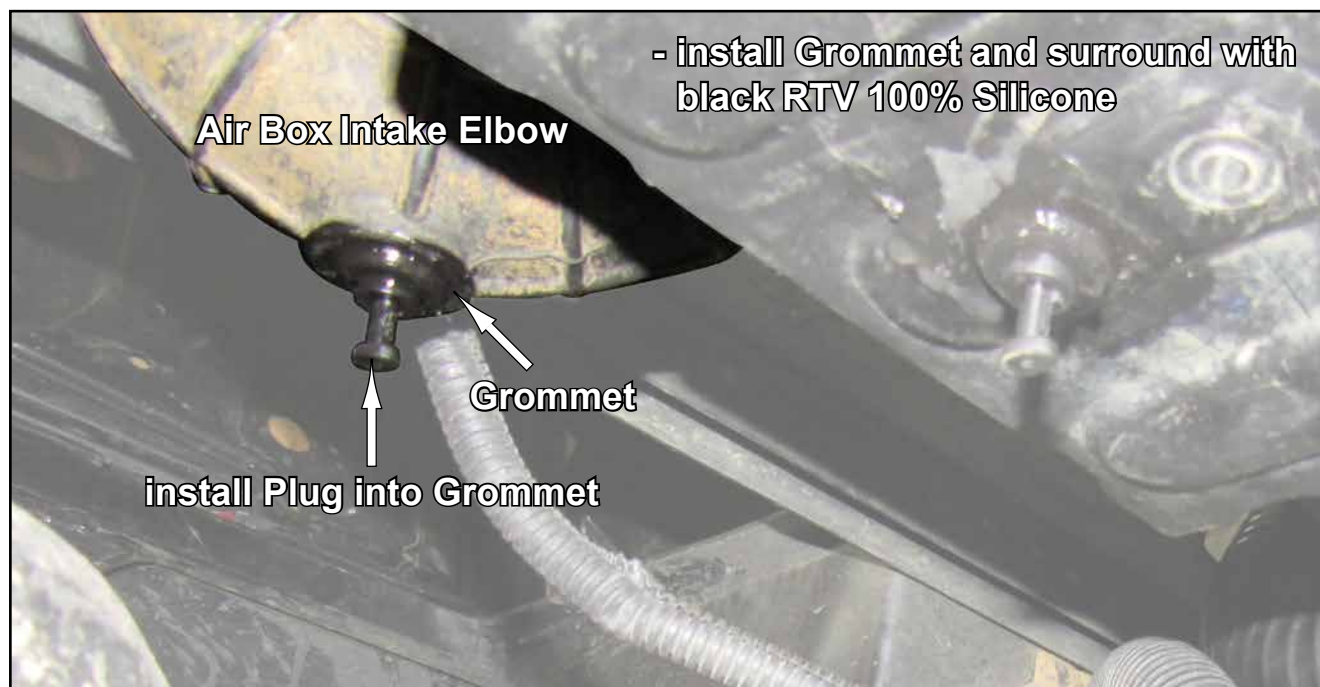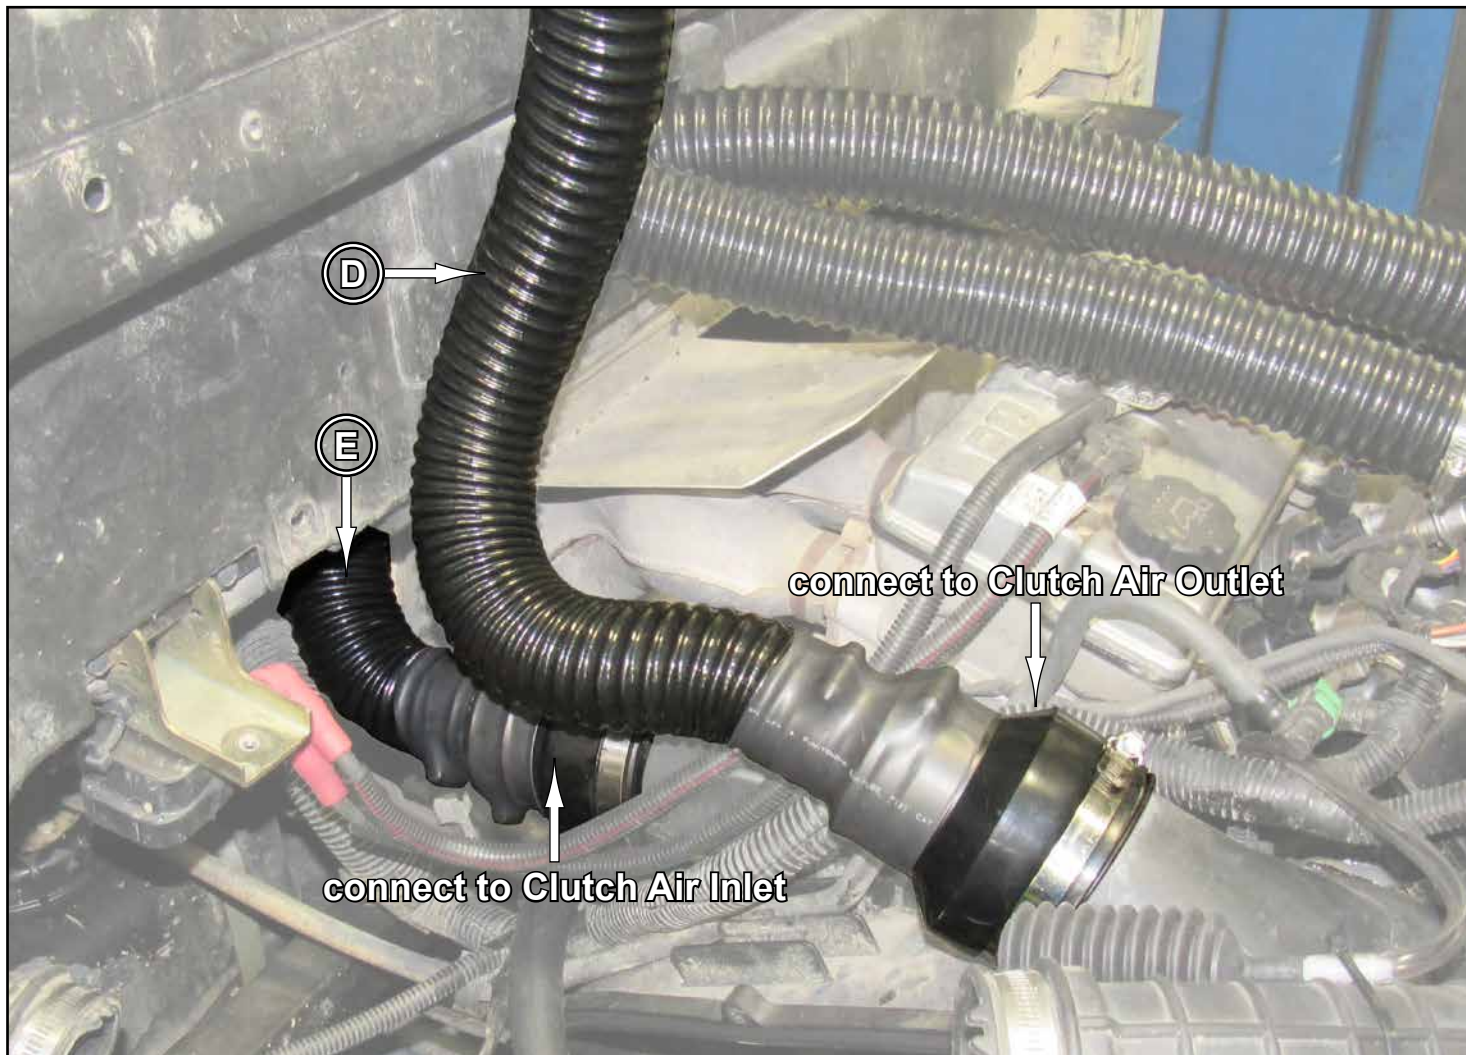


Riser Pipes continued




Riser Pipes continued


- Install Snorkel Risers (B) onto Riser Pipe Assemblies (P)
- Install Faceplates (A)(C) to locations shown. Secure with hardware shown.

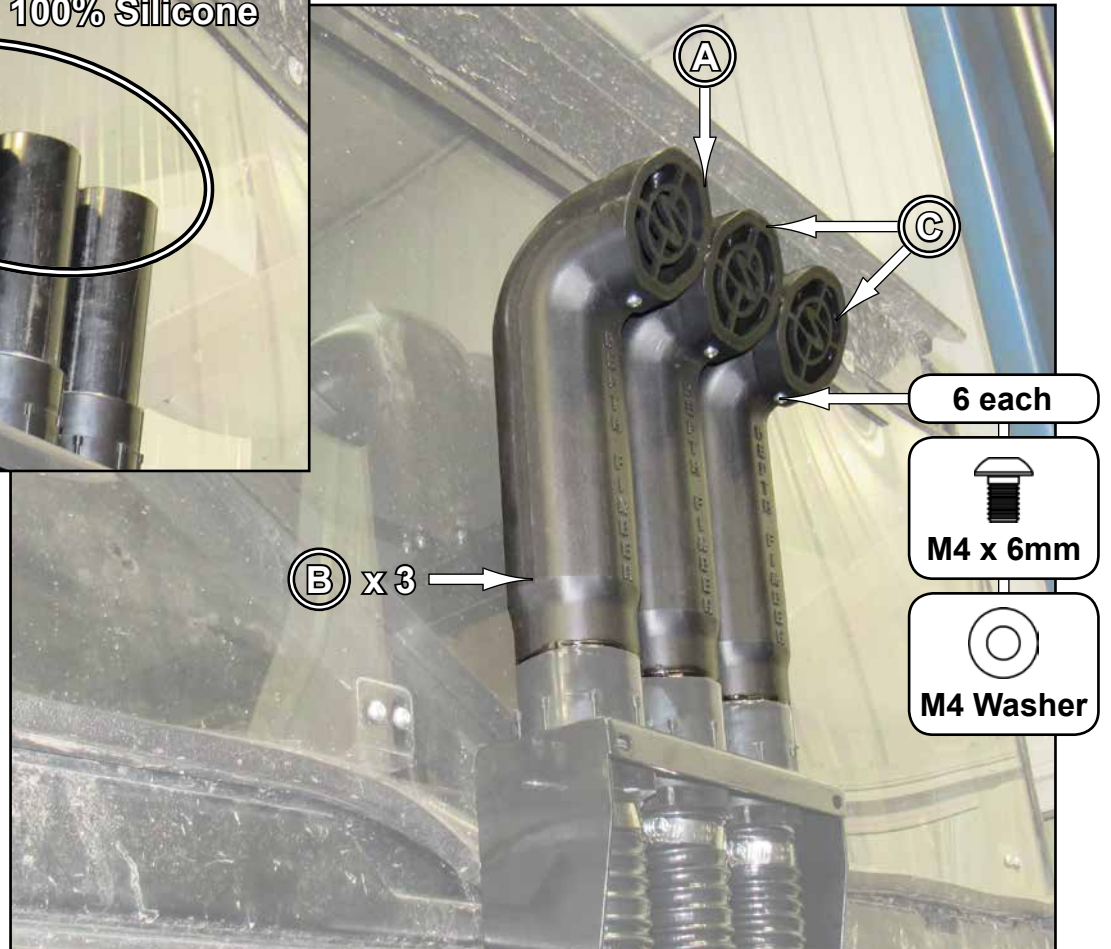

- Install Cover (K) to Bracket (L) with hardware shown.

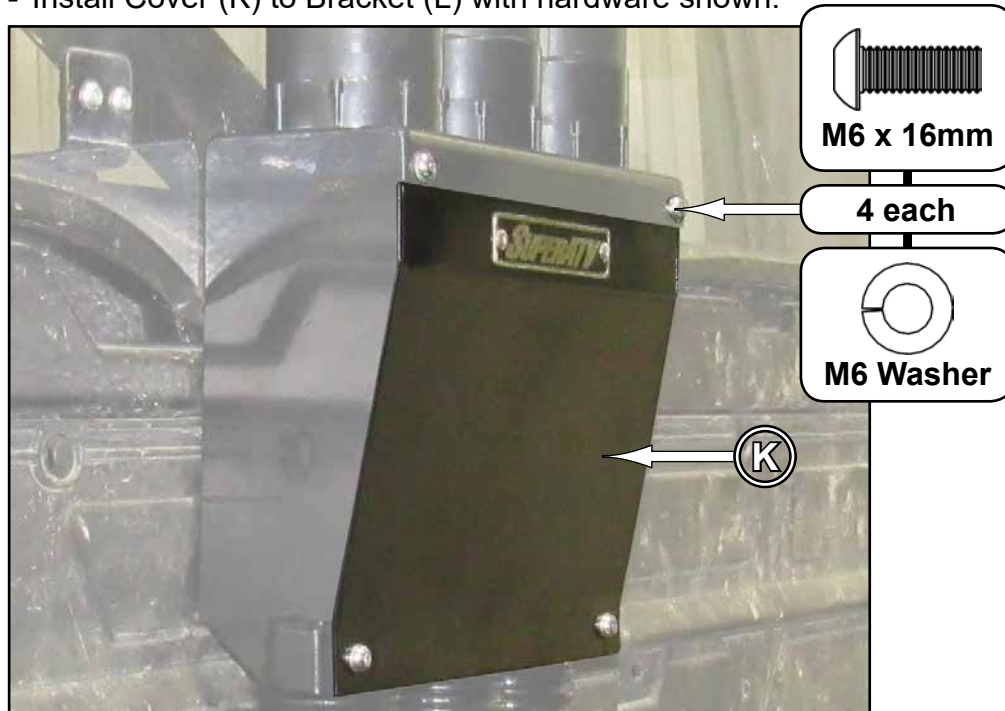


Transmission Vent Line

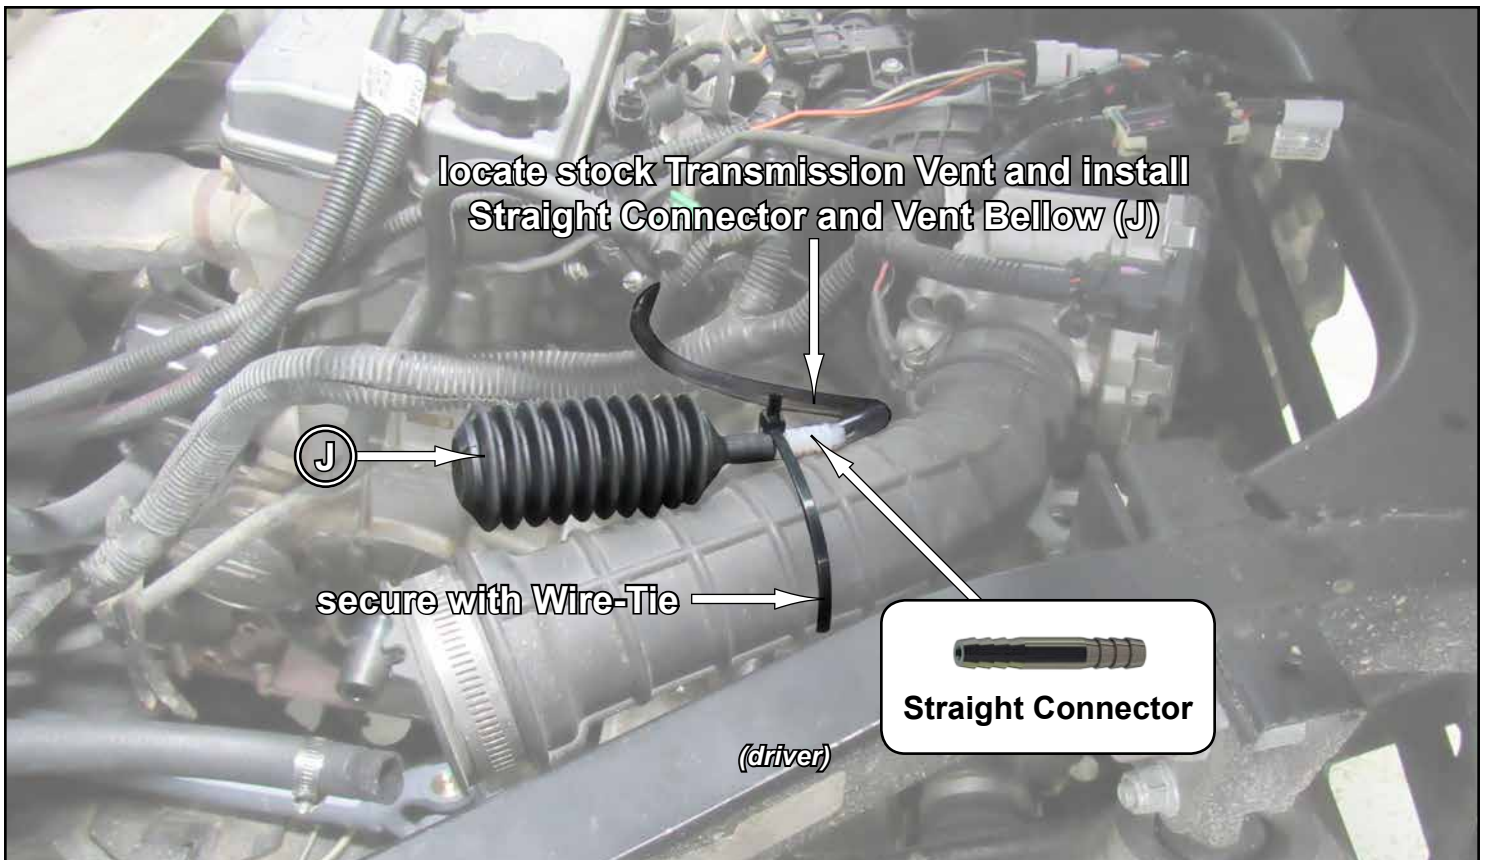

Front Differential Vent Line



Crankcase Hose

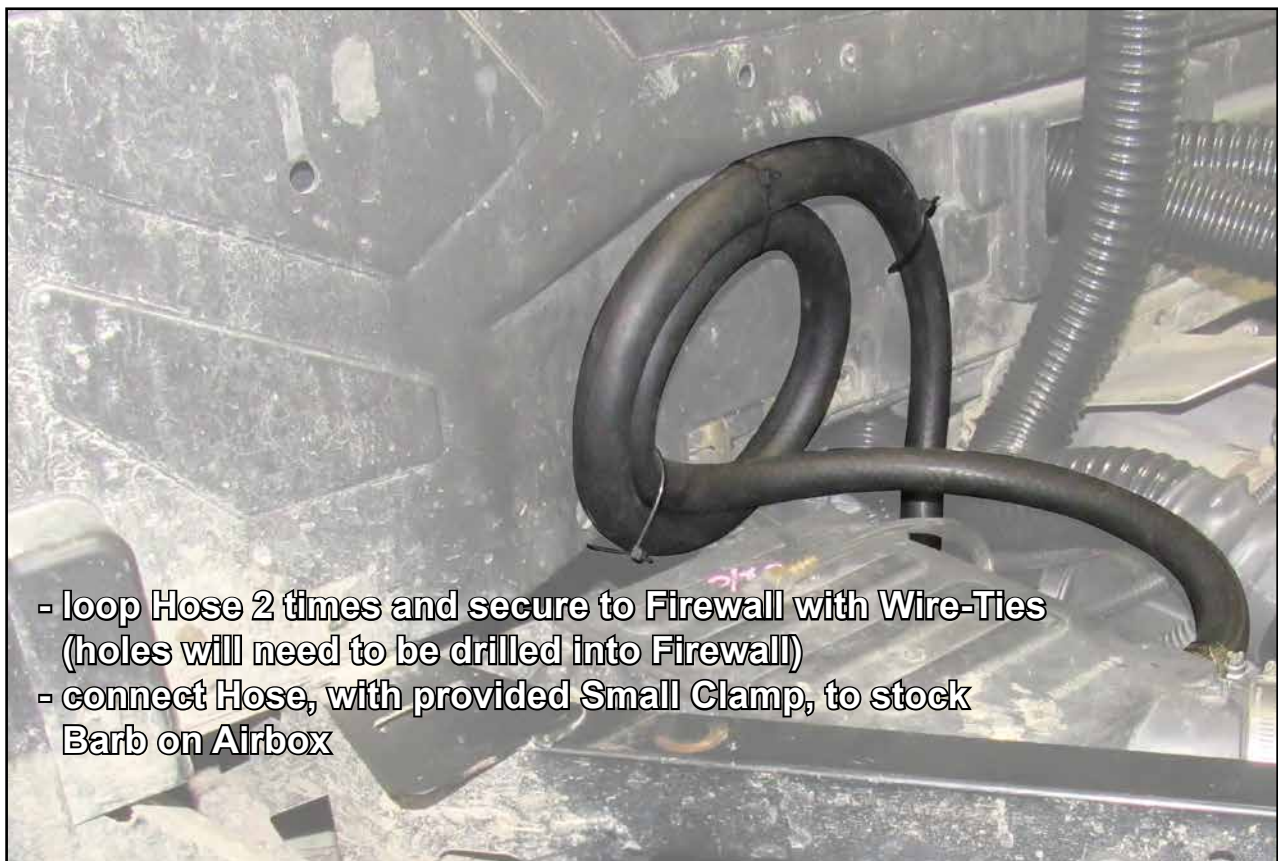

Gas Tank Vent Hose (under driver seat)

