


Heater: for CFMOTO UFORCE 1000

- Do not discard packaging until product has been successfully installed.

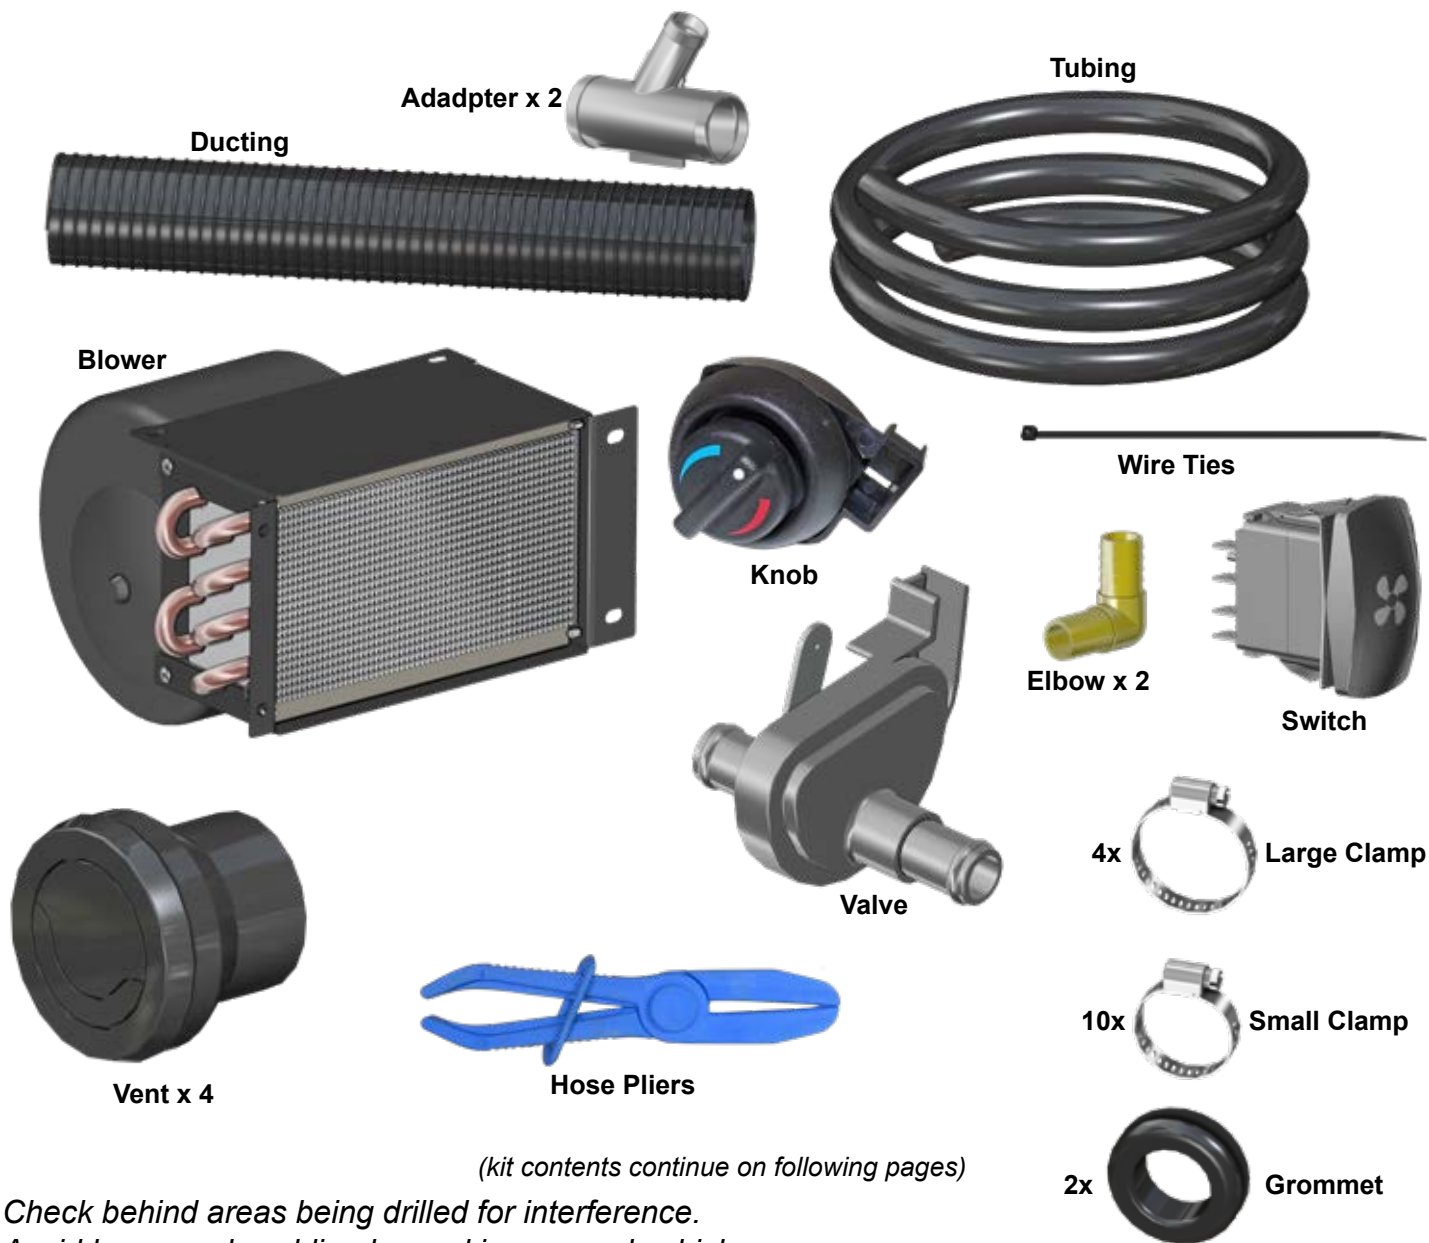

(kit contents continue on following pages)

- Check behind areas being drilled for interference.
- Avoid burns and scalding by working on cool vehicles.
- Secure components away from rotating objects.
- Do not tighten mounting hardware until all components are in place.
- Use manufacturers recommended coolant.
- Avoid sharp bends when installing Tubing.
- Verify that no leaks are present after installation.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-855-743-3427




8:00am - 8:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

Read instructions and view illustrations before beginning.


Thank You
For Choosing

SUPERATV.COM[®]

(kit contents continued)

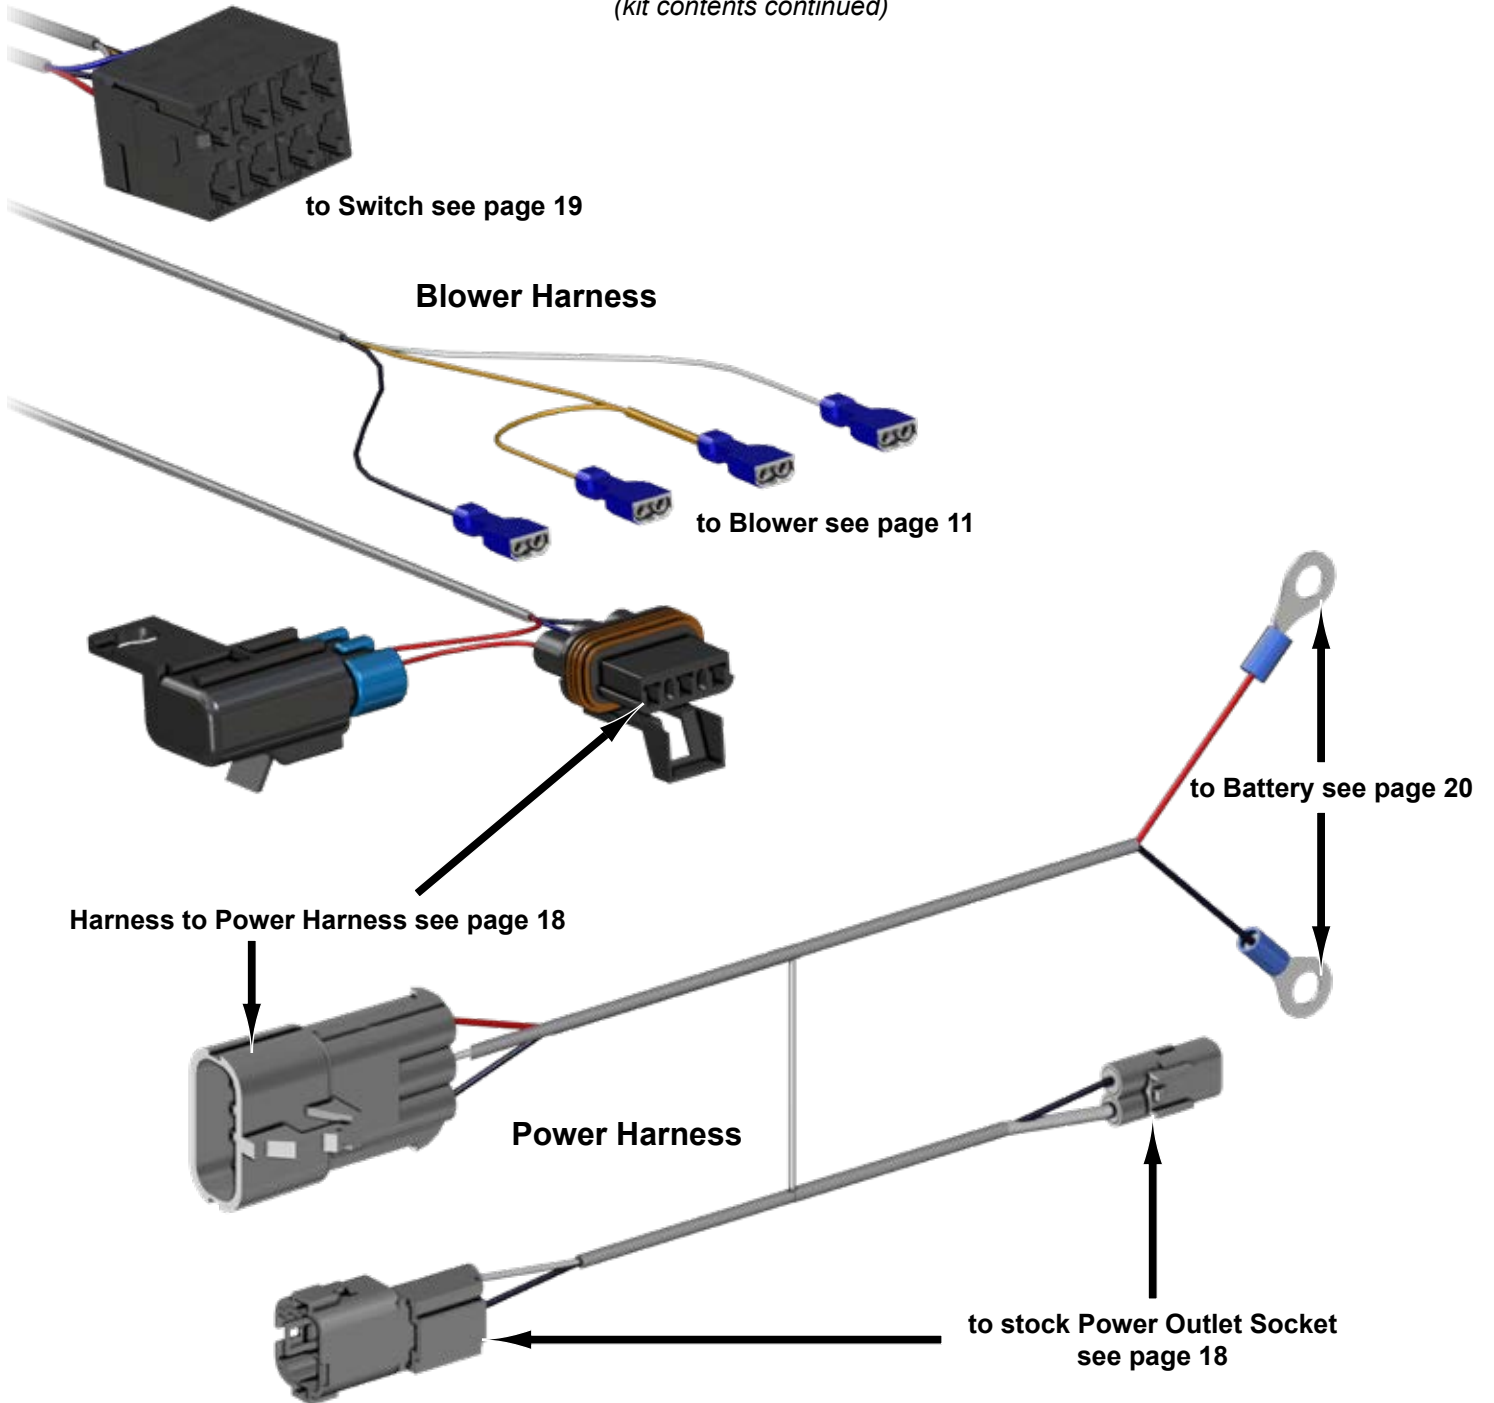

(kit contents continued)

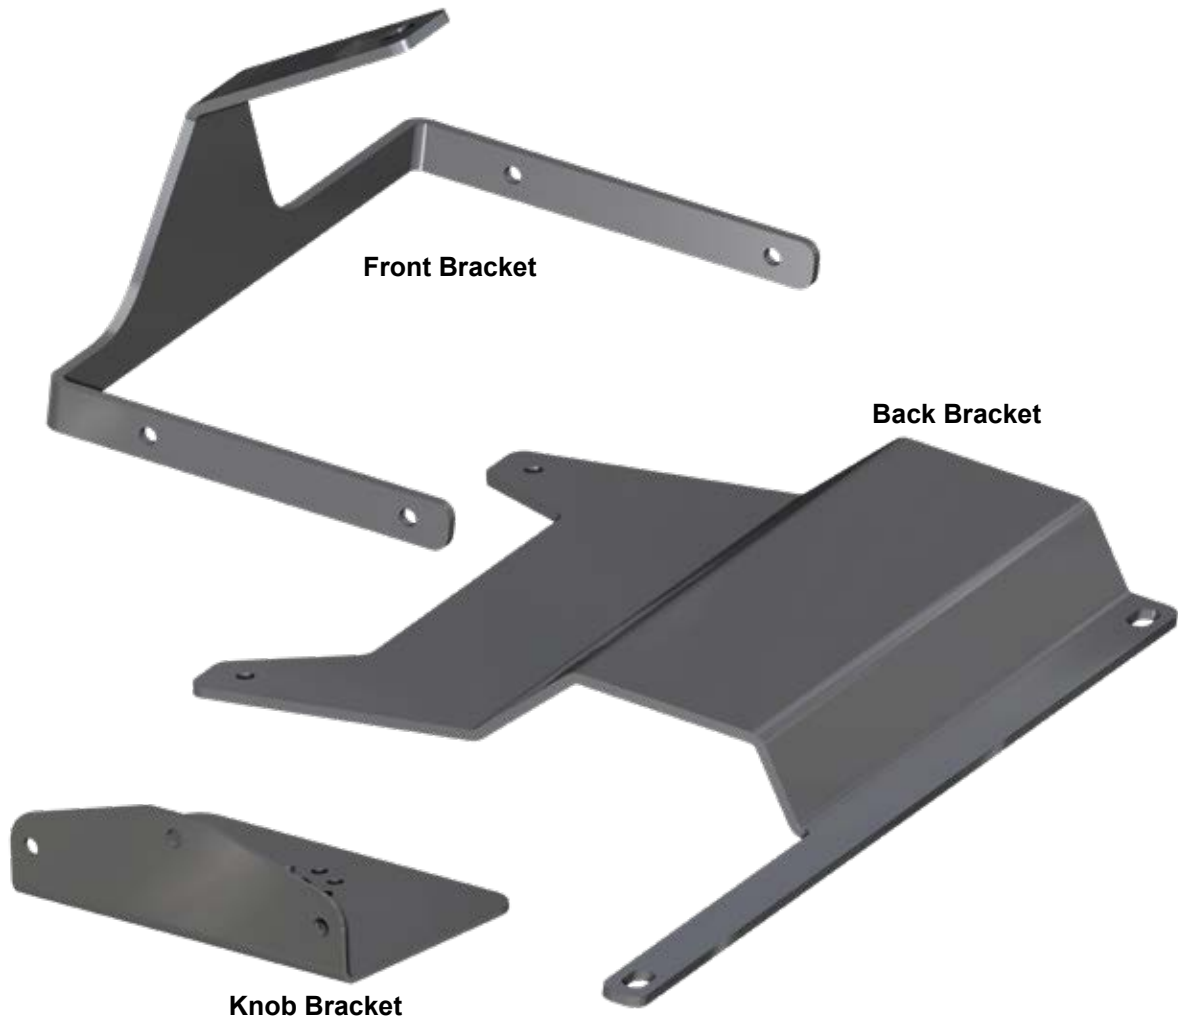

Liability Statement

SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warrantied if item was not installed properly, misused, or modified.


Installing, adding, modifying, or fabricating any factory or aftermarket product to your ATV/UTV may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of certain products on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of the product. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you.

The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws and ordinances when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.




unplug any applicable Switches, Harnesses, etc.




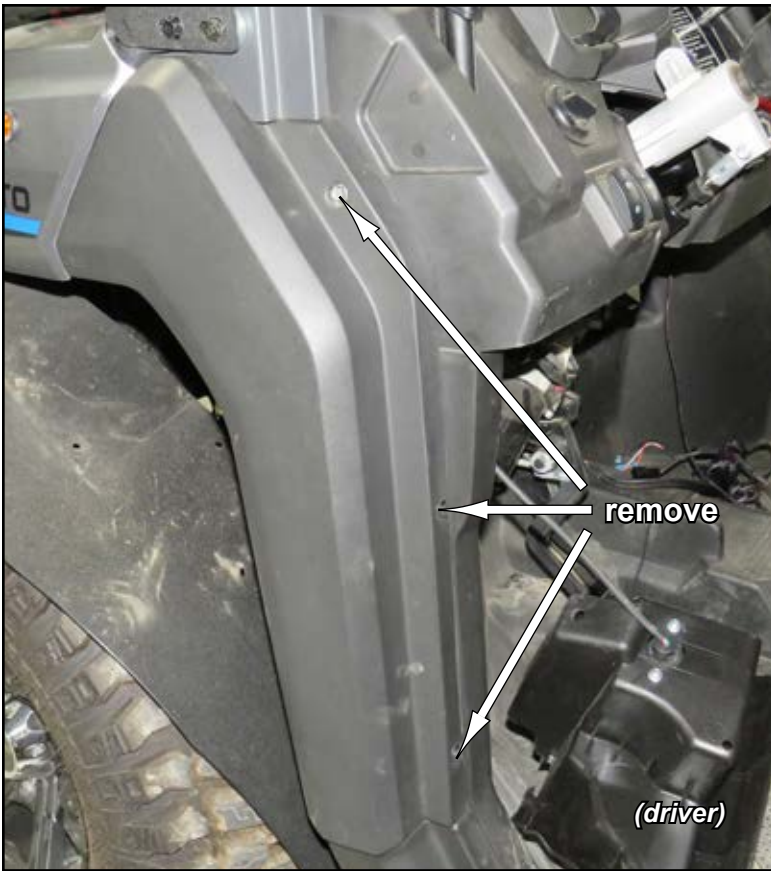

repeat for passenger side

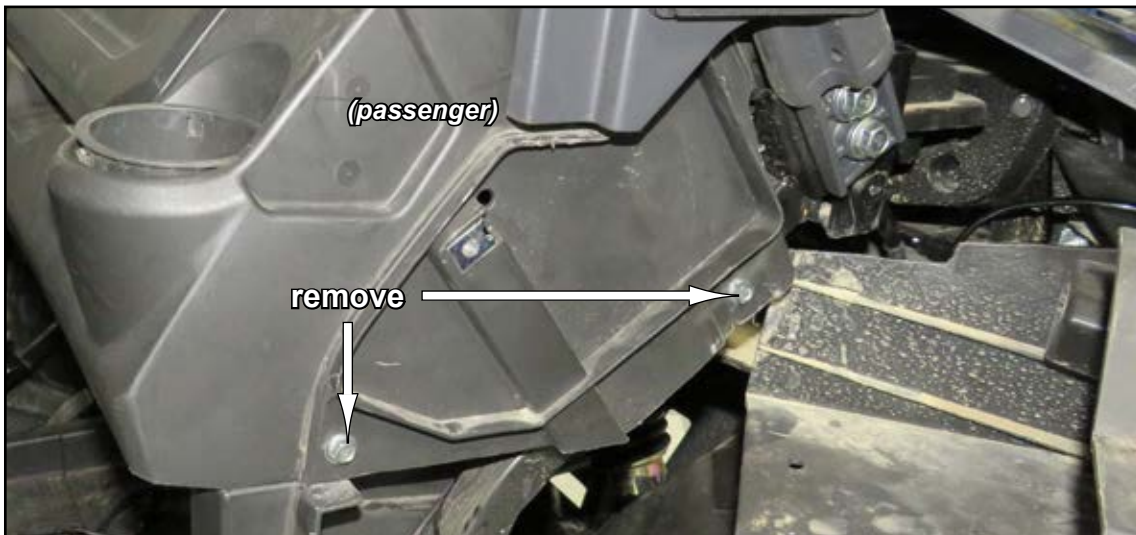

repeat for driver side

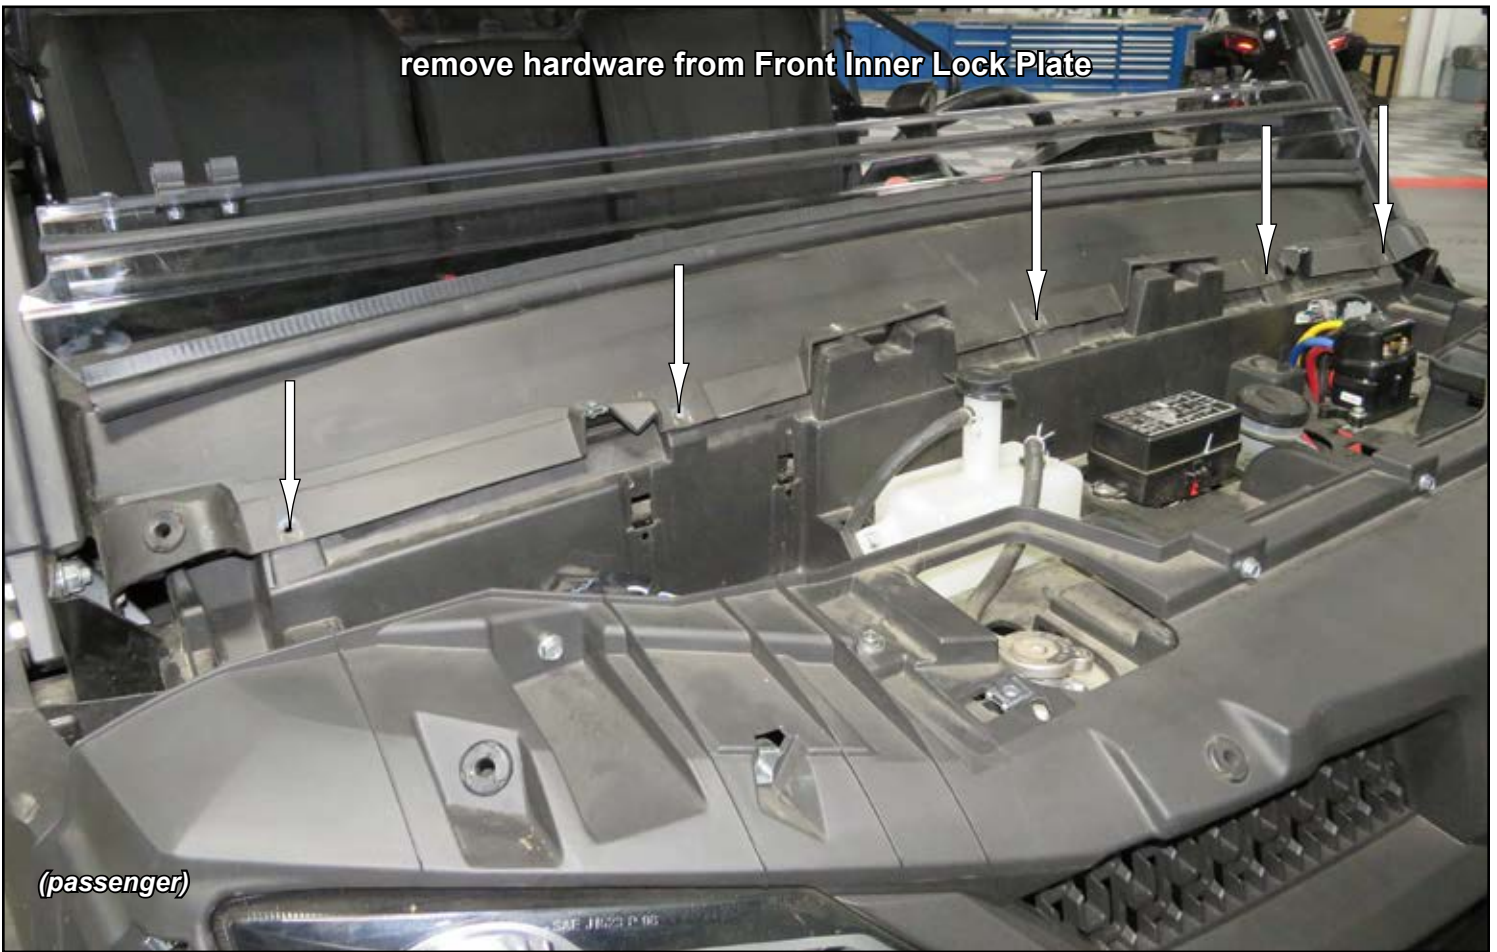


unplug any applicable Switches, Harnesses, etc.

- Hole for Vent will need to be cut in area shown.
- Holes can be made with Dash on or off machine.
- Use a hole saw and cut Ø2-1/2" hole for Vent.
- Repeat for passenger side.

remove Dash




- Install Brackets to Blower with hardware shown; tighten.

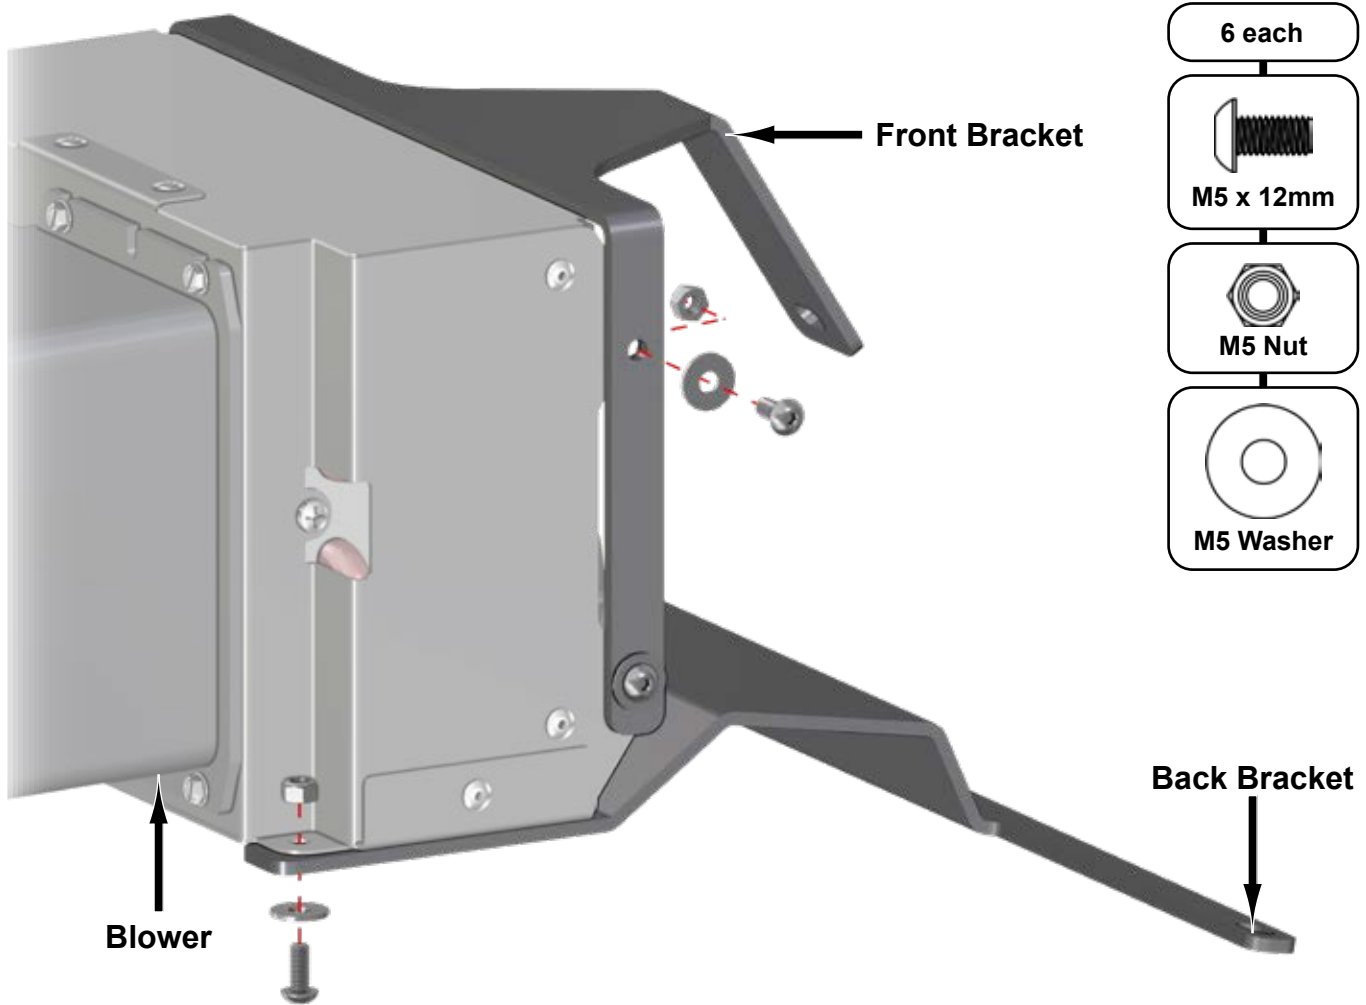


- Separate Knob.




- Install Knob to Knob Bracket.

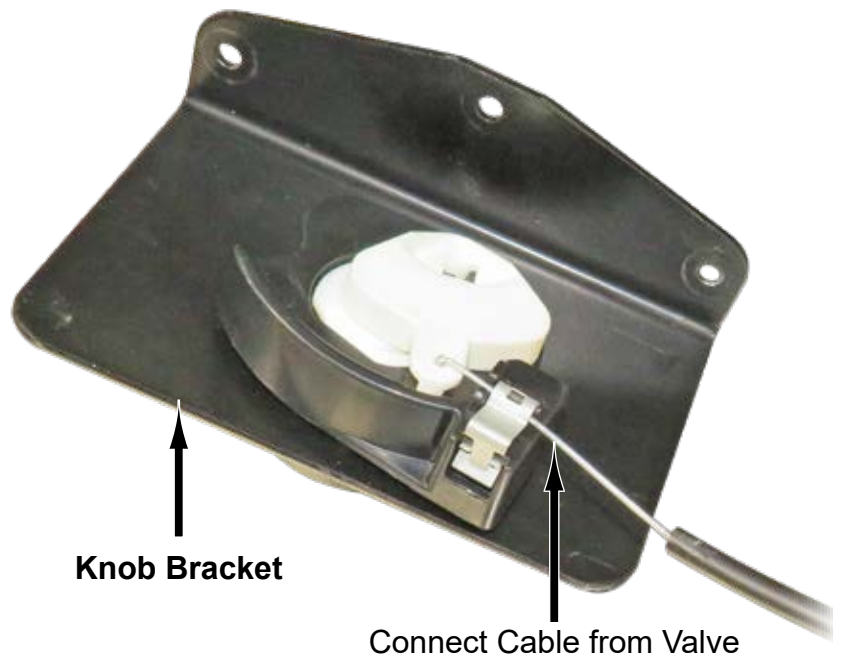


- Cut and install Tubing and Valve to Blower with components shown; tighten.

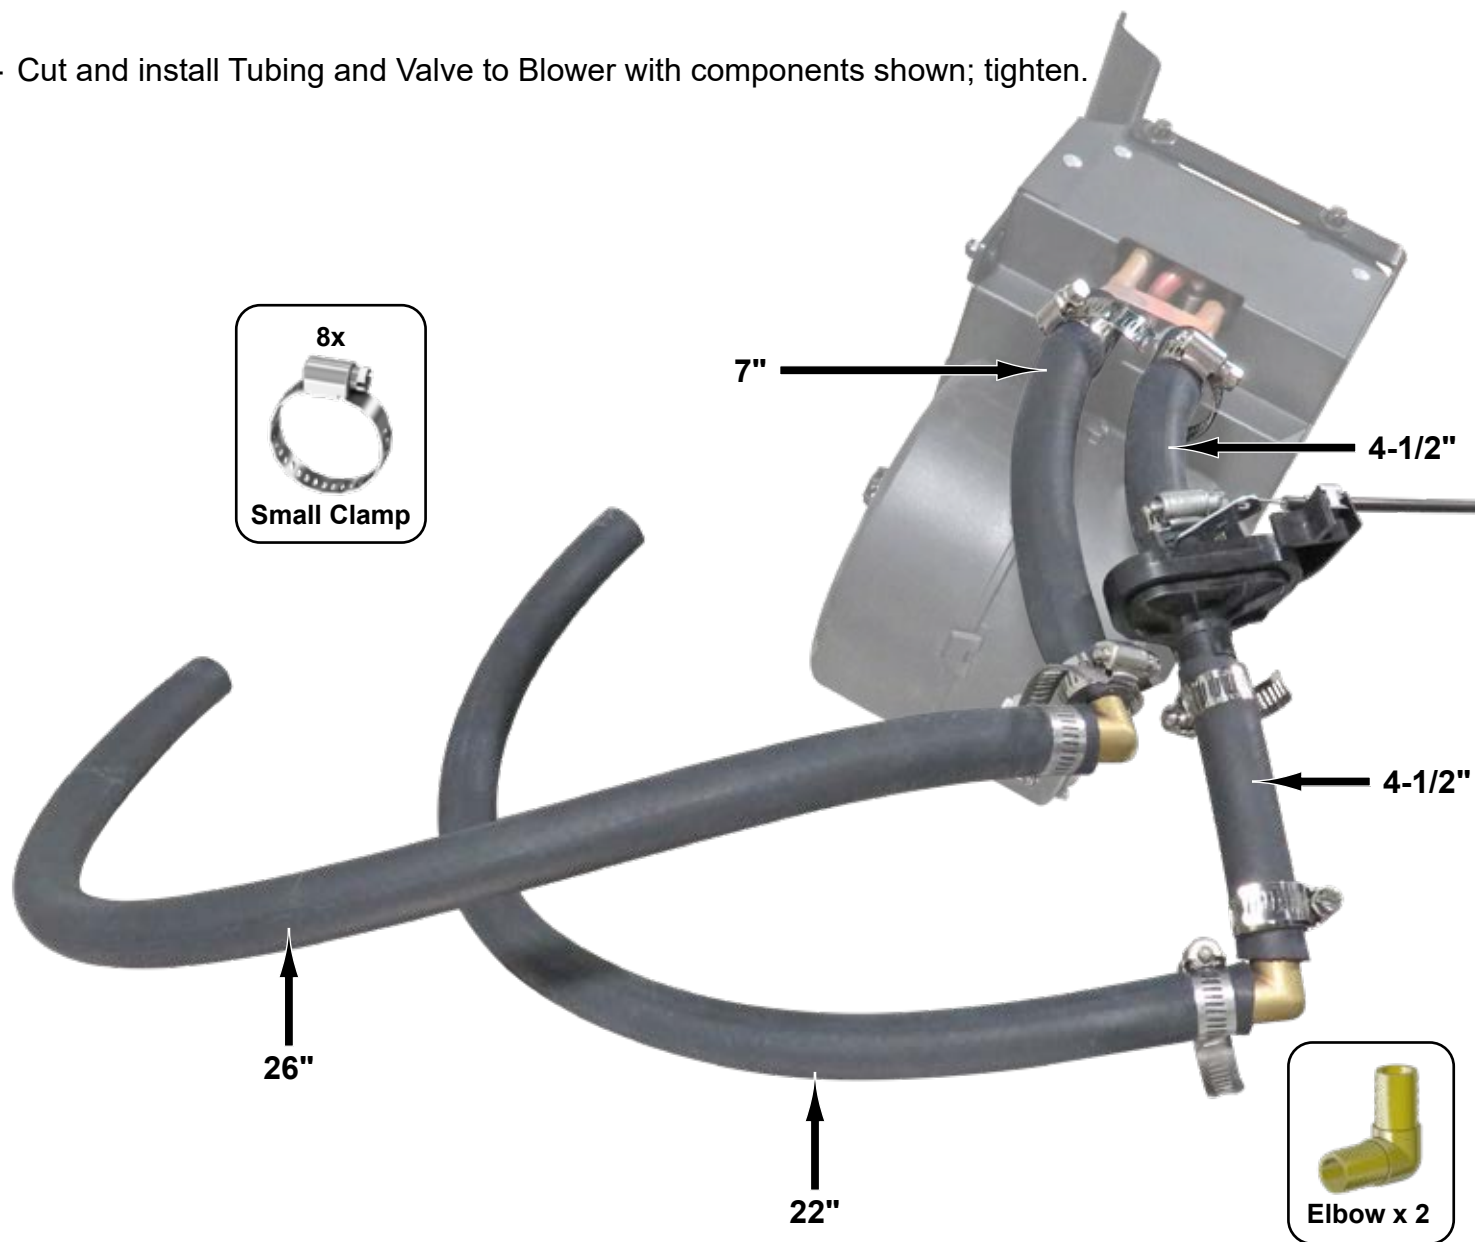

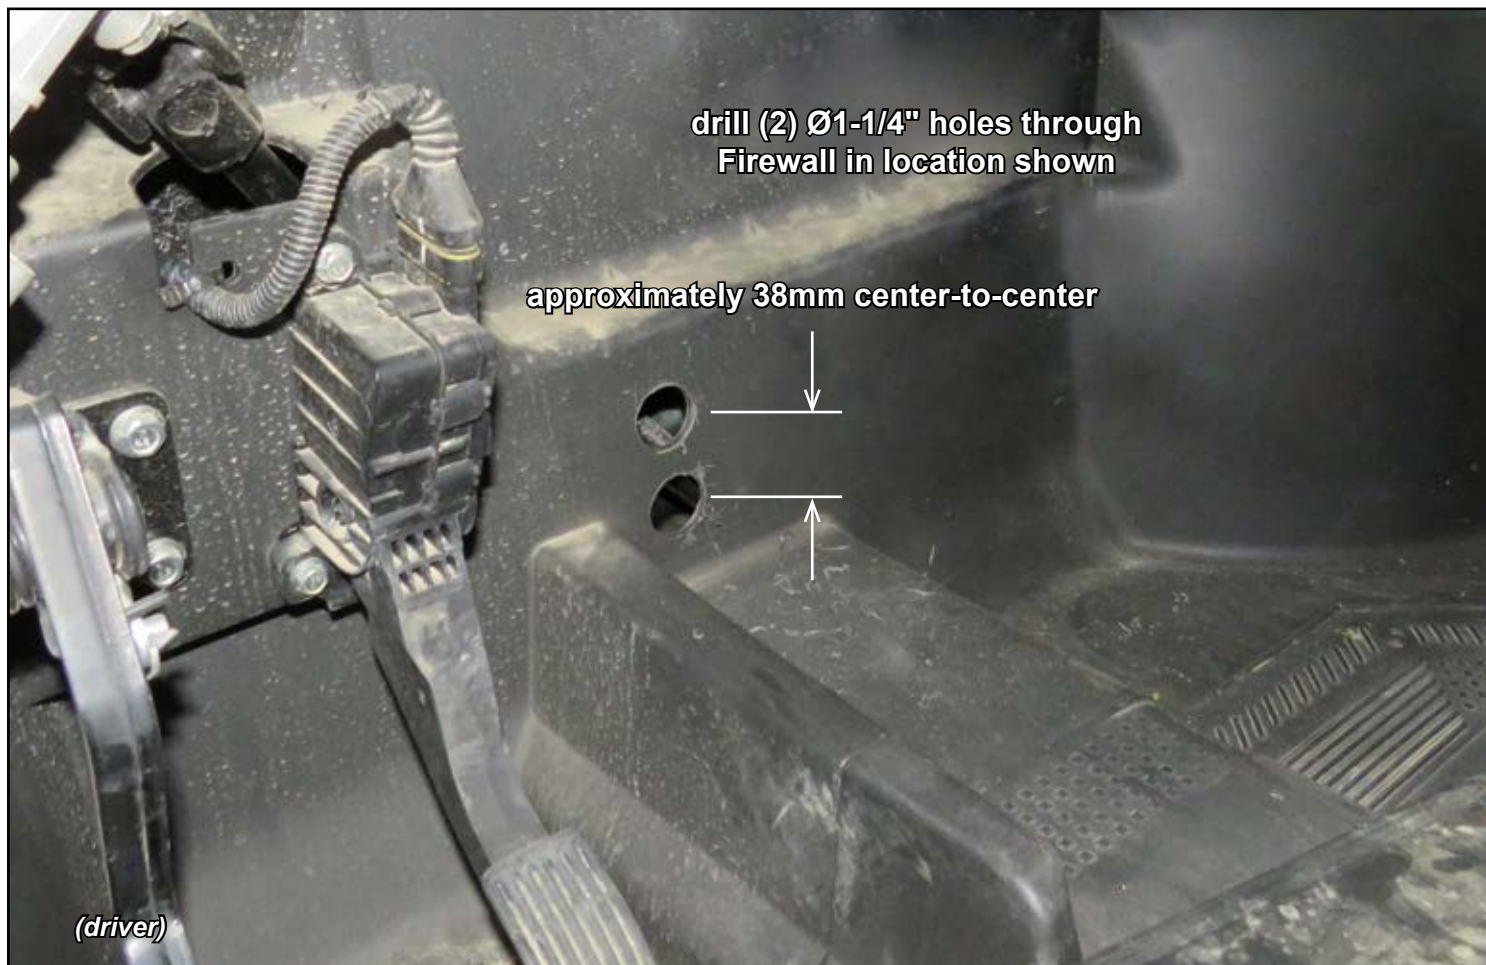

If a harness is attached to Blower, remove and discard it before attaching provided Blower Harness.

- Connect Blower Harness to Blower.

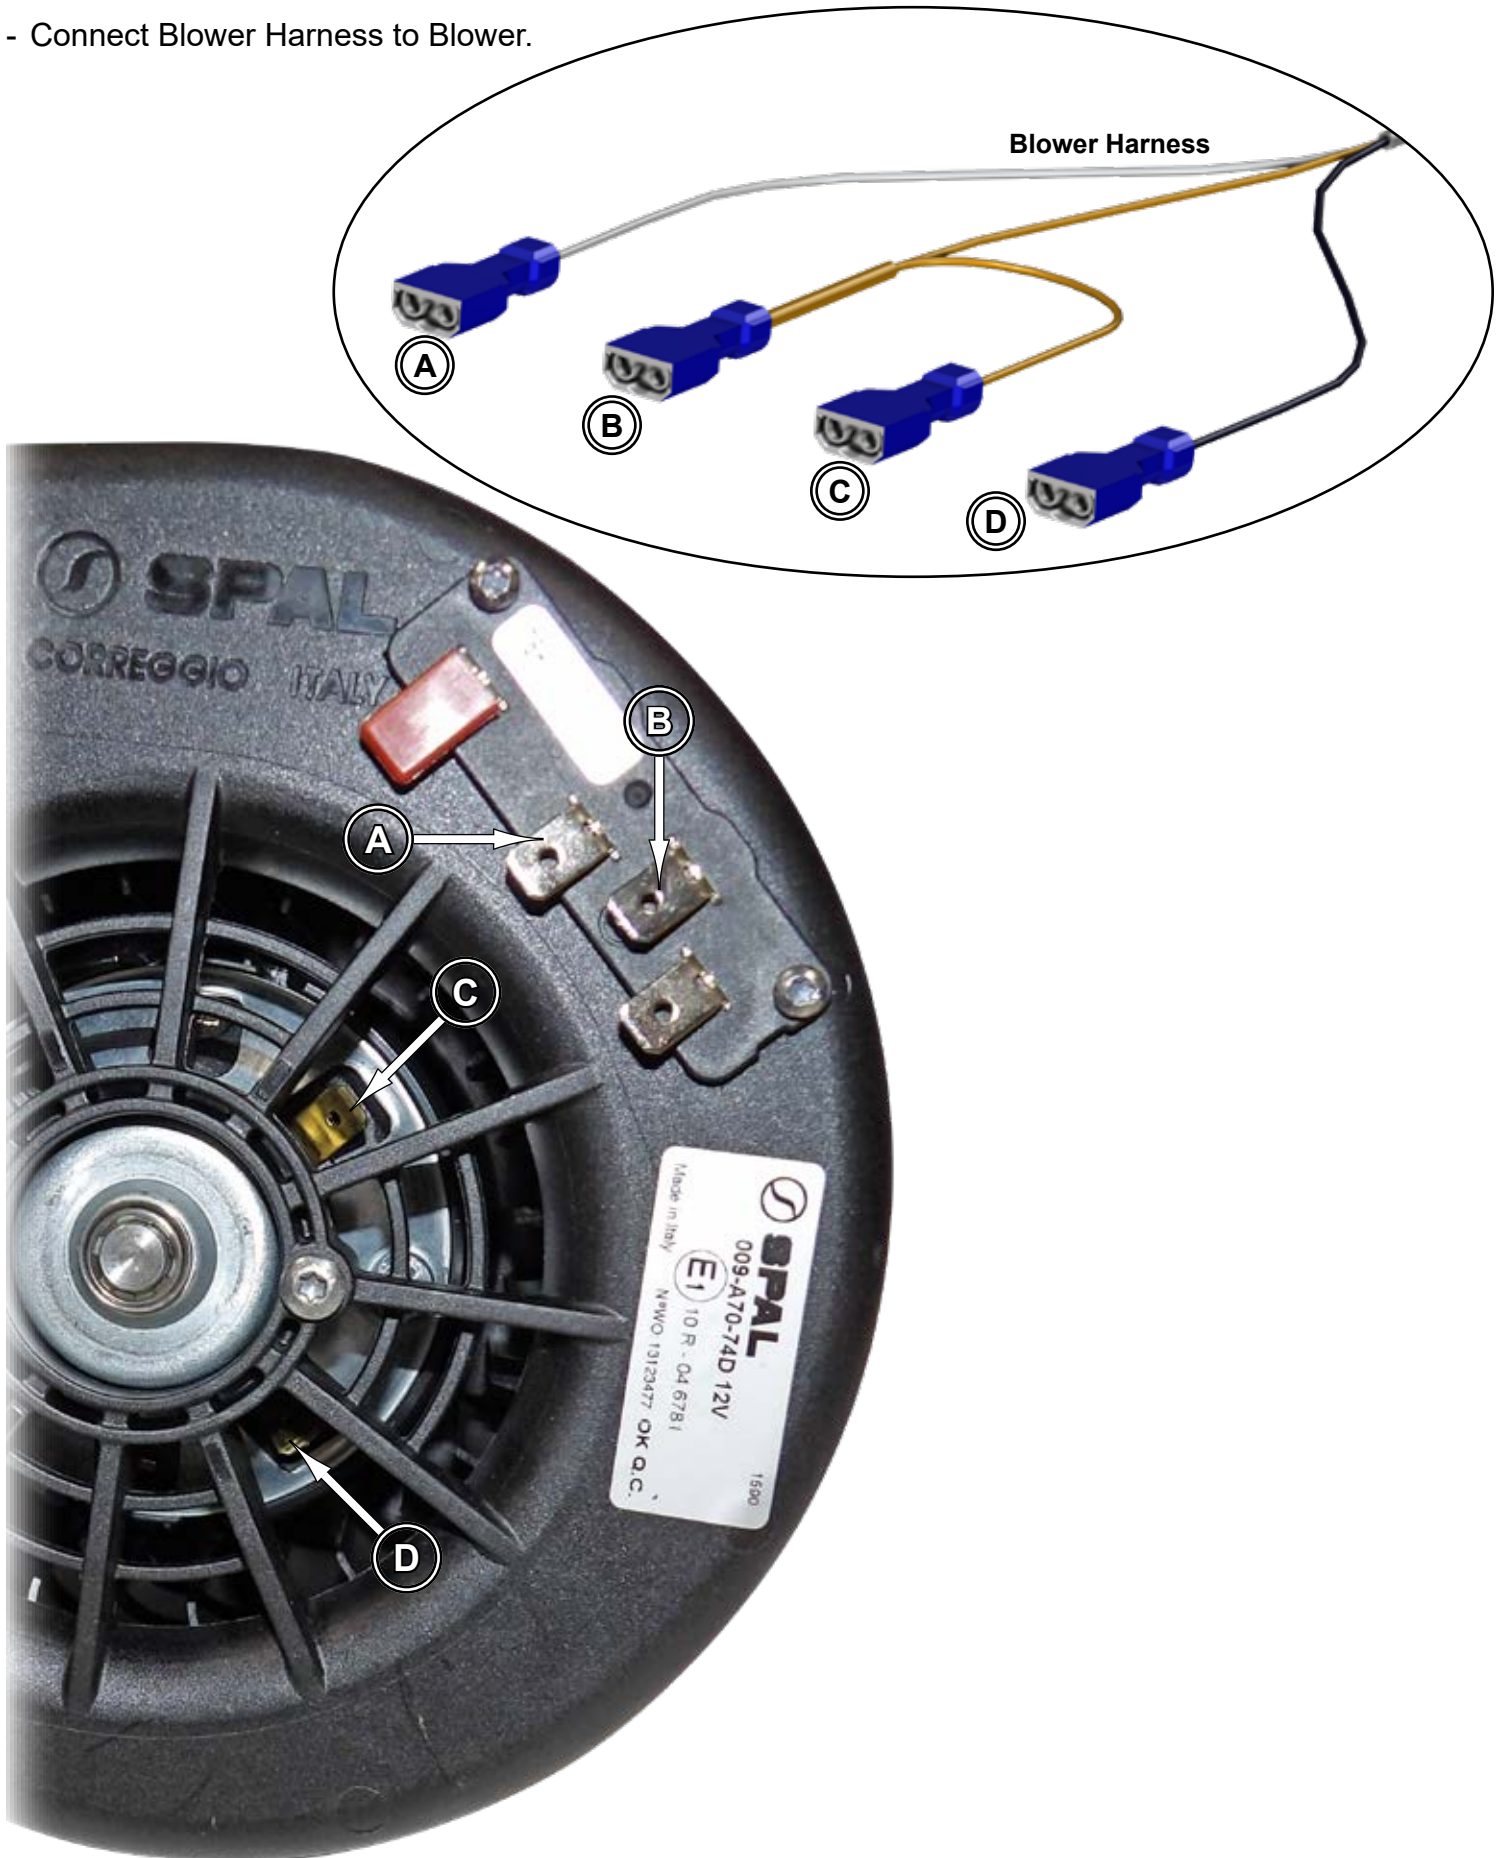


- Insert Tubing, on Blower through Grommets as shown.




- Secure Blower assembly to machine with hardware shown; tighten.



- Place Hose Pliers in location shown below.
- Mark cut lines onto stock Tubing in approximate locations shown.

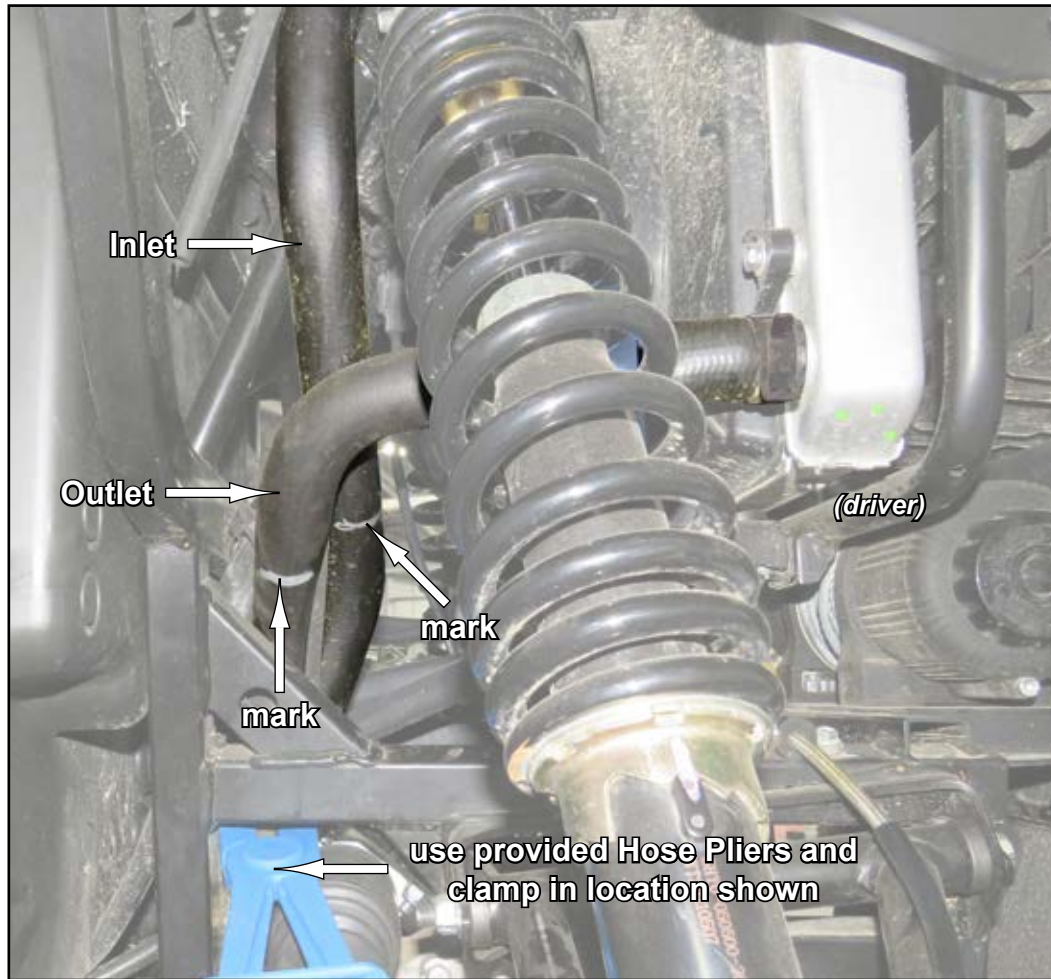

- Cut Outlet Tubing and install provided Adapter.
- Secure with Large Clamps; tighten.

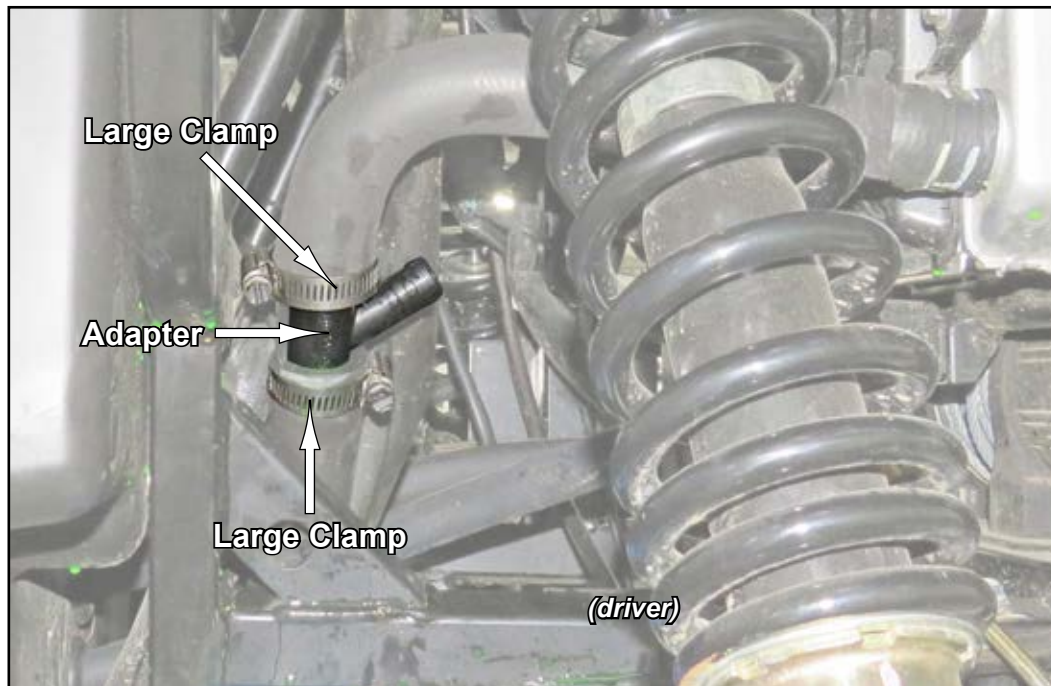


- Connect upper Tubing (from Blower) to Adapter and secure with components shown; tighten.



- Remove Hose Pliers.

- Place Hose Pliers in location shown below.
- Cut Inlet Tubing and install provided Adapter.
- Secure with Large Clamps; tighten.

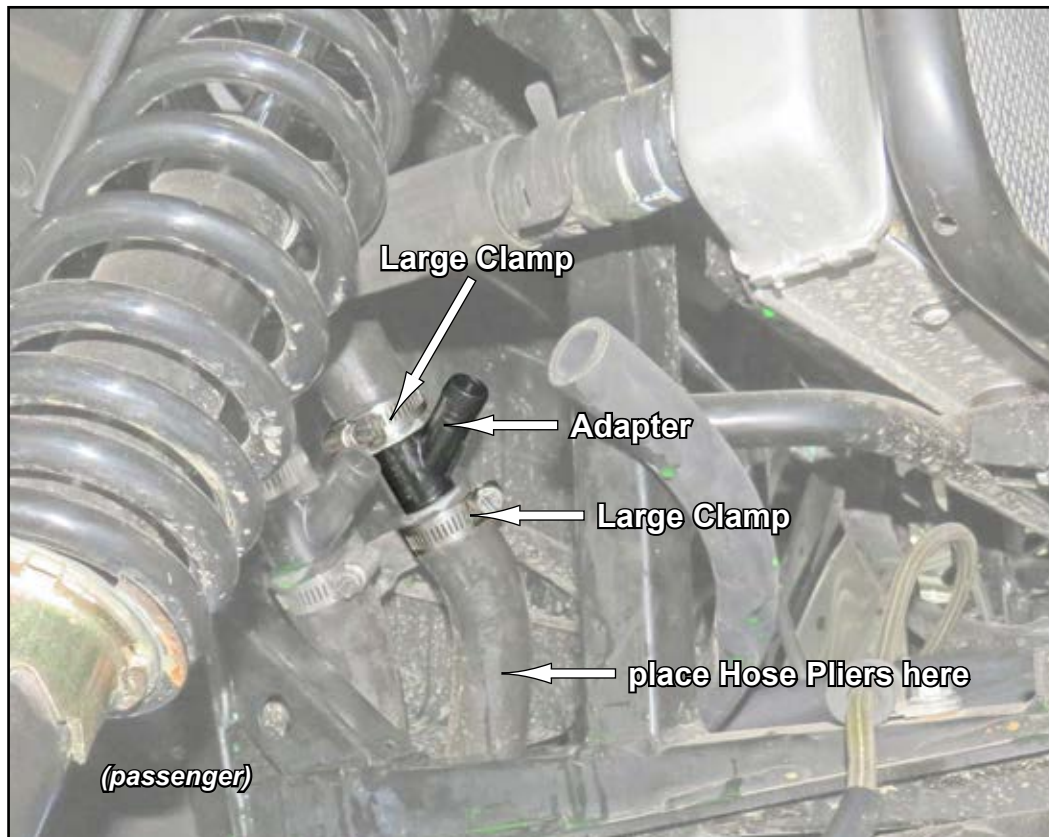


- Connect lower Tubing (from Blower) to Adapter and secure with components shown; tighten.



- Remove Hose Pliers.

- Use a hole saw and cut (2) Ø2-1/2" holes for Vents.

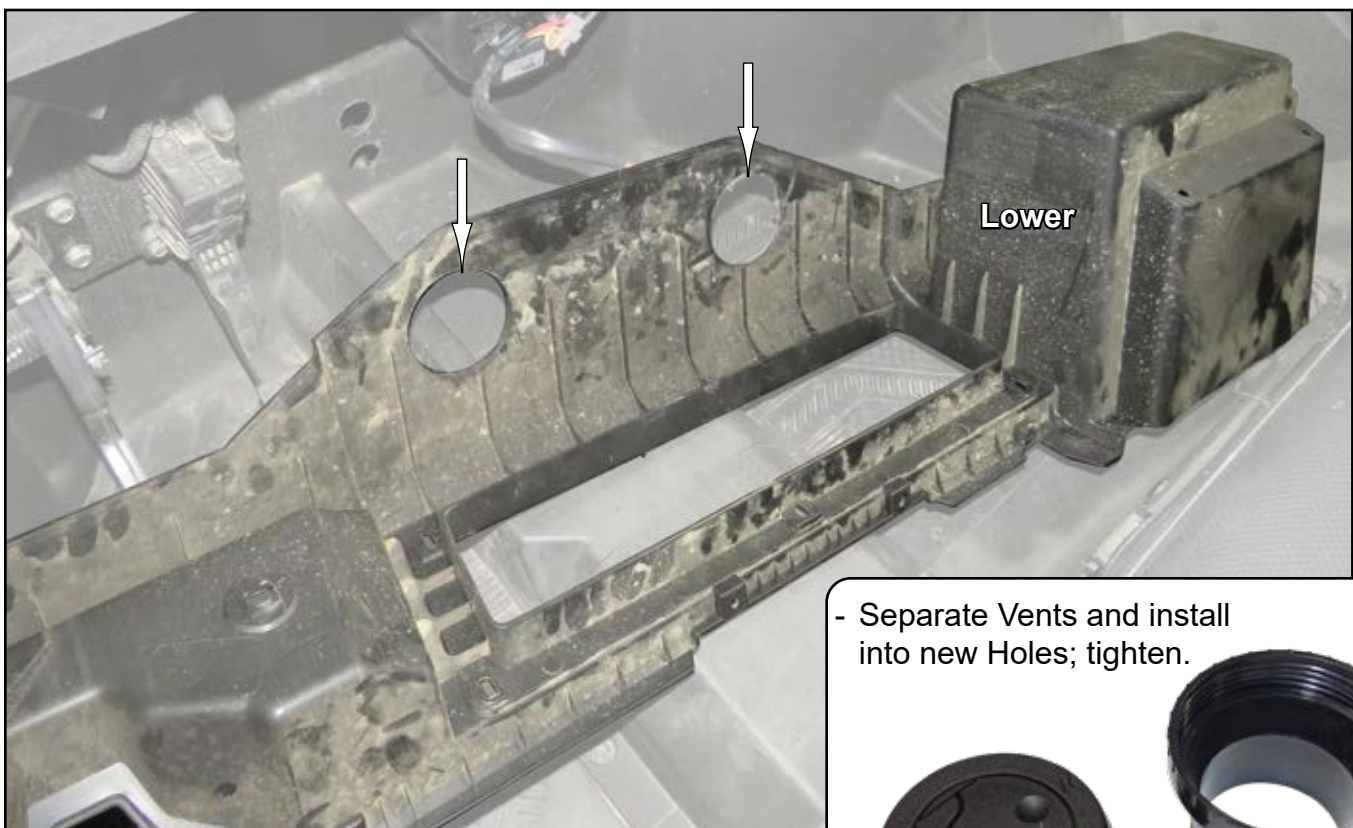


- Separate Vents and install into new Holes; tighten.



- Cut Ducting and secure to Vents with Wire-Ties.



reinstall Dash

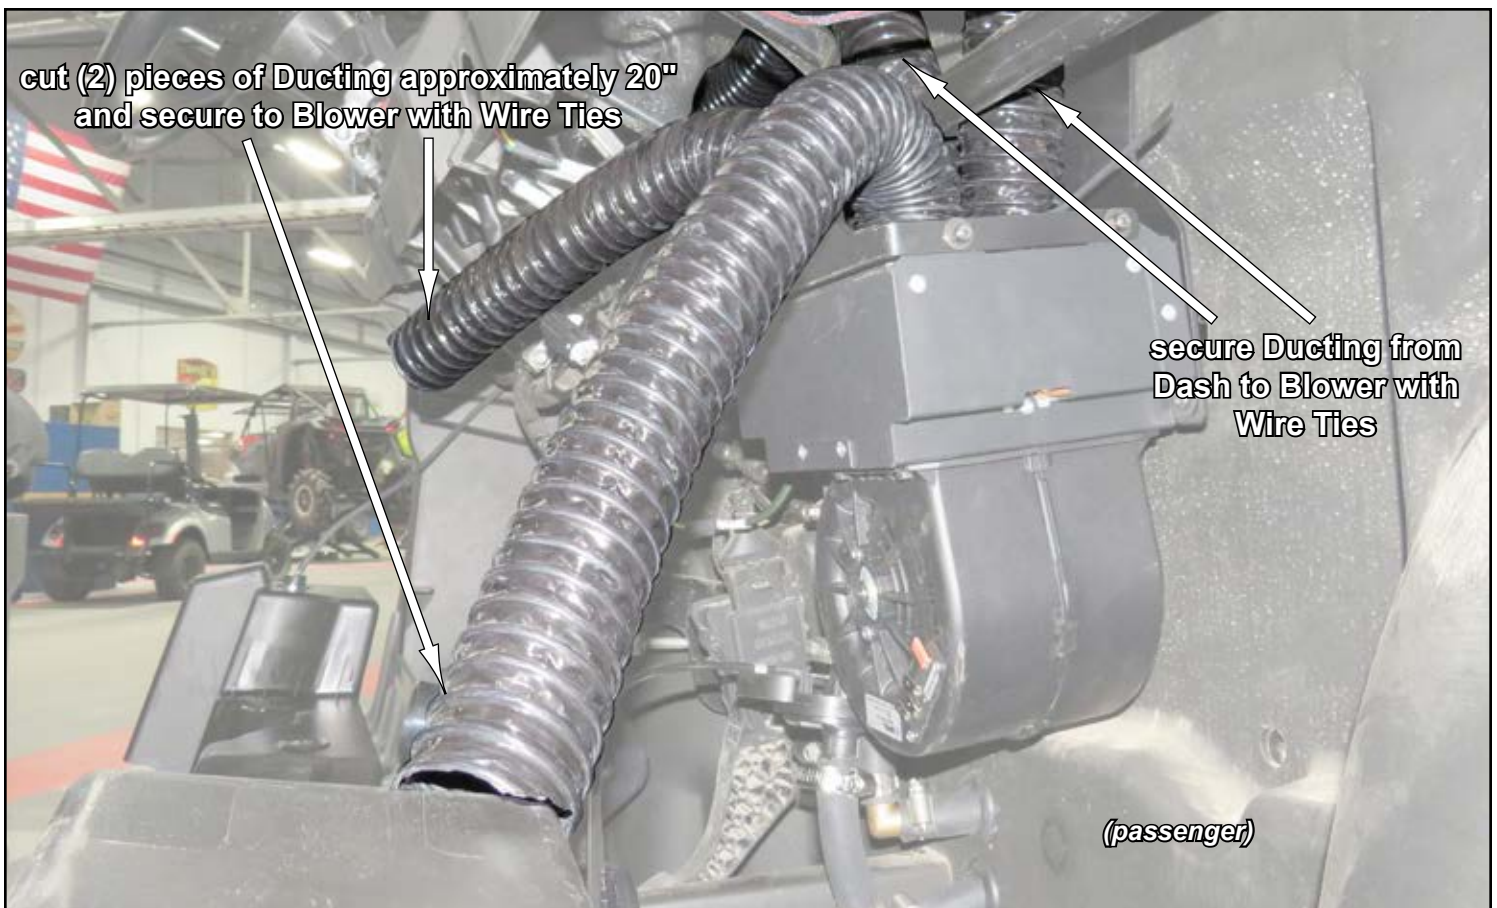



reinstall Lower


- Secure Knob Bracket to Lower with hardware shown; tighten.



- Unplug Power Outlet Socket and connect supplied Power Harness.



- Connect Power Harness to Blower Harness.

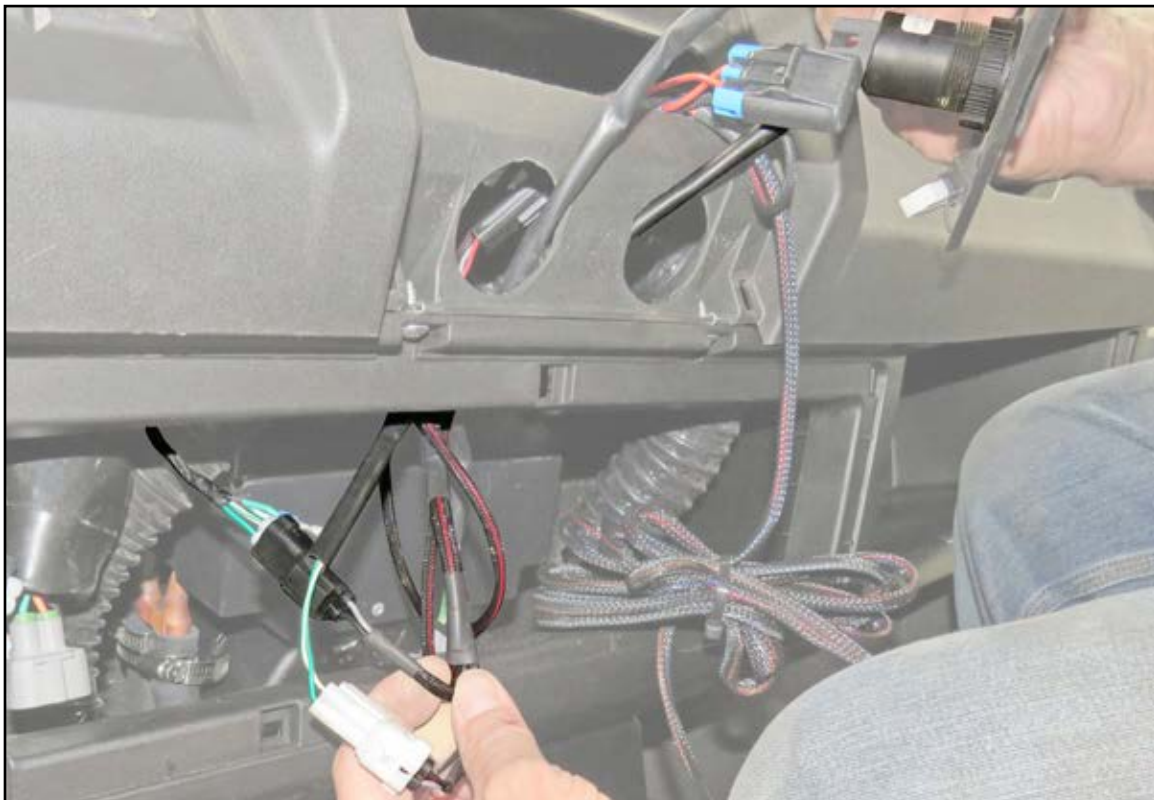

Before drilling any holes, check behind area to be drilled for any interference.

Switch Mounting:

- User may install Switch in location different than shown.
- Verify that Harnesses will reach components before mounting.
- Remove stock Knockout or cut a new location.

Before permanently mounting Switch, SuperATV recommends testing after all components have been installed.

- Insert connection from Blower Harness through opening.




- Connect Switch.



reinstall all applicable remaining stock components

- Raise Cargo Box and connect applicable ends of Power Harness to Battery.
- Close and secure Cargo Box.

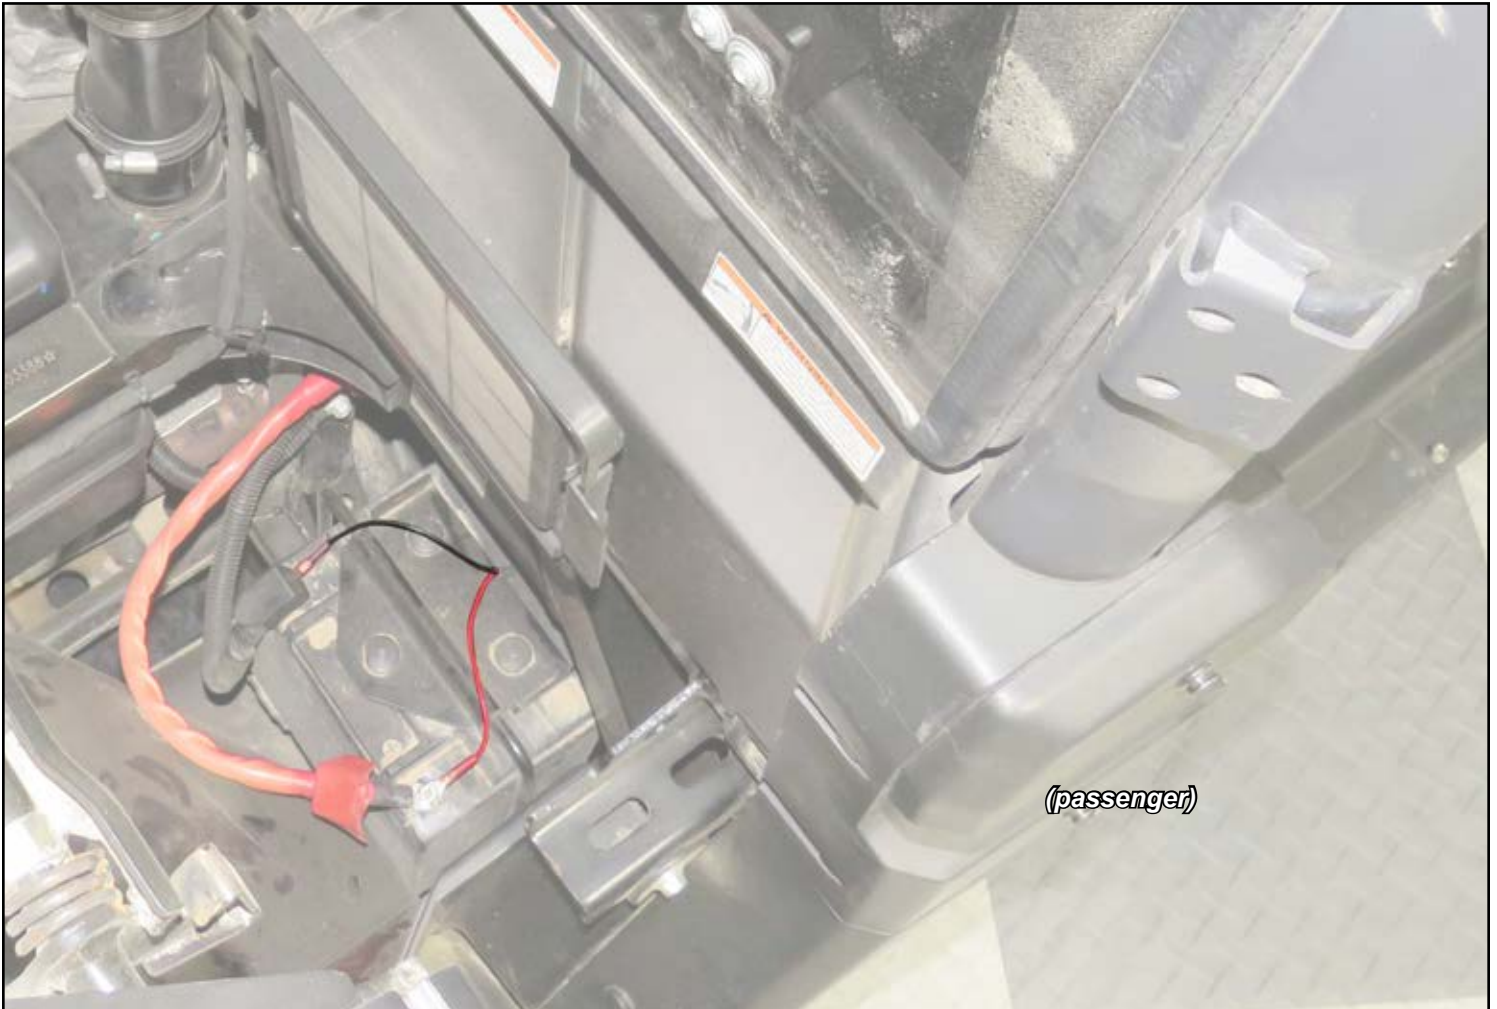

- Fill coolant level to manufacturers recommended setting.
- Start machine and run at 3000 RPM until engine is hot.
- Use provided Hose Pliers and pinch off Inlet Hose.
- Remove Hose Pliers after Radiator Fan turns ON.
- After Radiator Fan turns OFF, pinch Inlet Hose again and remove after Radiator Fan turns ON.
- Turn machine off and let engine completely cool; may take several hours.
- Check Coolant Level in Radiator and Reservoir; adjust as needed.
- Start machine and repeat "pinch" steps again.