

*FREE SHIPPING ON ORDERS OVER \$98 (EXCLUSIONS APPLY)

[SHOP CATEGORIES](#)[WHY S&B](#)[SHOP BY VEHICLE](#)

0

INSTALL INSTRUCTIONS FOR 75-5207

[PRINT](#)

BEFORE YOU START

Note: This intake kit may not fit with the following Aftermarket Parts installed:

- Custom Hood
- Throttle Body Spacer
- Body Lift

Please read the entire product guide before proceeding.

- Ensure all parts are present.
- If you are missing any of the components, call our customer support at (909) 947-0015.
- Do not work on your vehicle while the engine is hot.
- Make sure the engine is turned off and the vehicle is in Park or the Parking Brake is set.


REQUIRED TOOLS

- 7mm Socket + Ratchet Wrench
- 5/16 or 8mm Socket/nut driver
- 10mm Socket + Ratchet Wrench
- Phillips/flathead head screw driver
- T27 Torx screw driver
- Body Panel Popper
- Channel locks
- X-Acto knife

[Cookie Preferences](#)

Hi. Need any help?



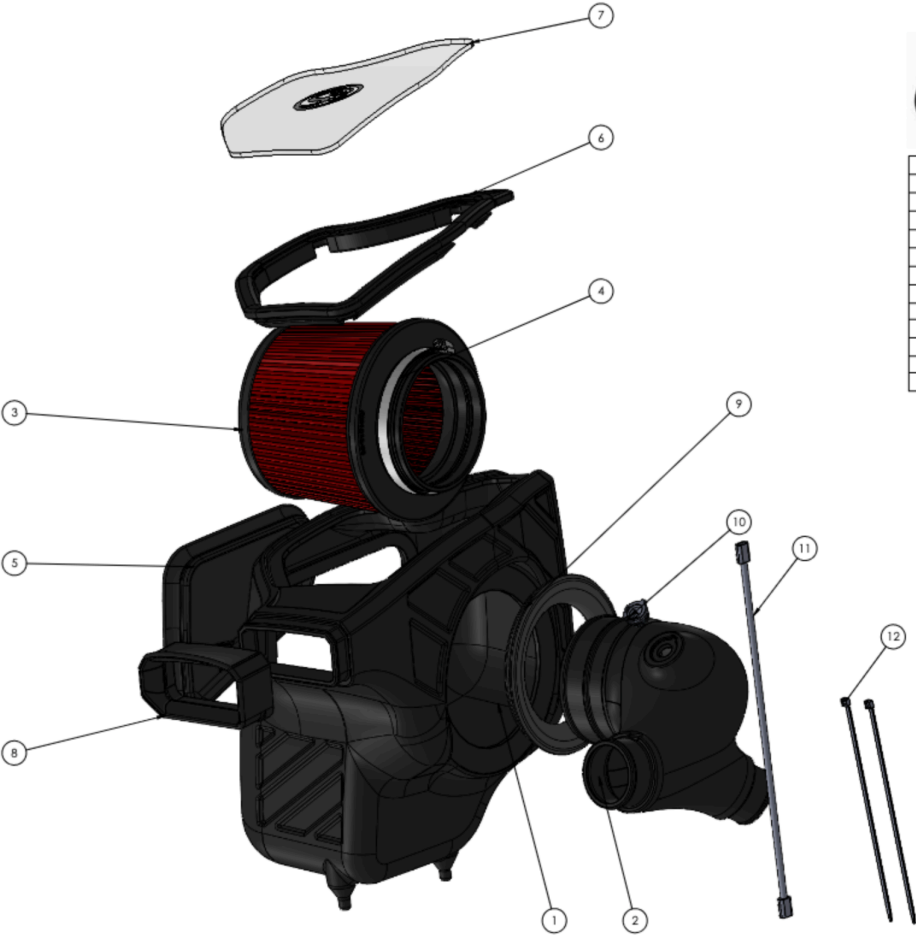

 www.sbfilters.com			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	AL15298-00	Air Box	1
2	AL1533-00	Air Tube	1
3	KF-1113A	Filter	1
4	AG1038-00	Hose Clamp, #84	1
5	AI1957C-00	Air Box Plug	1
6	AI3521C-00	Snap Lid	1
7	AI3522-00	Clear Lid	1
8	AI3520C-00	Silicone Scoop	1
9	AI1717C-00	Box Seal	1
10	AI1948C-00	IAT Sensor Adapter	1
11	AI1969-00	IAT Sensor Extension	1
12	AI1750-00	Zip ties	2

STEP 1:

With the ignition switched off and the parking brake set, disconnect the negative battery terminal on the battery using a **10mm** socket and ratchet wrench.

IMPORTANT: Failure to disconnect the battery for a minimum of 2 hours may

[Cookie Preferences](#)

cause the Check Engine Light to illuminate upon completion of the installation or subsequent operation. **DO NOT SKIP THIS STEP!**



STEP 2:

Remove the **8mm** bolt holding the air box to the fender side of the engine bay.



STEP 3:

Unscrew the bolt at the front of the air box with a **Flathead screw driver**.

Tip: You can also use a **T27** screw driver.

[Cookie Preferences](#)

STEP 4:

Loosen the forward hose clamp from the stock intake tube coming from the air box.

You will need a **5/16th** nut driver to do this.

STEP 5:

Loosen the rear hose clamp from the stock intake tube coming from the air box.

You will need a **5/16th** nut driver to do this.

STEP 6A:

Time to remove the 3 plastic pins holding the wire harness that runs parallel with the air box. The 1st is located near the rear secondary intake tube coming from the air box.

Tip: We recommend using a body panel removal tool for all these clips.

STEP 6B:

The **2nd** clip is located right next to the 1st clip.

STEP 6C:

The **3rd** clip is located just next to the hose clamp for the forward intake tube. (Red Arrow)

While there, go ahead and disconnect the IAT (Intake Air Temp) Sensor harness. (Green Arrows)

STEP 7:

Next, go ahead and remove the forward and rear intake tube from the air box tube.

STEP 8A:

Go ahead and uninstall the stock air box by lifting it up and out of the engine bay.

STEP 8B:

One or both of the stock air box grommets may still be attached to the air box.

If so, go ahead and remove them from the stock air box, then reinstall into these two mounting locations in preparation for the S&B Air Box install.

STEP 9:

Remove the IAT (Intake Air Temp) Sensor from the stock intake tube.

STEP 10:

Install the included IAT sensor adapter grommet (10) into the S&B Intake tube.

STEP 11:

Install the IAT Sensor into the S&B Intake tube.

Tip: Ensure the sensor tab goes past the lip on the IAT sensor adapter grommet (10) to hold the sensor in place.

STEP 12:

Install the S&B Air Filter (3) into the S&B Air Box (1). We recommend inverting the air

filter in order to easily install it.

STEP 13:

Install the circular box seal
(9) on the S&B air box.

STEP 14:

Install hose clamp #84 (4)
onto the air filter.

Note: Don't fully tighten the
hose clamp just yet.

[Cookie Preferences](#)

STEP 15:

Install the silicone scoop (8)
on the S&B air box.

STEP 16:

Install the S&B intake tube (2)
into the air box.

STEP 17:

With the new intake tube installed, go ahead and snug up the hose clamp around the filter.

STEP 18: OPTIONAL

Install the air box fender seal (5).

STEP 19A:

Install the S&B Air Box into the engine bay.

Tip: Use caution when installing the air box since you will have to maneuver it

[Cookie Preferences](#)

under the windshield washer
fluid fill-up.

STEP 19B:

When installing the air box,
we recommend running one
of the main wiring harness
over the S&B intake tube.

STEP 20A:

Install the **two** factory intake tubes onto the S&B air box intake tubes and tighten the **two** hose clamps.

STEP 20A: CONT.

STEP 21A:

Install one end of the IAT Sensor Extension to the intake tube (2).

STEP 22B:

Connect the other end of the IAT wire harness to the main harness located towards the front right of the engine bay, next to the forward intake tube. Then zip tie it securely up and out of the way.

STEP 23:

Use a **T27 Torx** screw driver to secure the S&B Air Box to the core support.

Tip: You will use the stock air box mounting location.

STEP 24:

Peel off the protective film from the clear lid (7).

STEP 25:

Install the Clear Lid (7) into the Snap Lid (6).

STEP 26:

Install the Snap-In lid (6) to your S&B Air box.

STEP 27:

Re-attach the **negative cable** to the negative terminal on the battery.

[Cookie Preferences](#)

Once done, please verify that
all connection points are
secured and tight.

Your installation is now
complete.

[Cookie Preferences](#)