

Cookie Preferences

OVER \$98 (EXCLUSIONS APPLY)



SHOP CATEGORIES

WHY S&B

SHOP BY VEHICLE



0

INSTALL INSTRUCTIONS FOR 76-2012

PRINT

BEFORE YOU START


- Please read the entire product guide before proceeding.
- Ensure all parts are present.
- If you are missing any of the components, call our customer support at (909) 947-0015.
- Kit may not fit with certain parts and accessories. Modification may be required to ensure fit.
- See Steps 17b & 36 for installation pictures to determine if your accessories will interfere with the mounting positions.
- Do not work on your vehicle while the engine is hot.
- Make sure the engine is turned off and the vehicle is in Park or the Parking Brake is set.

REQUIRED TOOLS

- 2.5, 4, & 5mm Hex Key
- 6, 10, & 13mm Wrench or Socket
- 5/16" Nut Driver or Flathead Screwdriver
- Heavy Duty Wire Cutter
- Flush Cutter
- Utility Knife or Scissor
- #3 Phillips Screwdriver



Cookie Preferences

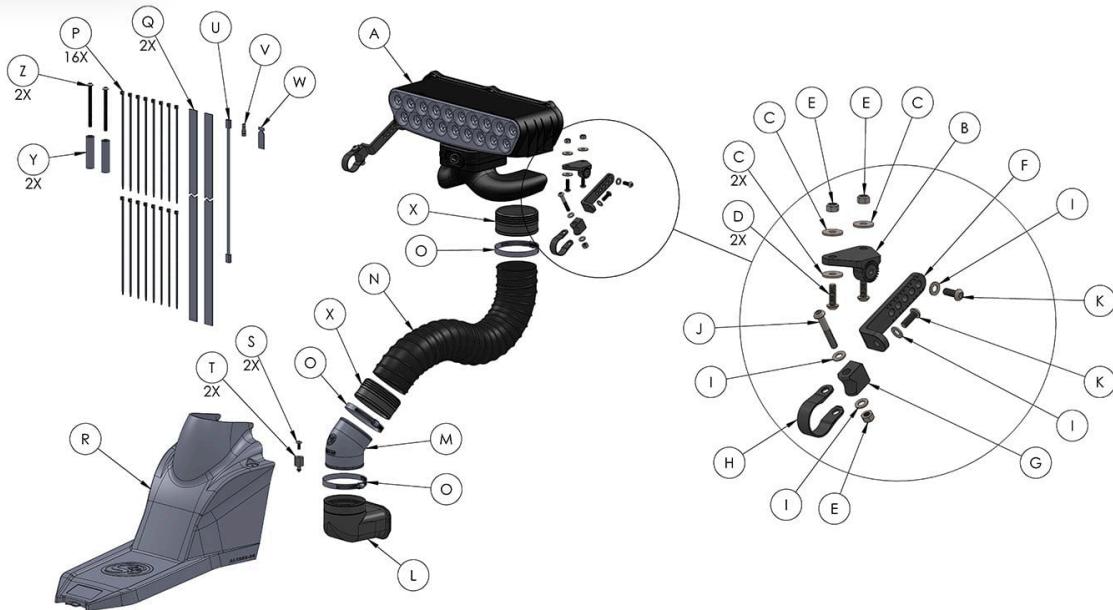

ITEM NO.	QTY	PartNo	Description
A	1	AL2002-00	Particle Separator Assembly
B	2	AI1780-01	Adapter (Earlier)
C	8	AI1742-00	Fender Washer, M8, SS
D	4	AI1788-00	BHCS, M8-1.25 x 25mm Long, 18-8 SS
E	6	AI1736-00	Locknut, M8-1.25, Nylon Insert, Class 10, Zinc Plated
F	2	AI1781-01	Clamp L-Bracket
G	2	AI1782-02	Clamp Pivot
H	2	AI1795-01	Clamp Strap, 1.50" ID
I	8	AI1740-00	Washer, M8, 16mm OD, 18-8 SS
J	2	AI2038-00	BHCS, M8-1.25 x 50mm Long, 18-8 SS
K	4	AI2111-00	BHCS, M8-1.25 x 22mm Long, 18-8 SS
L	1	AI1774C-00	Air Box Coupler, Silicone
M	1	AL1251-00	Tube

ITEM NO.	QTY	PartNo	Description
N	1	AI1735-01	3.50" ID Flexible Duct, Silicone, Black
O	3	AG1019-00	Hose Clamp, #56
P	16	AI1750-00	Cable Tie, 9" Long
Q	2	AI1779-01	Double Velcro, 25mm Wide, 36" Long
R	1	AL1253-01	Center Console, Yamaha YXZ
S	2	AI1569-00	Truss Head Phillips Screw, 1/4-20 x .50" Long, 18-8 SS
T	2	AI1791-00	Prong
U	1	AI1887-00	Universal Wire Harness
V	1	AI1799-00	Posi-Tap, Electrical Wire Line Tap
W	1	AI1595-00	Threadlocker
X	2	AI1865C-00	Flex Duct End Cuff
Y	2	AI1840-00	Spacer, .75" dia x 3.00" Long
Z	2	AI1844-00	BHCS, M8-1.25 x 100mm Long, 18-8 SS

STEP 1


Slide the drivers seat all the way forward by pulling up on the seat adjuster found under the front of the seat.



[Cookie Preferences](#)

STEP 2

Remove the center console cover by lifting up on the back and sliding the front tab out from its slot. Make sure the rear mounting grommets did not pull out with the cover.

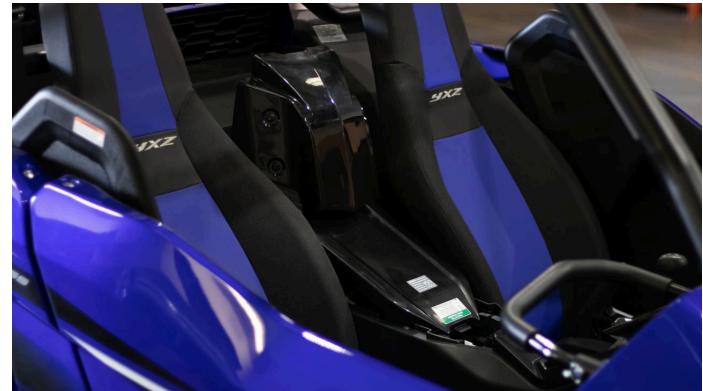

STEP 3

Remove the the stock air duct from the air box by squeezing the top and bottom of the air duct and pulling it into the cab.



[Cookie Preferences](#)

STEP 4

Remove the foam seal from the stock air duct, using your fingers between the two to carefully separate the factory adhesive holding them together. Be careful not to tear the foam.



STEP 5

Remove the air box lid by rotating the handle counter clockwise. The air box lid can be accessed from the driver's side rear wheel well.

STEP 6

Cookie Preferences

air filter out of the air box.

STEP 7

Insert the Air Box Coupler (L) into the air box opening from inside the cab.

STEP 8

Make sure the groove on the coupler is fully seated, and the coupler flange seals on the inside of the air box.

[Cookie Preferences](#)

STEP 9

Reinstall the air filter in the air box.

STEP 10

Reinstall the air box lid by rotating the handle clockwise.

STEP 11

Install the stock foam seal, removed in Step 4, into the gap around the Air Box Coupler, ensuring the semi circle bead is on the bottom. Push the entire foam seal into the gap until it is flush with the gap opening.

[Cookie Preferences](#)

STEP 12

Insert the Intake Tube (M) and Hose Clamp (O) into the Air Box Coupler with the S&B logo facing straight ahead towards the front of the vehicle. Tighten the hose clamp.

[Cookie Preferences](#)

STEP 13

Install the Adapters (B) onto the mounting bosses on both sides of the bottom the Particle Separator Assembly (A) with the Screws (D), Washers (C), and Locknuts (E), then tighten.

STEP 14

Install the L Brackets (F) onto the Adapters with the Screws (K) and Washers (I), selecting the proper angle and orientation based on the desired location for the Particle Separator. Apply Thread Locker to the screws before installing, then tighten.

[Cookie Preferences](#)

STEP 15

Slide the Straps (H) over roll cage. Wrapping a small parts bag around the roll cage will make sliding the strap over the roll cage easier and help protect the roll cage from scratches.

STEP 16

Install the Pivot Bodies (G) with the Screws (J), Washers (I), and Locknuts (E). Snug the straps up, but do not fully tighten, leave the straps loose enough so they can be slid side to side and rotated.

STEP 17A

Cookie Preferences L Brackets onto the Pivot Bodies using the Screws (K) and Washers (I). Apply a small amount of Thread Locker (W) to the screw before installing, then tighten.

STEP 17B

If you have the optional roof, you can use the 3" Spacers (Y) and Screws (Z) and Washers (I) to mount the particle separator behind the roof tail.

STEP 18

Once you are satisfied with the position of the Particle Separator, tighten the Straps, double check that all mounting screws and nuts are tight and that they are securely mounting the

Cookie Preferences separator on the roll cage.

STEP 19A

19A: Install the End Cuff (X) and Hose Clamp (O) onto one side of the Flex Duct (N) and slide it onto the Intake Tube (M) as shown. Tighten the Hose Clamp.

STEP 19B

19B: Bring the other end of the Flex Duct (N) towards the outlet of the Particle Separator (A). Note the length needed to reach the plenum and add an extra 3",

Cookie Preferences Where you will cut the Flex Duct.

STEP 20

Using a Utility Knife pierce the Flex Duct centered between the two reinforcement wires. Cut all the way around the Flex Duct keeping the blade centered between the wires. Use diagonal cutters to cut through the reinforcement wire.

STEP 21

Install the End Cuff (X) and a Hose Clamp (O) onto the Flex Duct (N) and slide it onto the plenum of the Particle

Cookie Preferences (A) as shown.

Tighten the Hose Clamp.

STEP 22

Familiarize yourself with the Wire Harness (U). It has a red Power Wire with fuse, a black Ground Wire, a red Accessory Wire, and a Fan Connector.

The Power and Ground Wires go to the battery, the Accessory Wire goes to the Posi-Tap and a keyed/switched power source, and the Fan Connector goes to the Particle Separator.

STEP 23

[Cookie Preferences](#)

Power and Ground wires onto the battery terminal posts. The red Power Wire goes to the positive (+) terminal first and then the black Ground Wire goes to the negative (-) terminal.

STEP 24

Remove the fuse box from the back panel between the seats by depressing the locking tab and sliding the fuse box up.

STEP 25

Install the Posi-Tap (V) onto one of the brown wires coming from the bottom of the fuse box that is connected to the HEAD (15A Fuse).

[Cookie Preferences](#)

STEP 26

Unscrew the large end cap from the Posi-Tap body and slide the brown wire in-between the legs of the cap.

STEP 27

Then reinstall the Posi-Tap body onto the large end cap and tighten.

[Cookie Preferences](#)

STEP 28

Strip about 3/8" off the end of the red Accessory wire.

STEP 29

Unscrew the small end cap from the Posi-Tap and insert the red Accessory wire.

STEP 30

Insert the small end cap and wire into the Posi-Tap body making sure the strands of

Cookie Preferences

- o around the metal core inside the body. While holding the wire in place, screw the cap back on until it is tight and the wire is secure.

STEP 31

Route the Find Fan
Connector along the Flex
Duct up to the Particle
Separator, plug it in and
secure the wire to the duct
with Velcro (Q).

[Cookie Preferences](#)

STEP 32

Secure the Flex Duct to the roll cage with Velcro.

STEP 33

Reinstall the fuse box onto the back panel and secure any excess wire with Cable Ties (P) near the battery in the center console area.

STEP 34

Install Prongs (T) onto the Center Console (R) using the Screws (S) and Thread locker.

Cookie Preferences

STEP 35

Install the Center Console by sliding the front tab in its slot then and pressing down on the rear of the cover.

STEP 36

Double check to make sure all connectors are plugged in and secured. Turn the ignition on and make sure air is blowing out the exhaust port of the Particle Separator. If the exhaust fan does not turn on, double check your electrical wiring. Your installation is now complete. Enjoy your new product!

Cookie Preferences