



1. Align the t-nuts so they fit within the profile.
2. Tighten the two (2) screws in order to rotate the t-nuts out to lock the anchor in place.
3. To remove the anchor, loosen the two (2) screws. The t-nut will spin back allowing the anchor to be pulled out.