




GENERAL MAINTENANCE


To ensure your step sliders function properly, some maintenance is required!

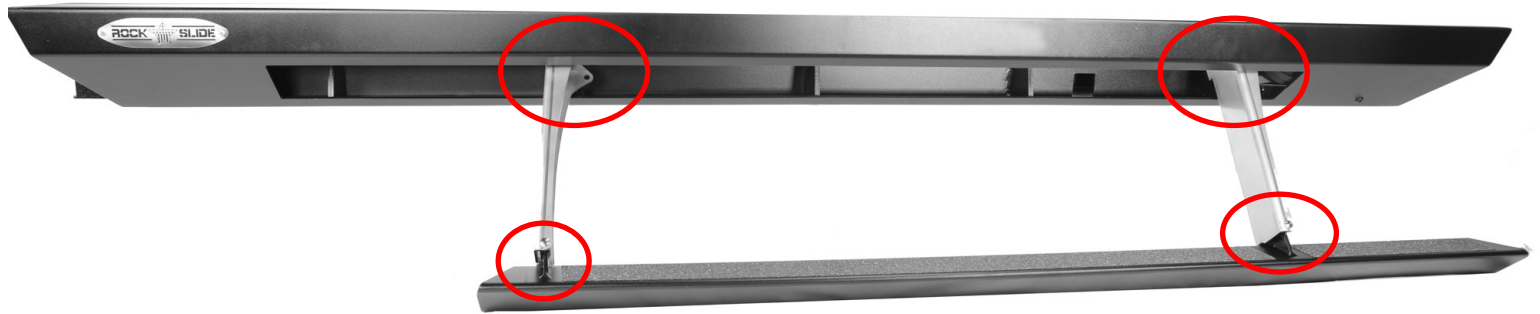

You will need to lubricate the pivot points that are circled in red shown above.

Lubricate the heim joints and aluminum blocks as shown below.

We recommend you do it monthly or after any offroad adventure, including during winter months.

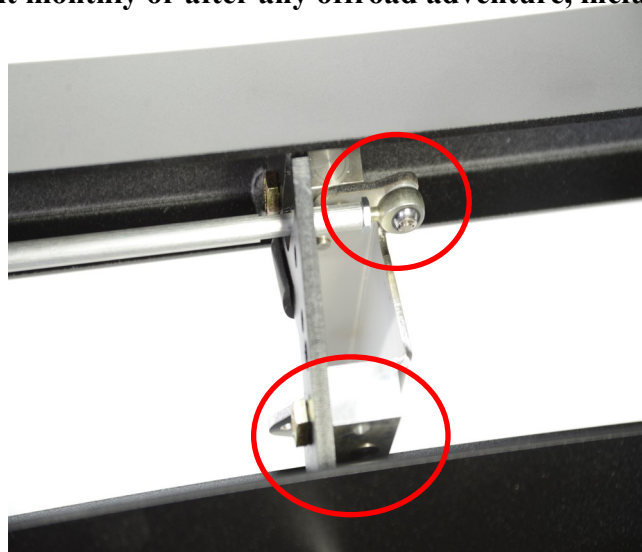

Deploy the steps, pressure wash the bodies clean including internals, then apply a multipurpose lubricant to each of the areas as shown.



Here are several options on lubrication that are carried at the local auto stores in most areas