


Half Doors: for Polaris Ranger 500

- Do not discard packaging until product has been successfully installed.
- Passenger side installation shown in illustrations.

Item	Description
A	Right Door
B	Left Door
C	Filler x 2

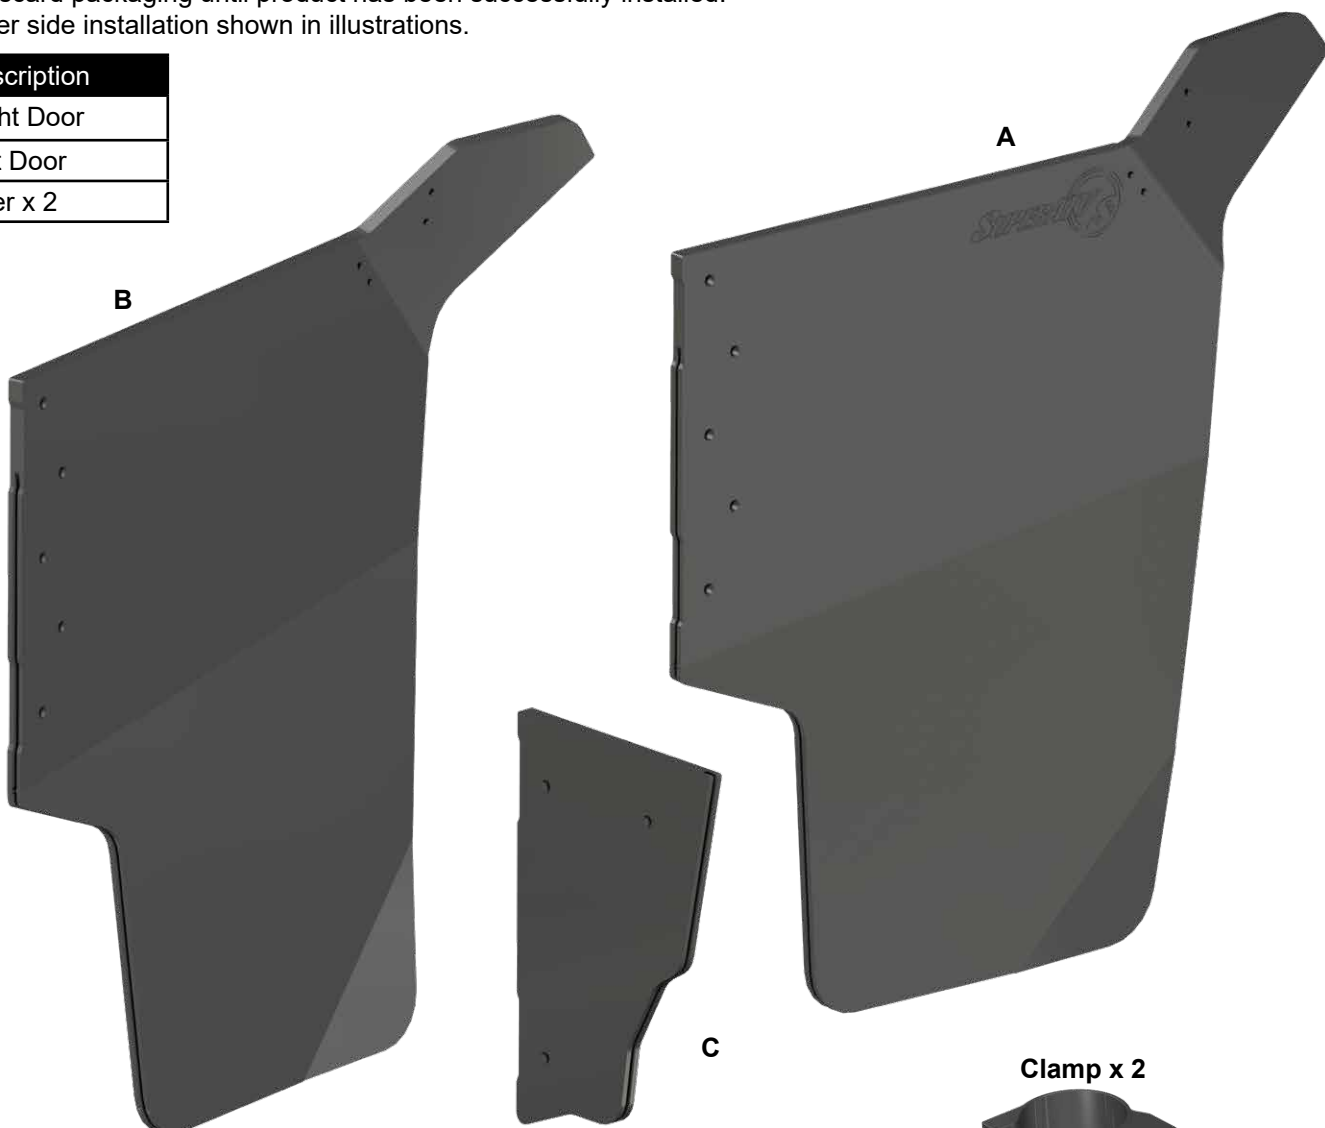

90° Seal



Straight Seal



Clamp x 2

(remove Cover and bolts)

(kit contents continue on following page)

***Soak Seals in hot water before cutting or installing to increase flexibility.**

Need help with your installation?



sales@superatv.com



www.superatv.com



1-855-743-3427



8:00am - 8:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

Read instructions and view illustrations before beginning.


Thank You

For Choosing

SUPERATV.COM[®]

(kit contents continued)


Item	Description	Item	Description	Item	Description
D	Right Filler Mount 1	J	Left Striker Mount	P	Left Latch
E	Left Filler Mount 1	K	Left Hinge Panel	Q	Strap x 2
F	Left Filler Mount 2	L	Right Hinge Panel	R	Right Latch
G	Right Filler Mount 2	M	Right Latch Bracket	S	Left Latch Plate
H	Left Latch Bracket	N	Right Striker Mount	T	Right Latch Plate

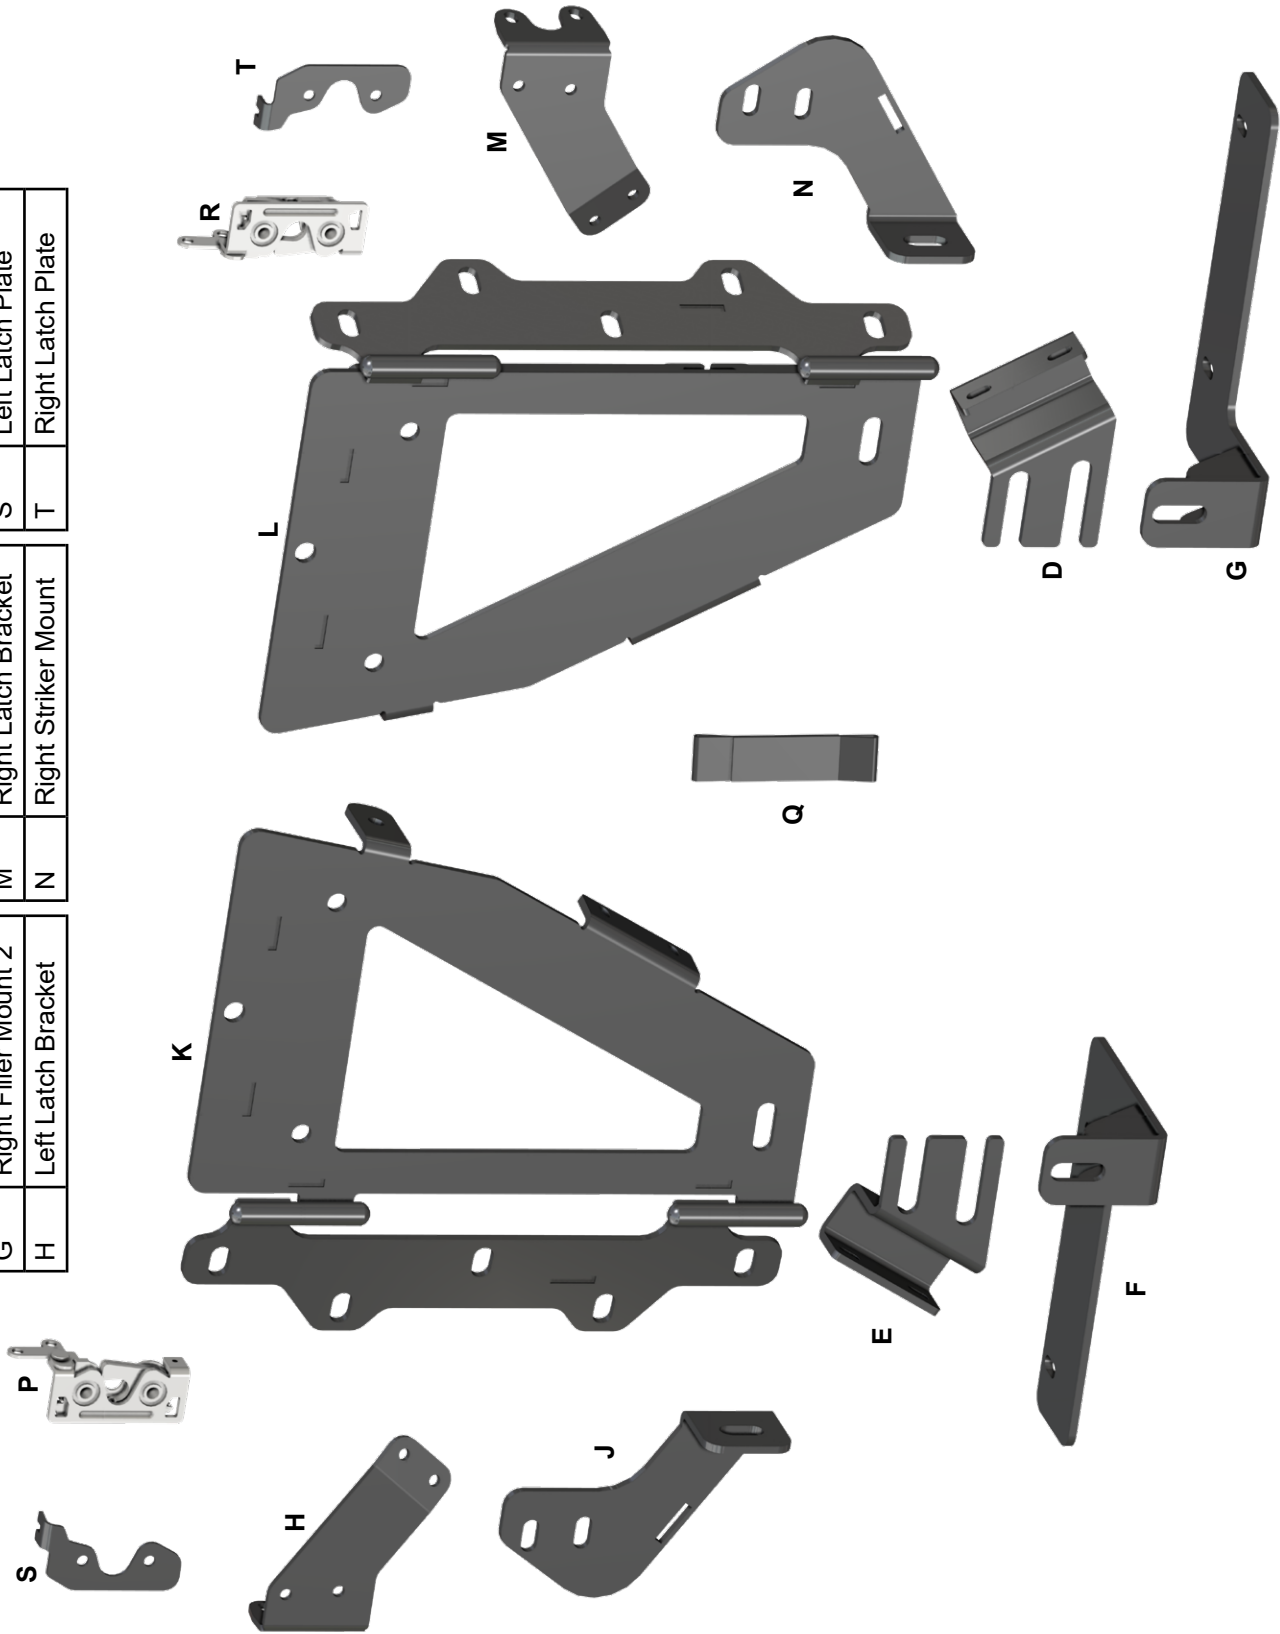

Removal: keep all components removed from machine.




- Install Right Striker Mount (N) and stock Buckle with hardware shown; do not tighten.
- Install Striker and hardware shown; do not tighten.

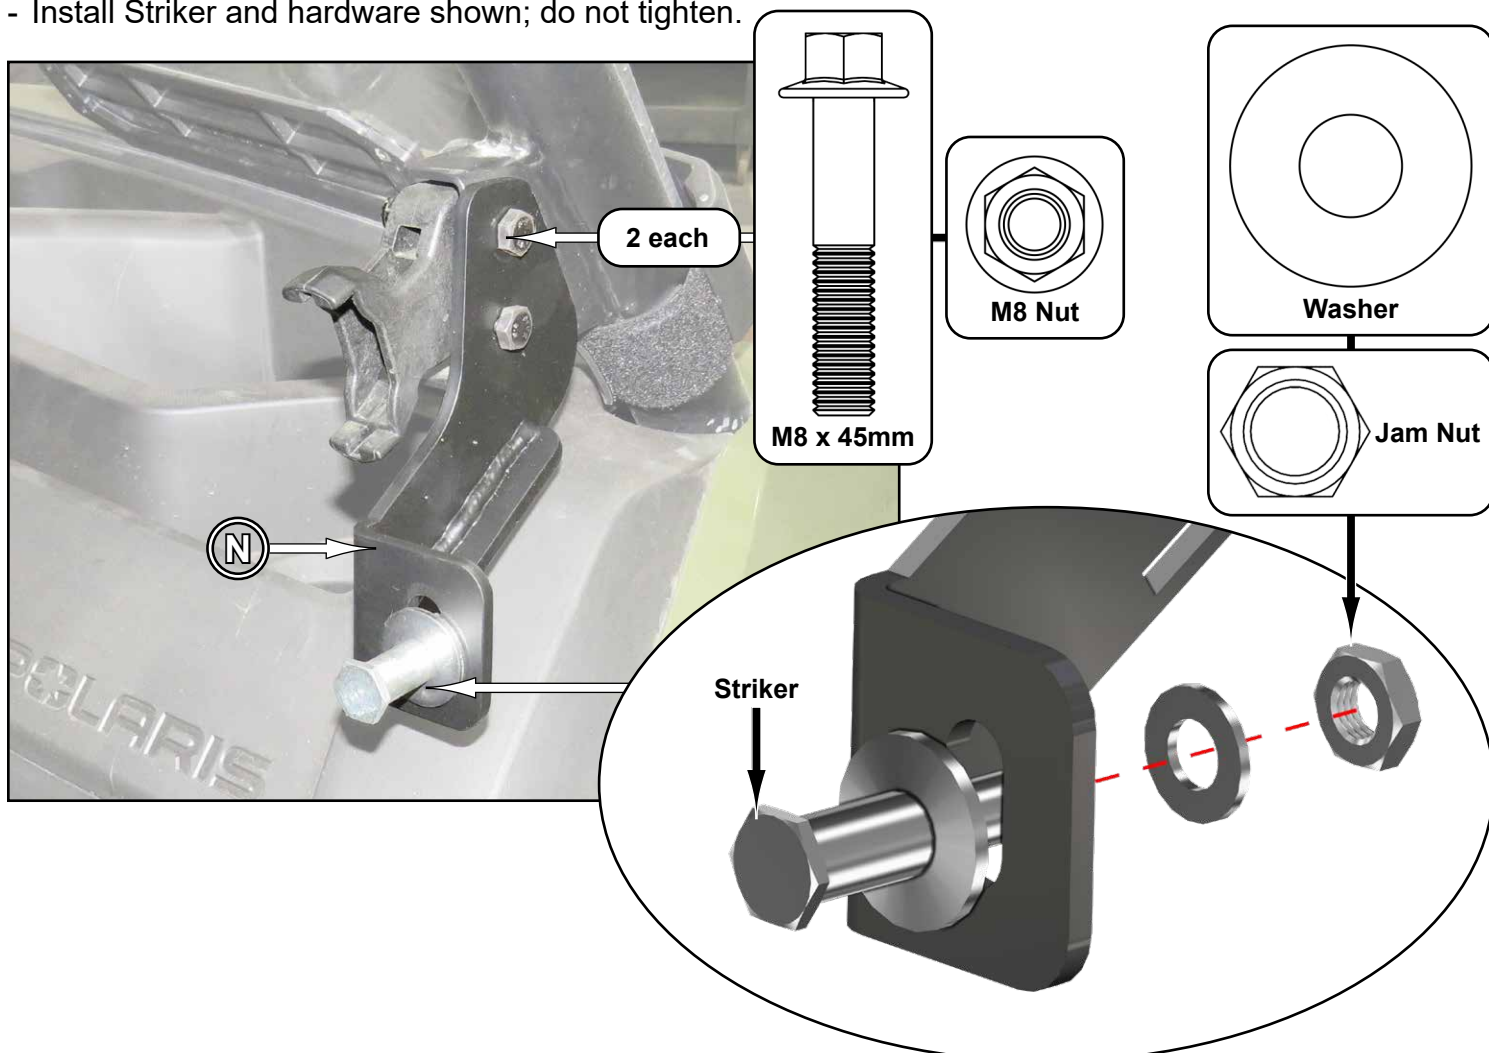

- Place Right Filler Mount 2 (G) onto same location as stock Seat Net Mount.




- Secure Right Filler Mount 2 (G) and Seat Net Mount with hardware shown; do not tighten.

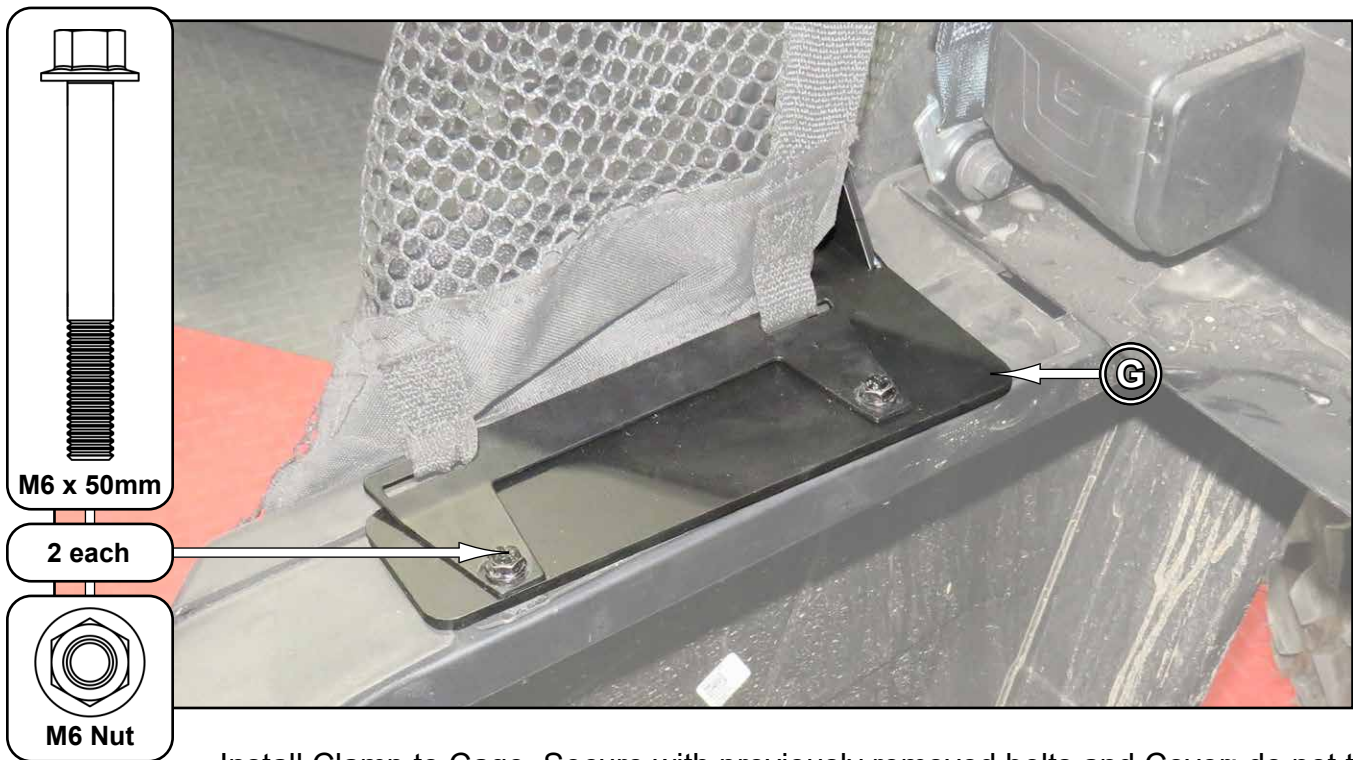


- Install Clamp to Cage. Secure with previously removed bolts and Cover; do not tighten.
- Loosen lower Velcro Straps if SuperATV Rear Windshield is installed.




- Install 90° Seal to perimeter of Right Door (A) as shown. *Bulb portion to face in.*

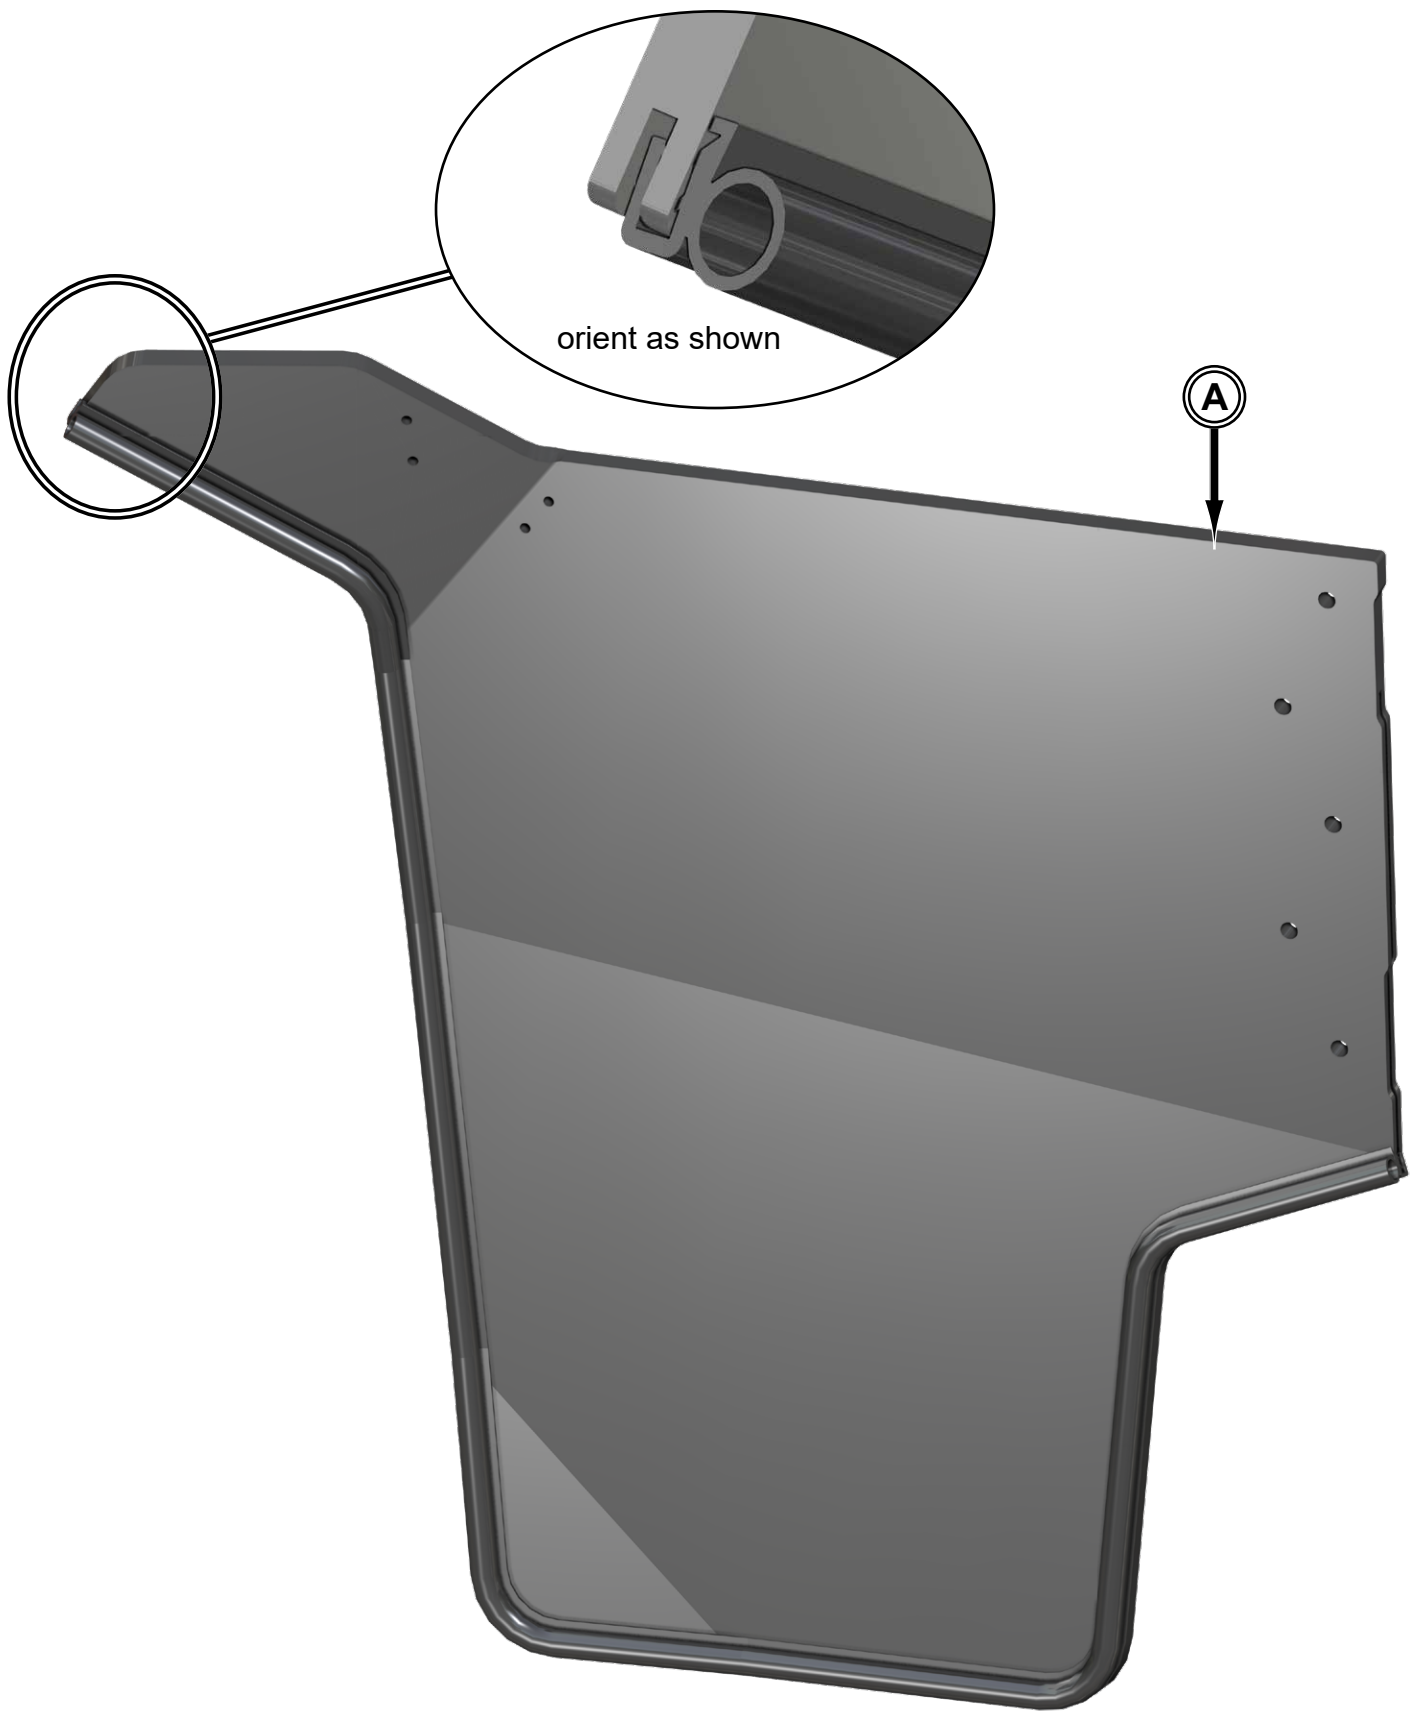

- Install Right Hinge Panel (L) to Right Door (A) with hardware shown; do not tighten.

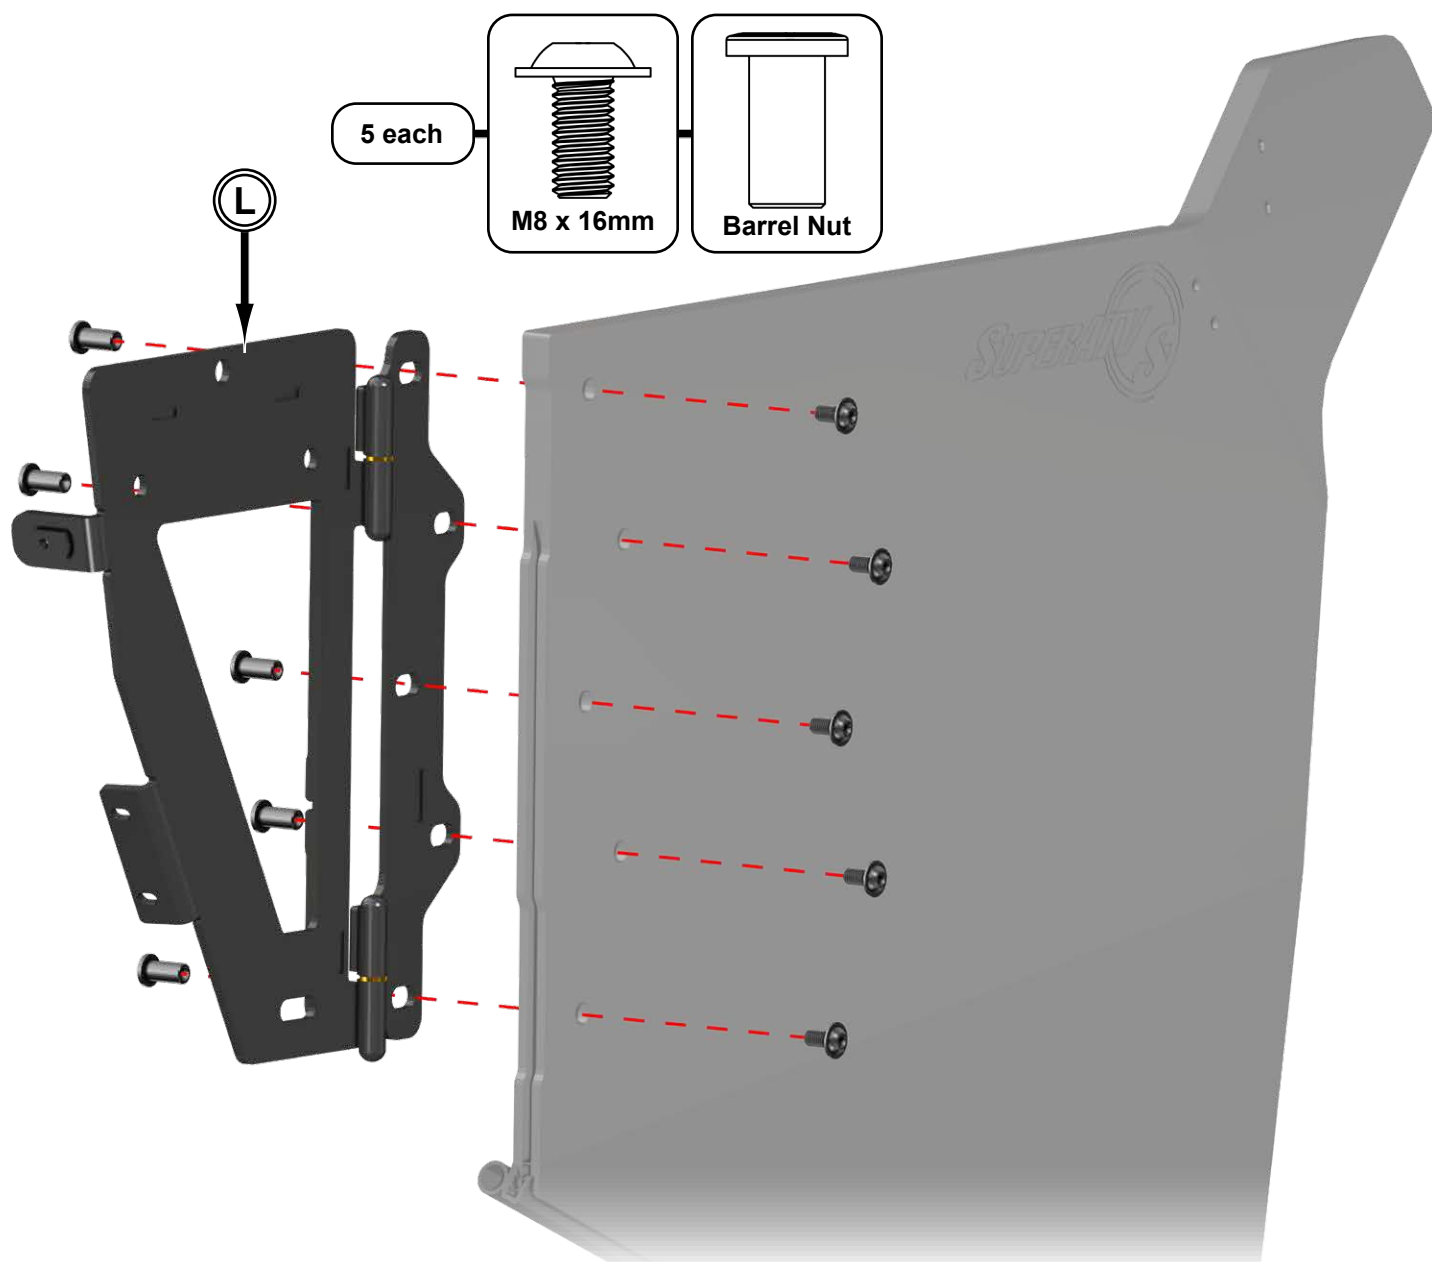


- Install Right Filler Mount 1 (D) to Right Hinge Panel (L) with hardware shown; do not tighten.
- Cut and install Straight Seal to Right Hinge Panel (L) in locations shown.

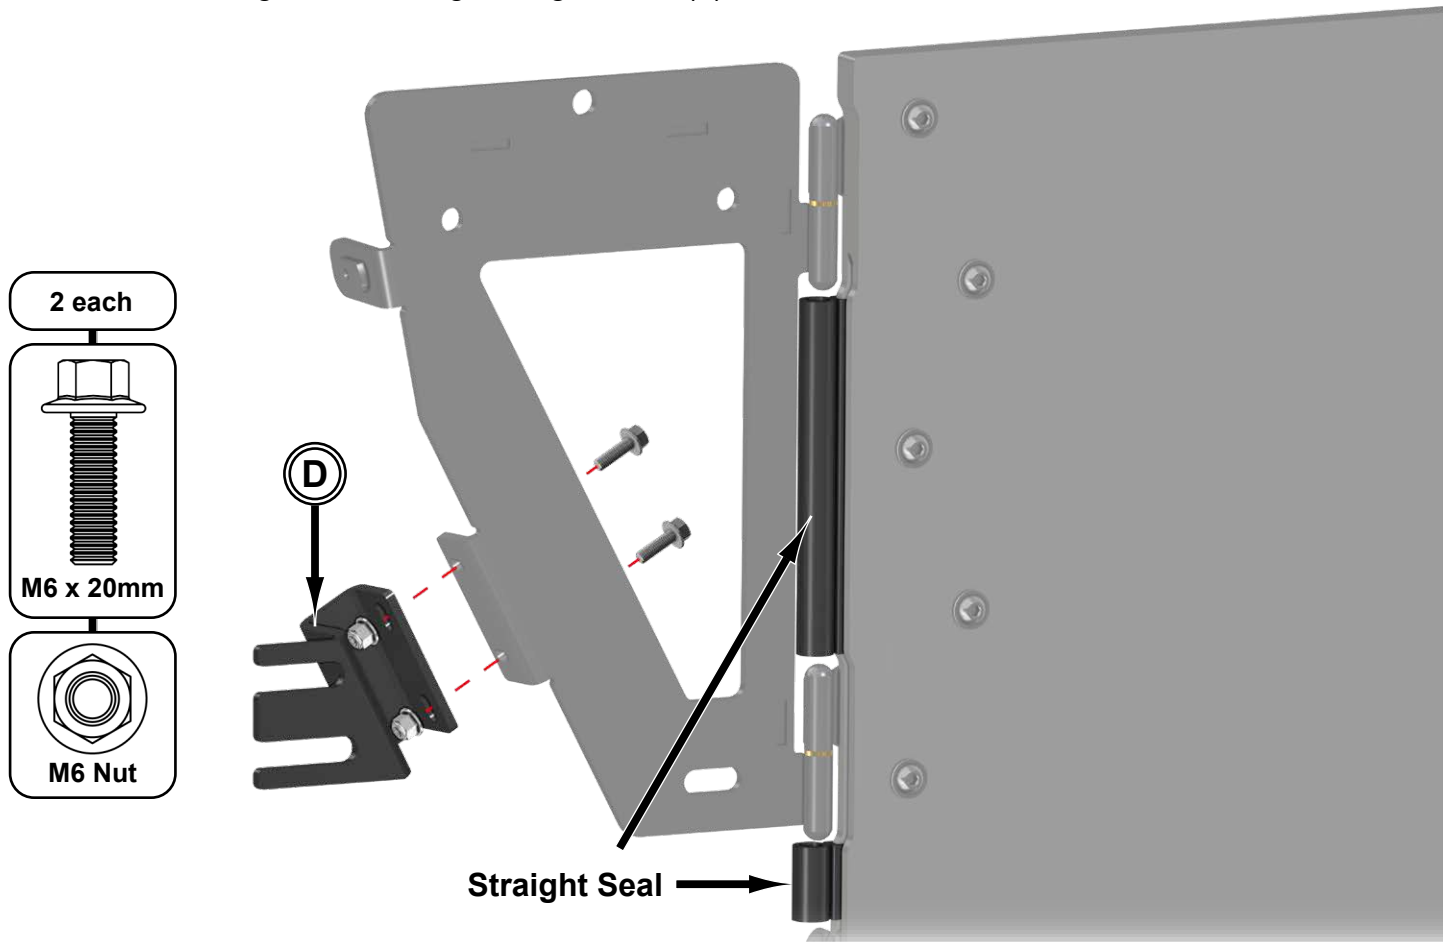


- Join components with Strap (Q).



- Install Right Latch Bracket (M) to Right Door with hardware shown; tighten.

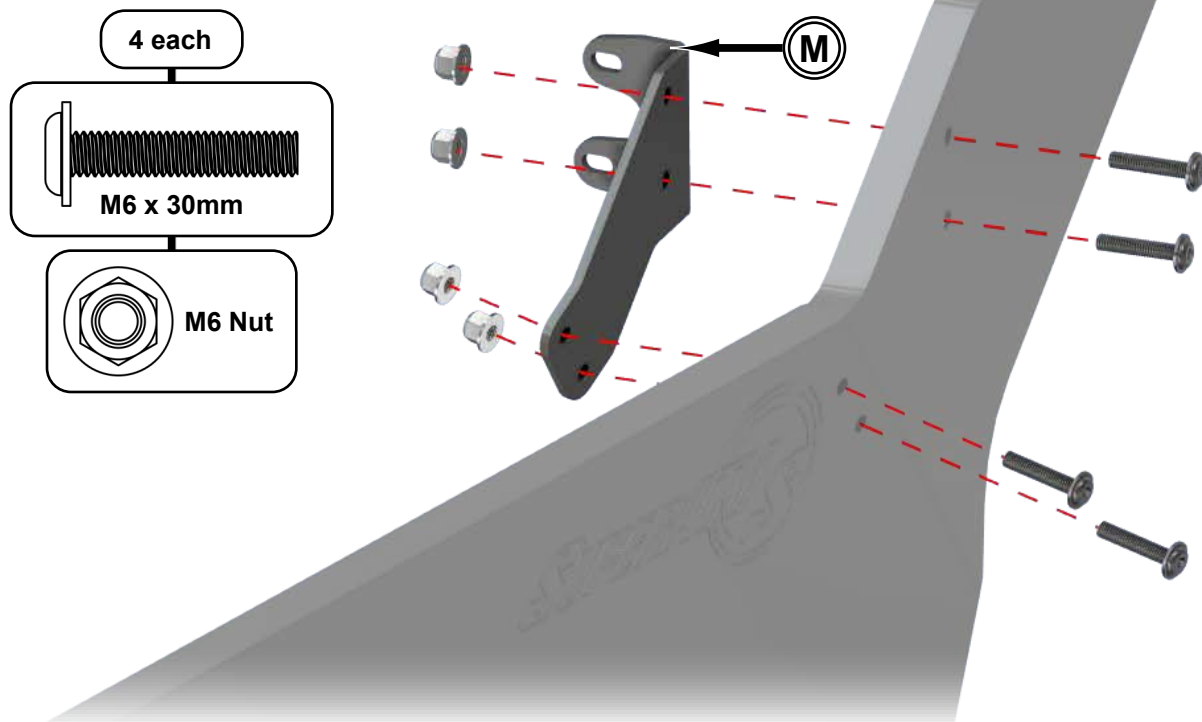


- Install Right Latch (R), Right Latch Plate (T), and Knob with hardware shown; tighten.

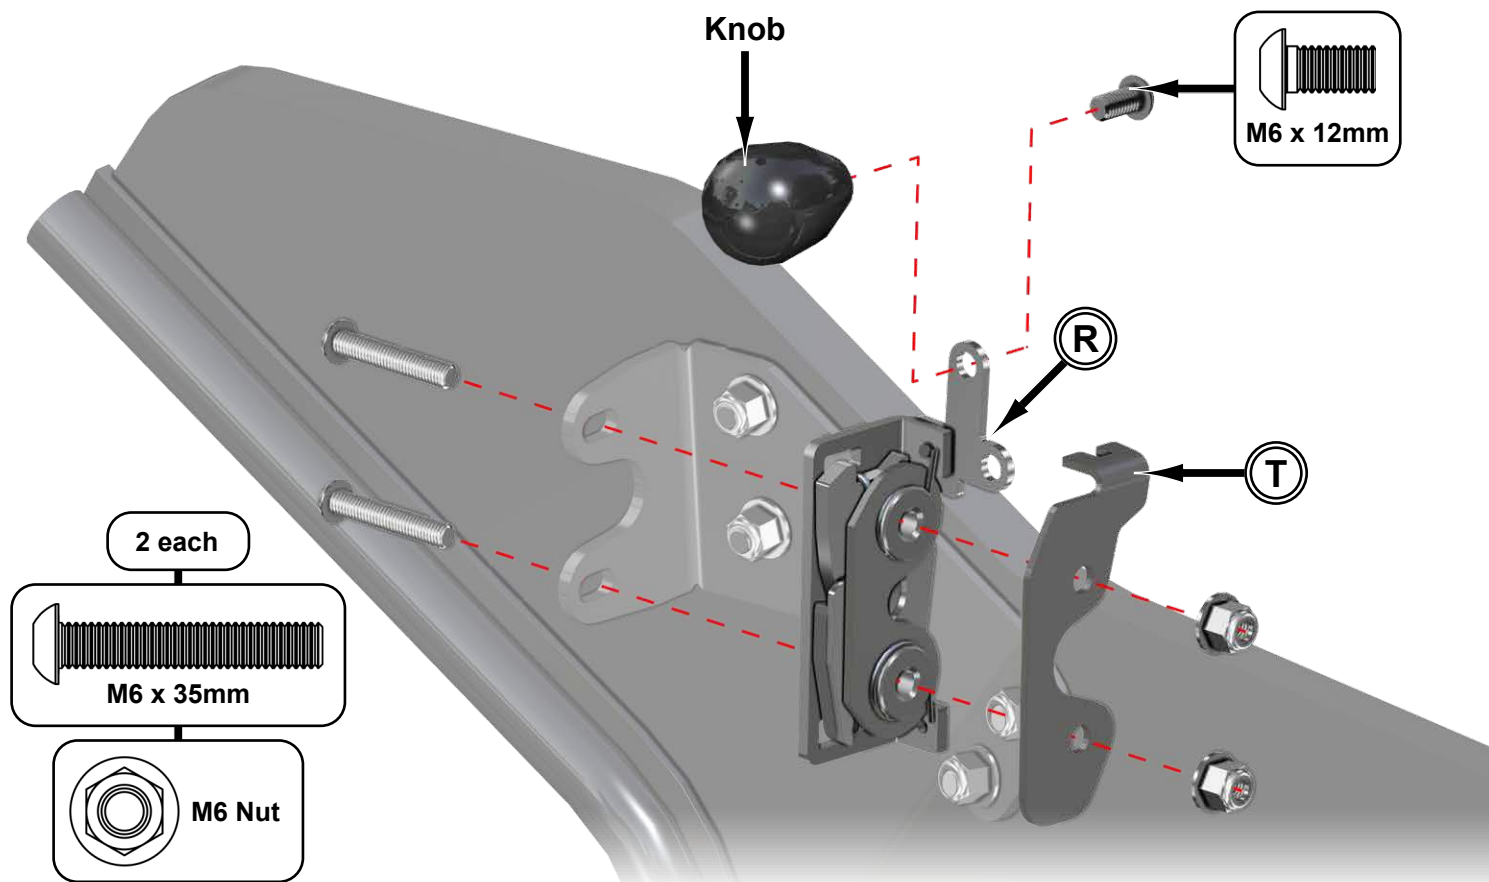

- Install Right Door assembly to machine.
- Secure Filler (C) to previously installed Clamp with hardware shown; do not tighten.



- Close Door and engage Latch.

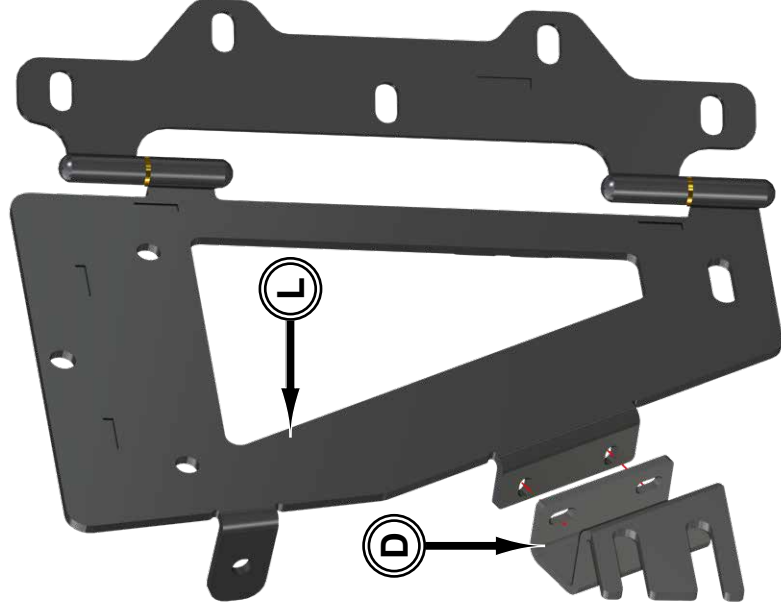

slots in Right Filler Mount 1 (D)
and Right Hinge Panel (L)

Adjustment points are locations shown;

- When making adjustments, small increments will have big results.
- Make small adjustments and check alignment.
- Repeat as needed.
- Tighten **all** hardware.

- Secure Filler (C) with hardware shown; tighten.



Repeat steps for driver side installation.

Liability Statement

SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warrantied if item was not installed properly, misused, or modified.

Installing, adding, modifying, or fabricating any factory or aftermarket product to your ATV/UTV may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of certain products on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of the product. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you.

The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws and ordinances when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.