- Do not discard packaging until product has been successfully installed.
- While routing wires, follow factory wiring when possible and avoid rotating and/or hot components.
- Use provided wire ties and secure wires and Harnesses as needed.
- SuperATV does not recommend keeping Windshield installed while transporting on an open air trailer. Remove or secure with straps.

Optional WWK-004 Wiper Kit is shown being installed. Disregard all Wiper Kit references if not installing Wiper Kit at this time.

Need help with your installation?

✉ sales@superatv.com   💻 www.superatv.com

☎ 1-855-743-3427

🕐 8:00am - 8:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

Read instructions and view illustrations before beginning.

Thank You For Choosing
SuperATV.com®

(Kit contents)

Item	Description
A	Windshield
B	Hinge x 2
C	Actuator Bracket R
D	Actuator Bracket L
E	Clamp x 4
F	Wire Guide x 2
G	Actuator x 2
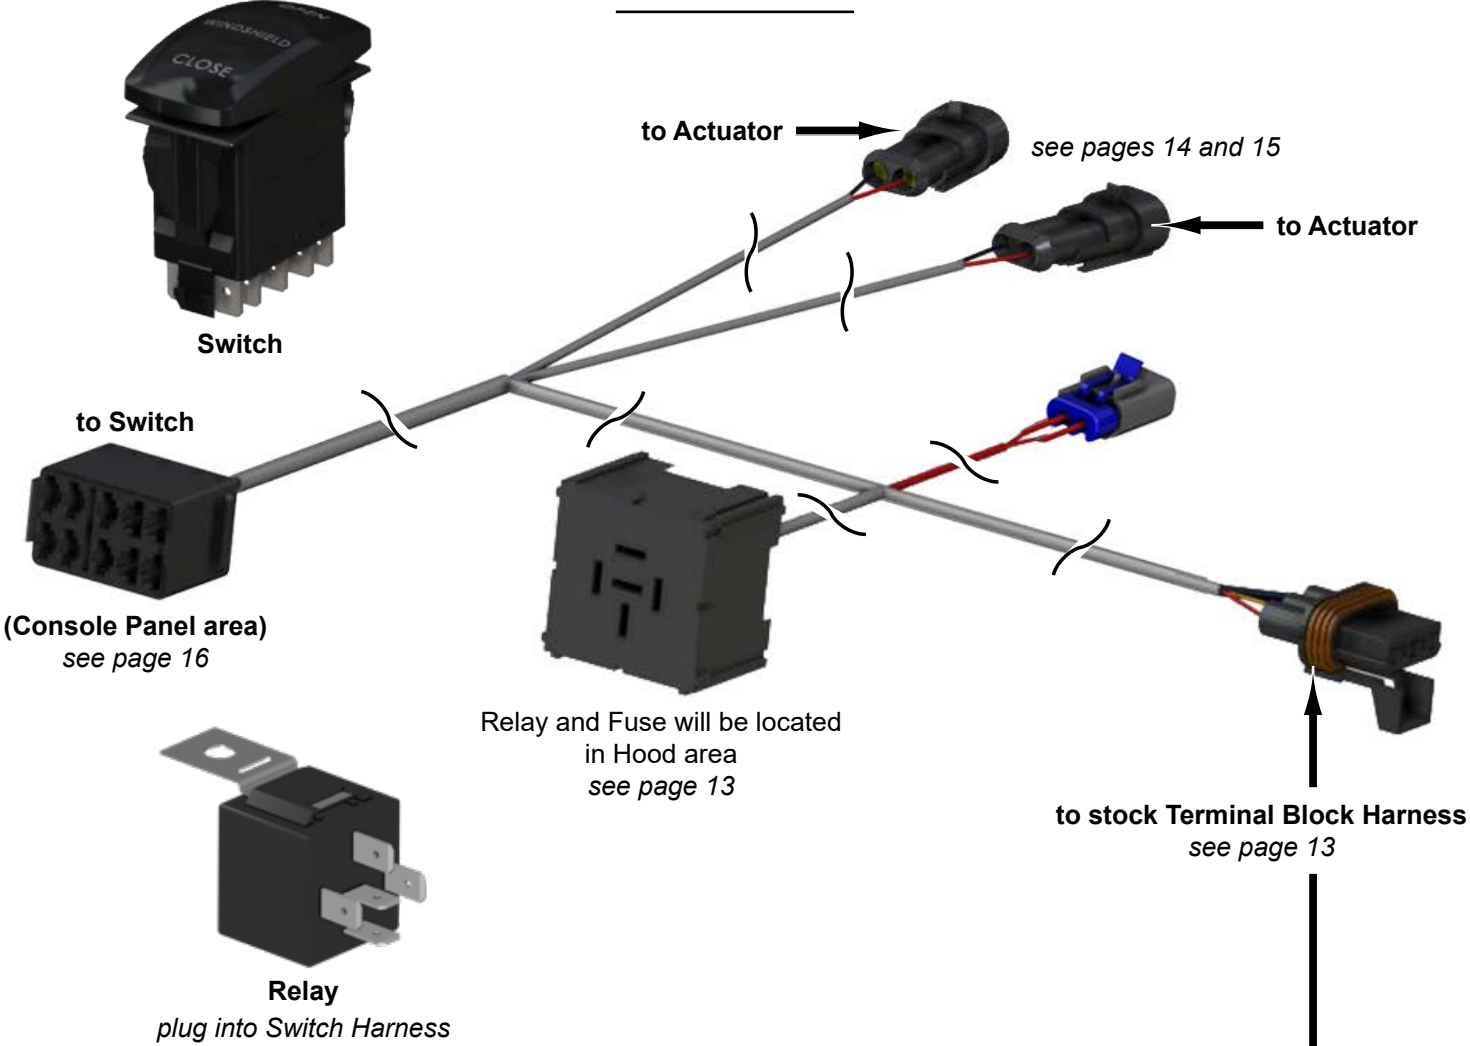
B

D

C

A

E

loosen Clamp hardware

F

Do not discard any Wire Guide. Optional Wiper Kit will also use a section of Wire Guide.

G

Switch Harness

Switch

to Actuator *see pages 14 and 15*

to Actuator

to Switch

(Console Panel area)
see page 16

Relay and Fuse will be located
in Hood area
see page 13

to stock Terminal Block Harness
see page 13

Relay
plug into Switch Harness

Alternate Power Harness

will only be used if installation is performed on older models

see page 13

(to switched 12V key-on power)

(12V)

(Ground)

to Switch Harness

Windshield Wiper Kit:

Tank

WINDSHIELD
WASHER

1

Wiper

Switch

Tubing

Arm

Blade
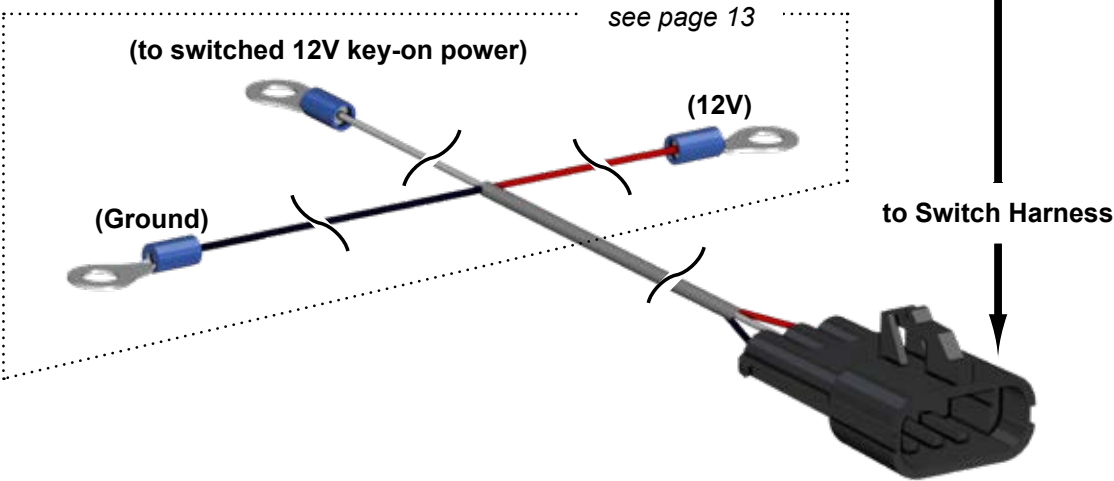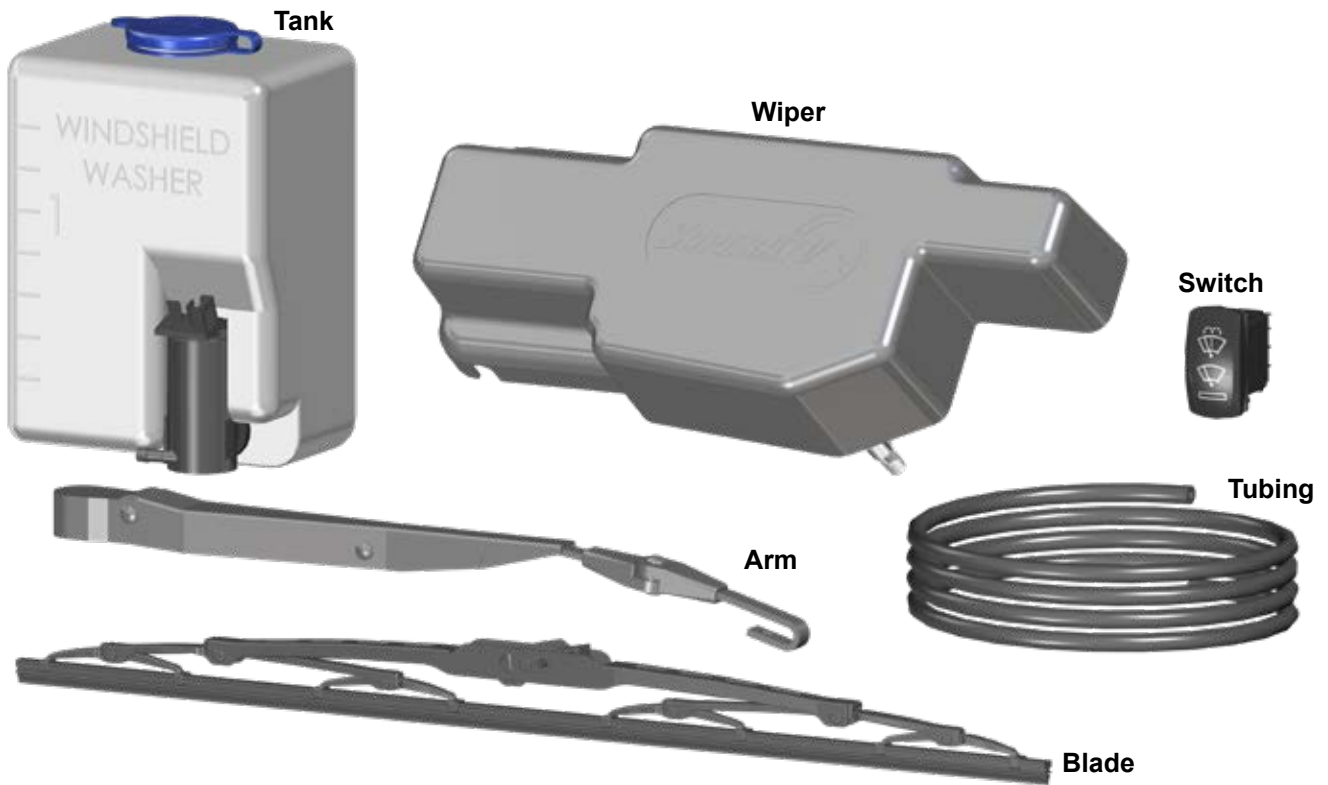
remove Tank Bracket from Tank ⟵

Windshield Wiper Kit Switch Harness

Relays and Fuse will be located in Hood area
see page 13

to stock Terminal Block Harness
see page 13

to Tank ➡

(Passenger Footwell area)
see page 17 and 19

to Switch

(Console Panel area)
see page 16

this end to Extension
see page 17

Extension

to Wiper
see page 9

this end to Harness
see page 17
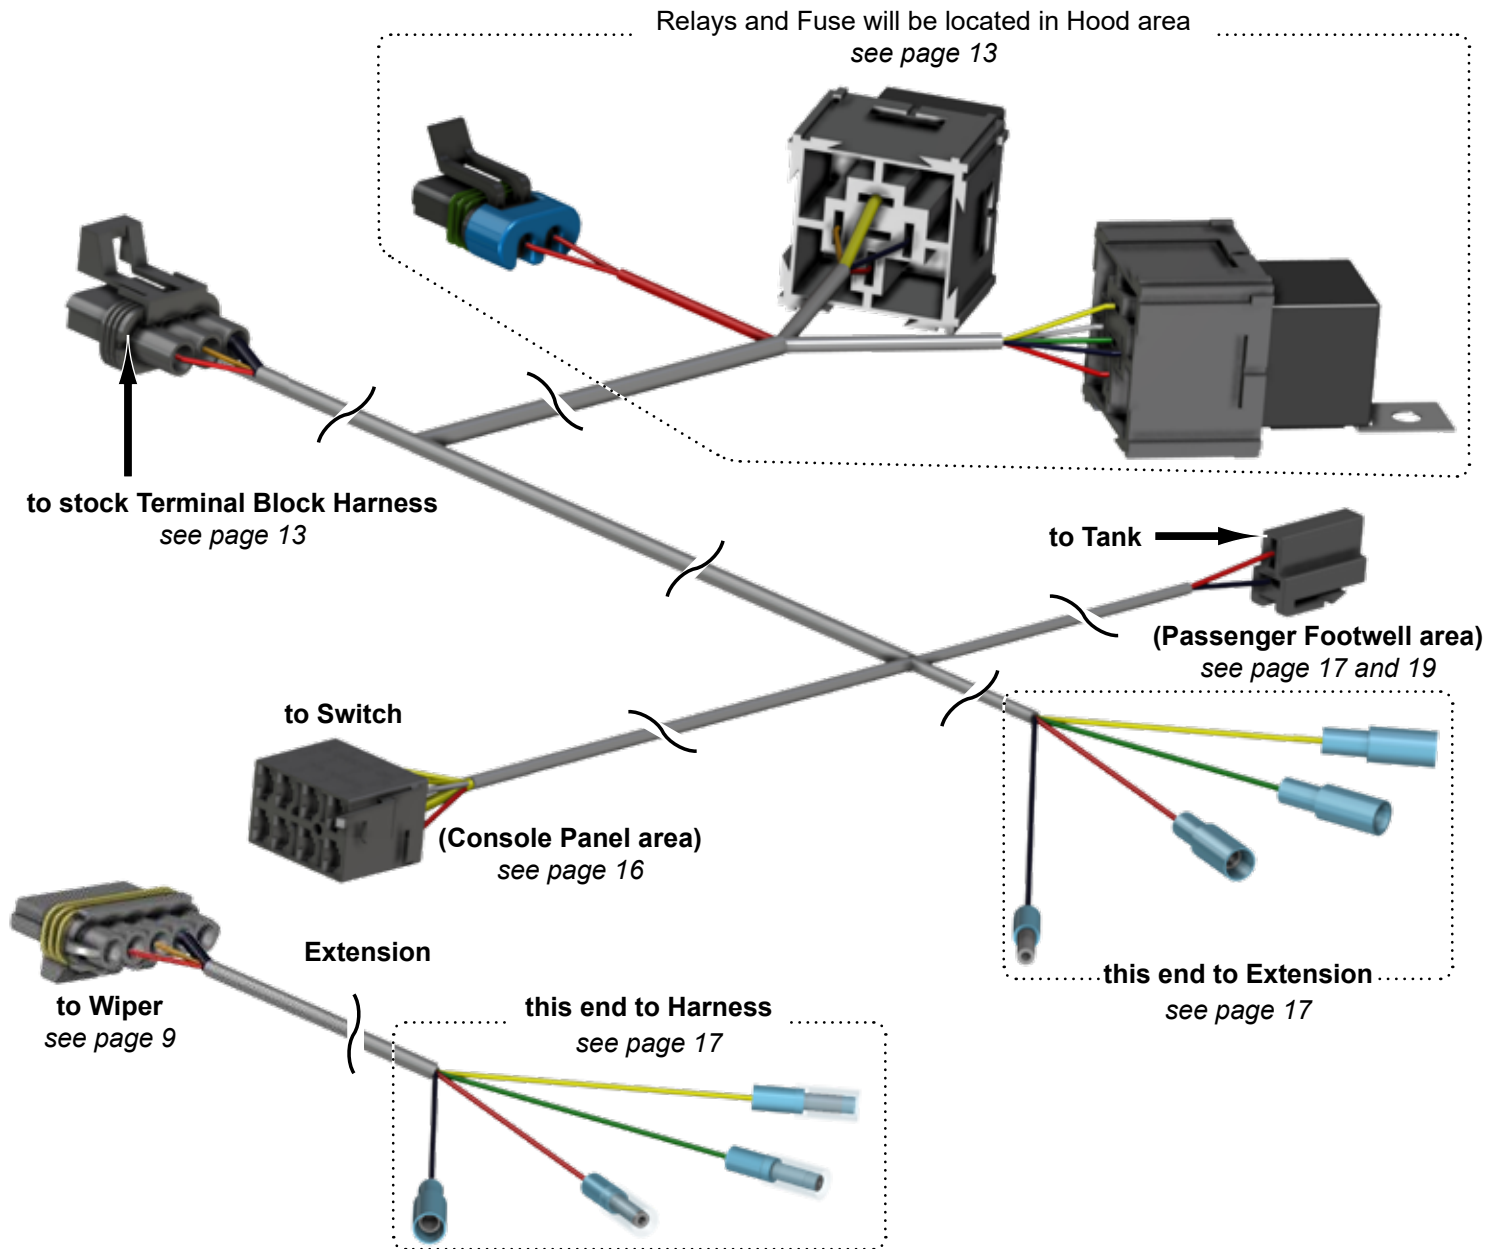
Windshield Wiper Kit Alternate Power Harness

will only be used if installation is performed on older models
see page 13

(12V)

(to switched 12V key-on power)

(Ground)

to Windshield Wiper Kit Switch Harness

Remove Hood.

Remove Upper Dash.

(driver)
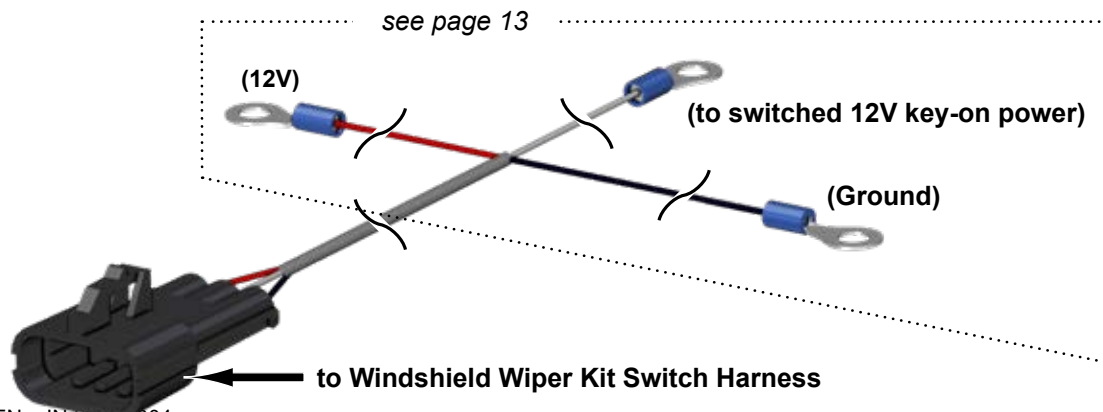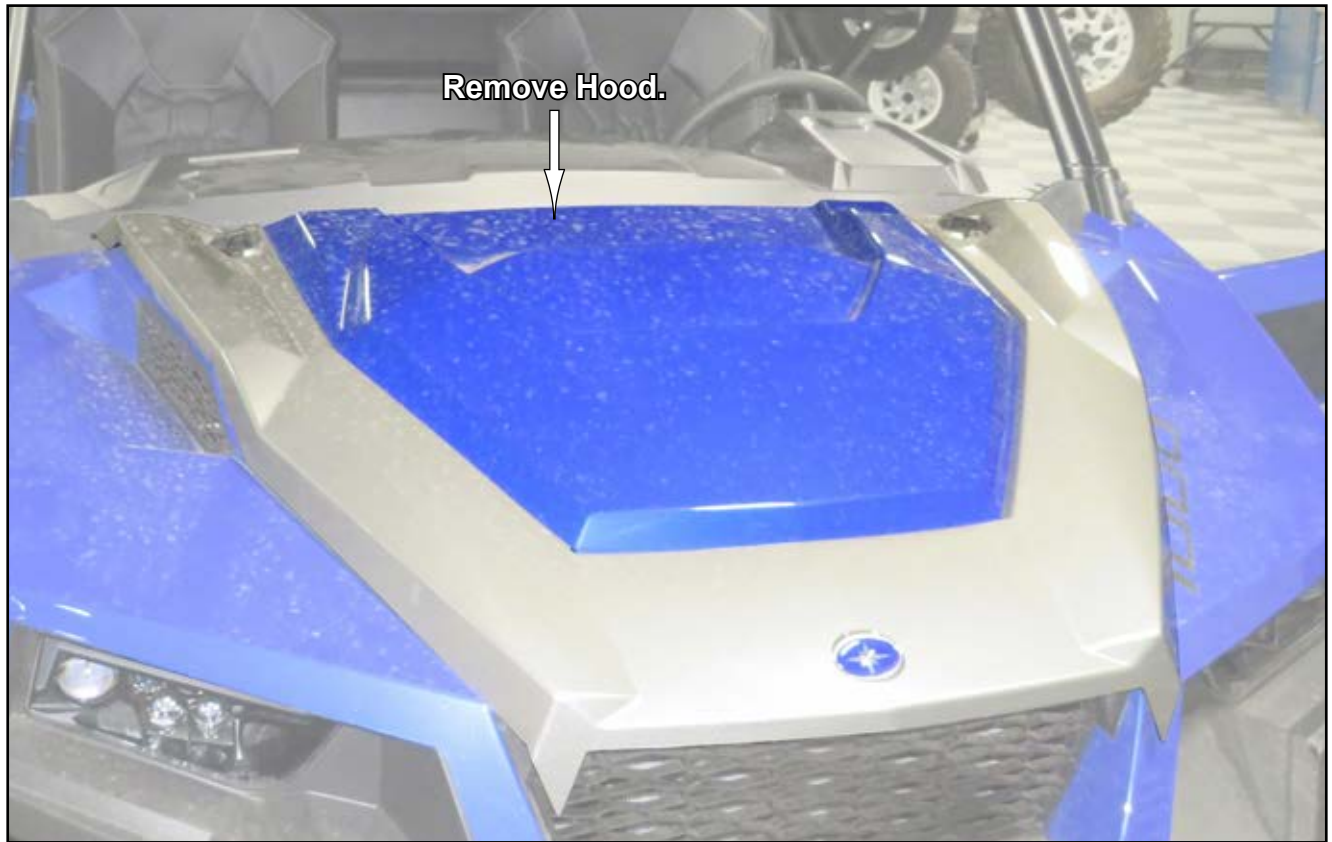
- Install Actuator Brackets (C)(D) to Clamps (E) with hardware shown; do not tighten.

D

C

4x

M8 x 20mm

(driver)

E x 2

E x 2

(passenger)
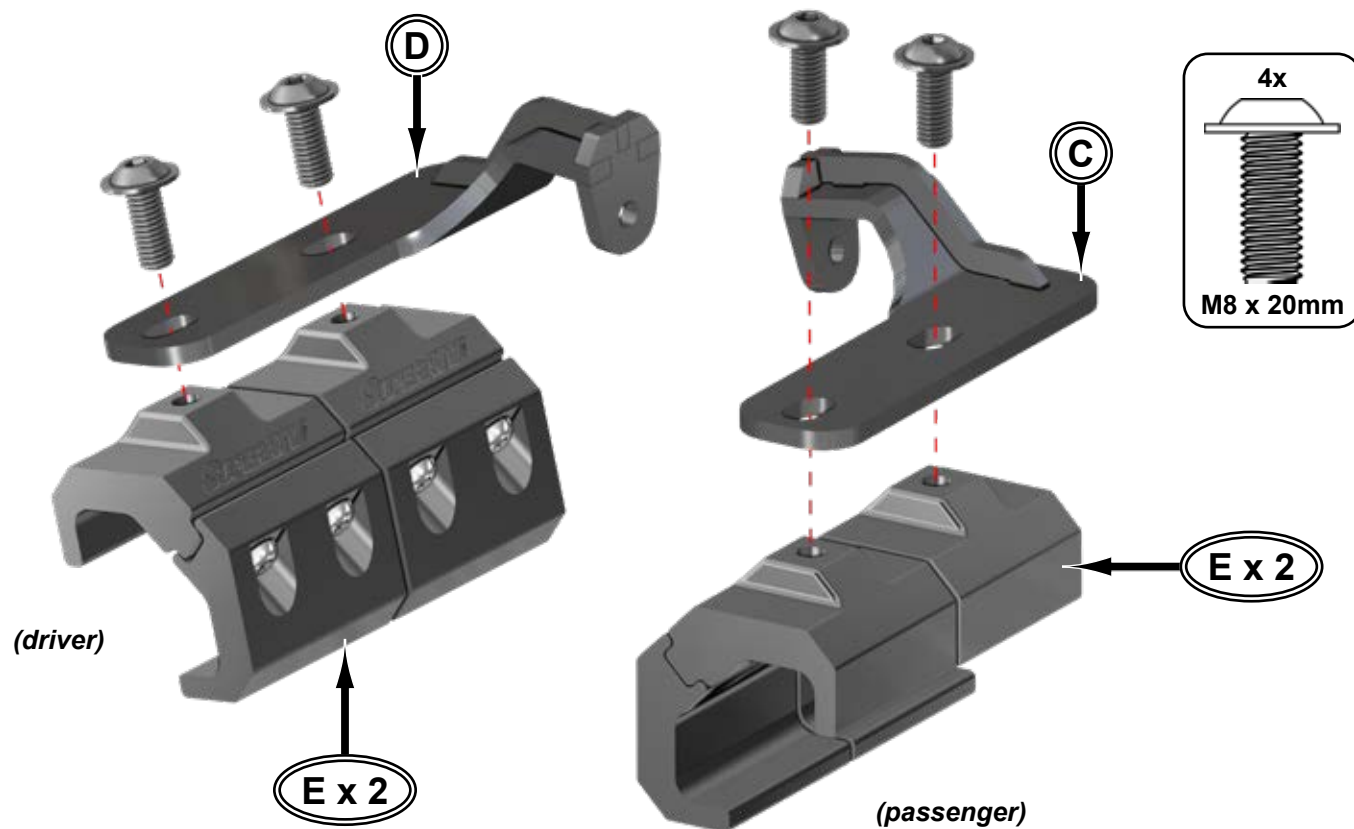
- Install Actuator Brackets / Clamps to machine.
- Clamp hardware should be snug but not completely tight.

push assembly up to
Gusset on Frame

push assembly up to
Gusset on Frame

(driver)

(passenger)

- Install Hinges (B) to Windshield (A) with hardware shown.
- Tighten hardware.

2x

Misalignment Bushing

each Hinge (B)

M8 x 30mm

M8 Nut

B

A

B
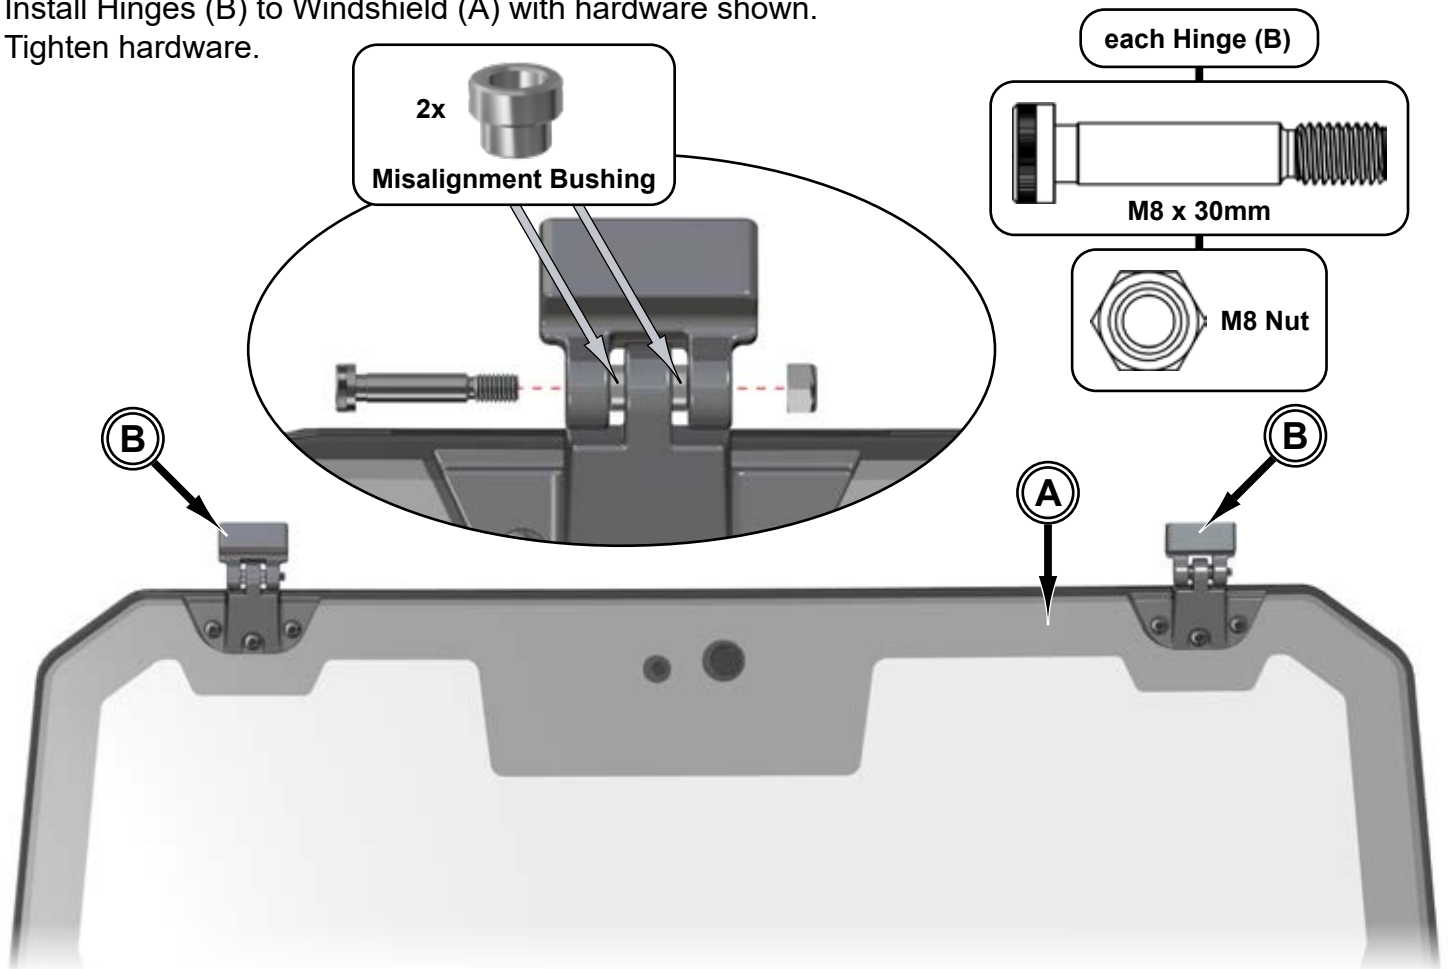
Windshield Wiper Kit only

Prep Wiper as shown.

connect Tubing

remove Wiper Nut

connect Extension
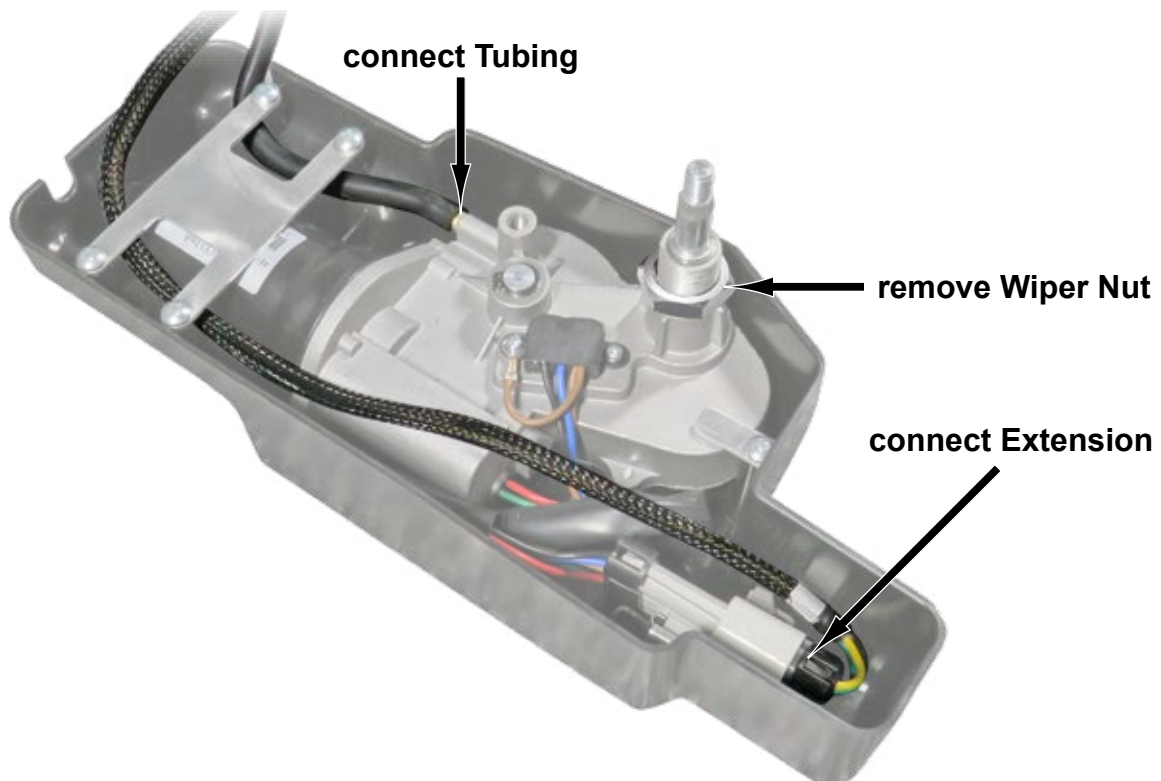
Windshield Wiper Kit only

- Remove Plugs from Windshield (A).
- Install Wiper to Windshield with components shown.
- Tighten hardware.

Nozzle should face bottom of Windshield and stick out approximately 13/16".

Nozzle

Nut
(small)

Washer
(small)

Nut
(large)

Wave Washer

Seal

Wiper Nut

Washer
(large)

Wiper

Blade to be oriented as shown

IN-FGWS-P-GEN
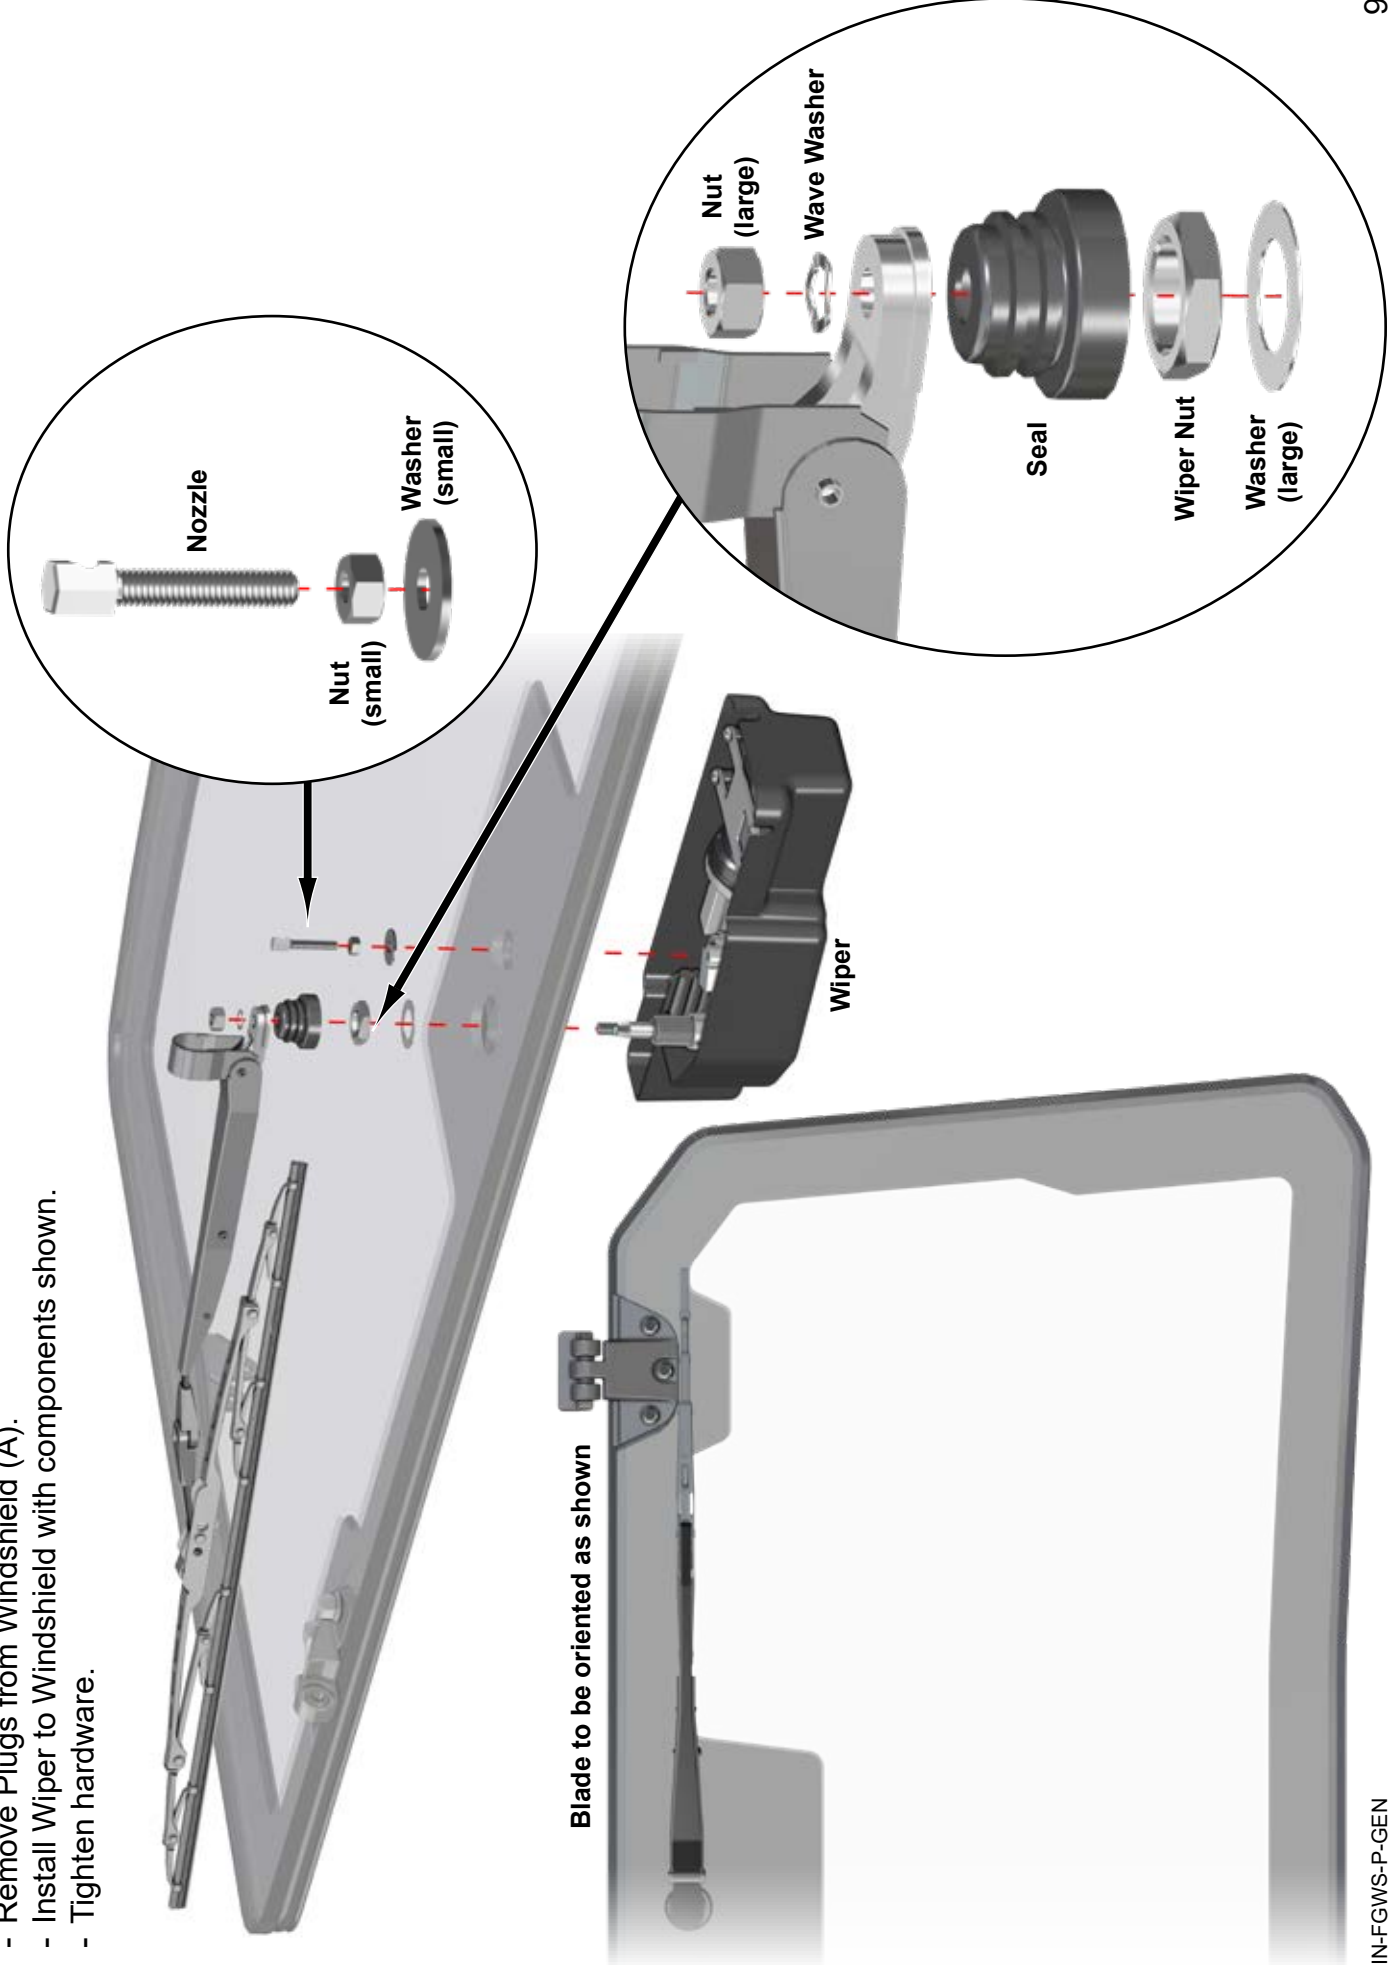
- Place Windshield (A) onto machine.

(passenger)

- Secure Hinges to Frame with hardware shown; do not tighten.
- Center and align Windshield assembly to machine.
- Tighten hardware.

(driver)

4x

M10 x 16mm

- Secure Actuator (G) with hardware shown; tighten.
- Repeat for driver side.

M6 x 25mm

Bushing x 2

2x
M5 Nut

4x
Bushing

M6 x 30mm

Bushing x 2

G

(passenger)

remove Grommet ⟶

(passenger)

Windshield Wiper Kit Switch Harness
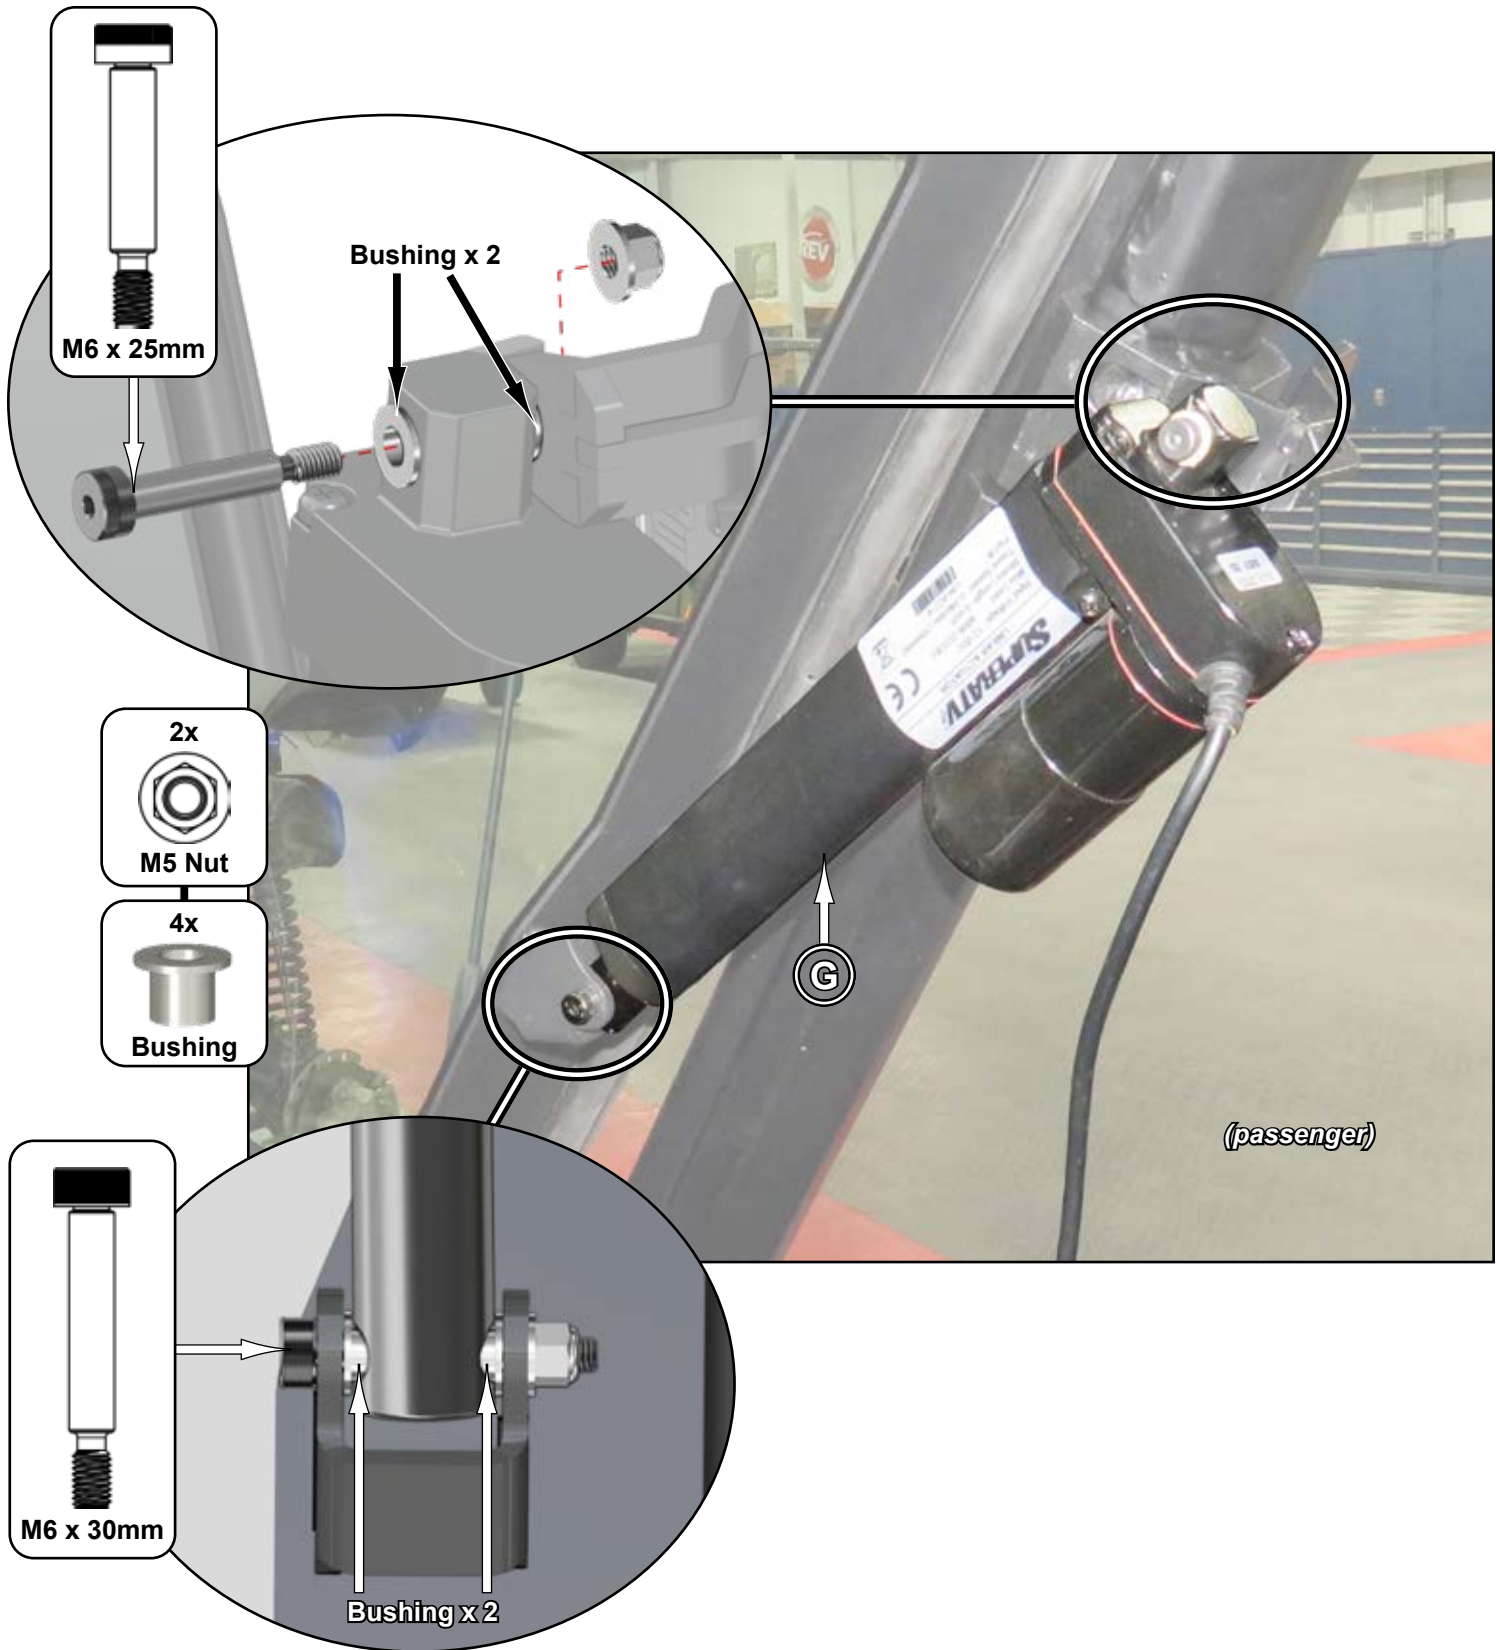
route Connectors shown through Grommet and into Upper Dash area

Switch Harness

plug Switch Harness and, if applicable, Windshield Wiper Kit Switch Harness into stock Terminal Block

(passenger)

⚠️ **Older models will not have a Terminal Block and will use a stock Power Supply as shown.**

stock Terminal Block

(passenger)

Alternate Power Harnesses

(switched 12V key-on power)

(12V)

(Ground)
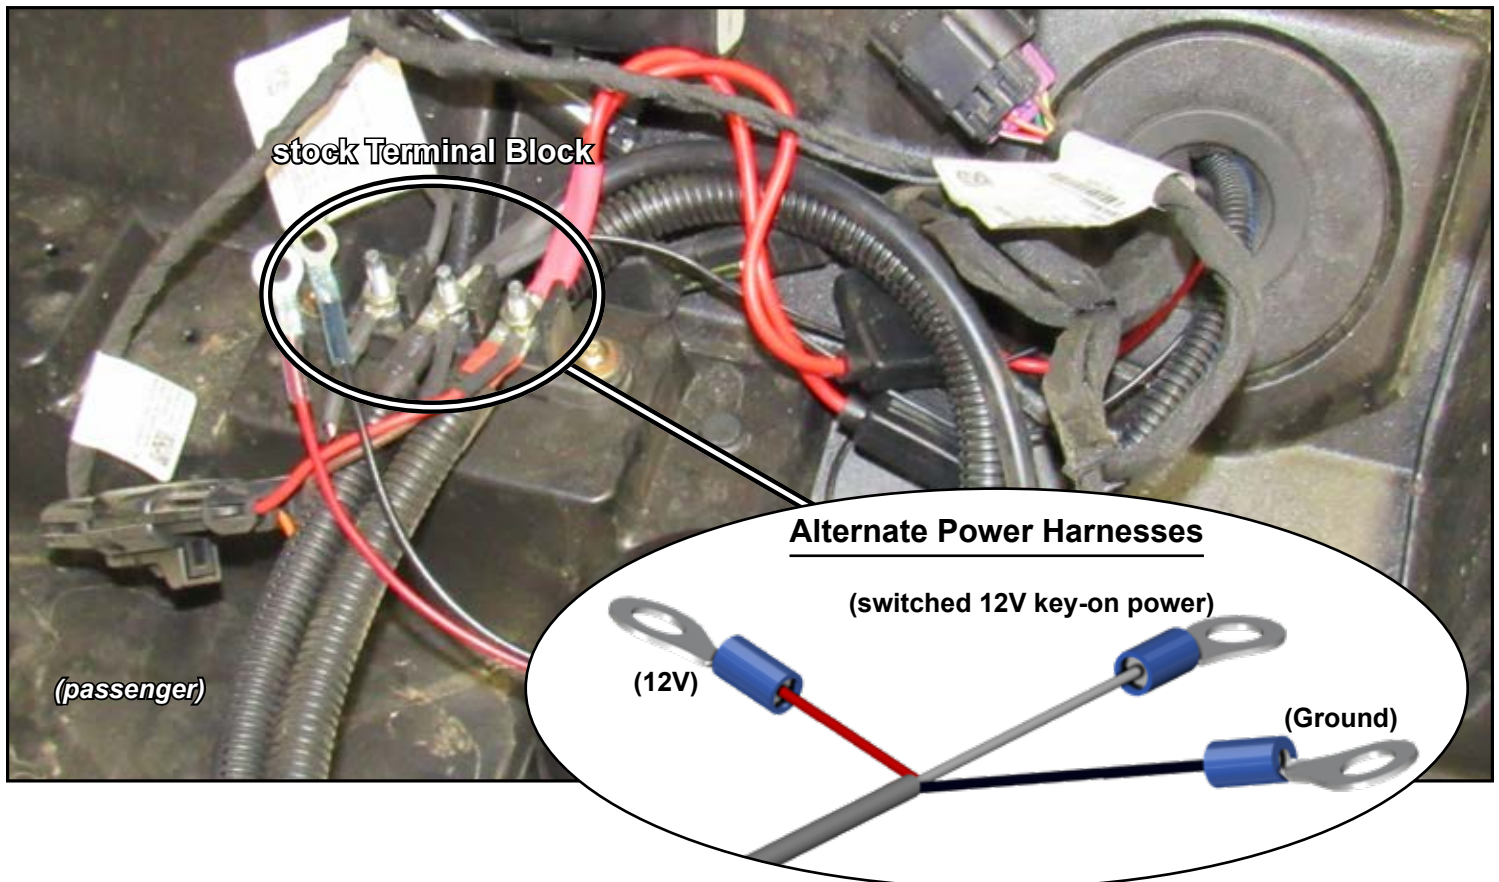
- Route Actuator connections to locations shown.

Actuator connector on Switch Harness

(driver)

(passenger)

Actuator connector on Switch Harness

connect Actuator to Actuator connector on Switch Harness

(passenger)

- Repeat for driver side.

separate Console Panel from Dash

GENERAL
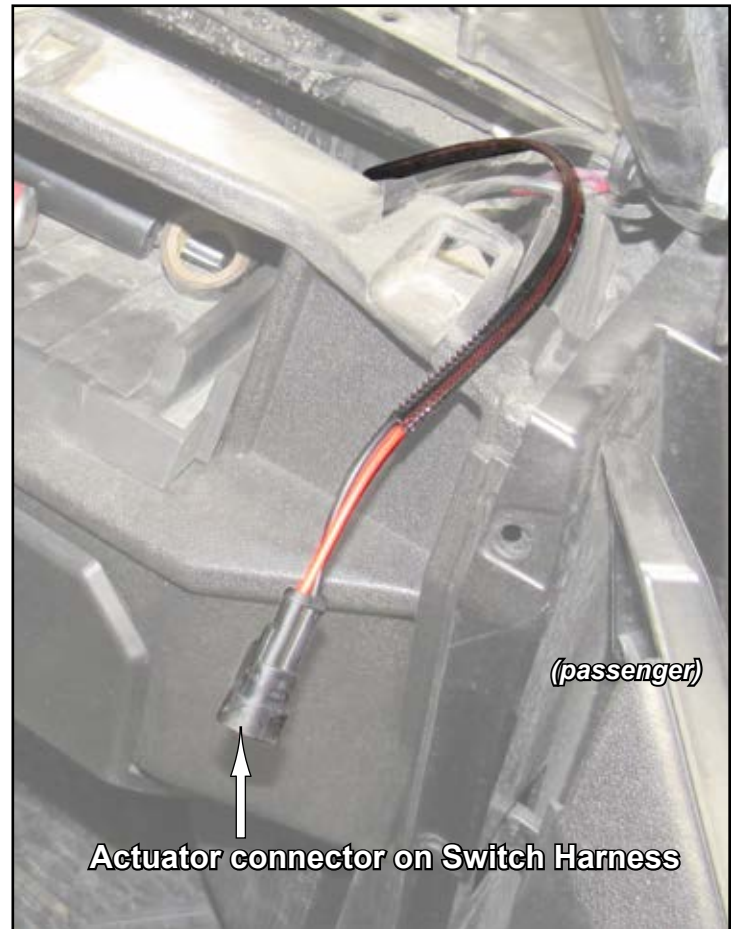
Switch Mounting:

- Remove stock Knockouts or cut new locations.
- User may install Switches in locations different than shown.
- Verify that Harnesses will reach Switches before mounting and check behind areas to be be cut for any interference.

install Switches into openings
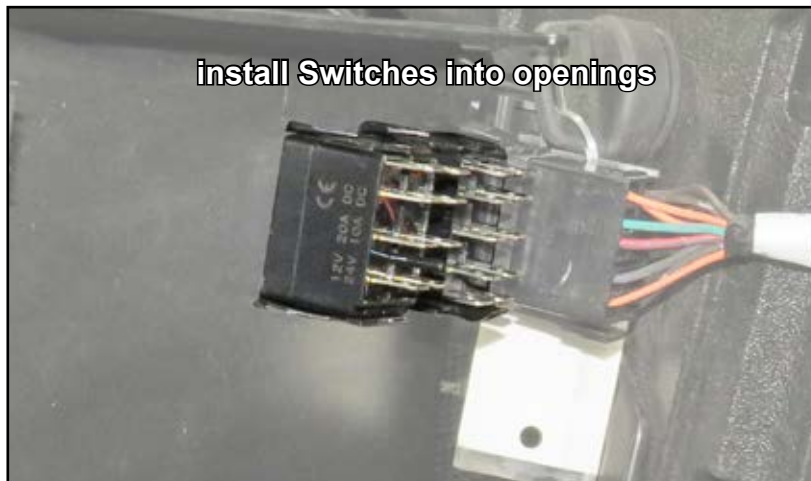
⚠️ **if installing Windshield Wiper Kit, ensure that Switches match Harnesses; don't connect Wiper Harness to Windshield open and close Switch** ⚠️

connect Harness ends to Switches

resecure Console Panel to Dash

Windshield Wiper Kit only

connect Extension and Harness

(passenger)

route Tubing and Tank connector on Windshield Wiper Kit Switch Harness through Upper Dash opening and to passenger Footwell

(passenger)

Windshield Wiper Kit only

2x

#8 x 3/4"

Tank Bracket

(passenger footwell)

approximately 1-3/4"

approximately 7"

- Place Tank Bracket onto Firewall in locations shown.
- Install screw through hole in Tank Bracket; snug but not completely tight.
- Ensure that Tank Bracket is at 1-3/4" dimension shown and install remaining Screw through Slot in Tank Bracket.
- Tighten all hardware.

IN-FGWS-P-GEN

Windshield Wiper Kit only

- Connect Tank connector to Tank.
- Trim excess Tubing and connect to Tank.


(passenger footwell)

- Slide Tank onto Tank Bracket.

- Cut Wire Guide (F) into 4 pieces; dimensions shown below.
- Place Actuator Wire into Wire Guide (F) and secure Wire Guide (F) to machine in location shown.

approximately 11" long

(driver)

secure Tubing and Extension in Wire Guide (F) if applicable

*approximately 4-3/4" long

*approximately 12-1/2" long

*disregard if Windshield Wiper Kit is not being installed

approximately 10-1/2" long

(passenger)

Reinstall all previously removed stock components.