
S6012 06-07 CLASSIC DURAMAX 4" SINGLE CAT BACK



PERFORMANCE EXHAUST

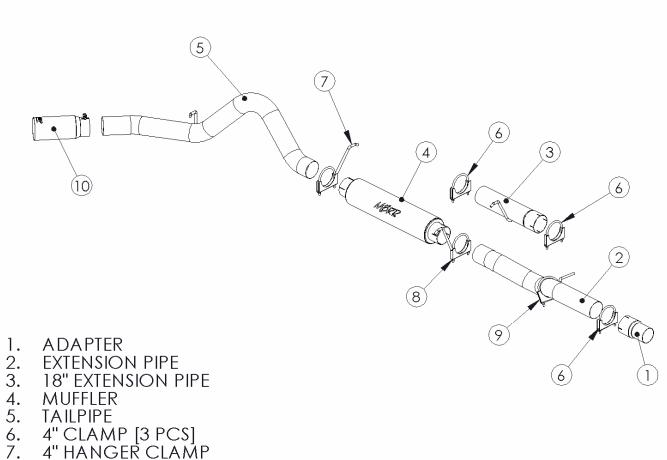

- 8. 4" HANGER CLAMP
- 9. 4" HANGER CLAMP
- 10. STAINIESS STEELTIP

PLEASE READ BEFORE STARTING INSTALATION

While MBRP Inc. has made every effort to ensure that all components of this system are of superior quality and properly packaged it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

S6012	$\widehat{\mathbb{C}}$	06/09
5001Z		00/0/





Figure 1



Figure 2



Figure 3



Figure 4



- 1. Apply a penetrating lubricant liberally to all exhaust fasteners, hangers and rubber insulators.
- 2. Loosen the band clamp behind the catalytic converter and disconnect the factory exhaust system.
- 3. Remove the exhaust system from the rubber insulators and remove from under the vehicle. If a hoist is not available for use, it may be necessary to cut the tail pipe behind the muffler for removal of the system.

Installation of MBRP Inc. Performance Exhaust:

- Place the Adapter provided into the factory band clamp located behind the catalytic converter. Install the Extension Pipe into the Adapter placing the bend under and around the cross member. Rotate the Extension Pipe to position the bend towards the driveshaft. See Figure 1. The Extension Pipe does not require cutting to fit crew cab trucks. For extended cab trucks, approximately 9 ½" needs to be cut off the end with the longest section of pipe. (Installation tip: Temporarily hang the Muffler and the Tailpipe in place and measure to the Adapter to verify the length required).
- 2. Position the Extension Pipe as shown and loosely install the Hanger Clamp with the shortest hanger. See Figure 2. This will support the Extension Pipe during the Muffler installation.
- Crew cab & extended cab long box trucks require the use of the 18" Extension Pipe provided. This is to be positioned between the Muffler and Extension Pipe. See Figure 3. The 18" Extension Pipe is not required with short box trucks.
- 4. Install the **Muffler** onto the **Extension Pipe. See Figure 4. See Figure 5** for the proper direction of air flow through the **Muffler**.

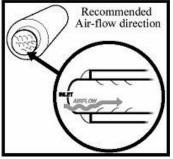


Figure 5





Figure 6



Figure 7

- 5. Install the **Tailpipe** from the rear of the truck, over the axle and attach to the **Muffler Outlet.** Install the tail pipe hanger into the OEM hanger; adjust for best axle clearance and **Tailpipe** exit location to complete. **See Figure 6.**
- 6. Install the **Hanger Clamp** with the longest hanger at the connection between the **Muffler** and the **Tailpipe** and into the OEM rubber hanger at this position. **See Figure 7.**
- 7. Install remaining **Clamps** around pipes as shown in the opening diagram. Adjust **Tailpipe** and check along the whole length of the exhaust system to ensure that there is adequate clearance around the spare tire, fuel and brake lines or any wiring. If any interference is detected, relocate or adjust.
- 8. Make sure the exhaust is in place before tightening clamps. Start at the front of the exhaust system and begin tightening all connections.
- 9. Install and adjust the **Tip** to suit. Using a 17mm wrench tighten lock bolt located on the **Tip**.



Congratulations! You are ready to begin experiencing the improved power, sound and driving excitement of your MBRP Inc. performance exhaust system. We know you will enjoy your purchase.