


S5400

2004-2006 NISSAN TITAN 5.6L,
KING (EC) 6.5' BED & CREW CAB
(CC) 6' BED, CAT BACK, SINGLE

MBRP

INC.

PERFORMANCE EXHAUST

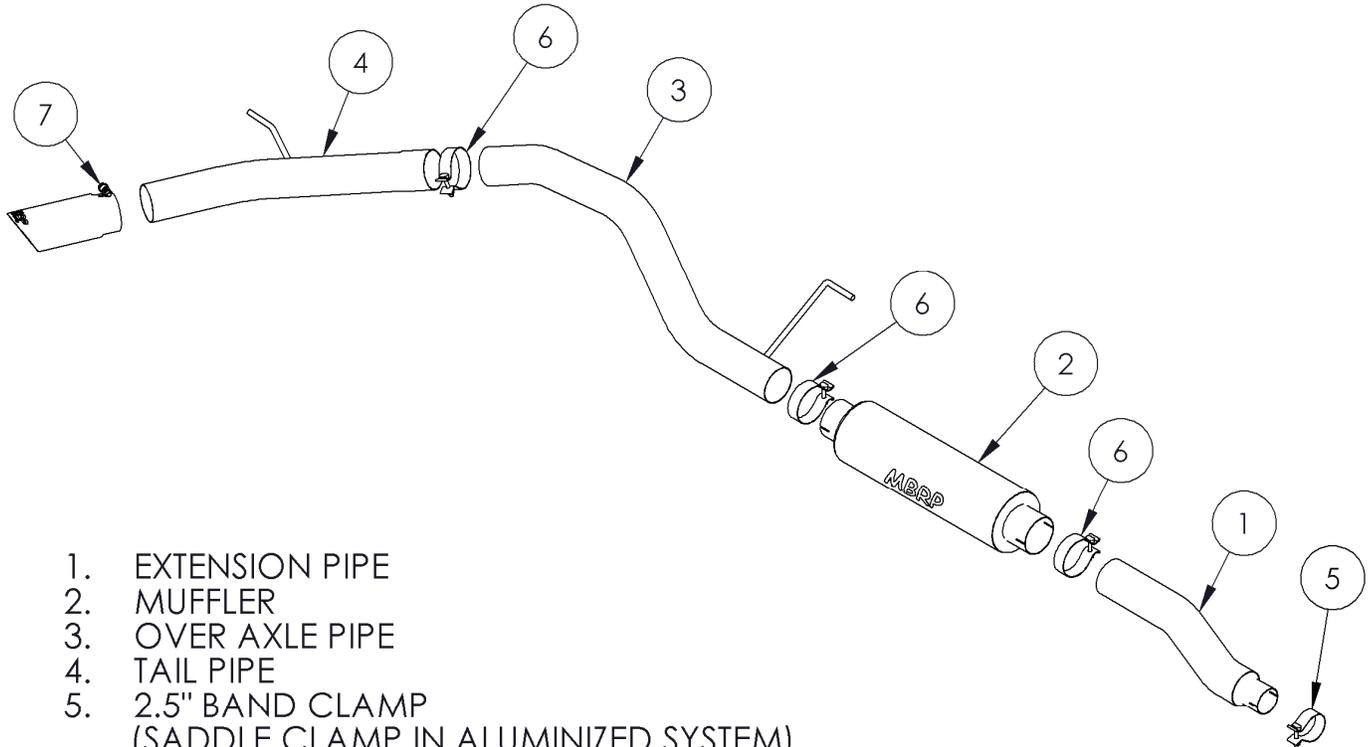

1. EXTENSION PIPE
2. MUFFLER
3. OVER AXLE PIPE
4. TAIL PIPE
5. 2.5" BAND CLAMP
(SADDLE CLAMP IN ALUMINIZED SYSTEM)
6. 3.5" BAND CLAMP (2PCS)
(SADDLE CLAMP IN ALUMINIZED SYSTEM)
7. EXHAUST TIP

PLEASE READ BEFORE STARTING INSTALLATION

While MBRP Inc. has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

2004-2006 Nissan Titan

These instructions cover the system: S5400304

Removal of stock system:



Figure 1



Figure 2



Figure 3



Figure 4

1. Apply a penetrating lubricant liberally to all exhaust fasteners, hangers and rubber insulators.

2. Mark 8" from the outside of the vehicle stock hanger just after the Y pipe. **Refer to Figure 1.**

3. Cut the pipe at the mark. Remove any burrs on the cut pipe. **Refer to Figure 2.**

4. Lubricate then remove hardware from the rearmost exhaust hanger. Keep for reinstallation. **Refer to Figure 3.**

5. Remove hardware from flange behind muffler. Remove the hangers from the rubber insulators. Remove the exhaust from the vehicle. **Refer to Figure 4.**



Installation of MBRP Inc. Performance Exhaust:



Figure 5



Figure 6



Figure 7



Figure 8



Figure 9

1. Install the **Extension Pipe** over the cut exhaust pipe using a **2.5” Band Clamp**. Refer to **Figure 5**.

2. Slide a **3.5” Band Clamp** over the **Extension Pipe** and install the **Muffler** onto the **Extension Pipe**. Refer to **Figure 6**. See the illustration on **Page 1** for the exhaust flow direction.

3. Slide a **3.5” Band Clamp** over the outlet side of the **Muffler**. Position the **Over Axle Pipe** over the axle and loosely attach it to the **Muffler**. Install the **Over Axle Pipe** hanger into the factory rubber insulator. Refer to **Figure 7**.

4. Slide a **3.5” Band Clamp** over the **Tail Pipe** and install onto the **Over Axle Pipe**. Refer to **Figure 8**.

5. Slide the **Tail Pipe** hanger into the rearmost rubber insulator and reattach to the frame. Refer to **Figure 9**.

MBRP^{INC.}

PERFORMANCE EXHAUST



Figure 10

6. Install and adjust the **Exhaust Tip** to suit. Using a 17mm wrench tighten the lock bolt located on the **Exhaust Tip**. Refer to **Figure 10**.

7. Align the exhaust as required. Starting at the front of the exhaust, tighten all clamps and connections.

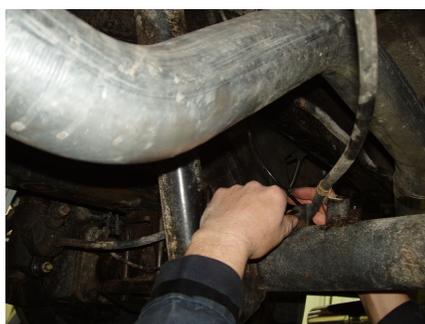


Figure 11

8. Carefully position the ABS line to provide clearance to the exhaust. Refer to **Figure 11**.

9. Check along the whole length of the exhaust system to ensure that there is adequate clearance around the spare tire, fuel and brake lines or any wiring. If any interference is detected relocate or adjust.



Congratulations! You are ready to begin experiencing the improved power, sound and driving experience of your MBRP Inc. performance exhaust system. We hope you enjoy your purchase.