



Wheel Well Guards

79131 - Installation Instructions

Ford F250 / F350

PACKAGE CONTENTS:



Wheel Well Guard
Driver's Side (1)

Supplied Hardware
8 - #10 SEM Screws
8 - U-Clips




Wheel Well Guard
Passenger's Side (1)

TOOLS REQUIRED:

- Phillips Head Screwdriver
- Utility Knife

VEHICLE PREPARATION:


Your vehicle's rear fender wells should be cleaned prior to the installation of your new Husky Wheel Well Guards.

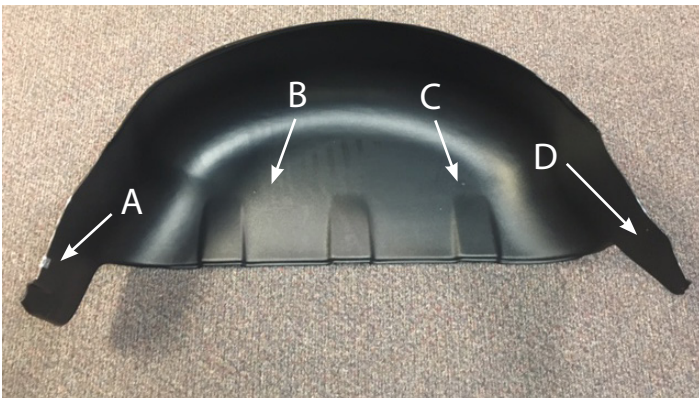

Installation

Read all directions thoroughly prior to the installation of your Wheel Well Guards.

A, B, C & D are pre-drilled fastener locations for installation.

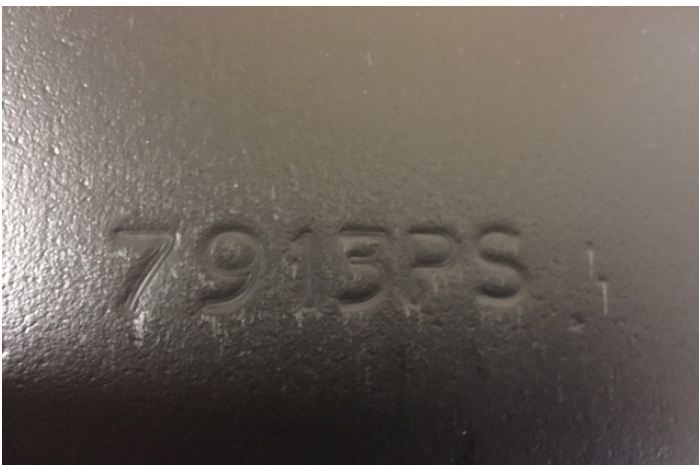

1. Check part number on the top of the Wheel Well Guard and identify DS & PS to determine which side to install.
 - DS 7913 installs on the driver's side.
 - PS 7913 installs on the passenger's side.



2. Install a u-clip over the factory hole at location B.



3. Remove factory push-in fastener at location A on the truck
Install a u-clip over the Wheel Well Guard at location A and align with the pre-drilled hole



4. Install the Wheel Well Guard into the wheel well opening over the tire.

Note: It is not necessary to remove the tire for installation.



5. Insert the lower rear flap sections of the Wheel Well Guard into the fender well behind the fender well lip and push the front portion of the Wheel Well Guard up into the opening.



6. Tuck the front portion of the Wheel Well Guard behind the fender lip and tuck the remainder all the way around the fender well opening.

Note: Make sure on flared models the Wheel Well Guard lip is tucked behind the metal wheel well lip of the truck.



7. Align the holes in the Wheel Well Guard at locations A and B with the factory screw location with the U-clip and install the #10 SEM screw using a phillips head screwdriver.

Note: Do not tighten all the way till all fasteners are installed



8. At locations C and D install the #10 SEM screws through the Wheel Well Guard and the slotted factory hole and into a U-clip on the backside of the sheet metal.

Note: The U-clip goes on the back side of the sheet metal and is used as a nut at both locations A and D and does not clip over the sheet metal.



9. Once all fasteners at locations A,B,C & D are installed, tighten with a phillips head screwdriver.

10. Repeat steps 1-9 on the other side of the vehicle.

Congratulations,
You have now successfully installed
your new Husky Liners Wheel Well
Guards. If you have any questions
please call us at 1-800-344-8759.

HUSKY LINERS WHEEL WELL GUARDS LIMITED LIFETIME WARRANTY

HUSKY LINERS INC. WARRANTS YOUR HUSKY LINERS WHEEL WELL GUARD PROTECTION PRODUCT WITH A LIMITED LIFETIME WARRANTY TO THE ORIGINAL PURCHASER. IF YOUR FINISHED PRODUCT IS FOUND DEFECTIVE, HUSKY LINERS INC. WILL AUTHORIZE THE REPLACEMENT OF YOUR PRODUCT AT NO CHARGE TO THE ORIGINAL PURCHASER. THIS WARRANTY COVERS PRODUCT REPLACEMENT ONLY. HUSKY LINERS INC. WILL NOT PROVIDE A MONETARY REFUND FOR THE PRICE OF THE PRODUCT OR CHARGES INCURRED DURING INSTALLATION. THIS WARRANTY IS NOT TRANSFERABLE. HUSKY LINERS INC. ASSUMES NO LIABILITY FOR PRODUCT FAILURE DUE TO ACCIDENT, COLLISION, NEGLIGENCE, VANDALISM OR ABUSE.

THERE IS NO WARRANTY OF MERCHANTABILITY AND NO WARRANTY THAT THE PRODUCT SHALL BE FIT FOR ANY PARTICULAR PURPOSE OR USE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY HAVE OTHER RIGHTS WHICH VARY FROM JURISDICTION.

THIS PRODUCT IS TO BE USED IN COMPLIANCE WITH ALL APPLICABLE STATE OR PROVINCIAL LAWS. INSTALLATION OF THIS PRODUCT IN A MANNER THAT VIOLATES STATE OR PROVINCIAL LAW IS A MISUSE OF THE PRODUCT AND VOIDS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTY OF MERCHANTABILITY. HUSKY LINERS INC. SHALL NOT BE LIABLE IN ANY MANNER WHATSOEVER FOR DAMAGES RELATED TO THE USE OF THIS PRODUCT IN AN ILLEGAL MANNER.

FOR WARRANTY SERVICE CONTACT YOUR HUSKY LINERS DEALER OR CALL HUSKY LINERS INC. AT (800) 344-8759.