



RZR 1000 XP

Front Winch Bumper

Mount winch and winch fairlead to S3 bumper before installing bumper.

1. Remove factory winch cover. (Image A)
2. Attach bumper to frame using supplied 1/2" bolts. Do not tighten. (Image A & B)
3. Make sure the clamps fit properly on the frame braces under the front fender. (Image C)
4. Attach clamps to frame braces using supplied clamp cover and 5/16" screws. Do not tighten. (Image C)
5. Tighten lower bumper bolts then tighten clamp bolts. (Image B & C)
6. Complete installation by wiring winch and install lights if applicable. (Image D)



Image A

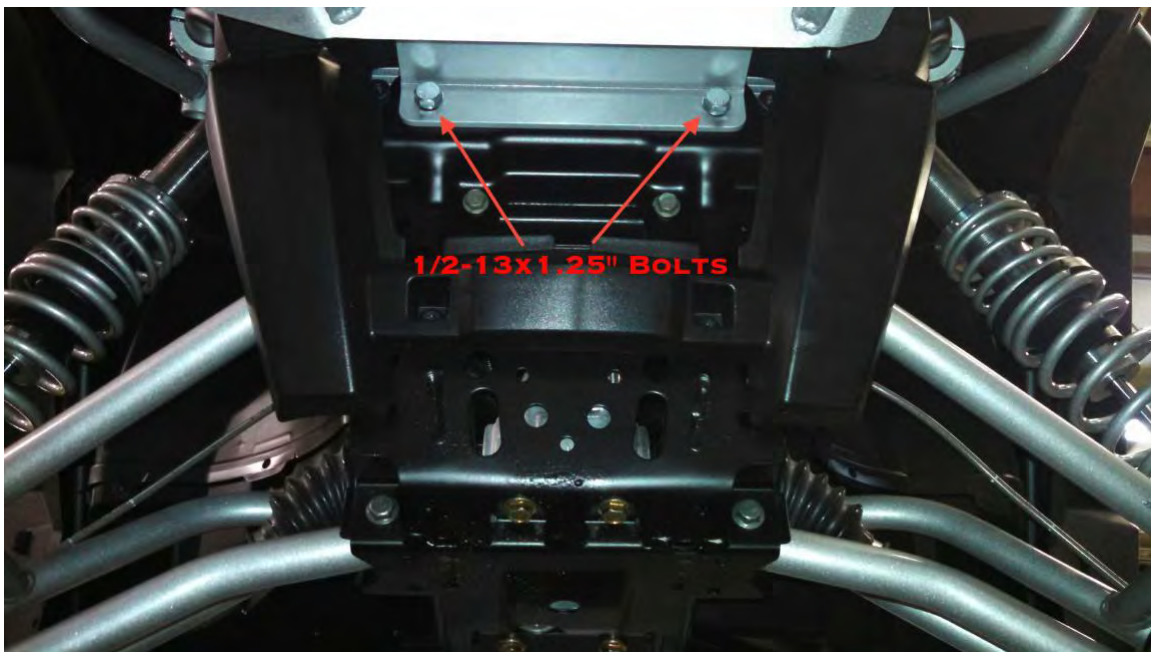


Image B

