

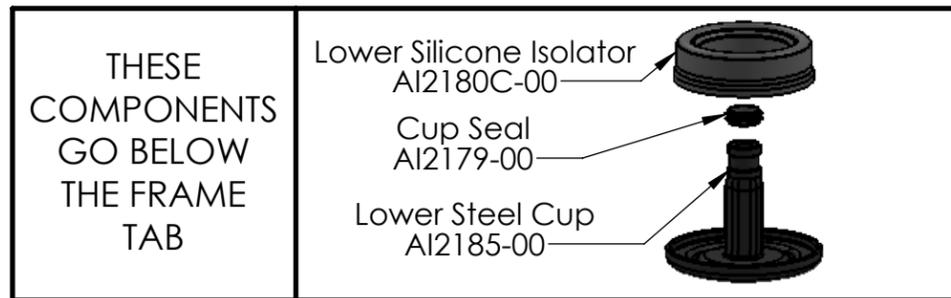
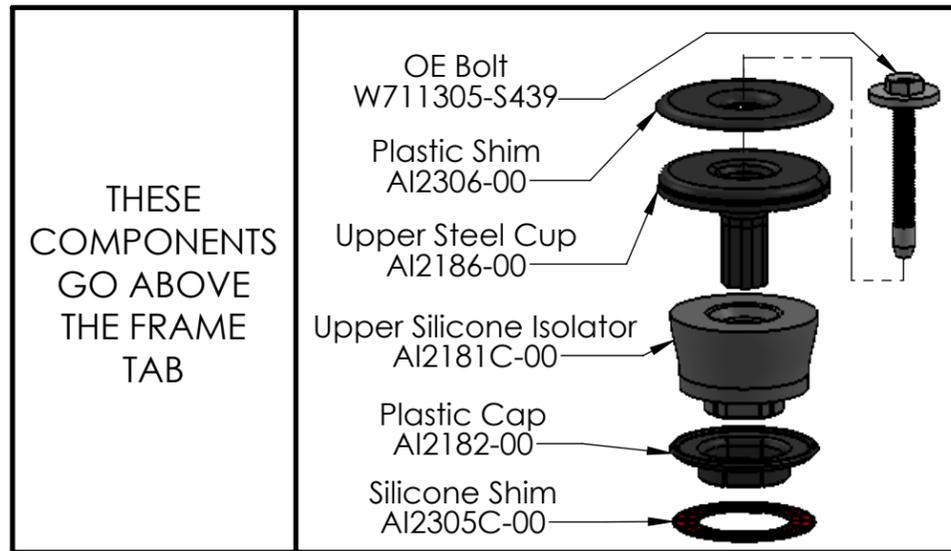





Rows #2 and #3

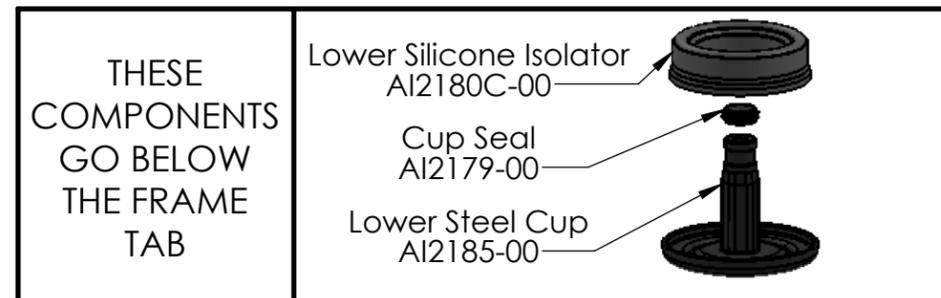

Row #4 (Driver Side)

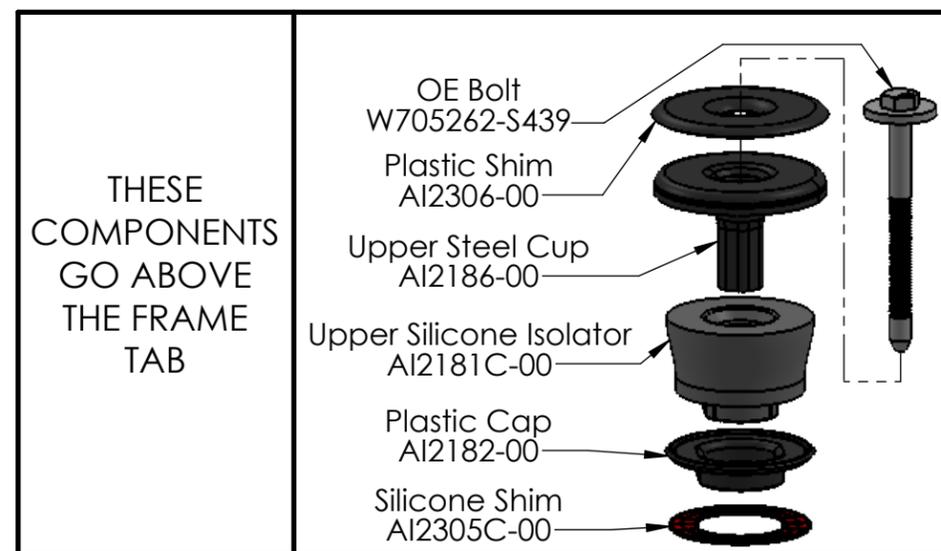

Row #4 (Passenger Side)

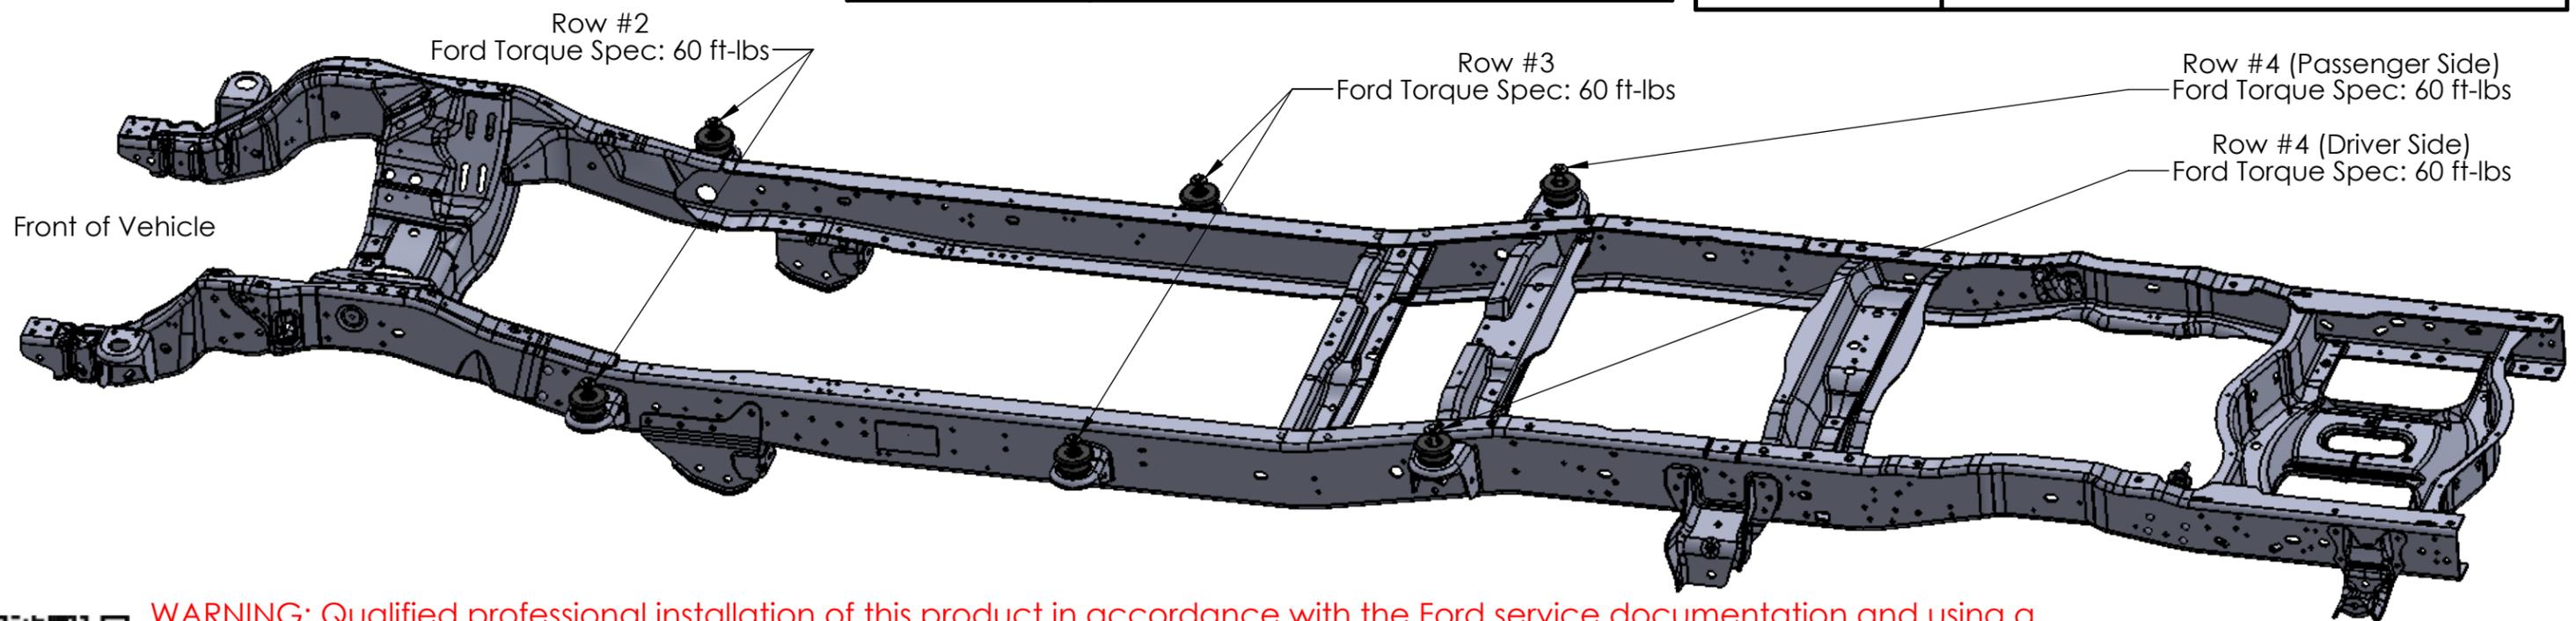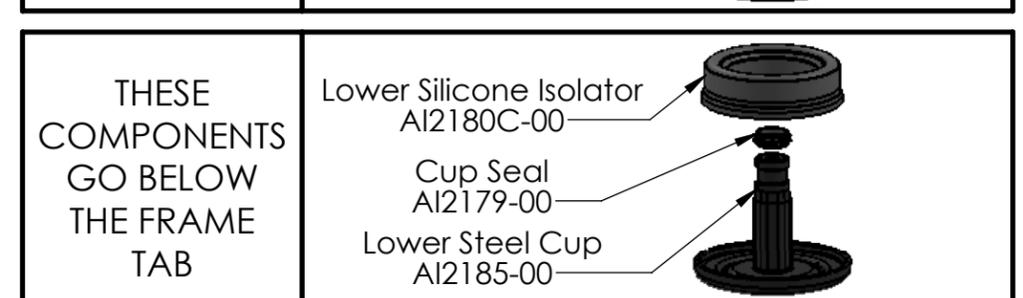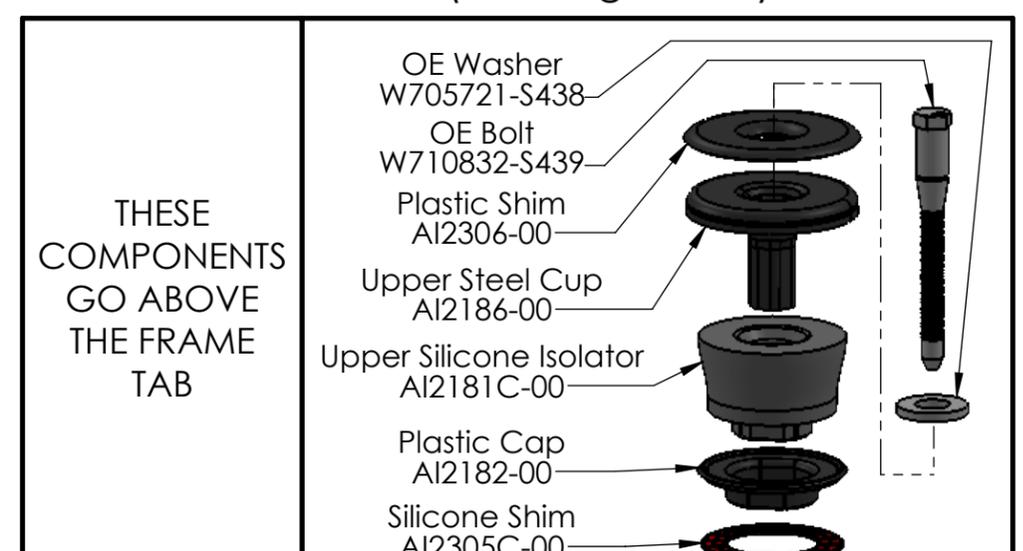

WARNING: Qualified professional installation of this product in accordance with the Ford service documentation and using a vehicle lift is required.

Install according to the supplied Ford Torque Spec for the best ride and to avoid damaging your truck. Do not attempt self-installation of this product or use an impact wrench at anytime. Self-installation using a jack or other lifting device could result in personal injury and/or damage to your vehicle. S&B shall not be liable for any loss, damage, including any incidental or consequential damages, fire, explosion, injury, or death as a result of self-installation of this product. The S&B Warranty will be voided if this product is not installed by a qualified professional or if an impact wrench is used. Visit sbfilters.com for warranty and other information.



Part Number: 81-1001
2003-2007 Ford Powerstroke
6.0L Crew Cab