


## INSTALLATION INSTRUCTIONS

Rock Sliders: for Polaris RZR® XP

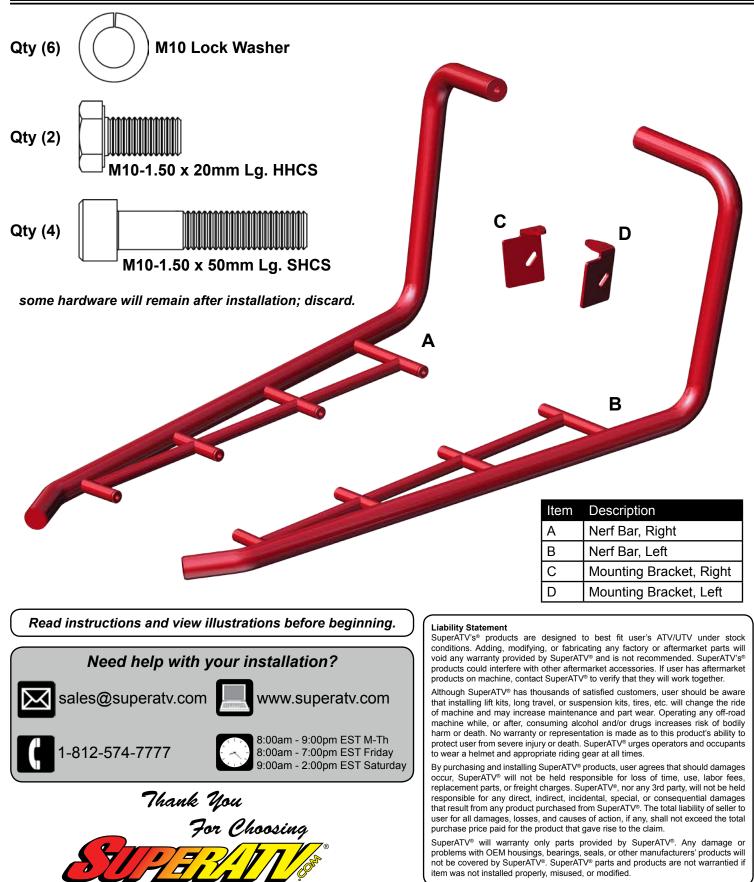

Do not tighten hardware completely unless noted. Keep all components removed from machine.

- 1. Remove Roll Cage Mounting Hardware. See Fig. 1.
- Install Mounting Bracket, Right (C) with stock hardware from Step 1. See Fig. 1.
- Install Nerf Bar, Right (A) to Frame with M10-1.50 x 50mm Lg. SHCS and M10 Lock Washers. See Fig. 2.
- 3. Secure Nerf Bar, Right (A) to Mounting Bracket, Right (C) with M10-1.50 x 20mm Lg HHCS and M10 Lock Washer. See Fig. 3.
- 4. Repeat steps for opposite side.
- 5. Align to machine and tighten all hardware securely.



(illustrations continue on following pages)

