

(discard any remaining hardware)

Need help with your installation?



sales@superatv.com



www.superatv.com



1-855-743-3427



8:00am - 8:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

Read instructions and view illustrations before beginning.


Thank You

For Choosing









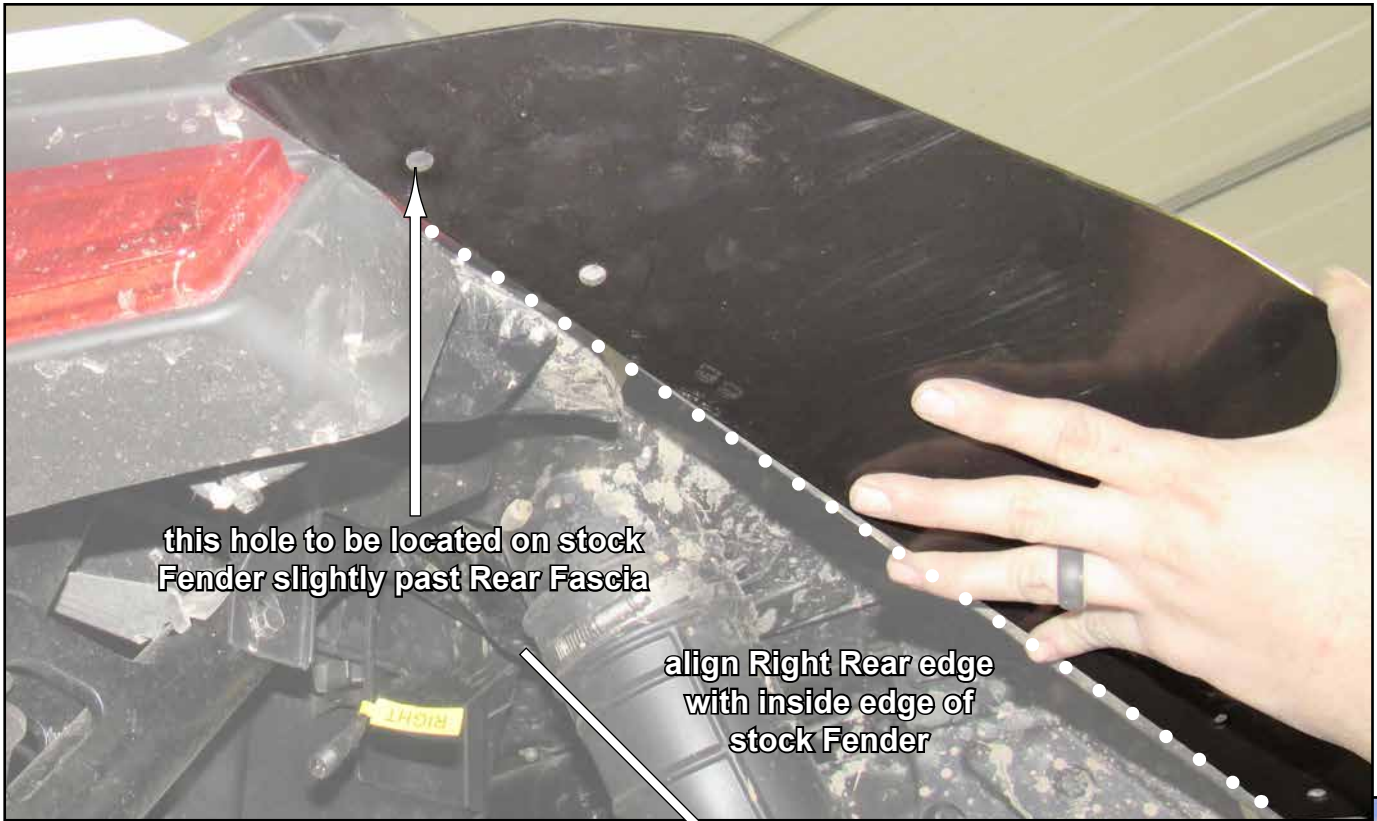




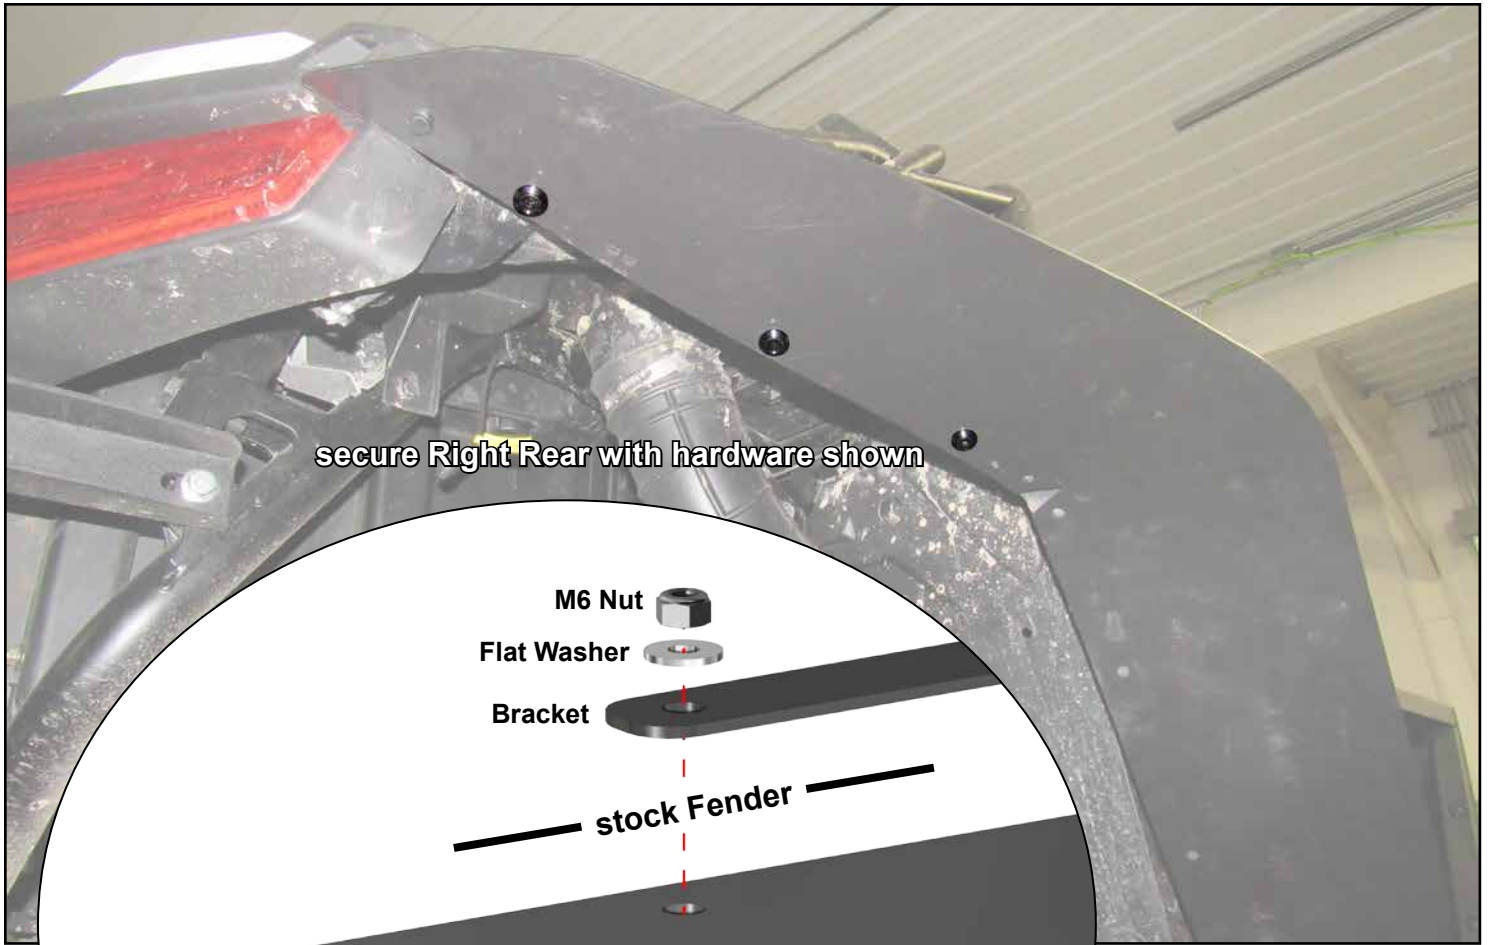

secure Right Rear with hardware shown

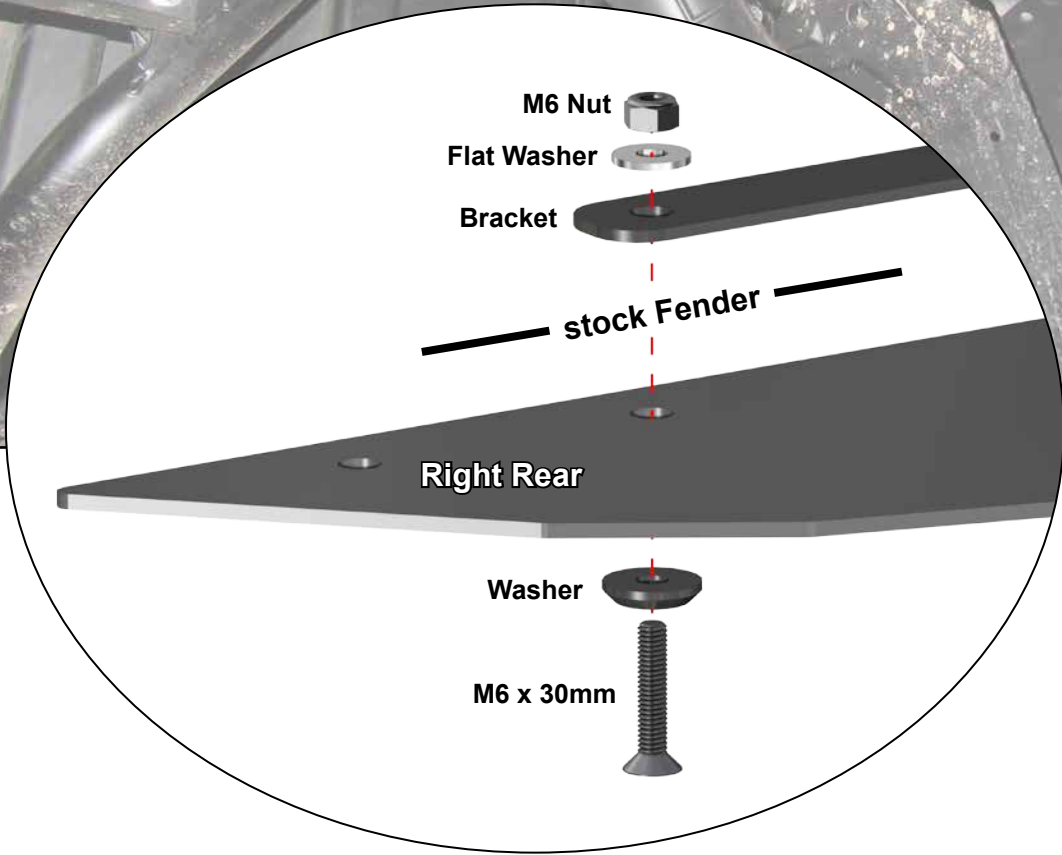


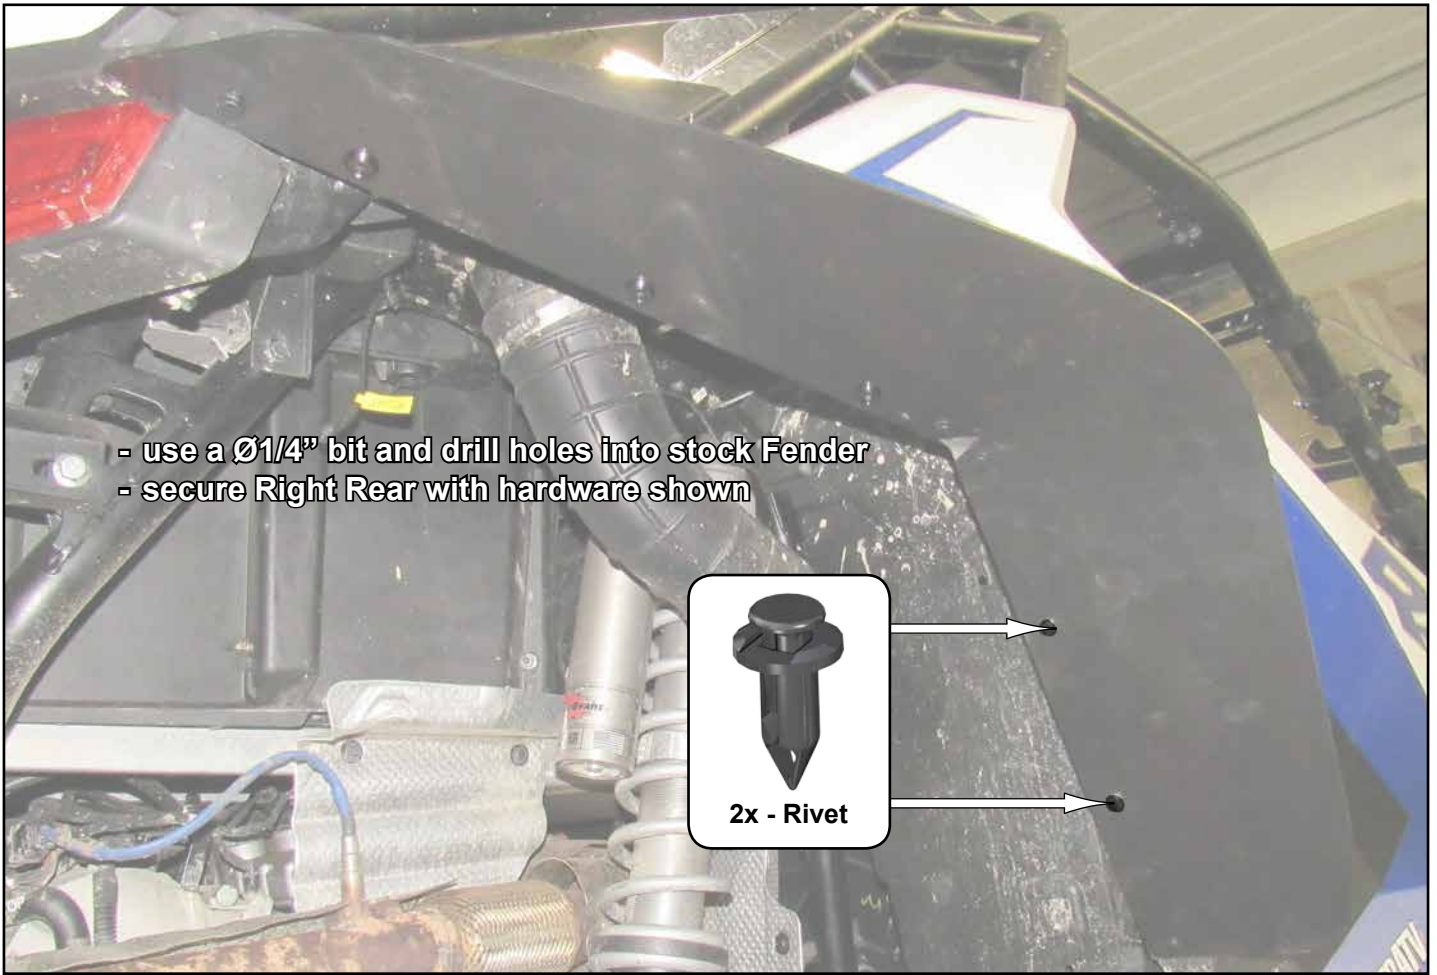




reinstall Fender

- use a Ø1/4" bit and drill (3) holes into stock Fender
- secure Right Front with hardware shown

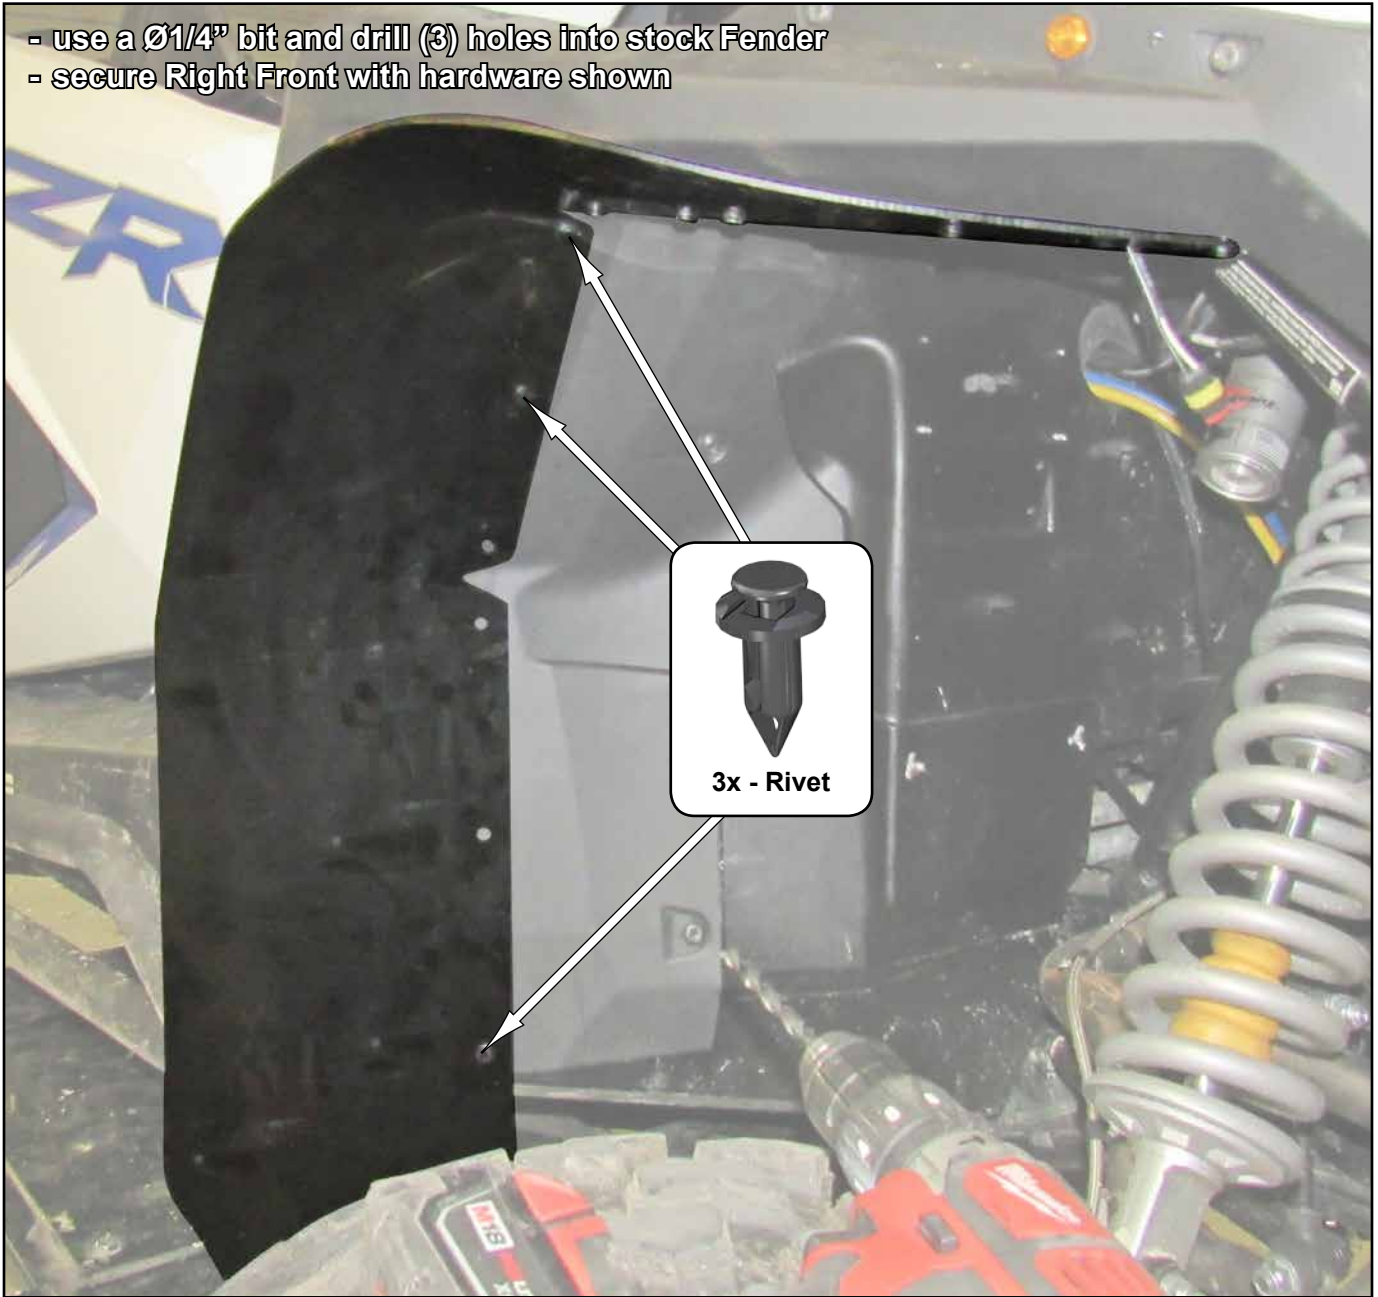

- use a $\text{Ø}1/4''$ bit and drill (3) holes into stock Fender
- secure Right Front with hardware shown

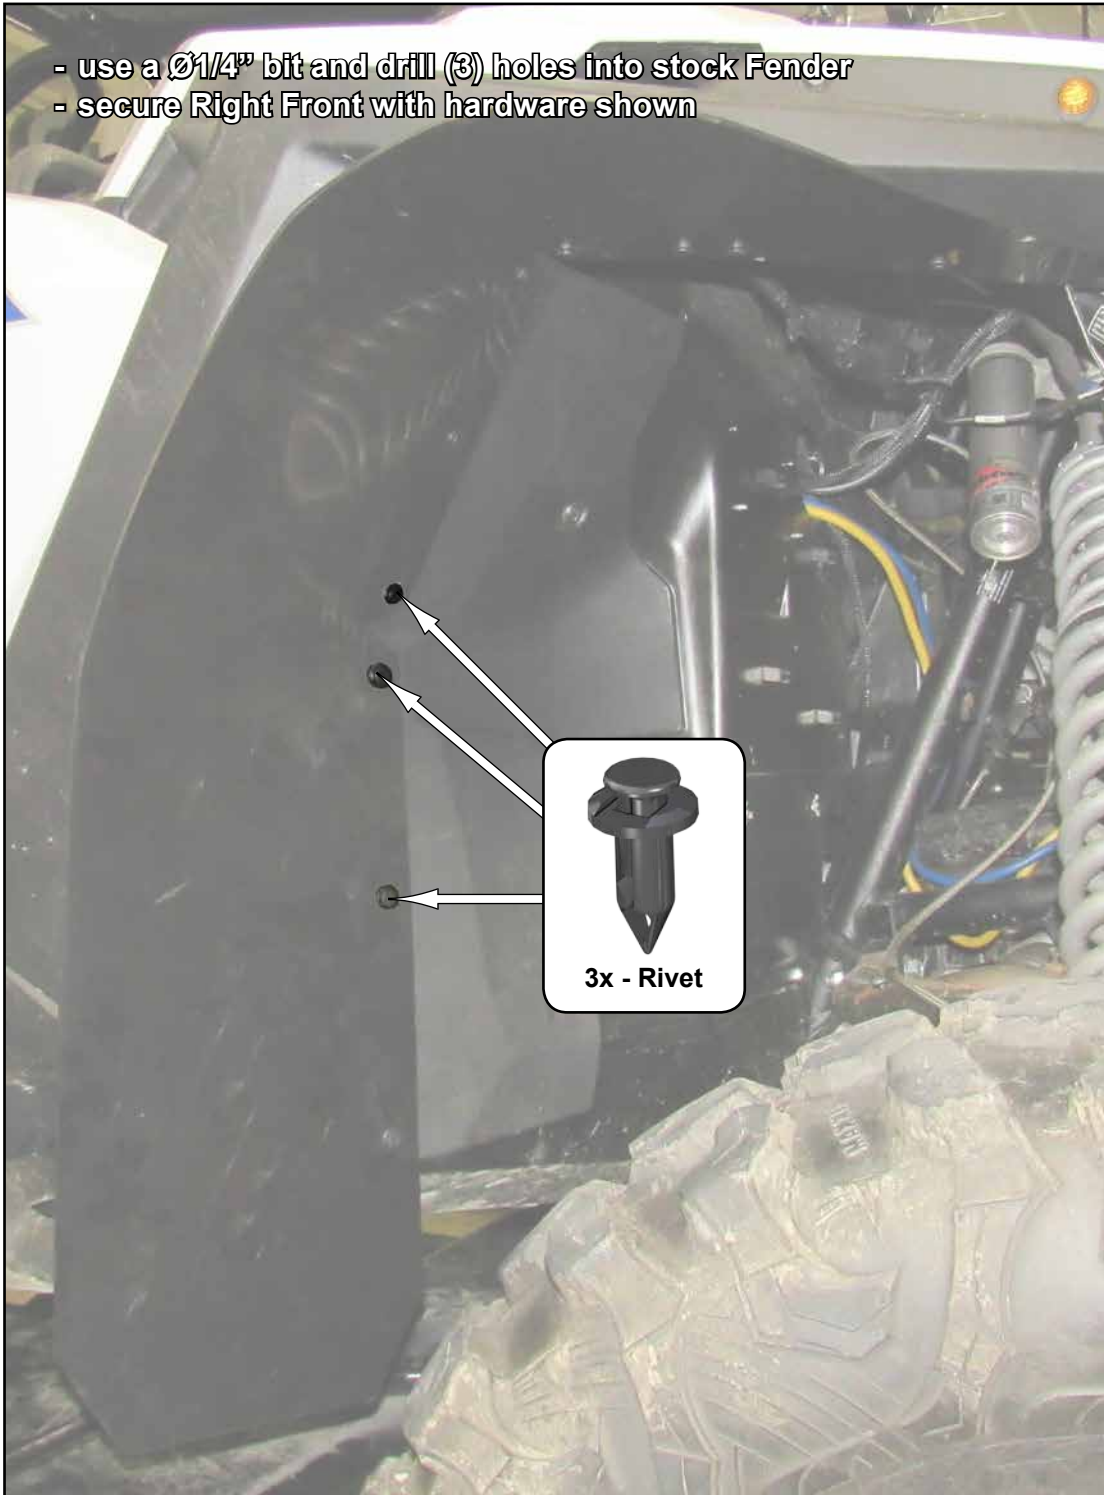

repeat steps for driver side installation