

## INSTALLATION INSTRUCTIONS

### PRODUCT: ALL LIGHTS ON™ FOR TOYOTA TUNDRA


FPE-2022-81  
November 2022

**INSTRUCTIONS FOR:** 2007-2017 Toyota Tundra with factory installed fog lamps


**ESTIMATED INSTALLATION TIME:** 5 minutes

**STEP 1:** OPEN the vehicle hood and locate the relay / fuse block on the right side of the engine, behind the battery. REMOVE the cover panel.

**STEP 2:** Carefully REMOVE the relays labeled: FOG and DIM. It may be necessary to use a pair of pliers to remove the relays.

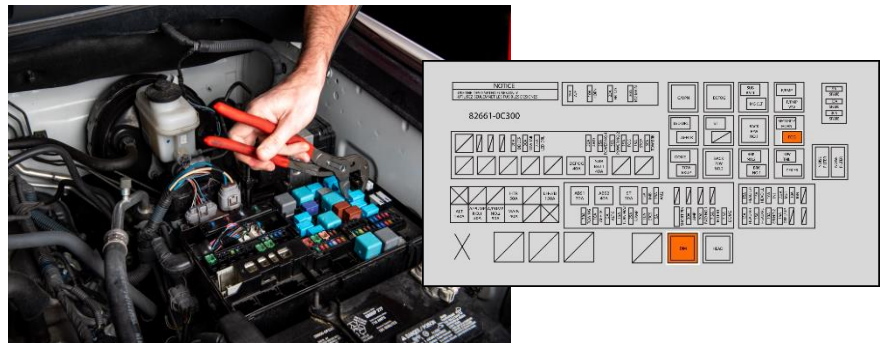

**STEP 3:** Insert the two relays that were removed through the All Lights On boards with the wire connection facing towards the top of the relay. The board will make a firm connection with the relay.

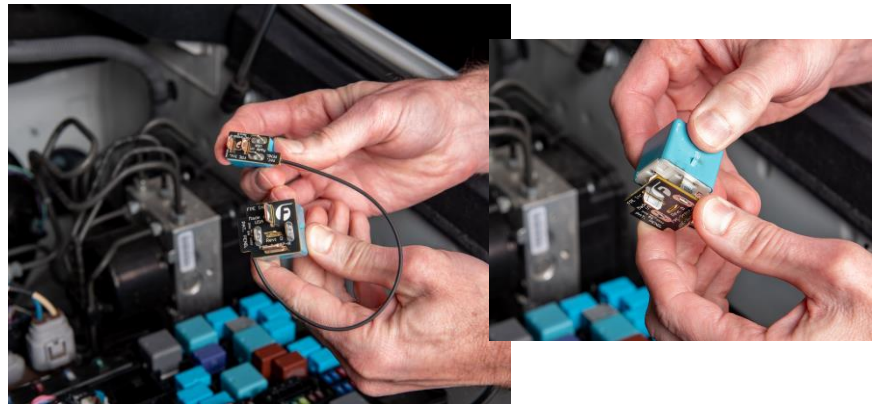

**STEP 4:** Reinstall the two relays back into their original location. Route the connecting wire along the side of the relay box. Install the relay panel cover.

#### Operation:

MY2007-2013 (Separate high and low bulbs): High beams, driving lights, and fog lights all on when high beams are enabled.

MY2014-2017 (Dual filament bulbs): High beams and fog lights on when high beams are enabled.

