


INSTALLATION INSTRUCTIONS

Vented Windshield Kit: WS-CF-ZF800T-V

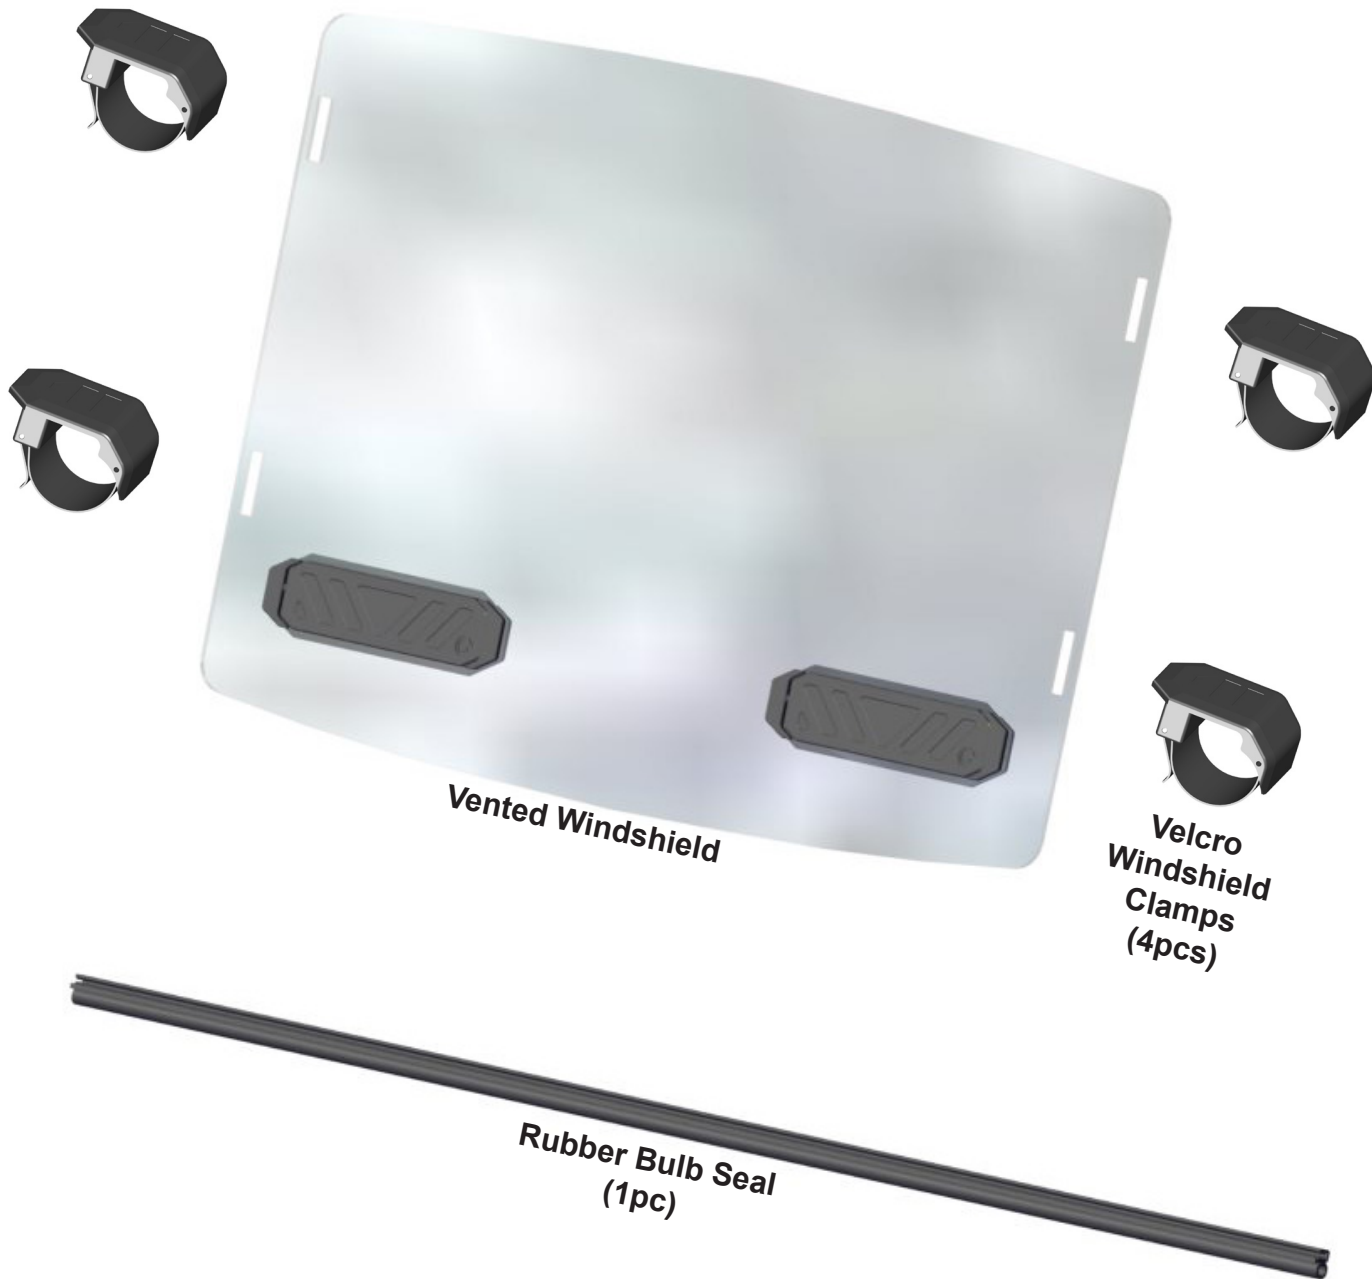

What You'll Be Doing

- ① First you will install the rubber bulb seal all around the shield.
- ② Install the Velcro Windshield Straps.
- ③ Place the shield into the windshield frame.
- ④ Reposition if needed and snug down tight.

- Please look through and read these instructions BEFORE starting so you understand what processes you'll be doing, and possible extra tools you may need.
 - Do Not discard product packaging until installation is complete and functioning properly.
-

1. First, you will need to install the Rubber Bulb Seal all the way around your shield as shown in **Fig.1**. This will be the only thing you will need to install on the shield as the vents comes pre-installed for you.



2. After you've installed the seal, now place the windshield into the frame as shown in **Fig.2**. **Fig.3** shows it in place before strapping down.



Fig.2



Fig.3

3. Once the windshield is in place, you will need to secure it to the frame posts using the Velcro Clamps provided in your kit. These simply are inserted into the slots precut into the windshield, and then wrapped and secured to the frame with the Velcro from the Clamps. **Fig.4** shows to insert the Clamps.

NOTE: To make it easier to install the Clamps into the slots, push the Rubber Seal outward to expose the outer edge of the slot so the clamp can slide down into the slot. Then you can push the seal back in place after the Clamp is inserted. See **Fig.5** for this visual. Without doing this may hinder the Clamp from inserting, making it a little more aggravating.



Fig.4

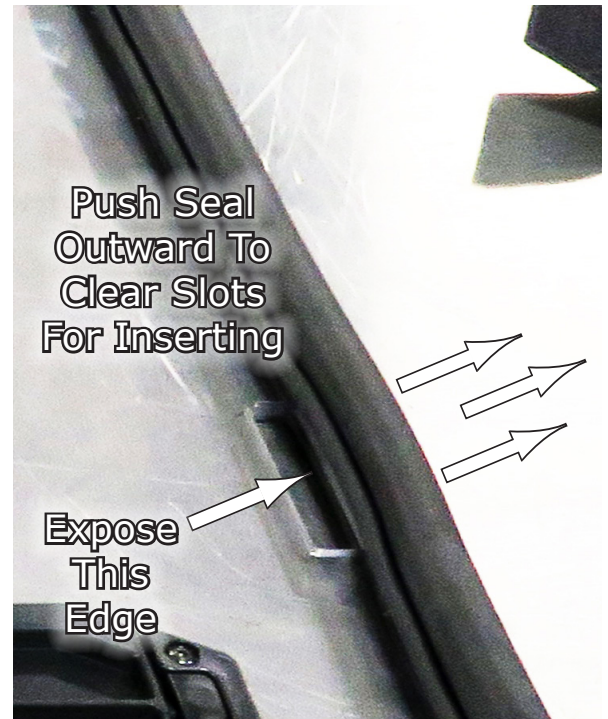


Fig.5

4. After the Clamp is inserted, secure it onto the window frame by wrapping the Velcro around the frame and up under to the other side of the Clamp, and feed the Velcro up over the Clamp Pin and back down to pull and tighten the Velcro wrapping it together. **Fig's 6a-6c** show this process and the Clamps in the finished secured position.



Fig.6a



Fig.6b



Fig.6c

Loosen clamps to reposition the windshield and re-tighten clamps to secure as needed.



If you have any problems/questions on this kit, contact us by email at Superatv.com.

*Thank You
For Choosing*

Need help with your installation?

 sales@superatv.com	 www.superatv.com
 1-855-743-3427	 8:00am - 9:00pm EST M-Th 8:00am - 7:00pm EST Friday 9:00am - 2:00pm EST Saturday



 **Like SuperATV on Facebook to keep up to date on new products!**