


INSTALLATION INSTRUCTIONS

Tinted Poly Roof: ROOF-P-RZRX-001

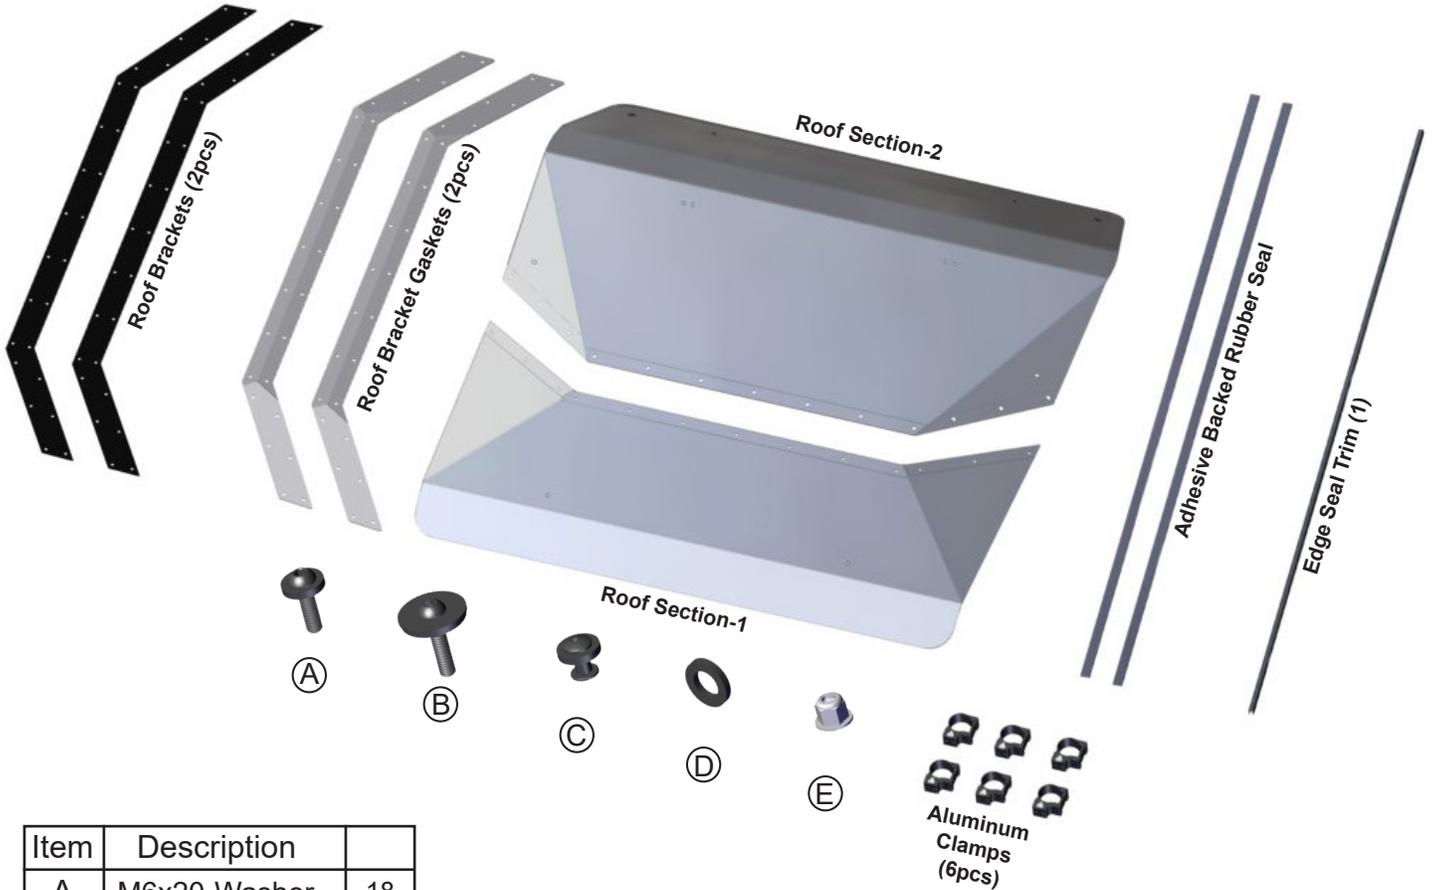

Item	Description	
A	M6x20-Washer	18
B	M6x25-Washer	2
C	M5 Barrel Bolt	30
D	Zinc Spacer	2
E	M6X1 Nylock	22

What You'll Be Doing

-  First, you will apply adhesive seals to metal panel brackets.

 Install the 2 brackets to the 2 roof panels together with supplied hardware.

 Installing the front rubber trim piece to the front roof panel.

 Install the foam/rubber adhesive seal to the vehicle roofing frame.
-  Cut spaces to install the roof clamps.

 Install the Roof Clamps.

 Set roof on top and install screws to clamps and frame.

 Adjust roof and tighten all screws and clamps.

1. First, you will need to assemble a couple things before installing the roof. Find the two Adhesive Rubber Seals. They are shaped identical to the two metal Roof Brackets that hold the two pieces of the roof together. See **Fig.1a**.



2. Then, find the two metal Roof Brackets and orient them opposite of each other. See **Fig.1b**. These brackets will be used to sandwich the two roof sections together, one bracket on top and the other up underneath.

Fig.1a

3. Then, peel one side of the paper off one of the Rubber seals and apply it to one of the Roof Brackets. And then peel and stick the other Rubber Seal to the other Roof Bracket, except make sure this bracket is mirrored opposite of the first one. **Fig.1b** shows both brackets laying opposite of each other and with the adhesive rubber seals already applied to one side of them.

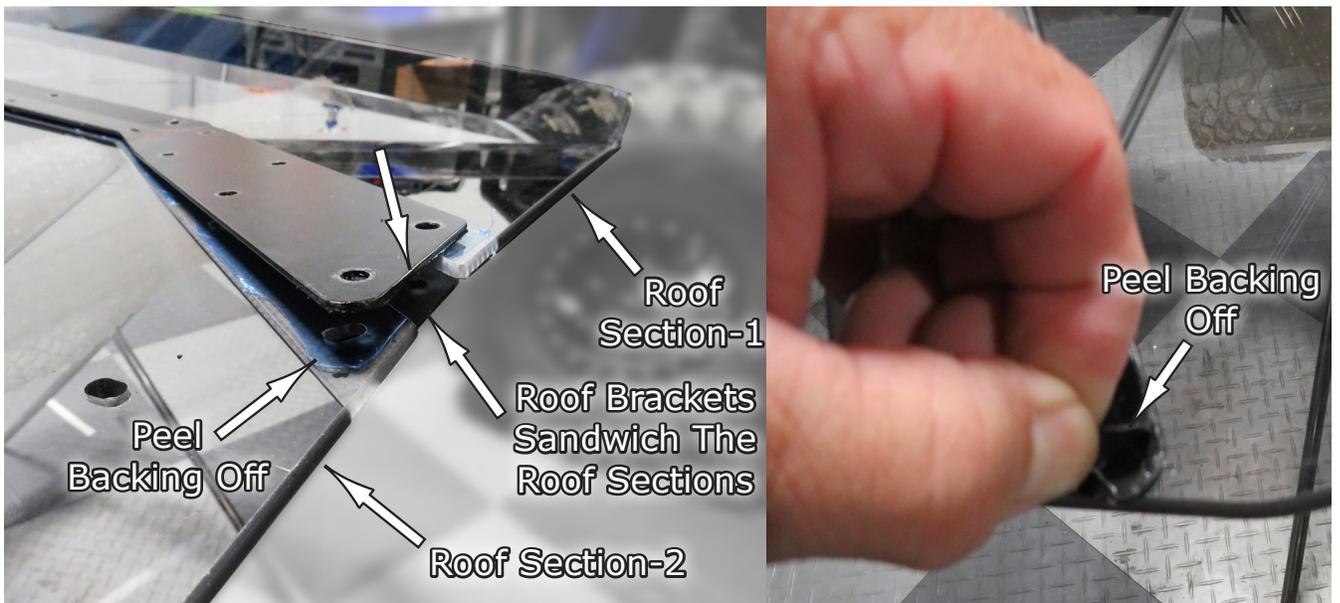


Fig.2

4. Now locate the two roof sections, and with using the two Roof Brackets, Sandwich the two Roof Sections with the Brackets as shown in **Fig.2**. Be sure to peel any adhesive backing from the sections and brackets off before installing the Roof Brackets so that the brackets will stick to the panels, also shown in **Fig.2**.

5. Then assemble the roof together by using the Barrel Bolts provided in your kit (**item D**). **Fig.3a** shows installing the Barrel Bolts with the “under side” or “inside of vehicle” side facing upward. Place the larger half of the Barrel Bolt (the one with the large cup washer) on the outside or top side of the roof, thru the holes in the brackets and roof panels, then install the other half (screw) into it. Snug but don’t tighten down until all 26 bolts are installed into both sections. Once all bolts are installed, then tighten them all securely.

Fig.3b shows the bolts installed looking from the “Top side” of the roof as it looks like finished.

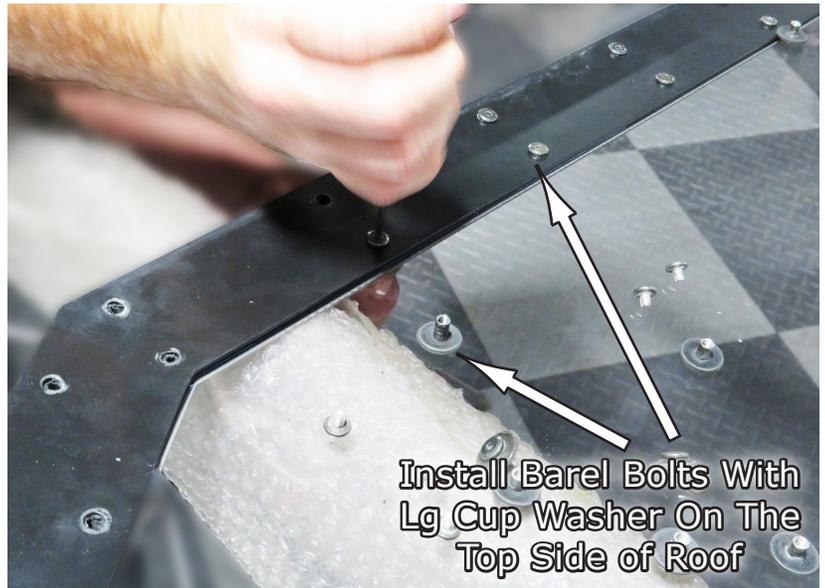


Fig.3a



Fig.3b

6. **Fig.4** shows the two roof sections assembled with Brackets and Barrell Bolts.



Fig.4

7. Next, install the rubber Edge Seal all along the lower front edge of the roof as shown in **Fig.5a & 5b**.



Fig.5a



Fig.5b



8. Before installing the roof onto your machine, you will need to install the clamps that hold it in place next. To do this, first install the adhesive backed rubber seal on top of frame where roof will sit as shown in **Fig.6**. Set the assembled roof on top the of the vehicle where it would be installed and mark on the foam stripping you applied to the top of the bars where the clamps would go according to the mounting holes in the roof. Then cut the foam leaving spaces for the clamps to fit tightly around the bars. See **Fig.6**.



Fig.6

9. Next, install the clamps in the spaces you cut in the foam, but leave them a little loose so you can make final adjustments once all the clamps are installed and the top is placed on top. See **Fig.7**.

10. **Fig.8** shows the clamp using the bolt covers and how it is used in the clamp.



Fig.7

11. Now place the roof on the machine and install the roof to the clamps using the **M6x20** screws with sealing washers, **item B**. See **Fig.9a**.

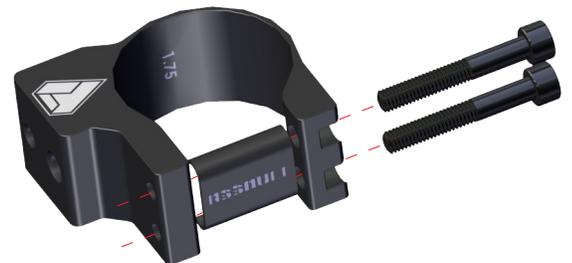


Fig.8

NOTE: The two back corner bolts will use Spacers, **item E**. These bolts are screwed into the roof frame, not a clamp. See **Fig.9b & 10**.

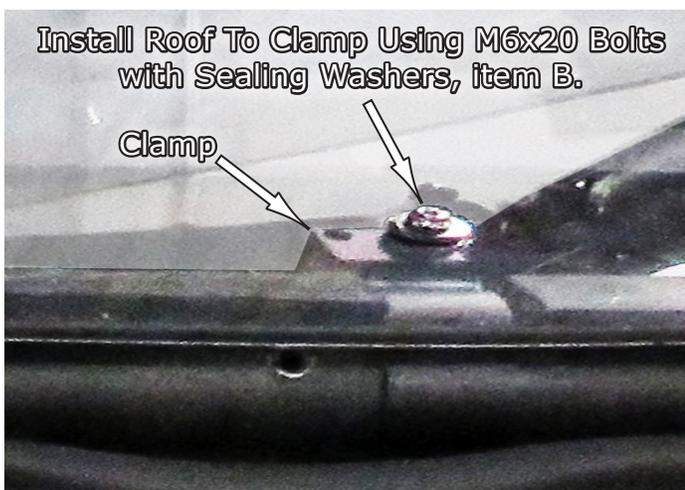


Fig.9a



Fig.9b

12. When installing the roof panels to the clamps and frame. Make sure the roof is where you want it by situating it to your desired location, and then tighten down all screws and clamps that were previously left loose for this last step. After snugging them all down, you are ready to go.

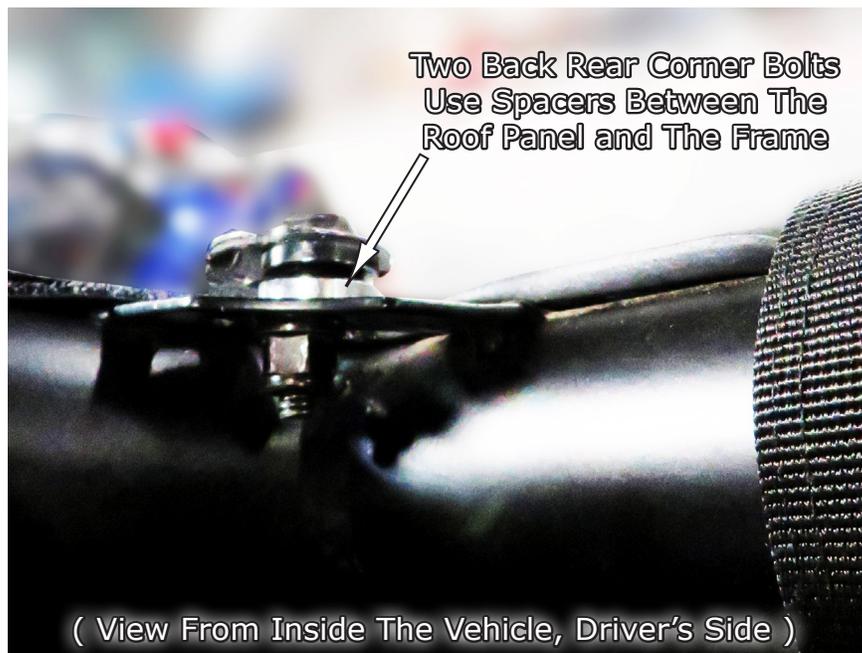


Fig.10

Liability Statement

SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warranted if item was not installed properly, misused, or modified.

Installing, adding, modifying, or fabricating any factory or aftermarket product to your ATV/UTV may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of certain products on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of the product. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you.

The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws and ordinances when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.

If you have any problems/questions on this kit, contact us by email at Superatv.com.

*Thank You
For Choosing*

Need help with your installation?

 sales@superatv.com
 www.superatv.com

 1-855-743-3427
 8:00am - 9:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday



Like SuperATV on Facebook to keep up to date on new products!