



***DOWNLOAD COLOR
INSTALL MANUALS AT
www.bddiesel.com***



GM Sway Bar End Links

**1" Longer Upgrade Sway Bar End Links for 2001-2019 GM
HD Trucks**

1032126

2001-2019 GM Sway Bar End Link

Longer End links are often required with Heavy Duty Tie Rods, or in leveled applications where clearance is needed

1032126 Kit Contents



Related Parts & Kits

BD Diesel also manufactures kits and replacement parts related to GM Steering assemblies. The following kits and parts are also available for individual purchase.

Kit 1032150	Kit 1032125	Kit 1032124
		
2001-10 GM Steering Upgrade Kit	2001-10 GM HD Tie Rods	2011-19 GM HD Tie Rods

Introduction

2001-2019 GM HD series trucks often have a leveling kit and/or upgraded heavy duty tie rods installed. These modifications often leave minimal clearance between the tie rods and sway bar. By installing the BD Diesel Sway Bar end links, clearance can be returned to these parts. The Sway Bar End Links also feature heavy duty bushing for long service life.

Installation




Secure the vehicle, and ensure it cannot move during install process.

End Link Removal

Remove sway bar end link by removing upper nut (arrow shown). Slide out bolt from below lower control arm.

Caution: Bushings and spacer tube will become loose and fall when bolt is removed.

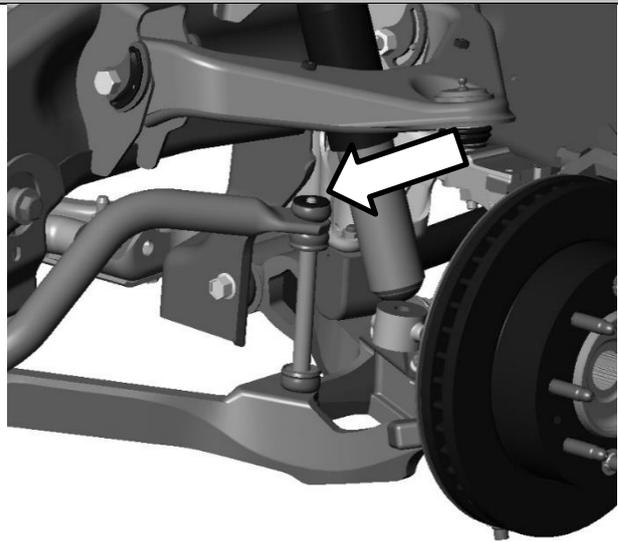


Repeat the above steps for removing the sway bar end link on the opposite side of the vehicle.

End Link Install

Install sway bar end link by installing a bushing onto the bolt, and inserting into the lower control arm from below. Stack bushings and spacer tube as shown, finishing with the nut on top.

Torque Spec: 17 ft-lbs

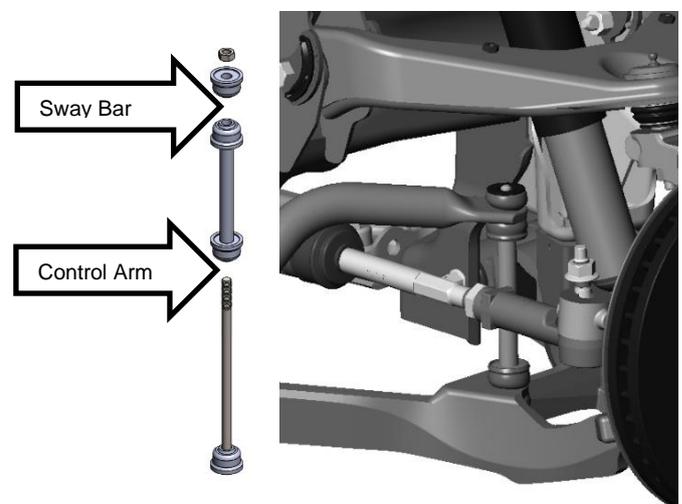

Repeat the above steps for installing the other sway bar end link on the opposite side of the vehicle.



Ensure all nuts are tightened to specification, and grease all joints in the steering assembly.