Do not discard packaging until product has been successfully installed.

**2 x Ball and Socket**

**2 x Tie Rod Shaft**

**2 x Boot**

**2 x Tie Rod End and Jam Nut**

**4 x Zip Tie**

**Hardware Kit**

**Read instructions and view illustrations before beginning.**

*Thank You For Choosing*

![SuperATV.com]
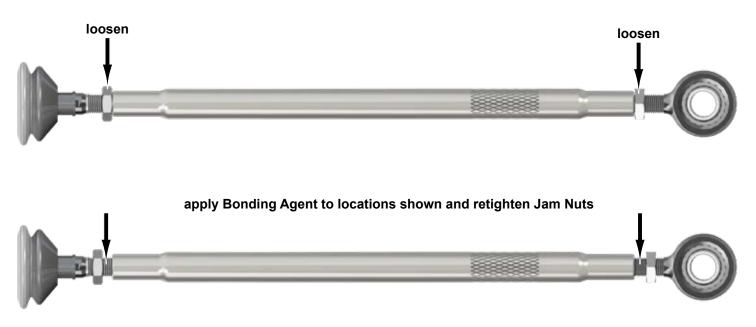
IN-TRRA-P-RANXD-XPD 8/30/2024

- Install Ball and Sockets to Rack and Pinion. Use provided Bonding Adhesive.
- Install Boots to Rack and Pinion and secure with provided Zip Ties. Use a lubricant to ease installation.
- Secure Boots to Ball and Sockets with provided Zip Ties.
- Install Jam Nuts to Ball and Sockets.
- Install Tie Rod Shafts to Ball and Sockets.
- Install Tie Rod Ends and Jam Nuts to Tie Rod Shafts.
- Secure Tie Rod Ends to same location as stock on Spindles with hardware shown.

M12 Nut

Misalignment Bushing

Tie Rod End

Stud

install Cotter Pin after Nuts have been installed

Washer

M14 Nut

Ball and Socket

*To Rack and Pinion*

Jam Nut

Tie Rod Shaft

Jam Nut

*To Spindle*

Tie Rod End

- Set toe of vehicle.
- Loosen Jam Nuts and apply Bonding Agent to Tie Rod End threads and Ball and Socket threads.

**loosen**                                                                                      **loosen**



**apply Bonding Agent to locations shown and retighten Jam Nuts**



- After initial ride check to see that hardware remained tight.