

2017-2019 Ford F-250/ F-350/ F-450 Super Duty PROJECTOR HEADLIGHTS SKU 111388/ 111389

Modified on: Mon, Jul 17, 2023 at 1:15 PM

2017-2019 Ford F-250/ F-350/ F-450 Super Duty PROJECTOR HEADLIGHTS

2017-2019 Ford F250/ F350/ F450 Super Duty PROJECTOR HEADLIGHTS

SKU# 111388, SKU# 111389



5150 Eucalyptus Ave. Unit A. Chino, CA 91710
(888) 360-3696 • techsupport@anzousa.com • ANZOUSA.COM

PRODUCT DESCRIPTION: Headlight
APPLICATION: 2017-2019 Ford Superduty




INSTALLATION GUIDE

READ COMPLETE INSTRUCTIONS BEFORE INSTALLATION
Improper installation may void warranty.



TOOLS NEEDED: 10mm Socket, Flat head screwdriver

STEP 1

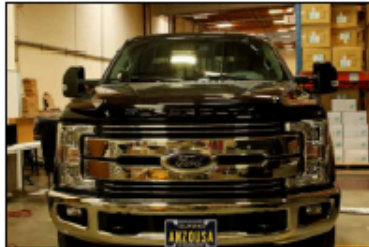

Stock 2017 Ford Superduty Headlights

STEP 2



Open hood and disconnect negative battery terminal

STEP 3



Remove 13 body panel clips from radiator shroud

STEP 4



Remove radiator shroud and set aside

STEP 5



Remove eight 8mm bolts from top of radiator grill

STEP 6



Grab center outside of grill and pull forward to detach grill from headlight on both sides.

STEP 7



Tilt top of grill forward to reveal bottom grill clips. Use flat head screwdriver to push clip down.

STEP 8



Detach 4 clips remove grill and set aside


STEP 9



Remove two 10mm inner headlight bolts

AnzoUSA™ products are covered, by a limited one (1) year warranty, to be free of manufacturer's defects. However, certain AnzoUSA™ product categories have warranty policies which differ from this standard, please contact your representative for detailed category information. Damage due to improper installation or road hazards is not covered. Seller and manufacturers' only obligations shall be to replace the product proven to be defective. Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising out of the use of or the inability to use the product. Before using, user shall determine the suitability of the product for its intended use, and user assumes all risk and liability whatsoever in connection therewith. © 2008 AnzoUSA™. All rights reserved.

STEP 10

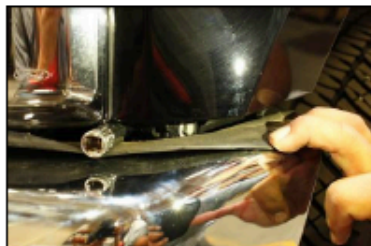

Remove lower outer 10mm fender headlight bolt behind rubber bumper molding

STEP 11



Remove top 10mm headlight bolt

STEP 12



Slide headlight forward then up to remove headlight. Disconnect all connections from factory headlight

STEP 13



Connect factory connections to new Anzo USA headlight

STEP 14




Reverse steps 9-12 to install new Anzo USA headlight

STEP 15



Repeat steps 9-14 for opposite side headlight. Reverse steps 2-8 to install grill and shroud.

STEP 16

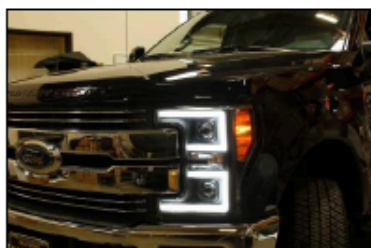

Check all functions of lights before operating vehicle.

AnzoUSA™ products are covered, by a limited one (1) year warranty, to be free of manufacturer's defects. However, certain AnzoUSA™ product categories have warranty policies which differ from this standard, please contact your representative for detailed category information. Damage due to improper installation or road hazards is not covered. Seller and manufacturers' only obligations shall be to replace the product proven to be defective. Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising out of the use of or the inability to use the product. Before using, user shall determine the suitability of the product for its intended use, and user assumes all risk and liability whatsoever in connection therewith. © 2008 AnzoUSA™. All rights reserved.