


# INSTALLATION INSTRUCTIONS

## Snorkel Kit: for Polaris Ranger® XP 1000

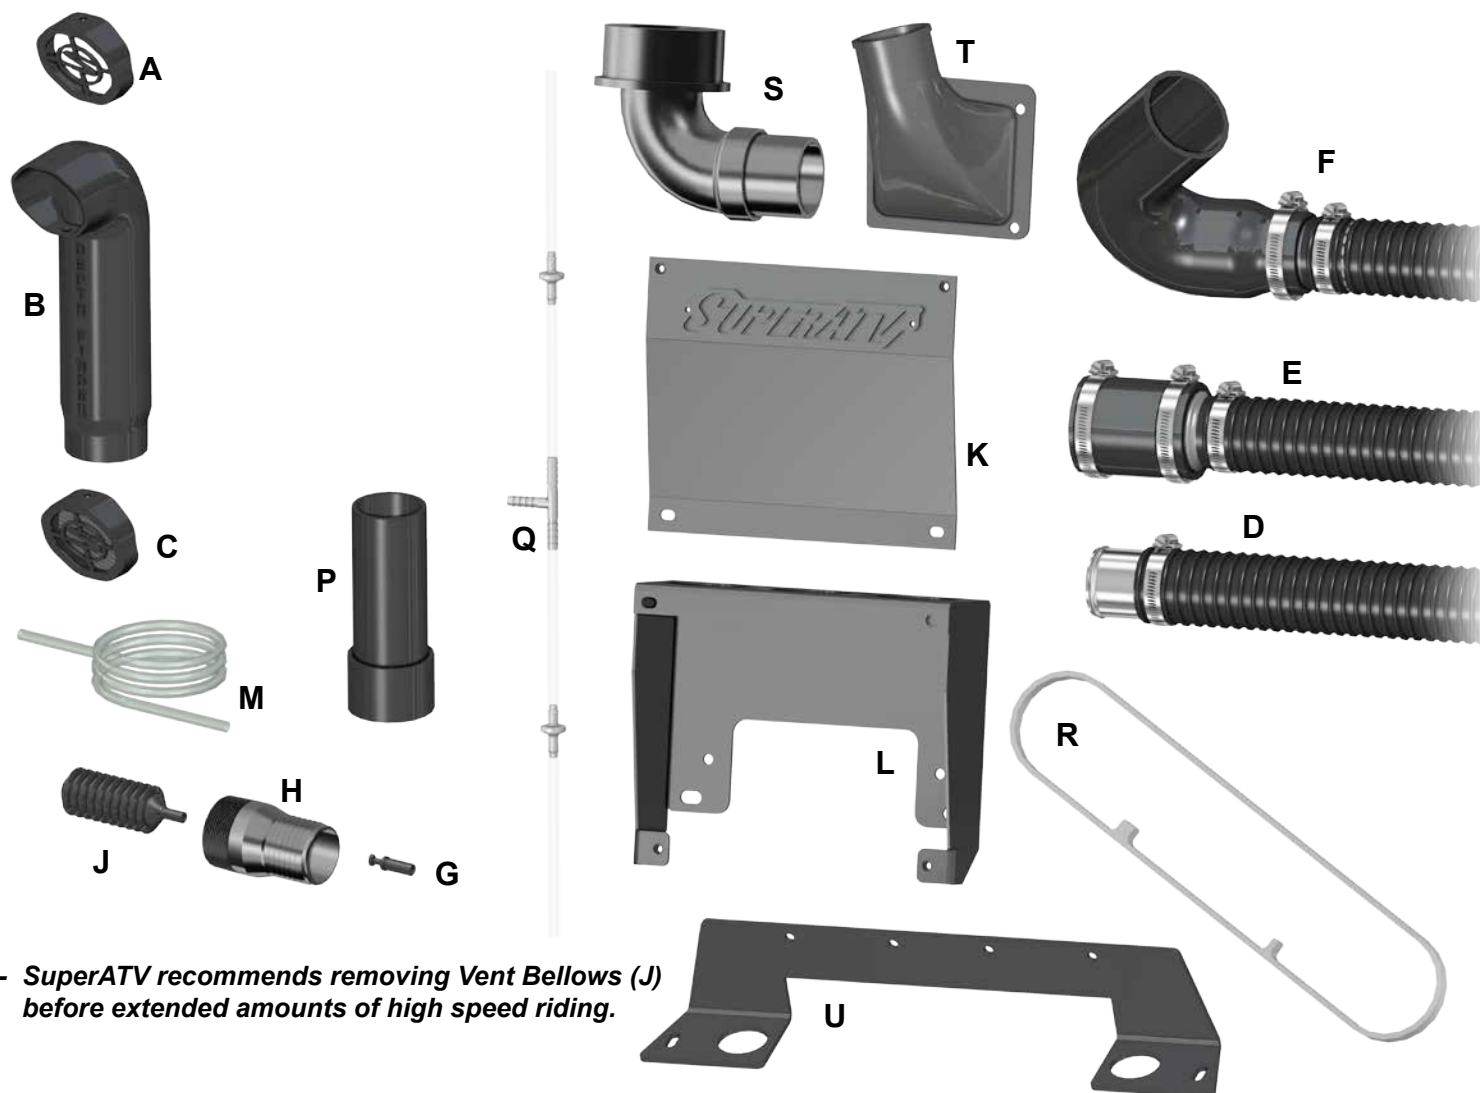

- SuperATV recommends removing Vent Bellows (J) before extended amounts of high speed riding.

Item	Description
A	Faceplate (no mesh)
B	Snorkle Riser x 3
C	Faceplate Assembly x 2
D	Belt Exhaust Snorkle
E	Belt Intake Snorkle
F	Airbox Snorkle
G	Plug x 2

Item	Description
H	Fitting x 3
J	Vent Bellow x 2
K	Cover
L	Bracket
M	Tubing
P	Riser Pipe Assembly x 3
Q	Gas Tank Vent Hose Assembly

Item	Description
R	Air Box Gasket
S	Belt Intake Adapter
T	Belt Snorkel Boot
U	Bed Support

(Kit Contents continue on following page)

### Need help with your installation?



sales@superatv.com



www.superatv.com



1-855-743-3427



8:00am - 8:00pm EST M-Th  
8:00am - 7:00pm EST Friday  
9:00am - 2:00pm EST Saturday

Read instructions and view illustrations before beginning.

Thank You  
For Choosing

**SUPERATV**.COM®

(Kit Contents continued)



**Clamp x 4**



**Straight Connector**



**Reducer**



**Locknut x 3**



**Grommet**



**90° Connector x 2**



**Wire-Tie x 12**

- disregard any remaining hardware
- use provided Wire Ties to secure Hoses and Tubing as needed
- Snorkels will fit as is. Installer may trim if desired.

#### **Liability Statement**

SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.


By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warranted if item was not installed properly, misused, or modified.


Installing, adding, modifying, or fabricating any factory or aftermarket product to your ATV/UTV may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of certain products on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of the product. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you.

The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws and ordinances when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.

- Place Bed Support (U) into position shown.
- Trace outline onto Bed.
- Follow outline and cut Bed.

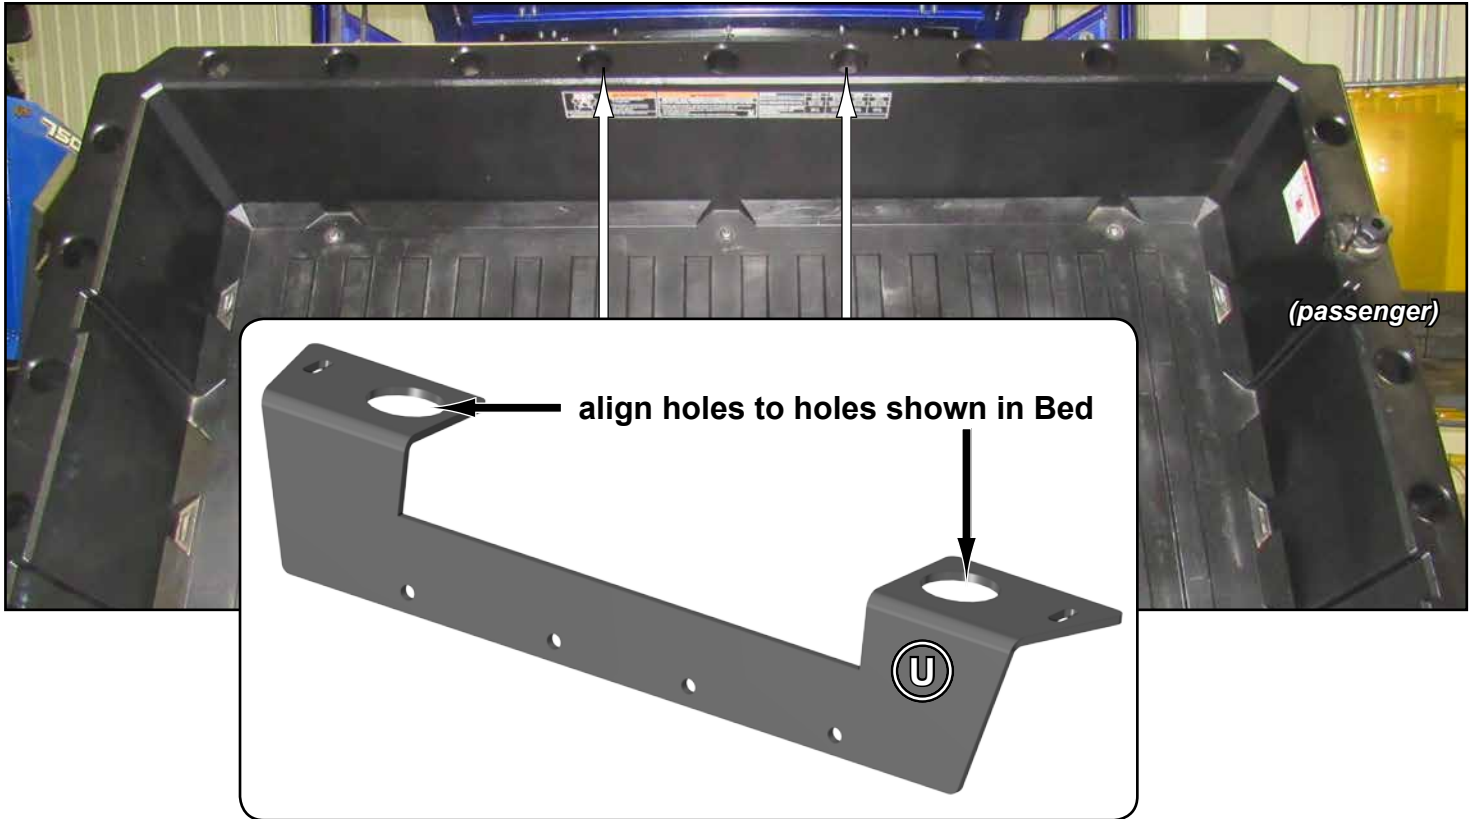

- Install Bed Support (U) with hardware shown.

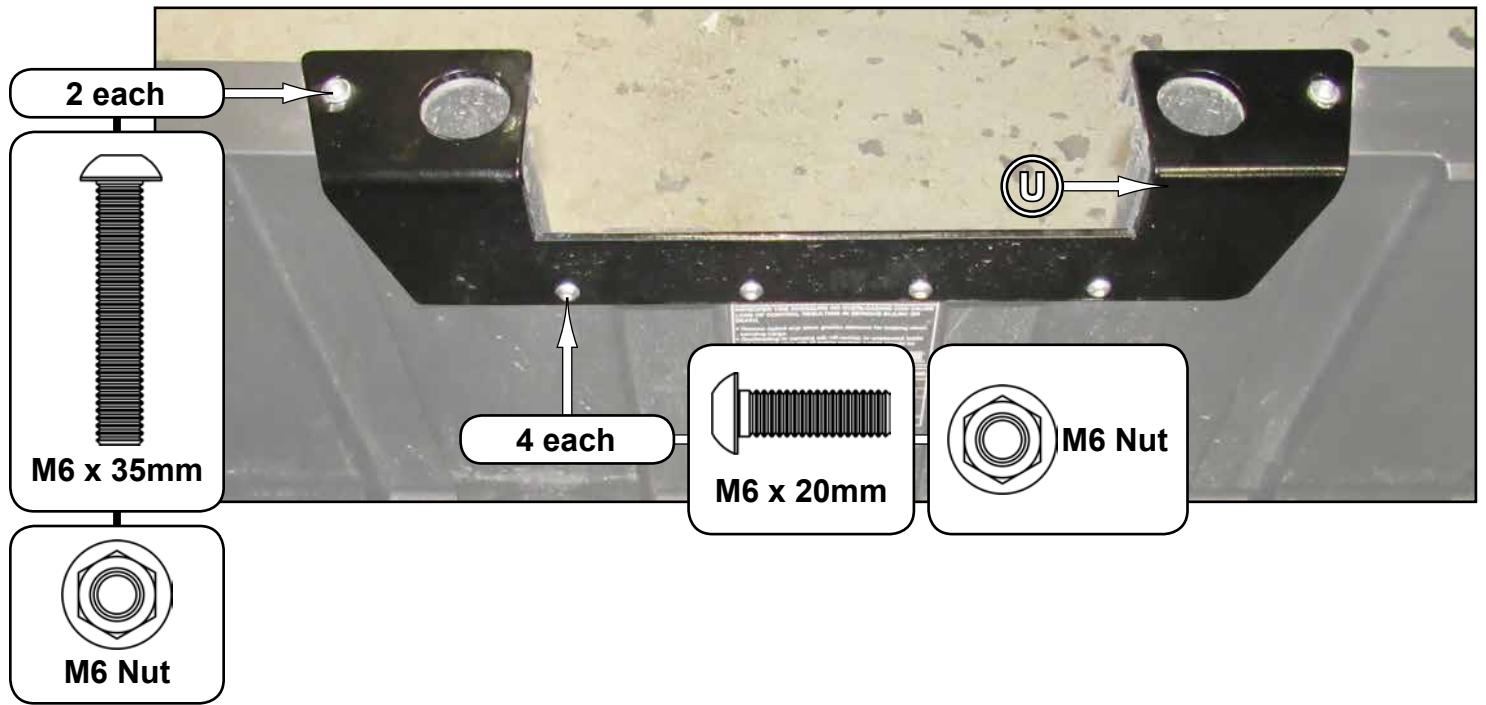




## Airbox Modifications

- Remove Air Box Lid Install Air Box Gasket (R).




- Remove stock Drain Plug from bottom of Air Box.
- Drill a Ø5/8" hole into bottom of Air Box.
- Install Grommet and surround with black RTV 100% Silicone.
- Insert Plug (G) into Grommet.

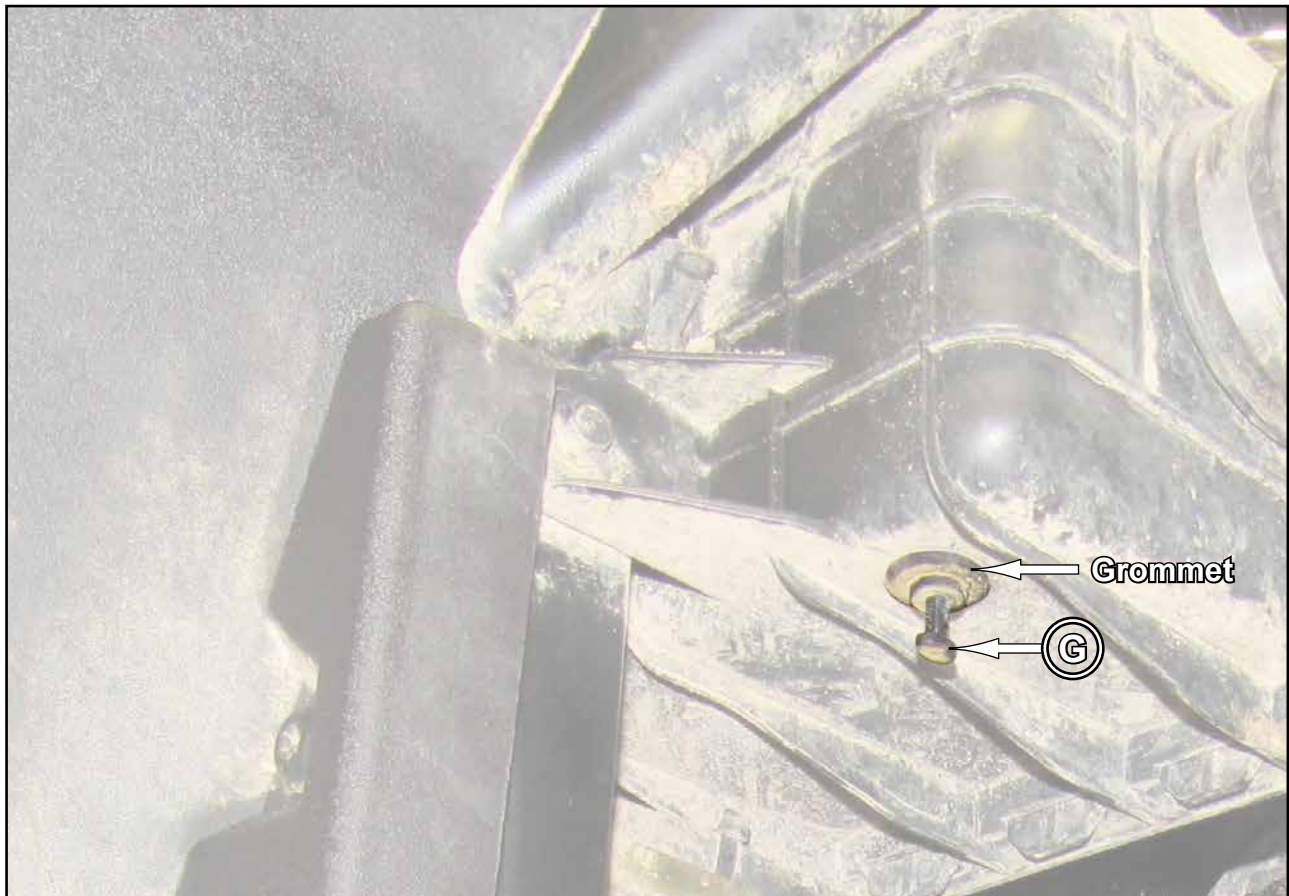

## Airbox Modifications continued

- Drill a Ø3/8" hole in top of Airbox.
- Install 90° Connector and surround with black RTV 100% Silicone.

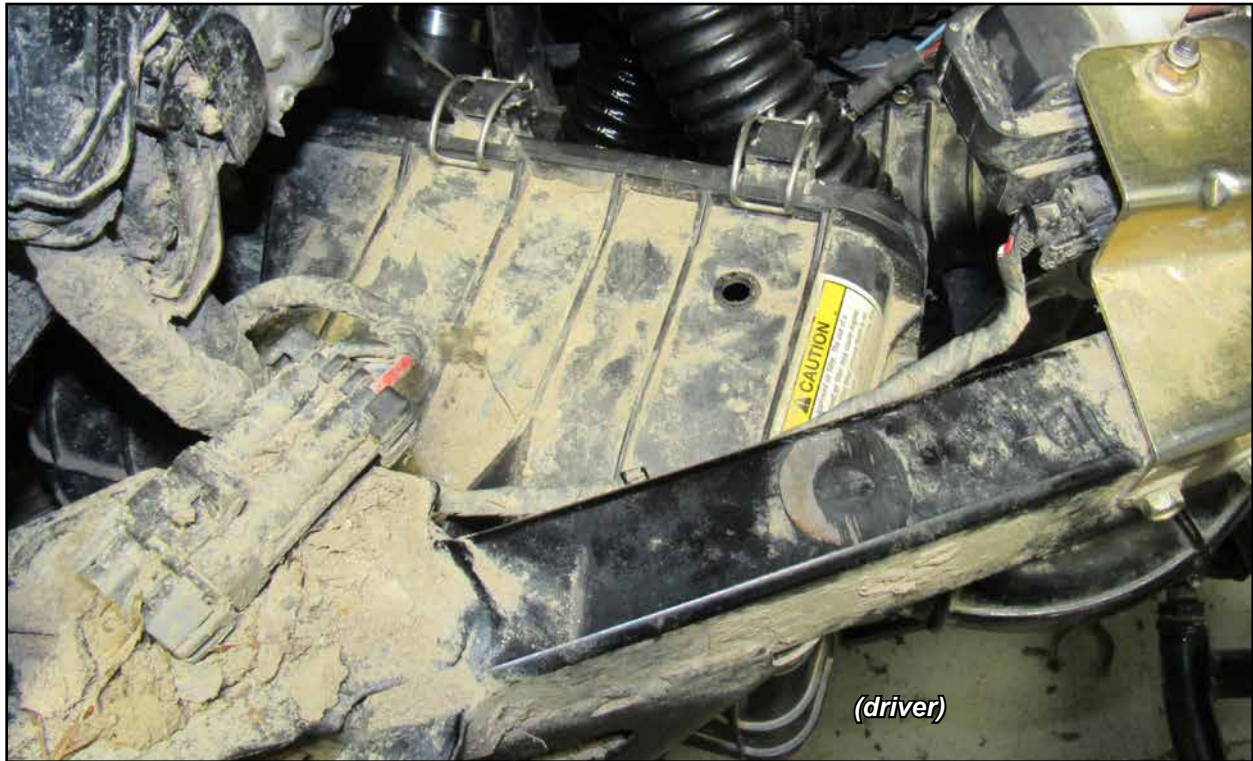





- Remove Driver Side Seat and locate Gas Tank Vent.



- Install Gas Tank Vent Hose Assembly (Q) to 90° Connector on Air Box.


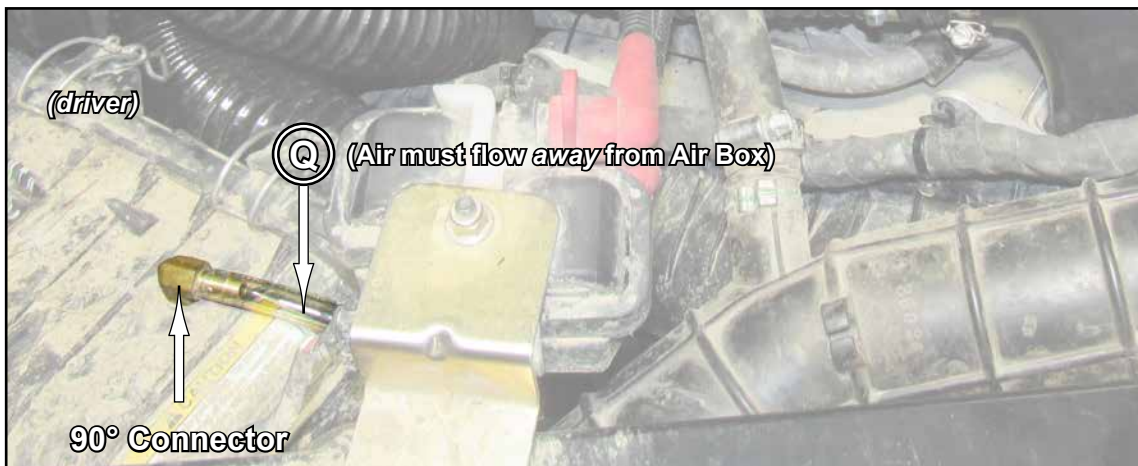


- Connect stock Gas Tank Vent to Gas Tank Vent Hose Assembly (Q).

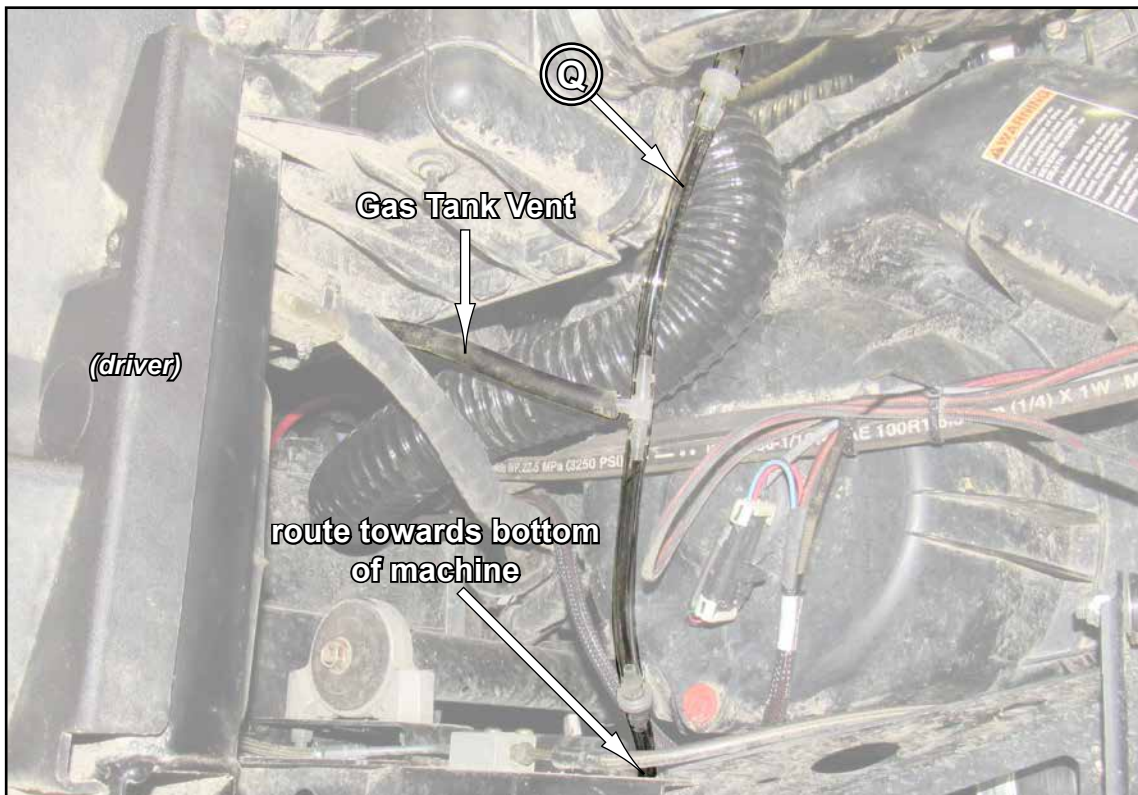



## Hose disconnections

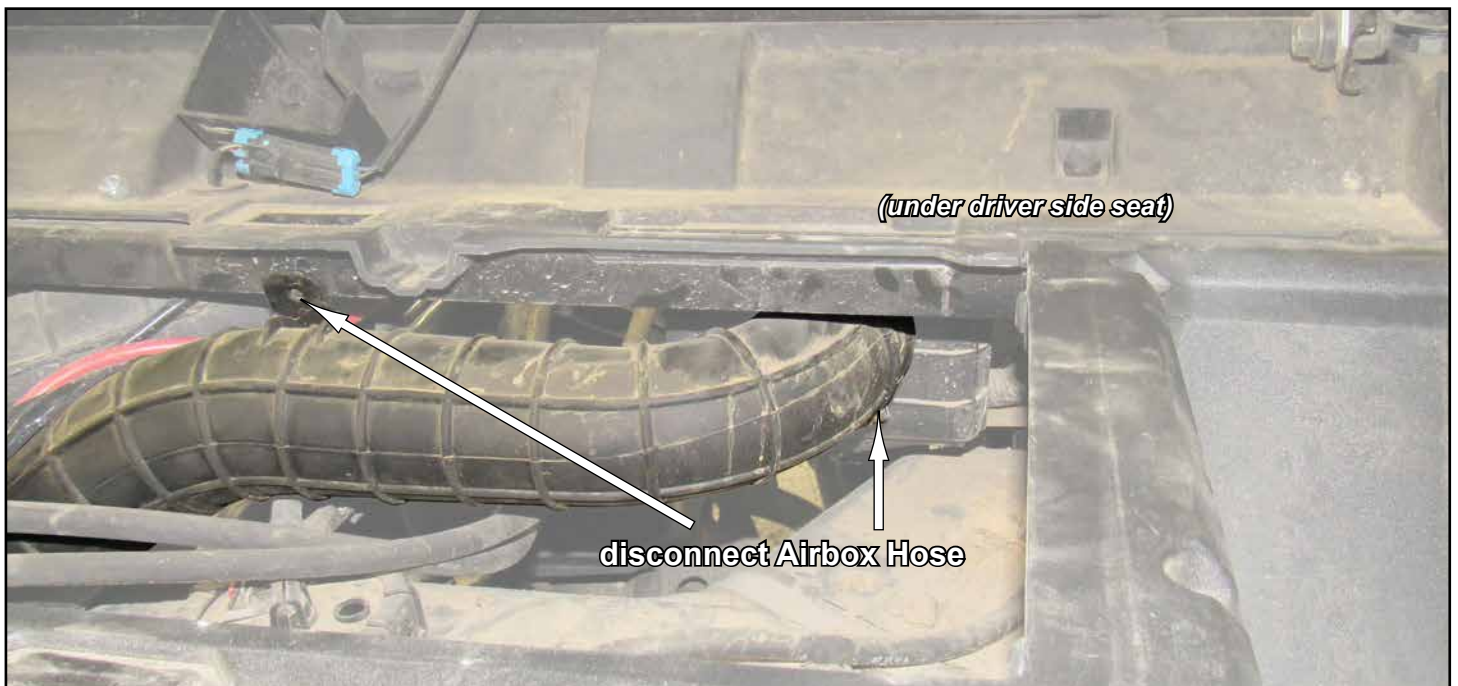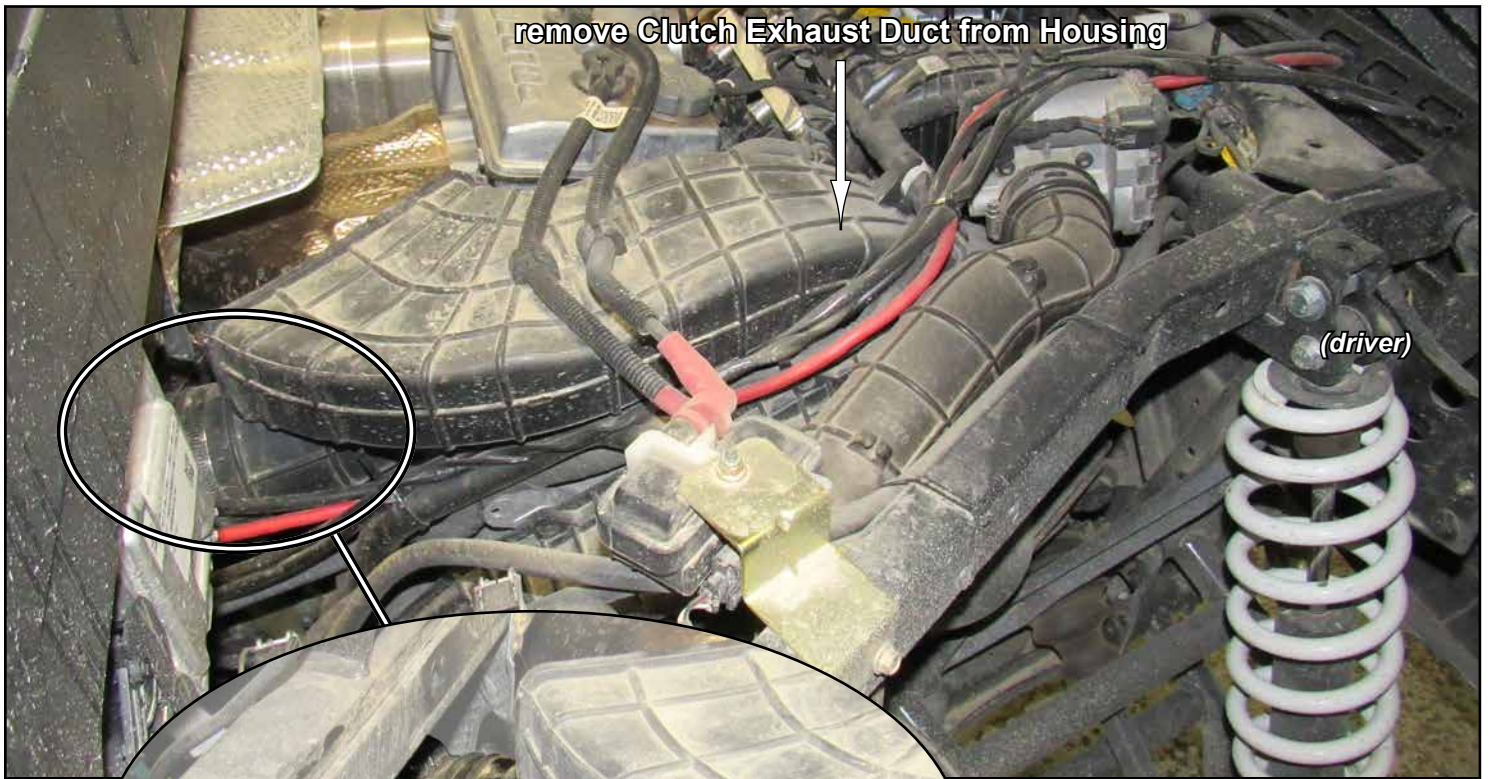

**Stock Airbox and Clutch Inlet Hoses do not need to be removed from machine. Installer may completely remove hoses or secure away from new components.**







## Bracket (L) nstallation

*vehicles without Rear Windshield see following page*

install Bracket (L) with hardware shown; tighten completely

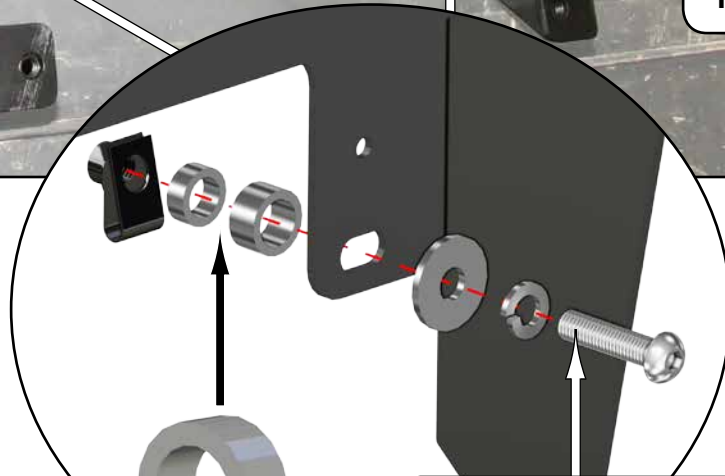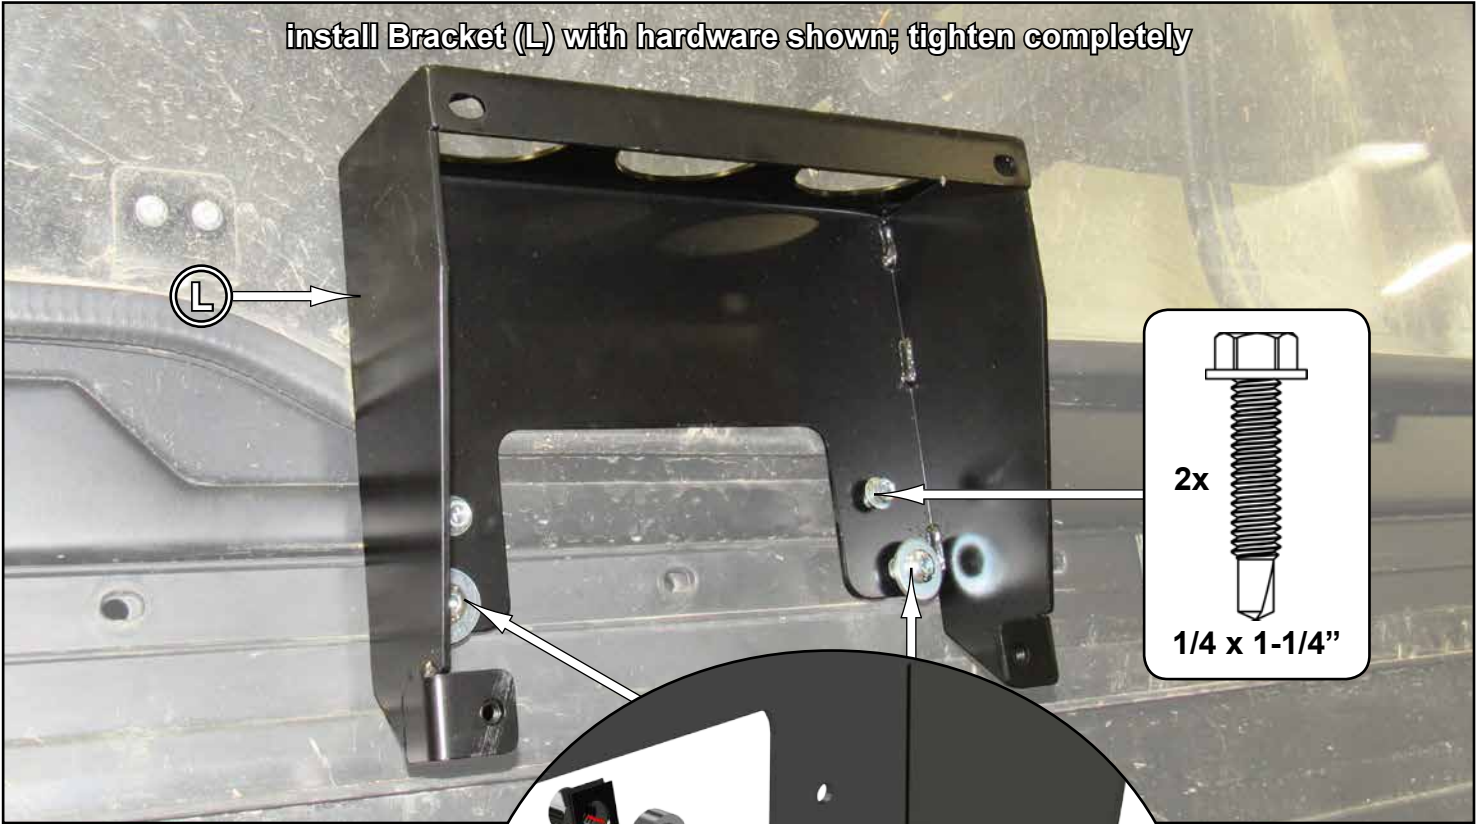


Small Spacer

+




Large Spacer

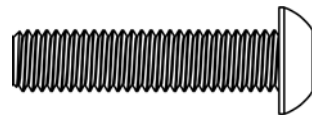

M8 x 35mm



M8 Lock Washer

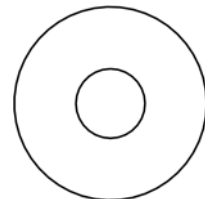


M8 Fender Washer



## Bracket (L) installation with Rear Windshield


install Bracket (L) with hardware shown; tighten completely

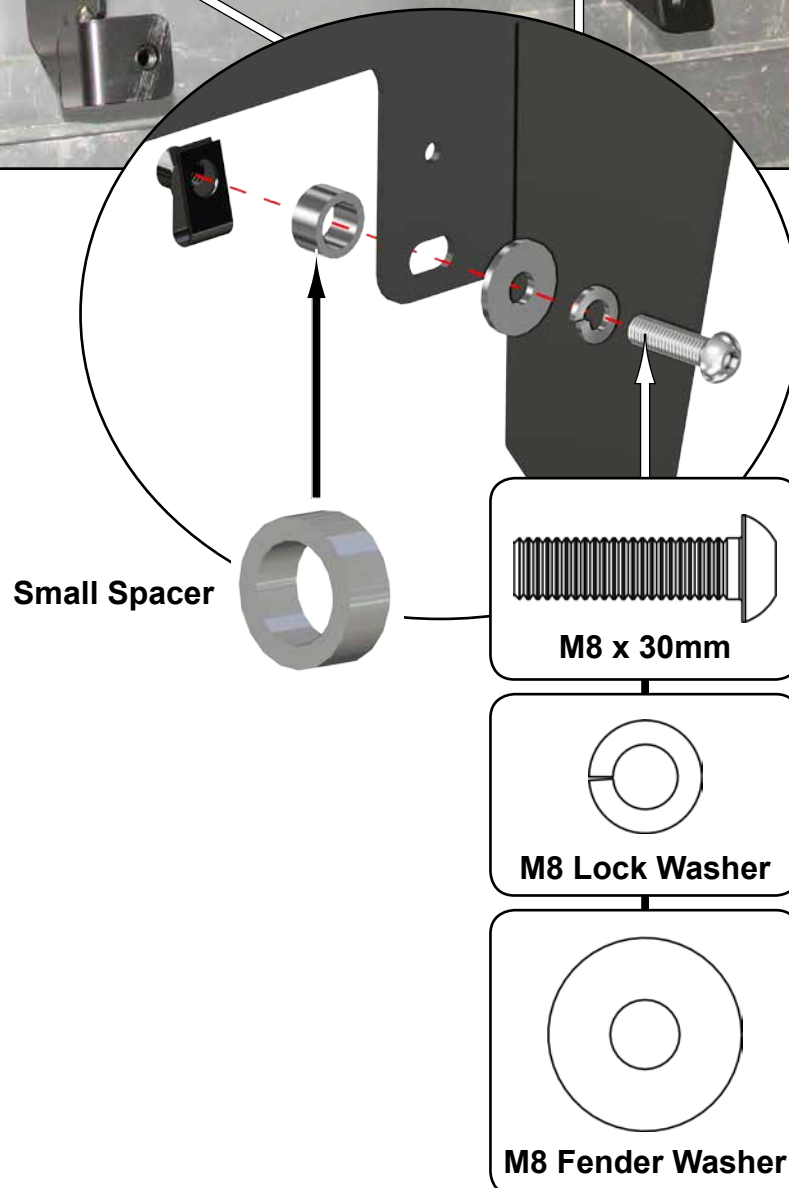




## Riser Pipes (P)


- install Locknut to bottom of threads on Fitting (H)

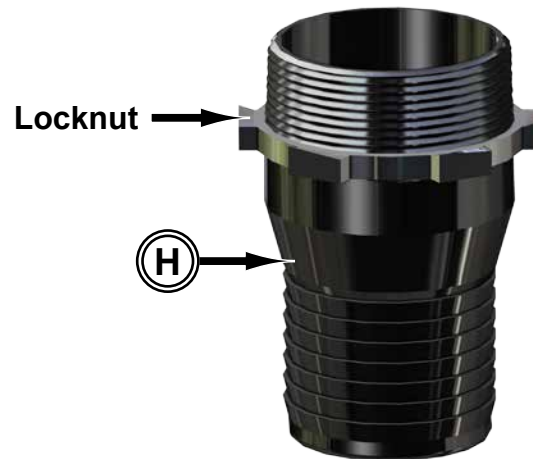

- install Riser Pipe (P) and Fitting (H) to Bracket (L)
- tighten components completely

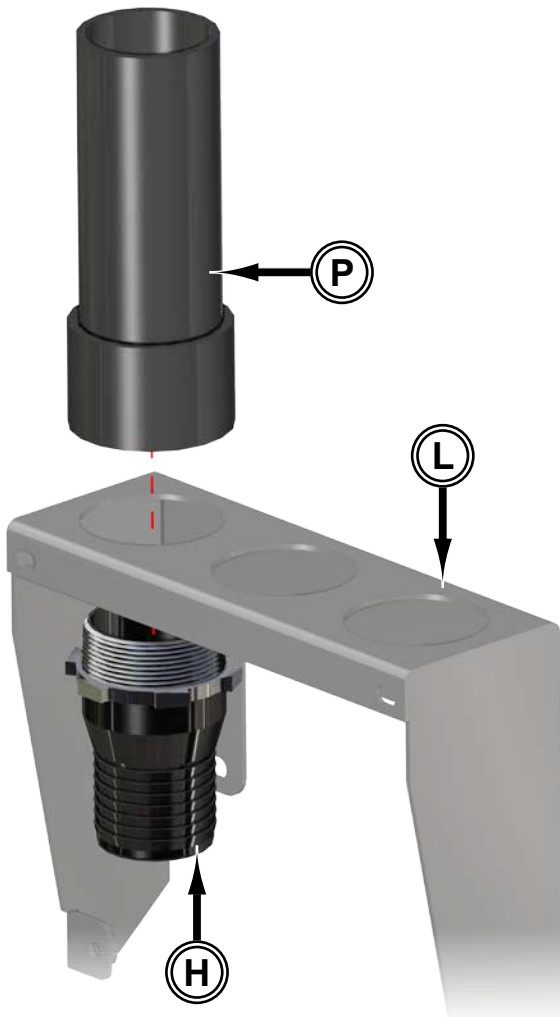

- remove any remaining slack by rotating Locknut up until tight against Bracket (L)

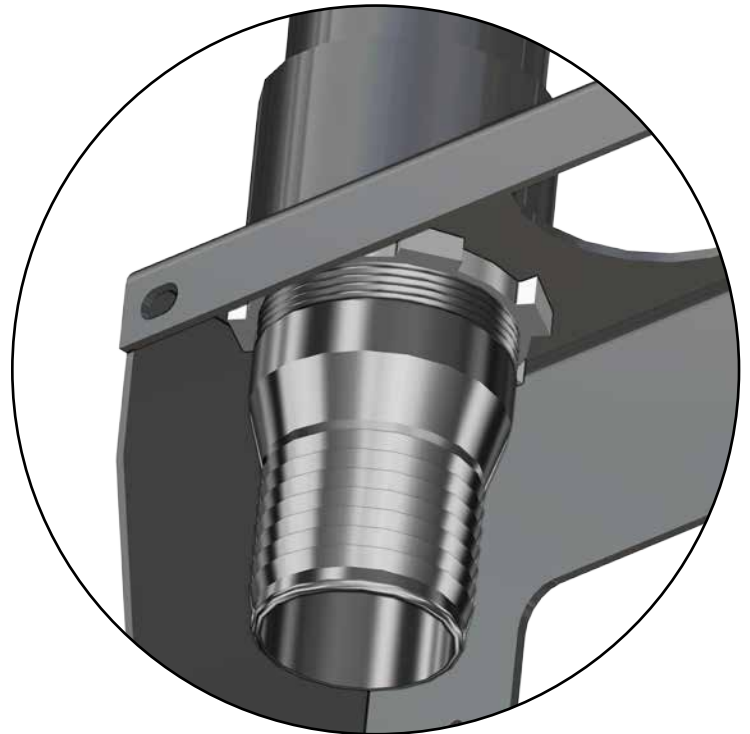


**repeat steps for remaining Riser Pipes**




## Riser Pipes (P) continued


- Install Snorkel Risers (B) onto Riser Pipe Assemblies (P)
- Install Faceplates (A)(C) to locations shown. Secure with hardware shown.

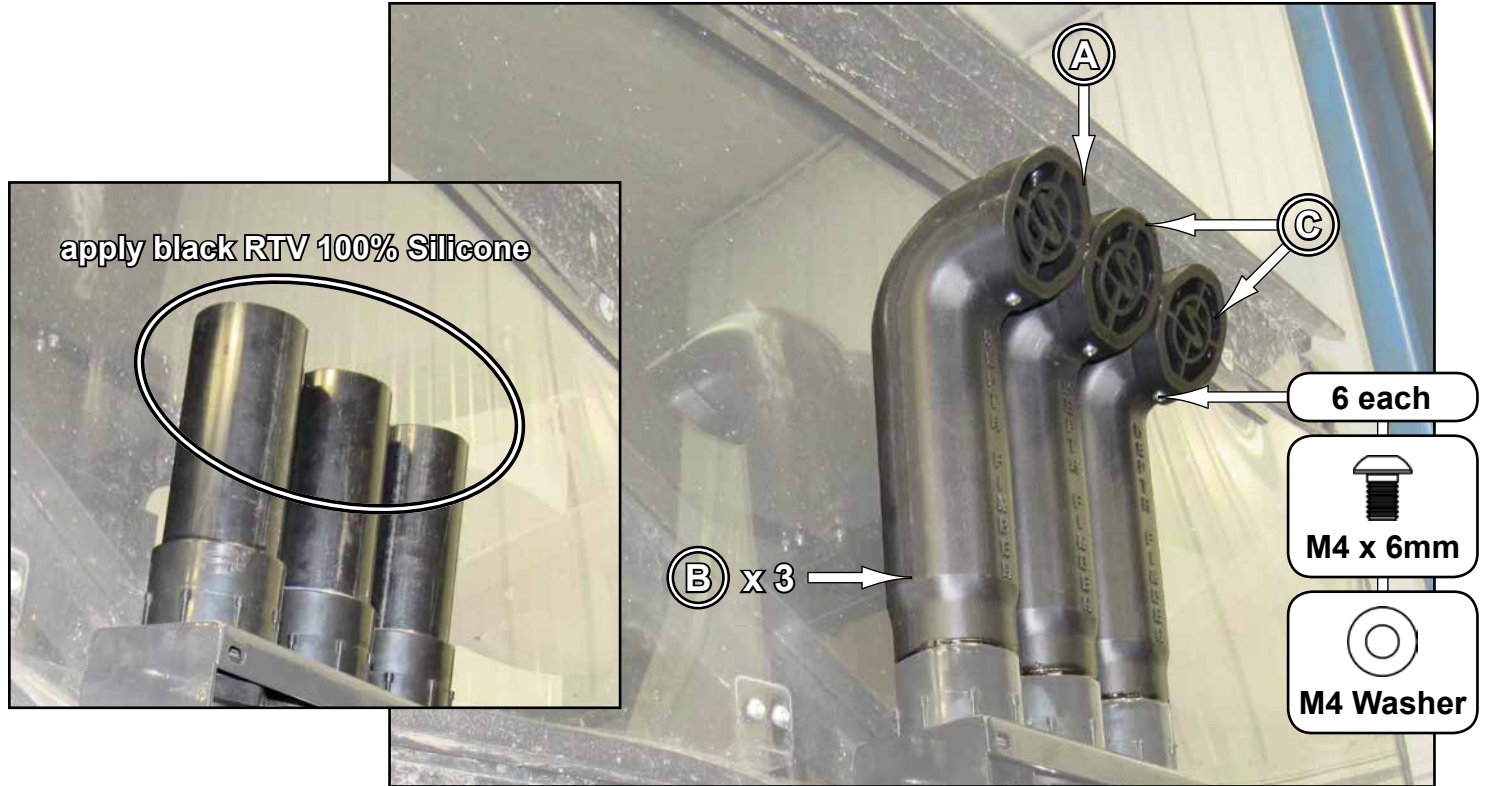

- Connect Hoses to Fittings (H). Secure with Clamps.

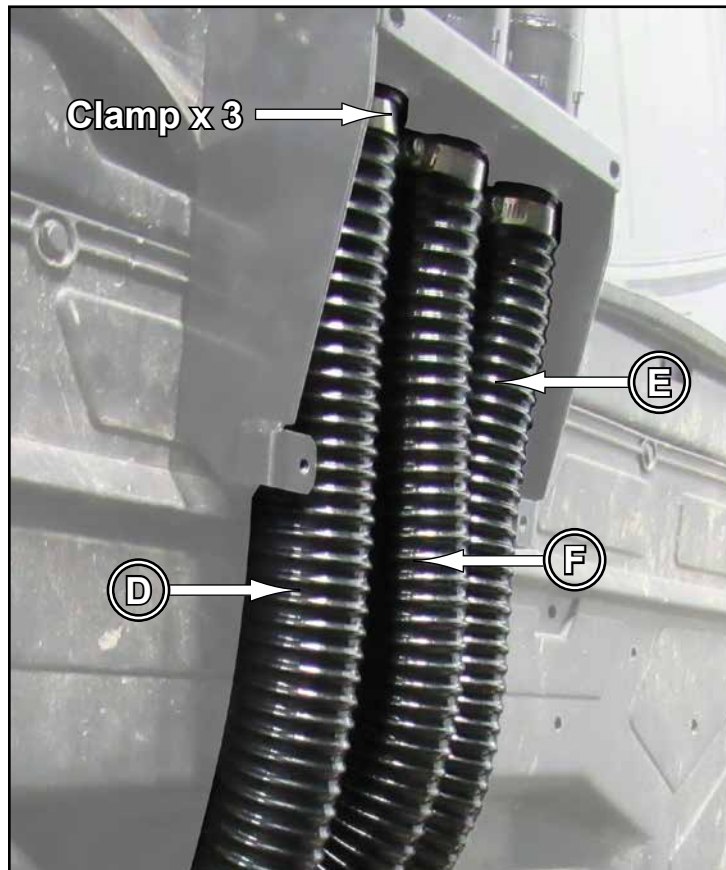


- Install Cover (K) to Bracket (L) with hardware shown.

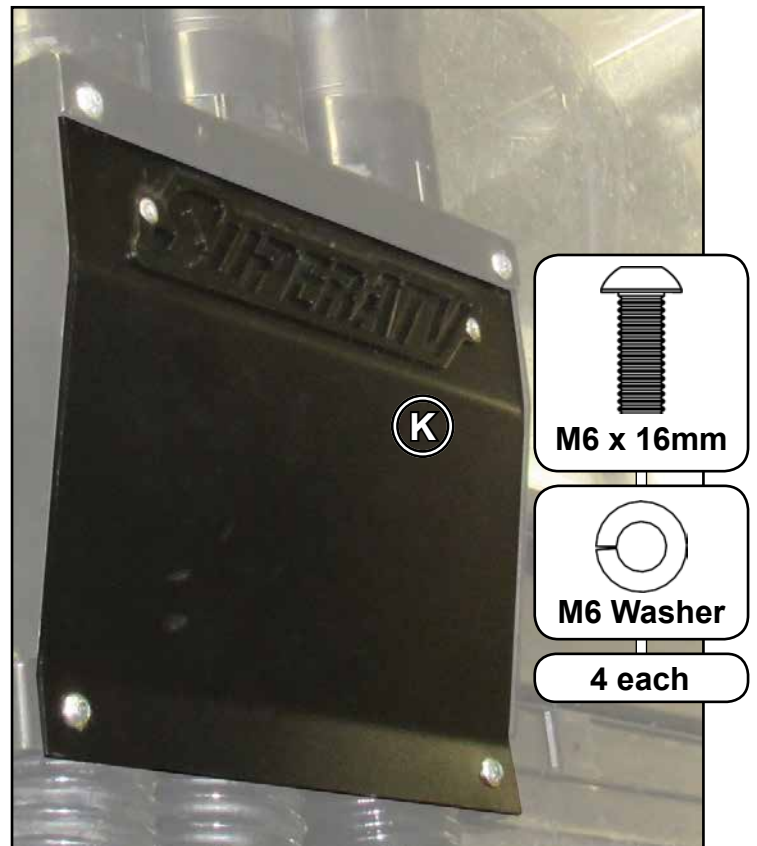

## Coolant Vent Hose




- reinstall Cap in orientation shown
- connect Tubing
- coil Tubing 3 loops and secure with Wire-Ties

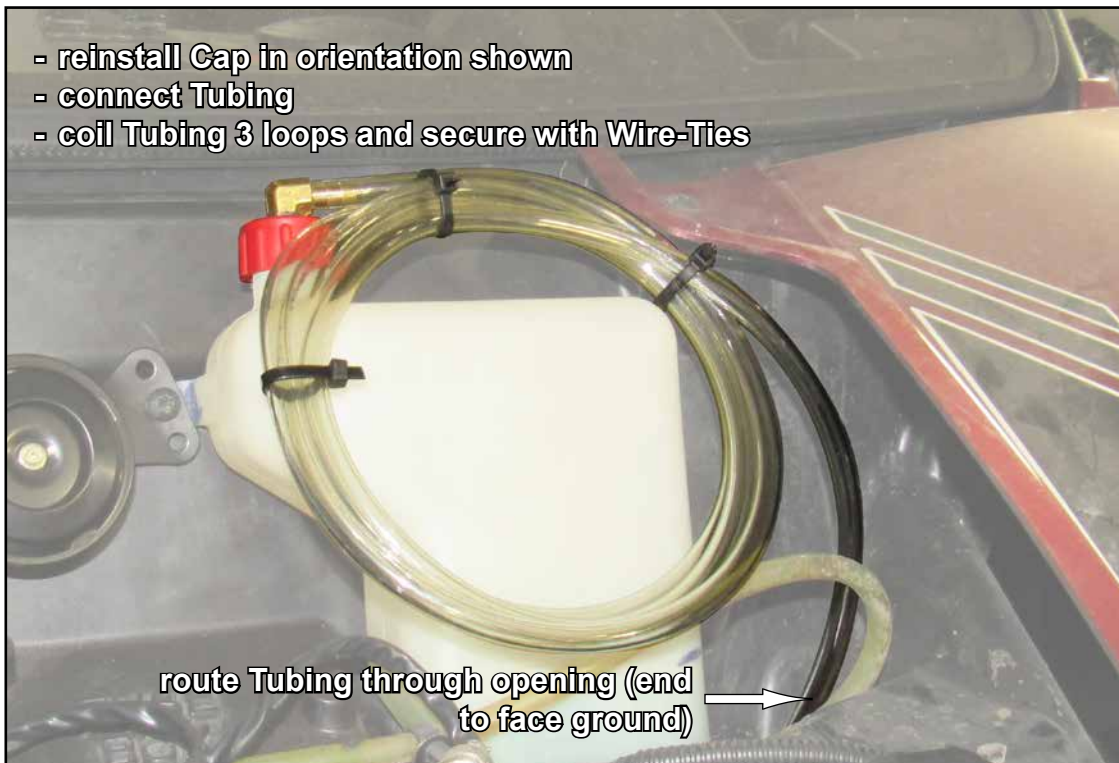




- Install Belt Snorkel Boot (T).

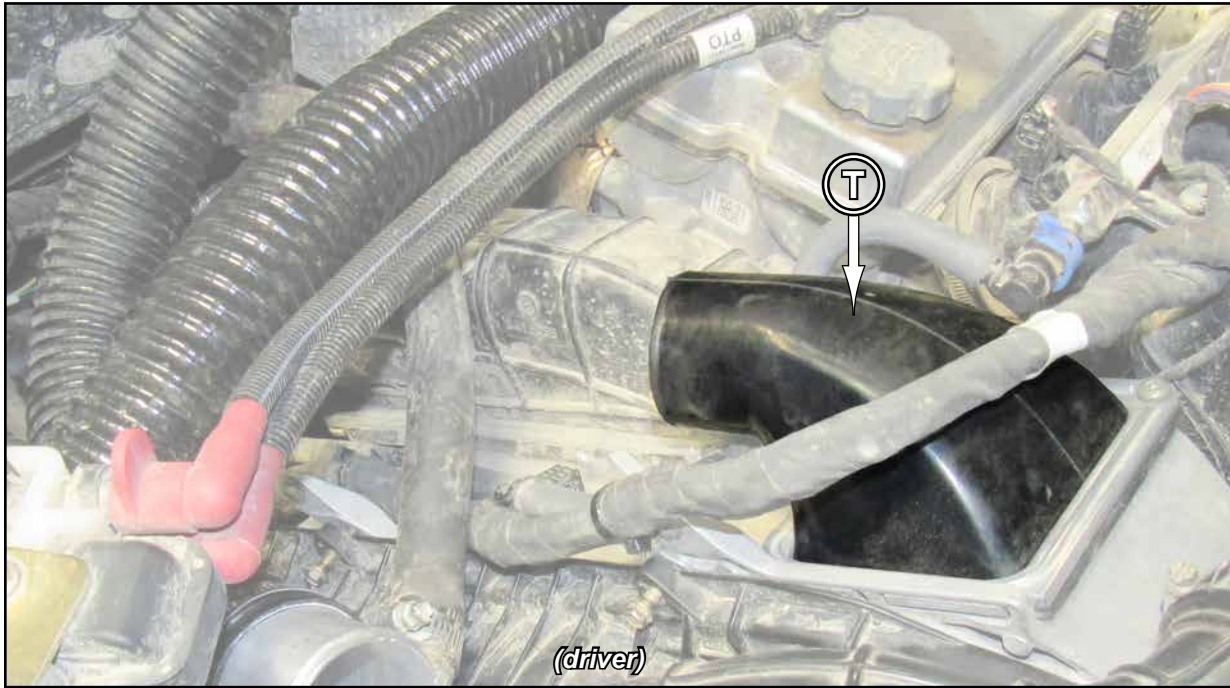

- Secure Belt Exhaust Snorkle (D) to Belt Snorkel Boot (T) with Clamp.

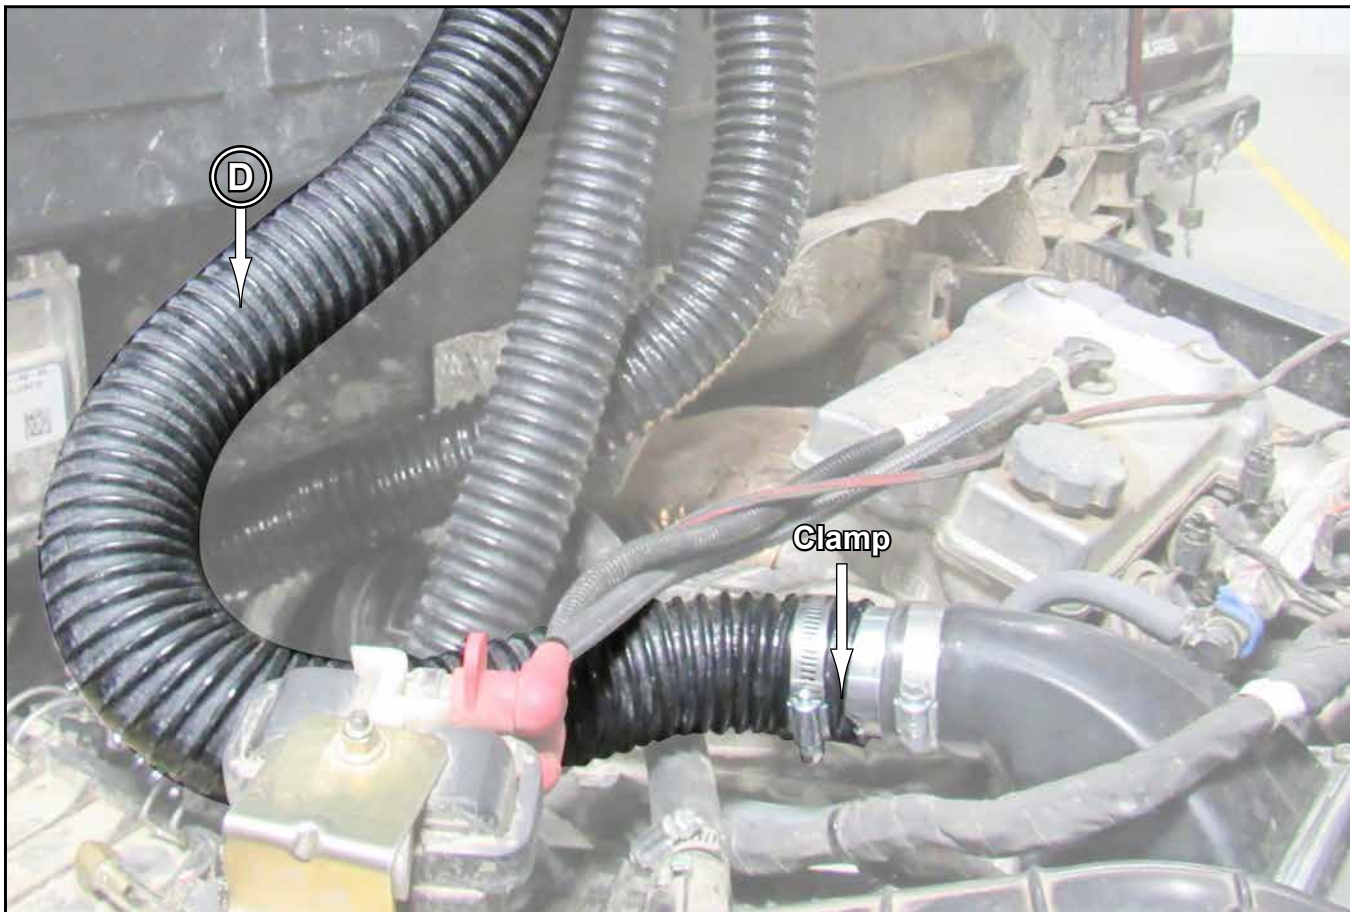



- Secure Airbox Snorkle (F) to Airbox with Clamp.



- Secure Belt Intake Adapter (S) to Clutch Inlet with stock Clamp.
- Secure Belt Intake Snorkel (E) to Belt Intake Adapter (S).





## Transmission Vent Line

locate stock Transmission Vent and install Straight Connector and Vent Bellow (J)

**Straight Connector**



+

ⓐ



*(passenger)*



## Front Differential Vent Line

unclip stock Differential Vent and route up and into Hood area



install Reducer and Vent Bellow (J)

**Reducer**

