

Cookie Preferences

OVER \$98 (EXCLUSIONS APPLY)



SHOP CATEGORIES

WHY S&B

SHOP BY VEHICLE



0

INSTALL INSTRUCTIONS FOR AS-1015

PRINT

BEFORE YOU START

Note: This intake kit may not fit with the following Aftermarket Parts installed:

- Custom Hood
- Intercooler or Turbo upgrades

If at any point in the instructions it is difficult to access the scoops or hood liner. Open the hood completely until the hood rests on the cabin (place a blanket or towel in between to avoid damage). Use a step stool or ladder to reach. Also, it is optional to remove the hood by removing the 4 hood bolts. See the manufacturer's instructions for removing the hood. These instructions will guide you to install the S&B Hood Scoops without needing to remove the hood

REQUIRED TOOLS


- Panel Popper
- Scissors
- Marker
- Box Cutter / Knife
- Strong Duct Tape
- Gloves
- Blanket or Towel
- T20 Torx bit and driver
- Phillips Head Screwdriver (Optional)
- Flat Head Screwdriver
- Step Stool /Step Ladder



Hi. Need any help?



Cookie Preferences

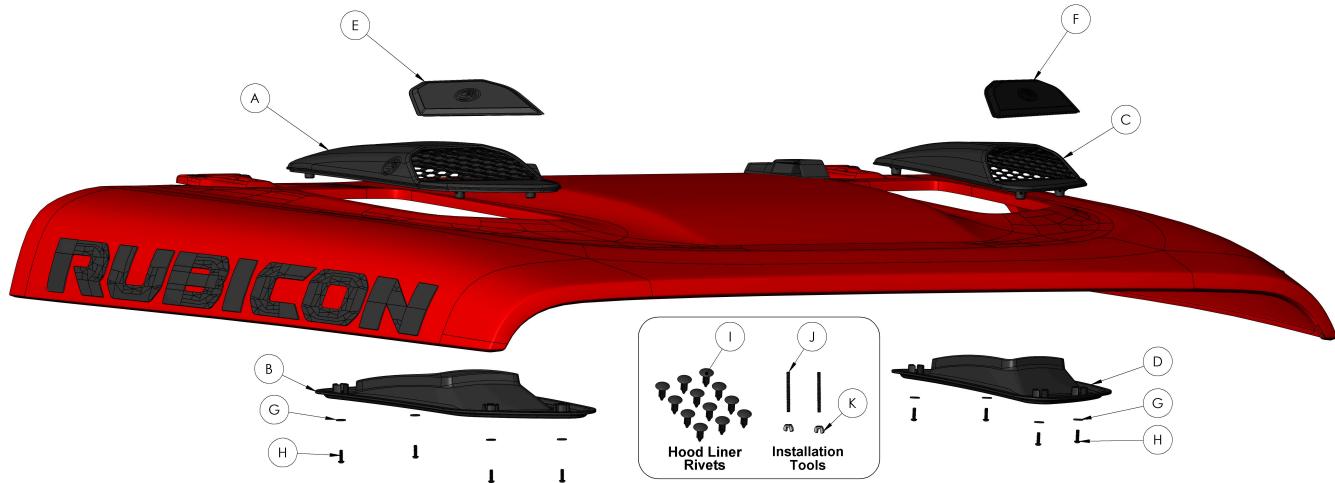


ITEM	QTY.	DESCRIPTION	PART NUMBER
A	1	Passengers Side Hood Scoop, Top Side	Ai2220-00
B	1	Passengers Side Hood Scoop, Under Side	Ai2221-00
C	1	Drivers Side Hood Scoop, Top Side	Ai2216-00
D	1	Drivers Side Hood Scoop, Under Side	Ai2217-00
E	1	Passengers Side Scoop Plug	Ai2223-00
F	1	Drivers Side Scoop Plug	Ai2222-00
G	8	M4 Zinc Plated Washers	Ai2245-00
H	8	M4 x 14 mm Zinc Button Head Torx Screws	Ai2224-00
I	12	Hood Liner Rivets	AI1567-00
J	2	M4 x 0.7 mm x 50 mm Long Threaded Rods	AI2431-00
K	2	M4 Winged Nut	AI2474-00


[Cookie Preferences](#)

TIP 1

If at any point in the instructions it is difficult to access the scoops or hood liner. Open the hood completely until the hood rests on the cabin (place a blanket or towel in between to avoid damage). Use a step stool or ladder to reach. Also, it is optional to remove the hood by removing the 4 hood bolts. See the manufacturer's instructions for removing the hood. These instructions will guide you to install the S&B Hood Scoops without needing to remove the hood.

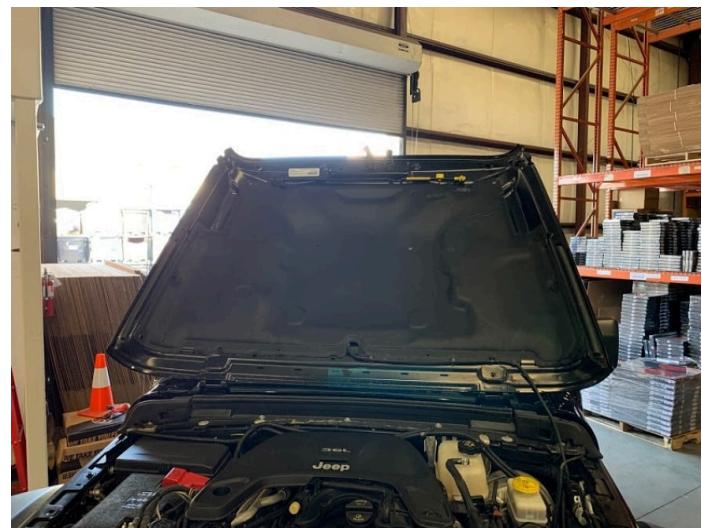

Cookie Preferences

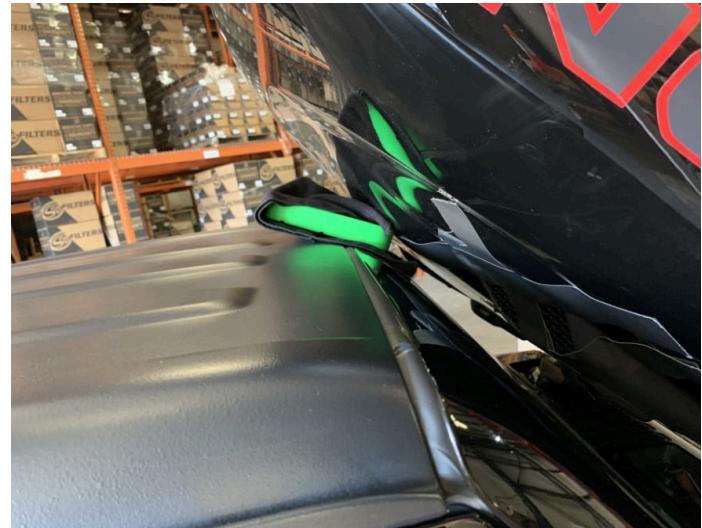TIP 2**STEP 1**

With the hood open, using a panel popper: remove the push-in rivets holding the hood liner/ insulation in place. There are 12 in total. A step stool will be required to reach. S&B supplies factory fit replacement hood liner rivets (P) in the kit in case any are damaged. Once all rivets have been removed set the hood liner to the side.



Cookie Preferences

STEP 2A

With the liner removed.
Remove the factory hood
bezels.

STEP 2B

Pinch the six holding tabs
inward towards the body of
the bezel to release the
bezels from the hood. If
needed, a flat head
screwdriver can be used to
wedge these snap-in features.

[Cookie Preferences](#)

STEP 3A

Locate the printed cut template. Set the hood liner on the working surface with the silver side facing up.

STEP 3B

With a pair of scissors cut within the line of the provided paper template.

STEP 3C

After cutting the template check with a hood scoop top side (A and C) that the cut template has sufficient clearance for the inserts

[Cookie Preferences](#)

STEP 3D

Align the template with the indentation of the factory vents on the hood liner. Tape down the template if needed

STEP 3E

Using a marker, trace within the template onto the silver side of the hood liner. Hold down the edges of the paper template close to the surface for a better trace.

[Cookie Preferences](#)

STEP 4

Remove the template from the liner if taped down. Using a blade or knife. Cut on the line of the traced pattern. For best results cut in a sawing motion to produce a clean cut. It is suggested to wear gloves when handling the exposed cut hood liner as this can irritate the skin on contact.

STEP 5

Cookie Preferences

he paper template
and Repeat Step 3-4 for the
opposite scoop opening.

STEP 6

Insert the two provided
threaded rods (Q) by hand
onto one of the top sides of
the hood scoops (A or C)
with inserts at the topmost
and bottommost insert
locations at opposite corners.

STEP 7

Align one of the S&B Hood
scoops tops through the
hood liner. Make sure the
inserts and threaded rods are

Cookie Preferences ted. Adjust the cut for clearance as needed

STEP 8

Remove the threaded rods by hand from the hood scoop top and insert them into the other hood scoop. repeat steps 6-7.

STEP 9

Once the cuts are done. Reattach the hood liner to the vehicle. Push in a Hood liner rivet (P) in each corner. This will make it easier to remove the liner in case adjustments need to be made.

[Cookie Preferences](#)

STEP 10

Close the hood. Set down a hood scoop top (A or C) with the threaded rods installed into their matching openings on the hood. For ease of assembly on the next step tape the scoops down onto the hood firmly.

STEP 11

Open the hood with the Hood Scoop top taped down securely. Install the passenger's side hood scoop,

Cookie Preferences (B) over the threaded rods (Q)

STEP 12A

For easier alignment
Compress the hood liner by
tightening down with the
provided wing nuts (R).

STEP 12B

If access is difficult to turn
the wingnut, a driver tool can
be used to turn

[Cookie Preferences](#)

STEP 13

Connect the underside of the scoops using a T20 Torx bit and driver into place. Using the two available positions thread the M4 x 14mm (Short) screws (H) and M4 washers (G). Tighten down until the liner is compressed and the scoop gasket seals to the hood. Recommended torque specification 10-15 in. lbs.

STEP 14A

Once the screws are tightened in the two available positions, remove the installed threaded rods by hand one at a time and replace it with appropriate hardware

Cookie Preferences

STEP 14B

Tighten down all of the screws firmly.

STEP 15

Repeat Steps 9-14 for the other side

STEP 16

Once you are satisfied with the alignment of the scoops and liner. Make sure all of the screws are firmly tightened.

Cookie Preferences Remaining push-in

rivets securing the hood liner
to the hood

STEP 17

Close the hood. Remove the tape holding down the hood scoops. The installation is now complete.

HOOD SCOOP PLUGS INSTALLATION

If extreme weather conditions arise such as heavy snow, dust or other debris grill plugs have been provided to prevent these elements from entering the hood scoops.

Cookie Preferences

STEP 1

Locate the scoop plugs
included with the kit (E & F)

[Cookie Preferences](#)

STEP 2

Position the appropriate
scoop plug in front of the
corresponding scoop (A & C).

STEP 3

Cookie Preferences all the lower prong features of the plug are located into the appropriate grill features

STEP 4

Align the topmost prongs with the corresponding grill feature

STEP 5

Push the plug into the grill

[Cookie Preferences](#)

STEP 6

To remove plugs pull from the innermost corner of the plug and peel away from the grill

STEP 7

Repeat steps 1-6 for the other hood scoop. Installation is now complete

Cookie Preferences