

Cookie Preferences

JVER \$98 (EXCLUSIONS APPLY)



SHOP CATEGORIES

WHY S&B

SHOP BY VEHICLE



0

INSTALL INSTRUCTIONS FOR CAI-75-5200

PRINT

BEFORE YOU START

Note: This intake kit may not fit with the following Aftermarket Parts installed:

- Custom Hood

Please read the entire product guide before proceeding.

- Ensure all parts are present.

- If you are missing any of the components, call our customer support at (909) 947-0015.

- Do not work on your vehicle while the engine is hot.

- Make sure the engine is turned off and the vehicle is in Park or the Parking Brake is set.

REQUIRED TOOLS

- 5/16 or 8mm socket/nut driver

- 10mm socket

- Phillips/flathead head screw driver

- Channel locks


- X-Acto knife



Hi. Need any help?



Cookie Preferences

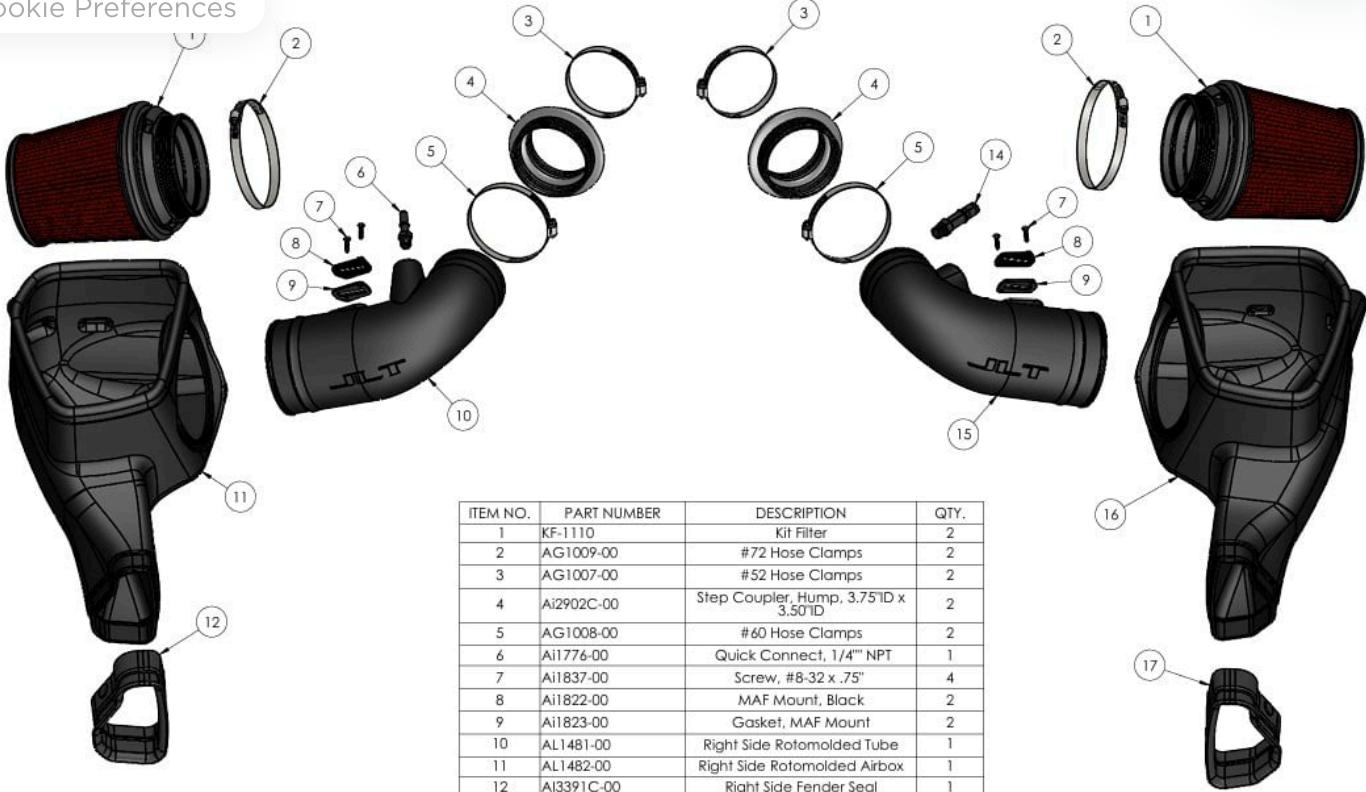

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|---|------|
| 1 | KF-1110 | Kit Filter | 2 |
| 2 | AG1009-00 | #72 Hose Clamps | 2 |
| 3 | AG1007-00 | #52 Hose Clamps | 2 |
| 4 | AI2902C-00 | Step Coupler, Hump, 3.75" ID x 3.50" OD | 2 |
| 5 | AG1008-00 | #60 Hose Clamps | 2 |
| 6 | AI1776-00 | Quick Connect, 1/4" NPT | 1 |
| 7 | AI1837-00 | Screw, #8-32 x .75" | 4 |
| 8 | AI1822-00 | MAF Mount, Black | 2 |
| 9 | AI1823-00 | Gasket, MAF Mount | 2 |
| 10 | AI1481-00 | Right Side Rotomolded Tube | 1 |
| 11 | AI1482-00 | Right Side Rotomolded Airbox | 1 |
| 12 | AI3391C-00 | Right Side Fender Seal | 1 |
| 14 | AI1701-00 | Quick Connect to 3/8" NPT | 1 |
| 15 | AI1479-00 | Left Side Rotomolded Tube | 1 |
| 16 | AI1480-00 | Left Side Rotomolded Airbox | 1 |
| 17 | AI3390C-00 | Left Side Fender Seal | 1 |

[Cookie Preferences](#)

PASSENGER SIDE INTAKE REMOVAL: STEP 1

Disconnect the crankcase connector from the tube.



PASSENGER SIDE INTAKE REMOVAL: STEP 2

Depress the white button on the MAF sensor connector and pull it off the sensor.



[Cookie Preferences](#)

PASSENGER SIDE

INTAKE REMOVAL: STEP

3

Use a panel popper to
remove the Christmas tree
pin

PASSENGER SIDE

INTAKE REMOVAL: STEP

4

Loosen and remove the hose
clamp on the throttle body.

[Cookie Preferences](#)

PASSENGER SIDE INTAKE REMOVAL: STEP 5

Use a 10mm socket to remove the bolt holding down the airbox.

PASSENGER SIDE INTAKE REMOVAL: STEP 6

Pull the intake tube off the throttle body and then lift the intake out of the vehicle. If its a tight fit, you can remove the lid off the intake box first.

DRIVER SIDE INTAKE REMOVAL: STEP 1

Cookie Preferences

Get the crankcase connector from the tube.

Rotate the blue section to release the connector (index finger is touching the part that gets rotated)

DRIVER SIDE INTAKE REMOVAL: STEP 2

Depress the white button on the MAF sensor connector and pull it off the sensor.

[Cookie Preferences](#)

DRIVER SIDE INTAKE REMOVAL: STEP 3

Use a panel popper to
remove the Christmas tree
pin

DRIVER SIDE INTAKE REMOVAL: STEP 4

Loosen and remove the hose
clamp on the throttle body.

[Cookie Preferences](#)

DRIVER SIDE INTAKE REMOVAL: STEP 5

Use a 10mm socket to remove the bolt holding down the airbox.

DRIVER SIDE INTAKE REMOVAL: STEP 6

Pull the intake tube off the throttle body and then lift the intake out of the vehicle. If its a tight fit, you can remove the lid off the intake box first.

Cookie Preferences

PASSENGER SIDE INTAKE INSTALL: STEP 1

Install the trimlock along the top of the airbox

PASSENGER SIDE INTAKE INSTALL: STEP 2

Install the air filter into the airbox and pull the flange of the air filter through the opening until seated.

[Cookie Preferences](#)

PASSENGER SIDE INTAKE INSTALL: STEP 3

This is what it will look like
when the filter is properly
installed.

PASSENGER SIDE INTAKE INSTALL: STEP 4

Install silicone fender seal
onto the airbox inlet.

PASSENGER SIDE INTAKE INSTALL: STEP 5

Remove the MAF sensor from
the passenger side OEM

Cookie Preferences

e. Place the included gasket, plastic MAF pad then OEM MAF sensor onto the JLT intake tube. Fasten down with the included Philips head bolts.

PASSENGER SIDE INTAKE INSTALL: STEP 6

Place the JLT airbox into the car and secure down with the OEM bolt.

PASSENGER SIDE INTAKE INSTALL: STEP 7

Install the coupler onto the throttle body first with the

Cookie Preferences ps loosely around the ends.

Place the hose clamp around the filter flange loosely.

Then install the JLT intake tube. Tighten down the hose clamps once the tube is in place.

PASSENGER SIDE INTAKE INSTALL: STEP 8

Reinstall the MAF sensor and PCV hose connector.

[Cookie Preferences](#)

DRIVER SIDE INTAKE INSTALL: STEP 1

Install the trimlock along the top of the airbox

DRIVER SIDE INTAKE INSTALL: STEP 2

Install the air filter into the airbox and pull the flange of the air filter through the opening until seated.

[Cookie Preferences](#)

DRIVER SIDE INTAKE INSTALL: STEP 3

This is what it will look like when the filter is properly installed.

DRIVER SIDE INTAKE INSTALL: STEP 4

Install silicone fender seal onto the airbox inlet.

DRIVER SIDE INTAKE INSTALL: STEP 5

Remove the MAF sensor from the passenger side OEM

Cookie Preferences

e. Place the included gasket, plastic MAF pad then OEM MAF sensor onto the JLT intake tube. Fasten down with the included Philips head bolts.

DRIVER SIDE INTAKE INSTALL: STEP 6

Place the JLT airbox into the car and secure down with the OEM bolt.

DRIVER SIDE INTAKE INSTALL: STEP 7

Install the coupler onto the throttle body first with the

Cookie Preferences  ps loosely around the ends.

Place the hose clamp around the filter flange loosely.

Then install the JLT intake tube. Tighten down the hose clamps once the tube is in place.

DRIVER SIDE INTAKE INSTALL: STEP 8

Reinstall the MAF sensor and PCV hose connector.

Cookie Preferences

INSTALL IS COMPLETE

Please check over clearance
and the install and let us
know if you have any
questions

Cookie Preferences