



Installation Instructions

For All Hornet Light Bars



For proper installation and best possible fit, please read all instructions BEFORE you begin.



Important Information

BEFORE you begin the installation process:

- Carefully read all instructions.
- Verify that all parts are included by checking the contents of your kit.

If any parts are missing or appear damaged, please contact our customer service team for assistance.

Customer Service

For support, please contact the Putco team, available Monday to Friday 8:30 AM to 5PM (Central Time).

1 800 247 3974

support@putco.com

WIRING TABLE

FUNCTION	WIRE COLOR	CONNECT TO
Positive	Red	(12-36VDC)
Negative	Black	(Ground)
Pattern Change	Yellow	Open, tap to ground to index
Color Change	White	Open, tap to ground to index
White Override	Purple	Open, connect to ground to activate
Left Turn Signal	Brown	Open, connect to ground to activate
Right Turn Signal	Green	Open, connect to ground to activate

NOTE: Not all Hornet light bars will be equipped with every function. Depending on the size and color combination of the unit you have purchased, some wires and their associated functions may be excluded.

All Hornets will come equipped with a positive, negative, and color change wire. Only units with multiple colors will be equipped with the color change wire (Yellow), and White override wire (Purple). Only units larger than 16 inches will be equipped with the left- and right-hand turn signal wires (Brown and Green). For additional questions, please contact Putco customer service.

NOTE: The etched side of the Hornet should face forward (in the normal direction of travel) when installed on a vehicle. This will ensure the turn signal functions activate facing the rear of the vehicle, and that their direction is aligned with the wiring chart above.

INSTALLATION

1. Connect the **RED** positive wire to 12-36VDC, through a switch, as shown in the switch wiring diagram (Figure 1) and the **BLACK** negative wire to ground.
2. Momentarily tap the **YELLOW** pattern wire to ground to cycle through the patterns, and the **WHITE** color wire to cycle through colors (if equipped) The selected pattern and color will be saved even after the device is power cycled. Connect the **YELLOW** and/or **WHITE** wire to a ground through a momentary switch to maintain pattern and color control after installation.
3. Connect the **PURPLE** wire (if equipped) to a ground through a switch to toggle on and off the white override function
4. Connect the **GREEN** and **BROWN** wires to a ground through a switch to toggle on and off the right and left turn signal functions, respectively, on the light bar.

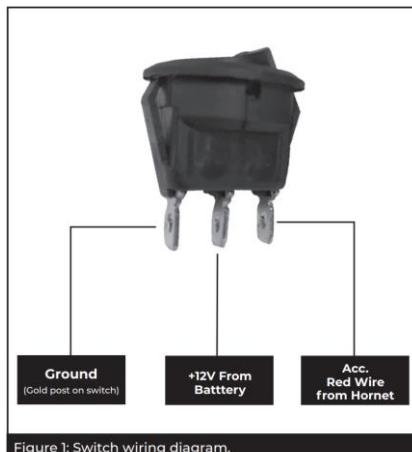


Figure 1: Switch wiring diagram.

Congratulations on completing the installation of your Putco product!
For information regarding your warranty, please visit www.putco.com/warranty.

Issues? Please Contact Our Technical Support Team: 1 800 247 3974



WARNING: Final Inspection required. Inspect product was properly Installed and all installation instructions were followed.



For additional information, please visit our website at www.putco.com!