

ROCK SLIDERS

07-18 JEEP WRANGLER JK 4-DR

SRJK-07



TOOLS REQUIRED

- 16mm Socket
- Socket extension or deep sockets

SKILL LEVEL

- Novice/Intermediate
- 1 (you) to 2 persons

Little skill level required, you can easily install it by yourself however, additional help will be useful.

TIME REQUIRED

- 1.5 Hours

Time to install this should only take about an hour and a half.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED

Factory Hardware




STEP 1 | Remove factory steps or sliders if equipped prior to beginning installation of DV8 Rock Sliders.

Use a 13mm socket to remove the factory nuts securing the slider to the body/inch weld.

With assistance, remove the remaining factory hardware using a 13mm socket.

Remove the slider and set it off to other side. Repeat steps for opposite side of the vehicle.

Note: Assistance is recommended to prevent injury and damage to the product or vehicle.

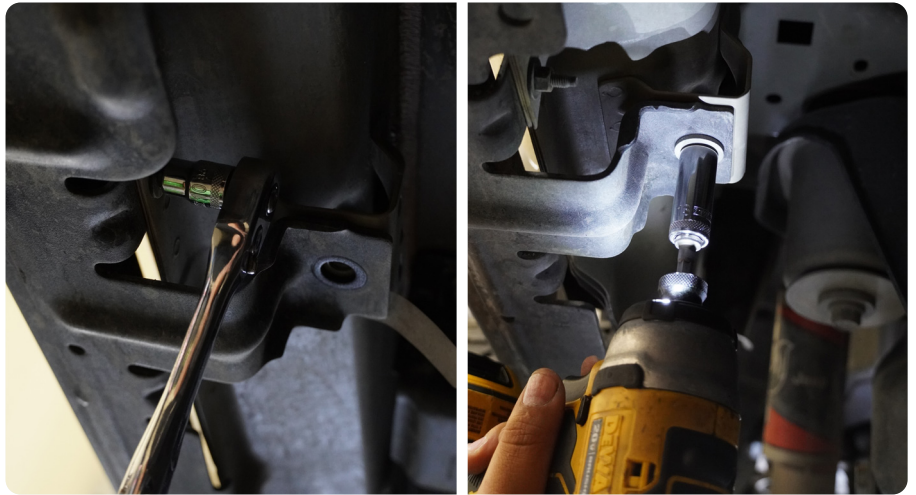

INSTALLATION **MANUAL**

STEP 2 | Use a 16mm socket to remove the factory nuts to the left and right of the main body mount bolt.



STEP 3 | Remove nuts on all three body mounts.



INSTALLATION MANUAL

STEP 4 | With assistance, place the sliders on the vehicle.

Lift the front mount into place, adjust into place. Use a 13mm socket to loosely secure the sliders to the vehicle.



STEP 5 | When all hardware is loosely installed, finish securing all factory hardware using a 16mm socket.

Double check fitment and all hardware is secure.

Repeat steps on the opposite side of the vehicle.



INSTALLATION MANUAL

STEP 6 | Congratulations! You are finished with the install of the DV8 JK Rock Sliders.

