

## BRONCO REAR INNER FENDERS

'21-'25 FORD BRONCO  
INFEND-08RB



### TOOLS REQUIRED

- + 7mm socket
- + #4 Allen tool/socket
- + Nutsert tool
- + Trim Tool
- + Phillips screw driver

### SKILL LEVEL

- + Novice/Intermediate
- + 1 (you) to 2 persons

Little skill level required, you can easily install it by yourself however, additional help will be useful to prevent injury or damage.

### TIME REQUIRED

- + Approximately 2.5 Hours

### WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.  
Customer Service: 855-680-9595

*DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.*

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle


*• Always wear eye protection when operating power tools*

*Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information*

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

# HARDWARE INCLUDED

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

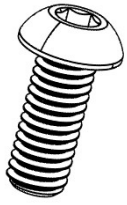


(44) M6x16 Allen  
Head Bolts



(44) M6 Split  
Washers




(44) M6 Flat  
Washers

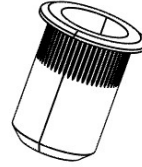


(44) M6 Nutserts

# PARTS INCLUDED

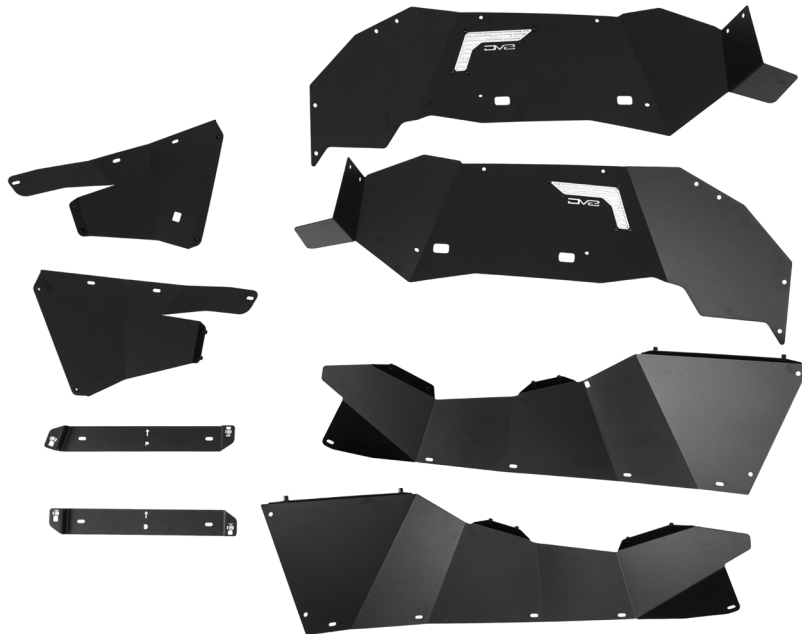

**STEP 1** | YOU WILL NEED TO FULLY REMOVE THE FRONT FENDERS BY TURNING THE CLIPS ON THE UNDERSIDE OF THE FENDER DOWN UNTIL THEY FEEL LOOSE. ONCE LOOSE, PULL THE FENDER AWAY FROM THE BRONCO DIRECTLY TOWARDS YOU, RELEASING THE CLIPS.


NOTE: BOTH FRONT AND REAR FENDERS ARE MOUNTED IN THIS MANNER.

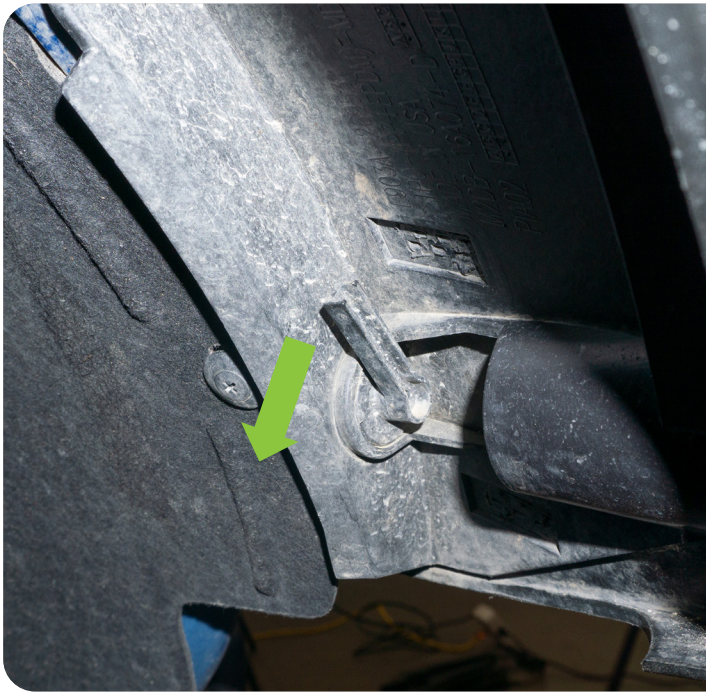

**STEP 2** | USE A PHILLIPS HEAD SCREW DRIVER AND PANEL CLIP REMOVAL TOOL TO REMOVE THE VARIOUS CLIPS SECURING INNER FENDER TO THE VEHICLE (NEXT THREE IMAGES).

NOTE: YOU WILL NEED TO USE OUR ACC RELOCATION BRACKET ABFF-02 TO REINSTALL THE ACC SENSOR.



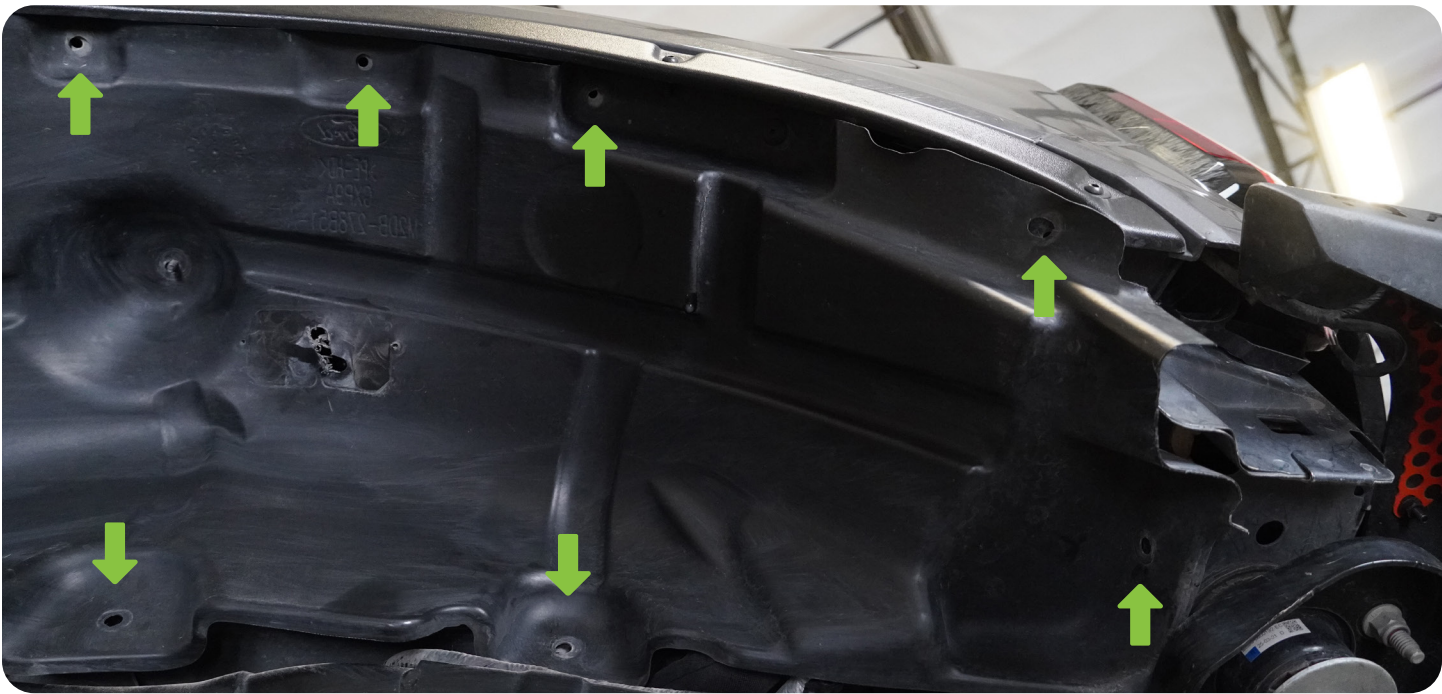

**STEP 3** | USE A 7MM DEEP SOCKET TO REMOVE THE NUTS SECURING THE INNER FENDER, LOCATED AT THE TOP OF THE INNER FENDER AND LOWER FRONT SECTION OF THE INNER FENDER.

NOTE: PASSENGER SIDE WILL HAVE TWO NUTS SECURING IT IN THE TOP SECTION.



**STEP 4** | REMOVE INNER FENDER BY PULLING DOWN BY THE LIP OF THE FENDER AND OUT.




**STEP 5** | BEGIN BY LAYING OUT ALL ITEMS FOR THE DRIVER SIDE INNER FENDER.




**STEP 6** | USING A #4 ALLEN HEAD, ASSEMBLE THE INNER FENDER STARTING WITH THE FORWARD SECTION. PLACE THE FORWARD SECTION "BEHIND" THE CENTER SECTION. USE THE PROVIDED M6 BOLTS , LOCK WASHER, AND FLAT WASHER. LEAVE ALL BOLTS LOOSE FOR ADJUSTMENT.



**STEP 7** | NEXT, INSTALL THE REAR SECTION ONTO THE ASSEMBLY USING THE SAME HARDWARE.

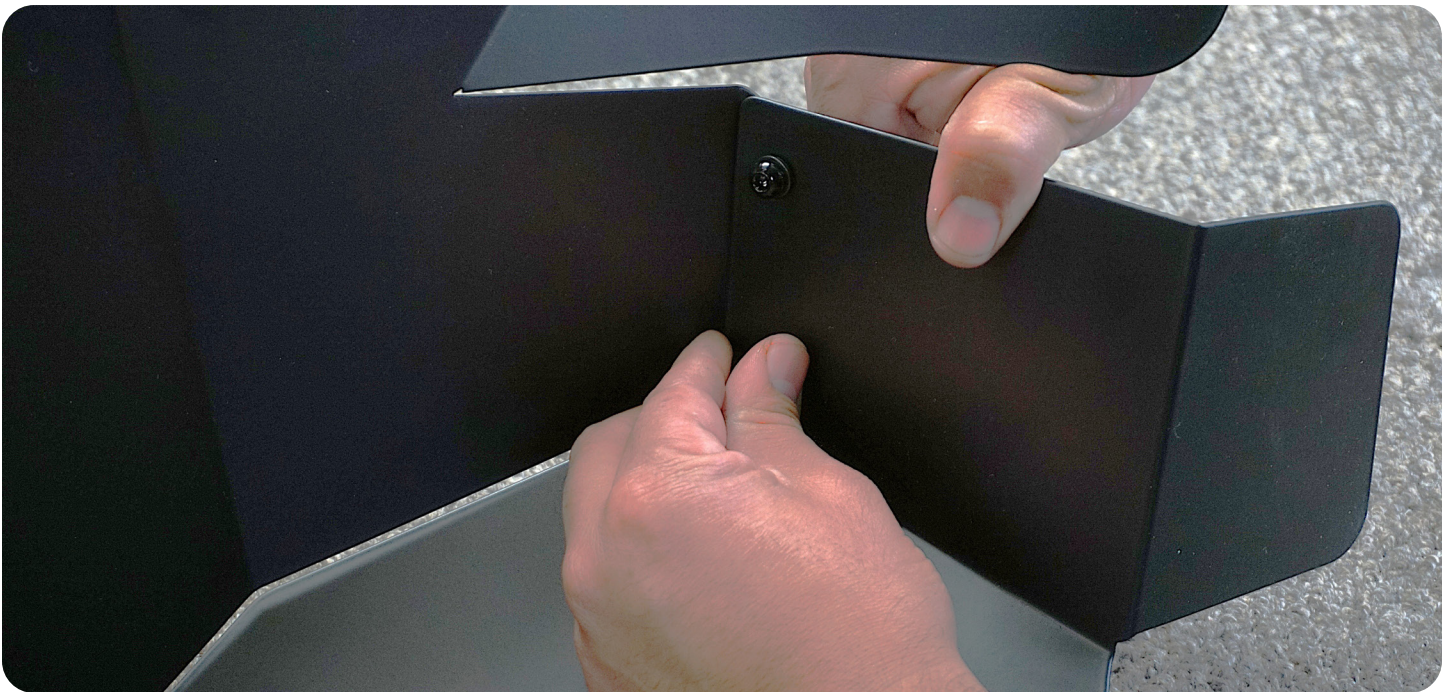

**STEP 8** | ONCE ASSEMBLED, USING A #4 ALLEN HEAD, TIGHTEN ALL BOLTS ENSURING THE SECTIONS ARE STRAIGHT AND ALIGNED PROPERLY.

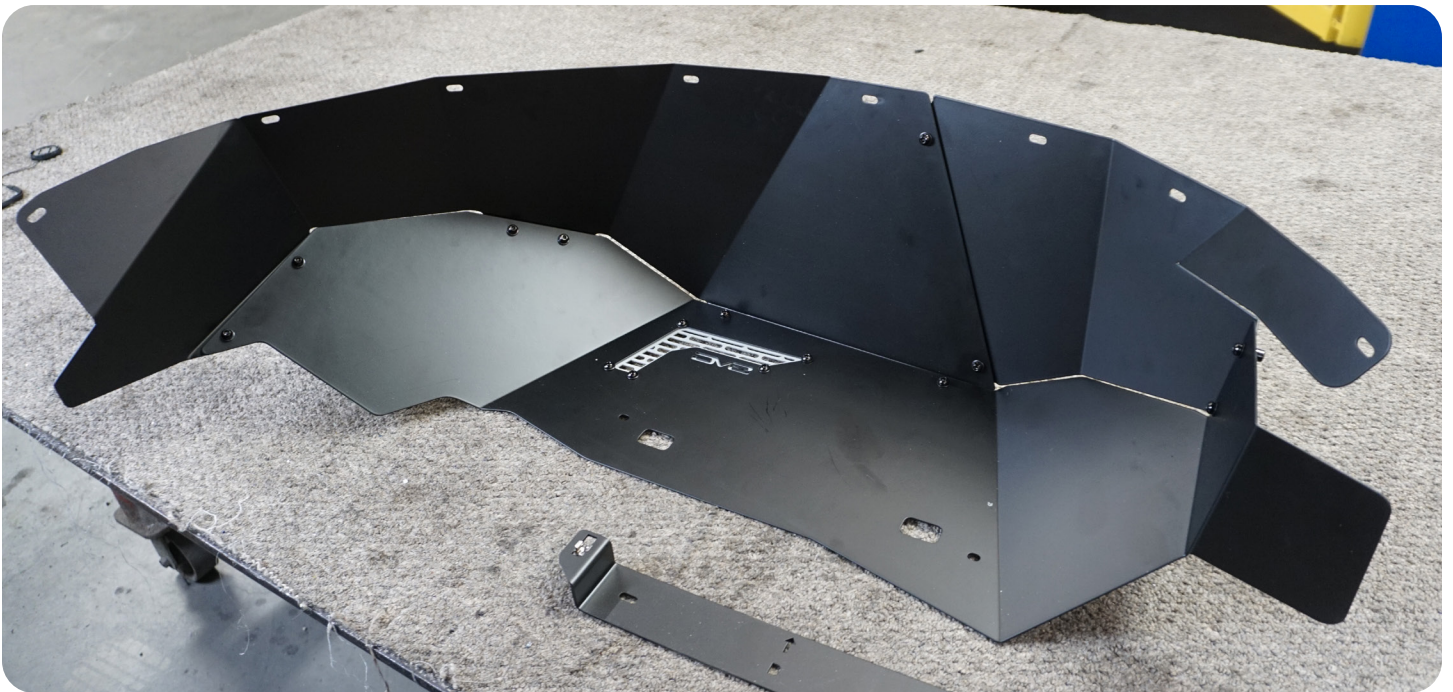

**STEP 9** | USING A M6 NUTSERT TOOL AND THE PROVIDED NUTSERTS, INSTALL INTO THE TWO LOWER TABS OF THE INNER FENDER.



**STEP 10** | USING THE SAME NUTSERT TOOL AND PROVIDED NUTSERTS, NUTSERT THE (7) TABS ALONG THE INSIDE OF THE INNER FENDER EXCEPT THE VERY FRONT TAB.





**STEP 11** | USING THE PROVIDED M6 ALLEN HEAD BOLTS, INSTALL THE REAR BRACE BRACKET. ENSURE THE CAGE NUTS ARE PROPERLY INSTALL AS SHOWN IN THE IMAGE.

NOTE: THE ORIENTATION OF THE BRACKET AND ENSURE ARROW IS POINTED UPWARDS.





**STEP 12** | INSTALL THE INNER FENDER INTO THE WHEEL WELL AND CHECK FITMENT. THE NUTSERT TABS ALONG THE INSIDE OUTSIDE MAY NEED TO BE ADJUSTED TO LAY AGAINST THE INNER FENDER. USING JUST YOUR HAND, LIGHTLY BEND THESE INTO PLACE.



**STEP 13** | ONCE ALIGNED, BEGIN BY USING THE M6 HARDWARE PROVIDED TO LOOSELY INSTALL THE INNER FENDER INTO PLACE. ENSURE TO LEAVE HARDWARE LOOSE UNTIL ALL HARDWARE IS STARTED.



**STEP 14** | ONCE ALL HARDWARE IS INSTALLED, USING A #4 ALLEN HEAD, SECURE ALL BOLTS. ENSURE TO JUMP AROUND FROM BOLT TO BOLT TO ENSURE INNER FENDER IS SECURED EVENLY.

NOTE: ON THE VERY FRONT TAB ON THE OUTER PERIMETER, USE THE FACTORY 7MM SOCKET TO SECURE.



**STEP 15** | DOUBLE CHECK ALL HARDWARE IS SECURE ON INNER FENDER. TAP ON THE INNER FENDER TO ENSURE THERE IS NO RATTLING. REPEAT STEPS ON OTHER SIDE.



# CONGRATULATIONS

YOU ARE FINISHED WITH THE INSTALL OF THE BRONCO REAR INNER FENDERS.

## + SHARE YOUR PICS

WE LOVE SEEING HOW OUR CUSTOMERS USE THEIR DV8 OFFROAD PRODUCTS AND FOLLOWING ALONG WITH YOUR ADVENTURES. TAG US IN YOUR PHOTOS @DV8OFFROAD.WE ENJOY SHARING CUSTOMER PHOTOS ON OUR FEED.



## + WRITE A REVIEW

ARE YOU HAPPY WITH YOUR NEW DV8 OFFROAD PRODUCT? WE WOULD LOVE TO HEAR AND SEE YOUR EXPERIENCE. VISIT THE PRODUCT PAGE AND CLICK "WRITE A REVIEW". ADD A SHORT REVIEW AND UPLOAD A FEW PHOTOS TO BE FEATURED ON THE PRODUCT PAGE.

[WWW.DV8OFFROAD.COM](http://WWW.DV8OFFROAD.COM)

## + NEED HELP?

IF YOU ARE HAVING ANY ISSUES WITH YOUR PRODUCT, PLEASE REACH OUT. DV8 OFFROAD IS A COMPANY OF OFF ROAD ENTHUSIASTS THAT DESIGN AND USE OUR OWN PRODUCTS, SO WE WANT YOU TO BE JUST AS STOKED ON YOUR NEW PARTS AS WE ARE.

P. 855.680.9595

E. [SALES@DV8OFFROAD.COM](mailto:SALES@DV8OFFROAD.COM)

