

TITANIUM SIGNATURE SERIES PLUS

INSTALLATION MANUAL

ALL 1/2" FUEL PORTS

APPLICATION:

TSP-D02-100G (100GPH @ 8-10PSI) TSP-D02-165G (165GPH @8-10PSI)





Cummins 5.9L 12 Valve
with VE pump

Standard Pickup Truck 1989-1993







Thank you for choosing FASS, from Diesel Performance Products, Inc.

FASS specializes in building extremely high-quality fuel products. We have earned an unsurpassed reputation for excellence in our industry by using only the highest-quality American-made components. In order to support our American workers and our American economy, more than 98+ percent of our products are manufactured completely in the United States.

Of course, that dedication to excellence comes at a price, but it is important to remember that price does not dictate quality-quality dictates price! We will never compromise by using cheaper, foreign-made components, like so many of our competitors do.

Customer satisfaction is our top priority and we strive always to provide outstanding customer service. Our Research and Development department, in conjunction with our Dealer Support Department, continually searches for ways to improve quality, expand our product line, and provide superb support. Our exclusive ViP Network ensures that customers receive the proper products and support at the local level. The extended lifetime warranty is only available on products purchased from the network. There is no warranty on products not purchased outside the network.

IMPORTANT:

In order to qualify for the lifetime extended warranty, your product registration form and proof of purchase from an authorized dealer must be submitted to FASS Fuel Systems within 30 days of purchase. Failure to comply will void the warranty. We have the right to deny any warranty believed to be false, altered or purchased through an unauthorized or terminated dealer. A current list of authorized dealers can be found on our website, FASSRide.com.

The complete conditions of the Limitation of Warranty can be found in the back of this manual, and FASSRide.com.

For more information, contact Technical Support: Diesel Performance Products, Inc. 16234 State Hwy O. Marthasville, MO 63357 636-433-5410





WARNING!

This product has **NO WARRANTY** unless:

- 1. It has been purchased from an Authorized or ViP FASS Dealer. If in doubt, check www.FASSRide.com.
 - 2. It is registered within thirty (30) days of purchase.
 Other conditions may apply. Please see full warranty information.

NOTE: Warranty is **void** if product was purchased below FASS website advertised pricing.

ATTENTION!

Before you begin installation Register for your Warranty ONLINE at

https://www.fassride.com/register-a-warranty/

No online access, call our TECH Support at

1-866-769-3747



FOLLOW THESE STEPS TO ENSURE A SIMPLE, CORRECT INSTALLATION OF YOUR NEW TITANIUM FUEL SYSTEM

ATTENTION:

Be sure to identify the proper FASS System and fuel line configuration. For help, our product finder can be found at www.FASSride.com. Follow the instructions to see fuel line detail.

- Be sure the serial number on this installation manual matches that on the outside of the box.
- Pay close attention to ALL WARNINGS
- **3** Read all instructions before starting installation of this product.
- 4 Inventory the package components. Notify the place of purchase immediately of any parts missing or damaged.
- 5 The installation recommendations contained herein are guidelines. Use good judgment and take into consideration your vehicles' accessories.
- For best results in accuracy and efficiency (due to training, communication, and our relationship with our dealer network), we recommend a VIP FASS dealer for the installation. They are prepared to install the FASS fuel pumps with the most efficiency. If a situation or problem arises during the installation, the dealer is prepared to handle it. Diesel Performance Products, Inc. is not responsible for any installation mistakes.
- 7 If you have any questions or concerns that cannot be addressed with your dealer, email or call FASS

If any installation procedure is uncertain, contact FASS technical support.

Call customer service at 636-433-5410,


or send us an e-mail: techsupport@FASSride.com

with the following information:

Your name, address and daytime phone number Model(TSP-DO2-100G) or (TSP-DO2-165G) Serial Number Last 6 digits of vehicles' VIN

Date of purchase
Nature of Your Concern
Serial number







INSTALLATION MANUAL TSP-D02-100G or TSP-D02-165G

(Installation Videos are available at www.fassride.com)

Recommended Application

TSP-D02-100G: Cummins 1989-1993 with stock- 600 horsepower

TSP-D02-165G: Cummins 1989-1993 with 600 - 900 horsepower

- 1. Read all instructions before starting installation of this product!
- 2. Installing the improper FASS Pump can cause severe engine damage.
- 3. Secure vehicle from ROLLING!
- 4. Cab and Chassis may require modifications
- 5. Consult vehicle's manufacturers' instructions concerning the electrical system before at-tempting any electrical connections.
- 6. Be sure that the serial # on this installation manual matches that of the outside of the box.
- 7. Flush and clean all brass fittings and fuel line from debris.
- 8. Keep debris from entering the internals of the system during installation. Getting debris in the water separator nipple can lock up the motor. If the motor does lock up from debris call FASS for technical assistance.




10. Properly secure lines to prevent chaffing.





Always be sure to fill the fuel tank to full after a new FASS installation. Failure to do so can result in excessive sound output, or priming issues!

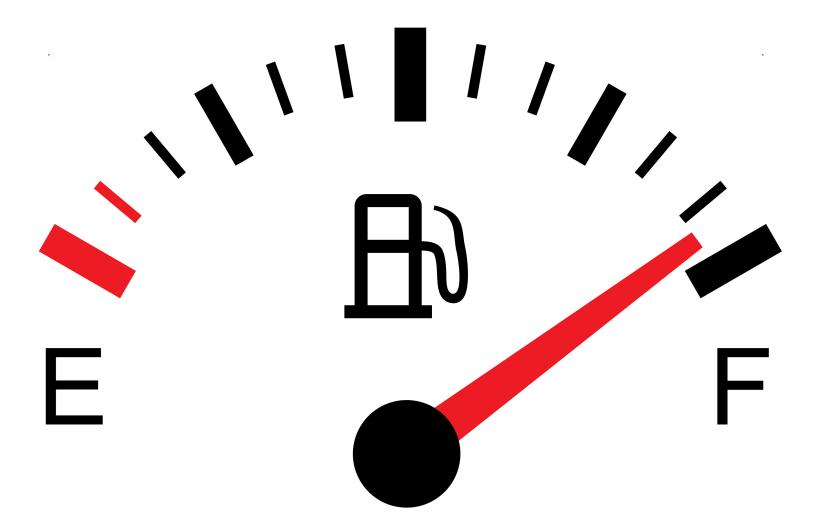

(866) 769.3747


iesel Fuel Systems SIGNATURE SERIES PLUS

TITANIUM

100 GPH or 165 GPH





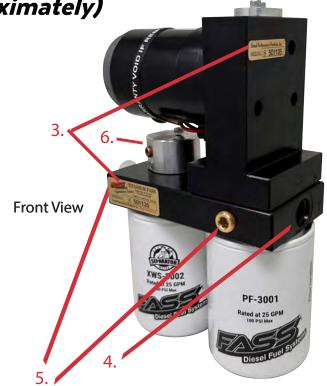

PUMP GUIDE:

- 1. "E" To Engine
- 2. "R" Return to Tank
- 3. Serial Number
- 4. "T" Fuel Inlet
- 5. Electric Heater Ports
- 6. "G" Gauge Port

INSTALLATION GUIDE:

- Step 1. Install Electrical Harness
- Step 2. Prep the FASS
- Step 3. Mount the FASS
- Step 4. Fuel Line Supply
- Step 5. Review Installation



TITANIUM

SIGNATURE SERIES PLUS

100 GPH or 165 GPH


8-10 PSI (Approximately)

Note: Going over 30 PSI WILL void warranty.

NOTE: WARRANTY MAY BEVOID IF SILICONE BAND IS REMOVED FROM MOTOR!!

The silicone band is in place to retain motor wires, preventing damage to the electric motor.







CONTENTS

NOTE: Owner's Manual available for download on our website,

www.FASSride.com







DIELECTRIC GREASE

OR-017



OR-030

NOTE: THESE SPARE BASE O-RINGS ARE INCLUDED WITH THE KIT IN THE EVENT OF A PINCHED O-RING DURING ASSEMBLY







RELAY COVER











FL-1002-BK x17'





MOUNTING **PACKAGE CONTENTS**

(866) 769.3747



TWO (2) PL-1005-BK



TWO (2) PL-2003-BK



TWO (2) **AN-8-ORB-10-BK**



TWO (2) **RING TERMINAL**



RM-1003



46044



46260



DIPF-1003



TWO (2) HC-1004



FOUR (4) LOCKING NUT 3/8""




CABLE TIES



THREE (3) WA-1001D



TWO (2) HC-1001

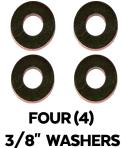



THREE (3) HEX BOLT 1/4"-20x1 3/4""



FOUR (4) Hex Bolt 3/8"-16x11/2"



Hex Bolt 1/2"-20 x 13/4"



1/2"WASHERS



RS-2002



QD-1001



Diesel Fue System STEP 1: INSTALL ELECTRICAL HARNESS


The installation of the electrical harness is done first, allowing power to be applied to the pump for lubrication purposes later in the installation.

NOTE: USE SUPPLIED DIELECTRIC GREASE SPARINGLY ON ALL ELECTRICAL CONNECTIONS! BE SURE TO GREASE RELAY PIGTAIL!










Diesel Fuel Systems STEP 1: **INSTALL ELECTRICAL HARNESS**

The installation of the electrical harness is done first, allowing power to be applied to the pump for lubrication purposes later in the installation.

Install the Relay Cover onto the relay on the FASS harness.



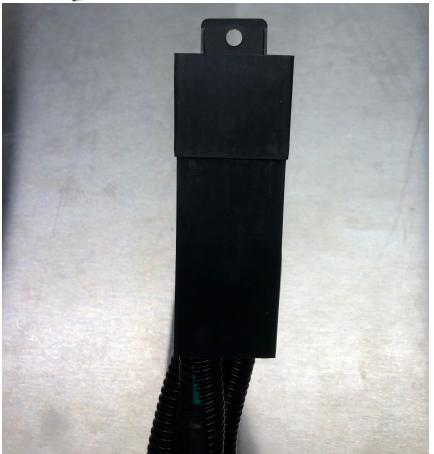



The installation of the electrical harness is done first, allowing power to be applied to the pump for lubrication purposes later in the installation.

NOTE: BE SURE TO INSTALL THE SUPPLIED 10 AMP FUSE INTO THE FASS WIRING HARNESS!!






(866) 769.3747

Diesel Fuel System STEP 1: INSTALL ELECTRICAL HARNESS

The installation of the electrical harness should be completed first. This will allow power to be applied to the pump during installation.


A. Using wire stripping tool, remove excess insulation off the add-a-fuse and the WH-1006-3

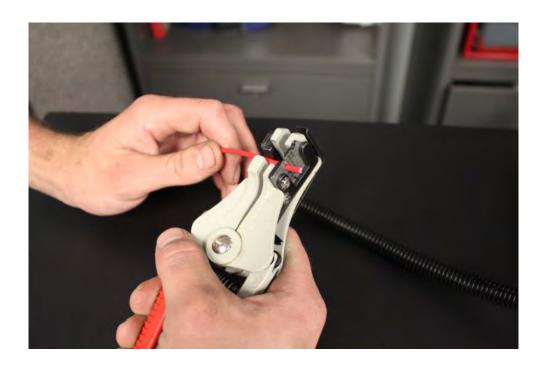





STEP 1: INSTALL ELECTRICAL HARNESS

B. Place wire from 46044 single red bare wire from WH-1006-3 into butt connector. Using crimping tool connect 46044 and WH-1006-3 with butt connector. Install 46260 to 46044 top slot (opening that is near the spade).

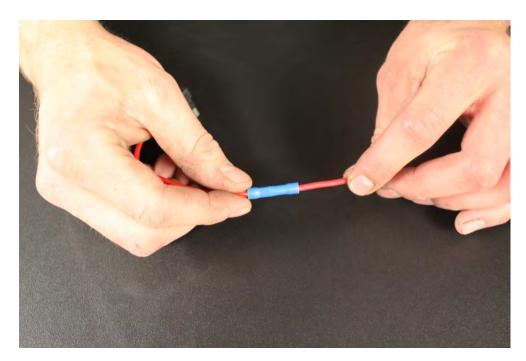


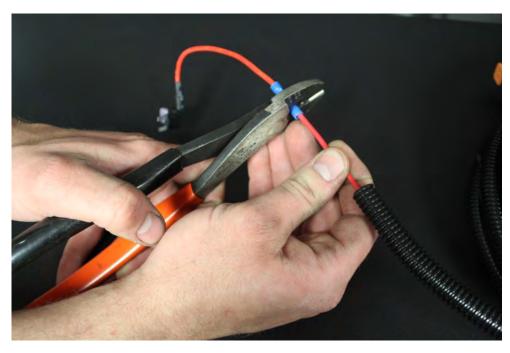




Diesel Fuel System STEP 1: INSTALL ELECTRICAL HARNESS

C. Crimp the ring terminals to the red and green wires of the WH-1006-3Wire Harness. Attach red wire to the positive terminal of the battery and the green terminal to the negative terminal. The use of a corrosion preventative on electrical connections is recommended.

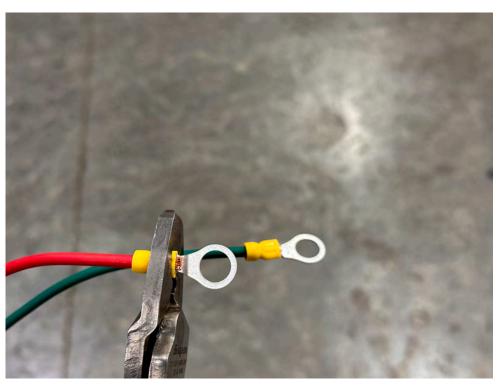









D. Secure relay and fuse in an upright position, as shown, to prevent moisture from entering. Di-electric grease may be applied to prevent corrosion.

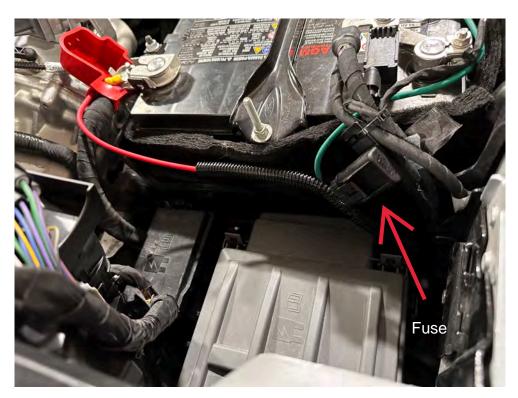





STEP 1: INSTALL ELECTRICAL HARNESS


E. If fuse panel is located in the cab it will be necessary to guide the single red wire from the relay through the fire wall grommet to access the fuse panel.







STEP 1: INSTALL ELECTRICAL HARNESS

F. Locate fuse box under hood and select ignition hot fuse. Remove fuse and put Add-A-Fuse in place. Install fuse previously removed. The use of a corrosion preventative on electrical connections is recommended.

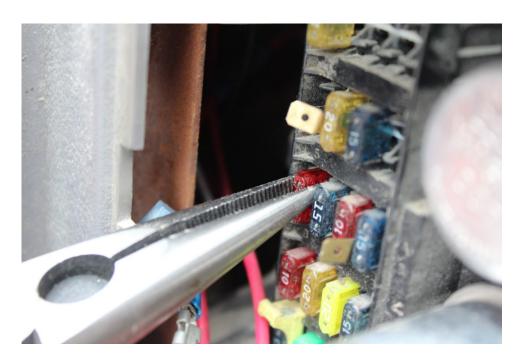

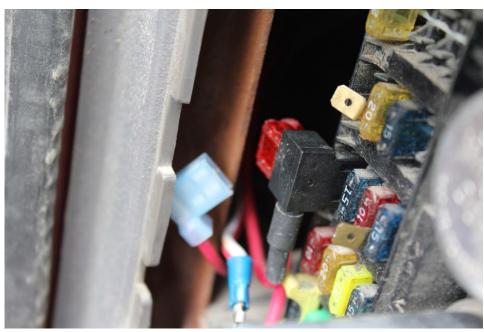





G. Route WH-1006-3 wire harness along frame rail to mounting location of pump. Completion of this step will be addressed in the Mounting Step 3.



Some of the photo's are of a different application, procedures are the same..

A. Prepare FASS return line by cutting rubber junction connecting the two halves of the filler neck. Loosen the factory clamps at the tank. Push the lower half filler neck into the tank enough to insert RM-1003. As seen in the following photo. Helpful Hint: If more space is required to access the top of the fuel tank, loosen the strap nuts to the end of the stud. This will gain you about 3" more working room.





Some of the photo's are of a different application, procedures are the same..


B. Filler neck removed for clarity. Position RM-1003 with the 3/8" junction pipe aiming to outside of bed. Clamp rubber and RM-1003 using both HC-1004's and factory clamps.





Some of the photo's are of a different application, procedures are the same..

C. Using a HC-1001 connect FL-1002-BK Fuel Line to the junction of RM-1003.

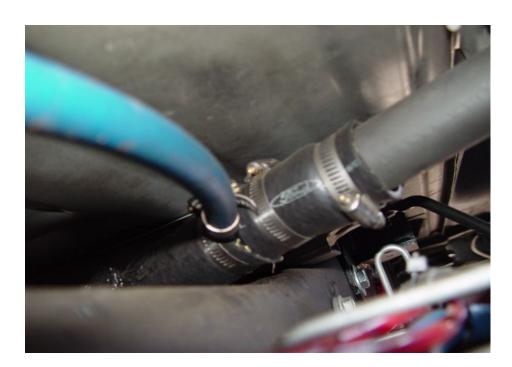




Some of the photo's are of a different application, procedures are the same..

D. Using a hose clamp install fuel line over the knurled flare on the QD-1001. Oil O-rings inside Quick Disconnect.






Diesel Fuel Systems STEP 2: PREPARE SUCTION & RETURN LINES

Some of the photo's are of a different application, procedures are the same..

E. Disconnect factory suction line clip by pressing in on the two tabs located on either side in the connection fitting. Once removed, clean the suction tube and connect the QD-1001 addressed in the previous step. Loop fuel line over frame, will be addressed in step Installing Fuel Line. Plug or seal factory line or remove. Bed has been removed for photo clarity.










NOTE:

ATTENTION: While installing fittings into Titanium pump DO NOT Apply side pressure to draw tube of pump

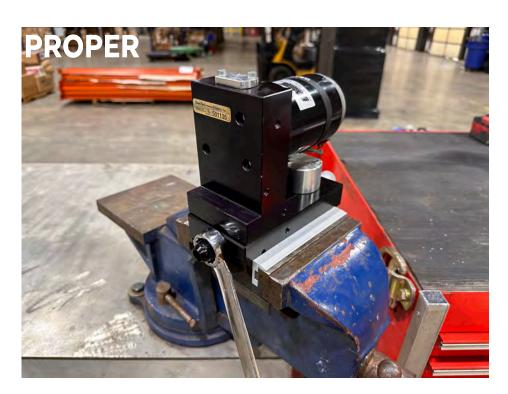

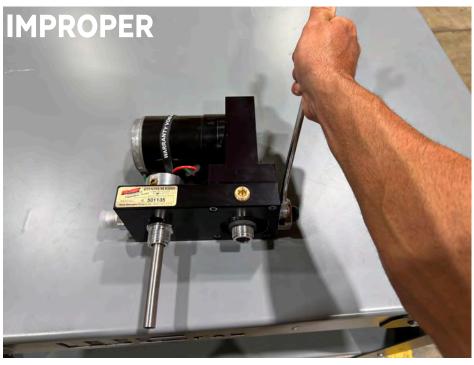






NOTE: Before installing fittings make sure to inspect for burs or flare imperfections. When cutting fuel line make sure to blow out line to keep debris from moving forward..

A. Install AN-8-ORB-10-BK into both the "E" port and "T" port of the FASS, torque to 18 ft./lbs.









B. For fitting purposes. Secure PBR-2001 to pump assembly lightly with (3) 1/4"-20x1 3/4 bolts and (3) WA-1001D. Assembly will be used in future steps for correct fitting of brackets.

(Note: Bracket may-be flipped to accommodate your application.)

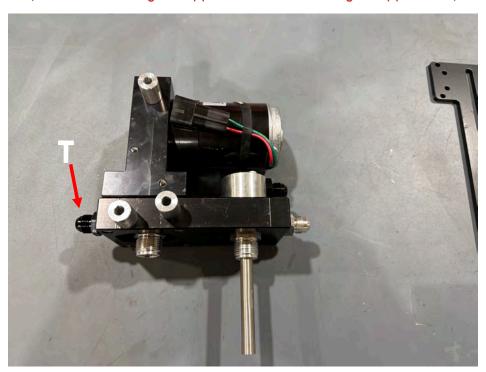

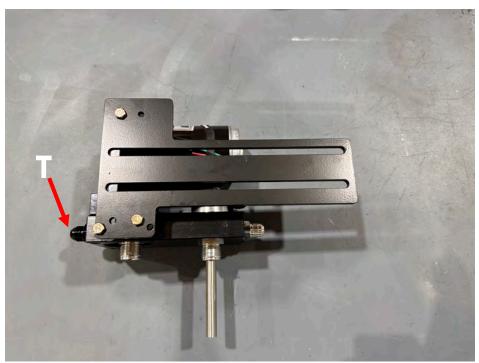



C. Assemble PFB-2002C and RS-2001C RS will make contact with bed channel when assembled correctly. Insert the PFB-2002C assembly in to bed channel align the nut with the opening on the channel.







D. Secure PFB-2002 and RS-2001 with (1) hex bolt $1/2"-20 \times 13/4"$ and (1) 1/2" washer to PFB-2002C.







E. Position the PBR-2001 to the PFB-2002 pump assembly at the mounting location and check for fit.






STEP 3:

MOUNT FUEL SYSTEM

F. Assemble the FASS pump bracket PBR-2001 using the RS-2002 spacer between PFB-2002 and PBR-2001 bracket with 4-3/8 bolts, nuts, and washers. Note: Torque bolts not flange nut.

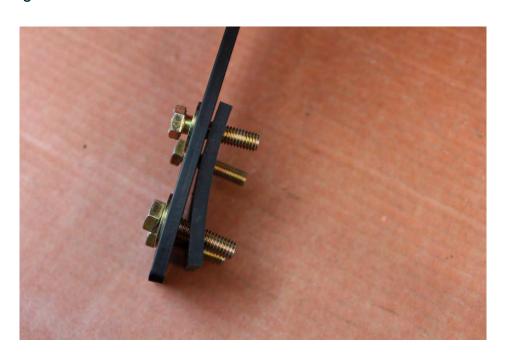






STEP 3:

MOUNT FUEL SYSTEM

G. Once secure use 3-11/2 bolts and 3-WA-1001D spacers to mount the pump to the bracket.

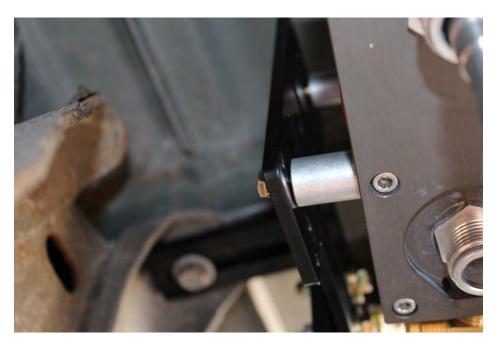






iesel Fuel Systems STEP 3: MOUNT FUEL SYSTEM

H. Connect female plug of the FASS harness into pump. Turn key to "on". With pump operating (you may have to bump the starter), turn pump over, liberally spray WD-40 (or equivalent) into water separator nipple lubricating Gerotor.







NOTE: If fuel pressure gauge is pulsating after FASS installation, use snubber valve (Cat Part # 7S-3795)

I. Apply motor oil to gasket located on filters. Attach to system and hand tighten.



Extreme Water Separator - Install XWS-3002 on side of pump with draw tube in the middle of the filter nipple.








Particulate Filter -Install PF-3001 on filter nipple without the draw tube. Make sure to insert O-Ring provided on nipple.


Note: O-Ring must be put back on suction side of pump. Failure to do so can result in priming issues, cavitation or pressure losses.





A. Route suction line to 'T' port . Cut FL-1002-BK to length. Insert PL-2003-BK in line using oil. Attach to AN-8-ORB-10-BK. Torque to 18 ft./lbs. NOTE: Hose clamps are not recommended for push lock fittings and can damage the strength of hose. They will hold up to 300psi! Use oil on fittings and inside fuel line when installing Push-Lok fittings 18 ft./lbs.






STEP 4: INSTALL FUEL LINE

iesel Fuel Systems


B. Route fuel line from the 'R' fitting of the suction tube assembly to the 'R' port on the FASS system with a gentle bend. Cut and insert the PL-1005-BK into the hose. Use oil. Attach fitting to the 'R' port. Torque to 18 ft/lbs.

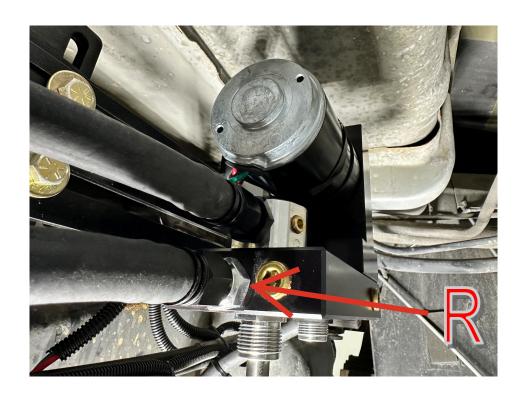




STEP 4: INSTALL FUEL LINE

C. Insert PL-1005-BK into the remaining fuel line. Connect to the 'E" port of the FASS system. Use oil. Torque to 18 ft./lbs. Route this line up to the injection pump.

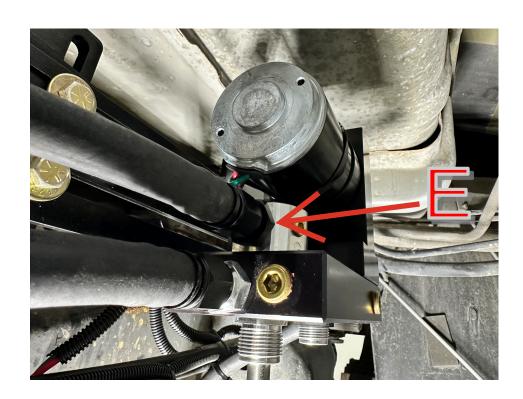





D. Remove the tension spring. Remove inlet fuel line to VE Pump. Remove the adapter nut below that. If you want to remove this line from the system, remove outlet feed on the factory filter housing, feed the line forward and twist as you pull it through. Make sure to plug the open port on the filter housing.








STEP 4: INSTALL FUEL LINE

E. Install DIPF-1003 Diesel Injection Pump Fitting. Torque to 18 ft/lbs. Measure fuel line to the inlet port. Install PL-2003-BK 90° Push-Lok into fuel line using oil. Attach PL-2003-BK to the DIPF-1003. Torque to 18 ft/lbs. Re-install tension spring. Note: Secure all fuel lines with cable ties. Cable ties are an economical way to prevent the possibility of problems occurring!

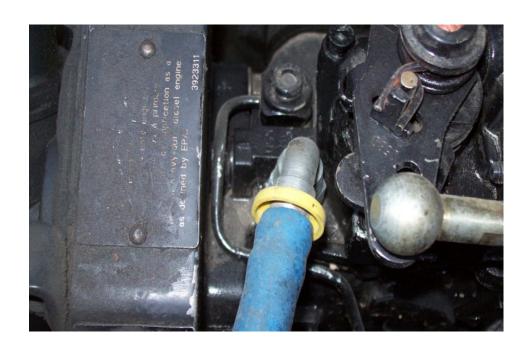





STEP 4: INSTALL FUEL LINE

OPTIONAL REMOVING FACTORY LIFT PUMP

Remove inlet fuel line from the factory filter housing. Pinch in tabs and pull off factory fitting on the inlet side. Unbolt and remove the factory lift pump. Use a Big Block Chevy block off plate to seal engine block. Drain filter, blow out fuel lines and cover or plug any open ends.


Note: Secure all fuel lines with cable ties. Cable ties are an economical way to prevent the



The factory suction line can be capped off or removed from the truck. Make sure to drain factory filter. The openings on the filter and tank will need to be capped off to keep debris from getting into lines or canister.

(866) 769.3747

esel Fuel Systems STEP 5: REVIEW INSTALLATION

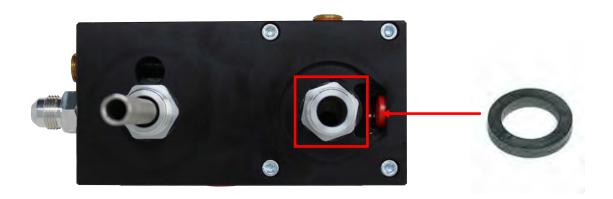

Note: O-Ring must be put back on suction side of pump. Failure to do so can result in priming issues, cavitation, or pressure loses.

- 1. Blow out any open lines/cover any open ports
- 2. Bolts and fasteners properly tightened?
- 3. Electrical harness and fuel lines secured and properly tightened? Reconnect the battery.
- 4. Has the system been primed?
 - a. Turn key to the ignition position, turning on the FASS pump for 15 sec..
 - b. Crank engine and allow to run for at least 1 minute.
- 5. Check for leaks.
- 6. Start the engine
- 7. Recheck all fluid and filter connections for leaks
- 8. This pump comes with a 1 Year Manufacturer's Warranty based on the date it has been manufactured. To receive your extended Lifetime Warranty, you have 30 days from date of purchase to send the completed warranty information





LIMITATION OF LIFETIME WARRANTY

Disclaimer: To help insure you receive the proper system and customer support at the local level, FASS has a VIP and Authorized Dealer network representing FASS products. This is one reason you must purchase through a dealer to comply with our warranty policies. If you do not, there is no warranty! We recommend you go to www.FASSride.com, click "Find a Dealer", put in their ZIP code, select the type of dealer, and see if the company you purchased from is listed. If they are not, put their phone number in the field below the ZIP code field to see if they are listed. Below these two fields is a list of "Terminated/Unauthorized" dealers. You may want to review this list. If the company is not listed or is on the "Terminated/Unauthorized" list, we suggest you return the product immediately to that dealer and call FASS. We'll recommend you to the nearest dealer.

Diesel Performance Products, Inc. (hereafter "SELLER") gives Limited Warranty as to description, quality, merchantability, fitness for any product's purpose, productiveness, or any other matter of SELLER'S product sold herewith. The SELLER shall be in no way responsible for the product's open use and service and the BUYER hereby waives all rights other than those expressly written herein. This Warranty shall not be extended or varied except by a written instrument signed by SELLER and BUYER.

When MANUFACTURER receives the "ORIGINAL" PRODUCT REGISTRATION form with a copy of the "BILL OF SALE/SALES RECEIPT" within 30 days of the sale, then the following applies! The Warranty will then and only then be validated to that of which typically accompanies your unit for your specific application from the date of sale or for recommended service life and limited solely to the original purchaser and/or vehicle and parts contained within the product's kit. This warranty does not cover normal wear on consumable items such as but not limited to filters, fuel line, wire harness & etc. The warranty does not cover seized gears due to lack of filtration. Warranty is voided if used with other than diesel fuel. Returned items will arrive prepaid to the place of purchase. Diesel Performance Products, Inc. will repair, without cost, any product found to be defective during the warranty period; parts only, or at its option, will replace such products in exchange for the product. Repair or replacements are warranted for the remainder of the original warranty period. All Warranty claims are subject to approval by Diesel Performance Products, Inc.

A Return Material Authorization (RMA) number must be obtained before any product is to be returned to Diesel Performance Products, Inc. for warranty consideration, repair or product return. Requests for product returns must be offset by an equal value order. Return parts must be completed and in resalable condition. No returns after 30 days.

Your Name, Address, and Phone Number's Model and Serial Number (Not Motor Number) Example: Model HD Series, Serial: 00125966 VIN Number of Vehicle Date of Purchase Nature of Problem

RMA and Product Serial Number must be on all paperwork and correspondence. Failure to obtain the required information or paperwork will result in \$25.00/item penalty and delay or denial of any warranty claim.

Under no circumstances shall the SELLER and/or MANUFACTURER be liable for any labor charged or travel time incurred in diagnosis for defects, removal, or reinstallation of this product, or any other contingent expenses.

Under no circumstances shall the SELLER and/or MANUFACTURER be liable for any damage or expenses insured by reason of the use or sale of any such equipment. This warranty does not apply to products which Diesel Performance Products, Inc. has determined to have been misused or abused, improperly maintained by the user, or where the malfunction or defect can be attributed to the use of non-genuine Diesel Performance Products, Inc. parts.

IN THE EVENT THAT THE BUYER DOES NOT AGREE WITH THIS AGREEMENT: THE BUYER MAY PROMPLY RETURN THIS PRODUCT, IN A NEW AND UNUSED CONDITION, WITH A DATED PROOF OF PURCHASE, TO THE PLACE OF PURCHASE WITHIN THIRTY (30) DAYS FROM DATE OF PURCHASE FOR A FULL REFUND LESS SHIPPING.

THE INSTALLATION OF THIS PRODUCT INDICATES THAT THE BUYER HAS READ AND UNDERSTANDS THIS AGREEMENT AND ACCEPTS ITS TERMS AND CONDITIONS.