

## PART#: 75-5116 / 75-5116D

### Vehicle Application

YEAR: 2017-2018

MAKE: Chevrolet / GMC

MODEL: Silverado / Sierra 1500

ENGINE: 5.3L & 6.2L

\*Note: Will Not Fit Hybrid Engine Models

**Note:** This intake kit may not fit with the following Aftermarket Parts installed:

- Body Lift or Lowering Kit
- Custom Hood
- Throttle Body Spacer / Upgrade

### Tools Required

- 8mm, 10mm, 13mm Wrench/Socket
- Pin Removal Tool or Flat Blade Screwdriver
- 7/16" Wrench and Socket
- 5/16" Nut Driver or Flat Blade Screwdriver
- Phillips Screwdriver
- 1 Set of Torx Wrenches & Allen Wrenches
- 1 Pair of Pliers or similar tool

**Note:** Approximate Install Time: 1 Hr 30 Mins.

### S&B Filter Maintenance

KF-1060 Cotton Cleanable : If the enclosed filter is RED, it came pre-oiled from the factory. Click [here](#) for exact oil amount required for cleaning.

KF-1060D Dry Extendable : If the enclosed filters is WHITE, it is a disposable filter and should be discarded once it reaches capacity. This filter does not require oil.

### Before You Start

- Please read the entire product guide before proceeding.
- Ensure all parts are present.
- If you are missing any of the components, call our customer support at (909) 947-0015.
- Do not work on your vehicle while the engine is hot.
- Make sure the engine is turned off and the vehicle is in Park or the Parking Brake is set.

### Related Products

- Cotton Cleanable Filter (KF-1060)
- Dry Extendable Filter (KF-1060D)
- Cleaning & Oiling Kit (88-0008)
- Filter Wrap (WF-1035)

### Air Box Plug Testing

Stock air boxes are a significant contributor to poor airflow which is why S&B designs custom air boxes with secondary and/or enlarged openings. With that said, S&B recognizes the benefits of cooler air. For optimal performance, we recommend that the intake be used without the end cap except in conditions of extreme heat.

### Performance Testing

- After your installation is complete engage parking brake and start your engine. Listen for abnormal noises. If an air leak is detected, re-inspect hoses and connections as they may need to be repositioned and tightened
- S&B FILTERS recommends that you keep your OE intake system in the event it is required in the future.
- In order to maintain your warranty, all connections and components must be checked periodically for alignment and

### Warning!

If your vehicle has a Vehicle Emission Control Information decal affixed to the factory airbox, a new replacement label must be obtained and installed in a readily visible position in the engine compartment in order to remain CARB compliant. Failure to do so will prevent the vehicle from passing a smog check. Replacement labels can be ordered from your local dealership. Regulations state that the VECI label shall not be affixed to any equipment which is ~~is~~ **Xasit**. Hi. Need any help? vehicle. Label placement, under the hood on a painted surface, is recommended.



for proper tension on all connections.

Failure to do so may void your warranty.

- Use only S&B FILTERS cleaning and oil products to service your filter. Using any other brand oil and or cleaners on your S&B air filter may void your warranty.


## **Emission Standard**

The California Air Resource Board (CARB) requires that an E.O. identification label be applied to the vehicle in order to pass a smog check inspection when a Performance Intake Kit has been installed. You must place the E.O. label provided on or near the intake kit after installation so that a smog check technician can easily verify the E.O. number. Check the status of the exemption process by looking up a specific part number at [www.sbfilters.com](http://www.sbfilters.com). The CARB Exemption number and/or status is listed under the Product Details section for each part number. If the status shows as "Pending," CARB has yet to issue an exemption. Products that have not been issued an EO number are street legal in most states, but may not be used on emission controlled vehicles in the state of California and are for off-road use only. If you purchased your kit from S&B Filters directly, we will automatically mail you your Exemption Sticker when it is issued to us. If you purchased your kit from an authorized S&B Filters Dealer, log onto our web site and register to receive your Exemption Sticker.

Hi. Need any help?



# EXPLODED VIEW

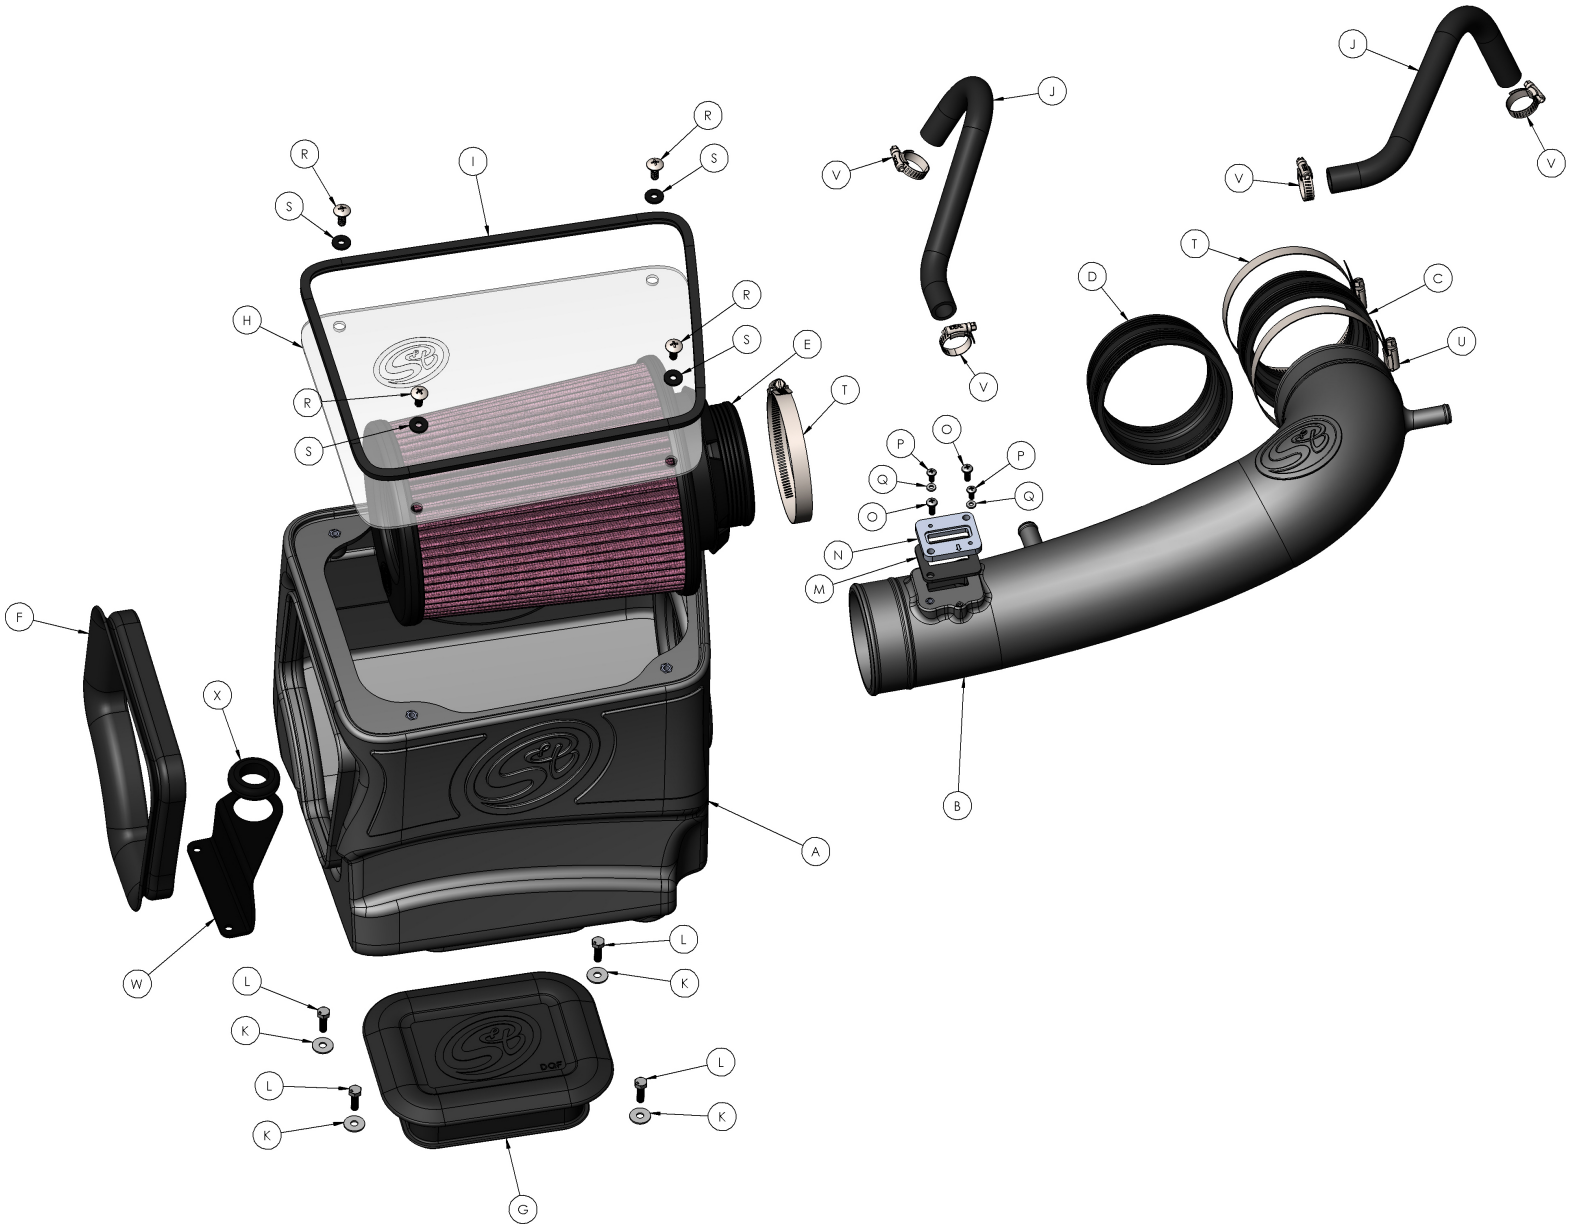

Hi. Need any help?



## PARTS LIST

ITEM	QTY.	DESCRIPTION	P/N	ITEM	QTY.	DESCRIPTION	P/N
A	1	Air Box	AL1224B-00	O	2	Screw 10-32 x 1/2"	AI1640-00
B	1	Intake Tube	AL1224-00	P	2	Screw 8-32 x 3/8"	AI1639-00
C	1	Coupler (For 5.3L)	AI1665C-00	Q	2	Rubber Washer #8	AI1200-00
D	1	Coupler (For 6.2L)	AI1542C-01	R	4	Screw 1/4-20 x 5/8"	AI1569-00
E	1	S&B Filter	KF-1060	S	4	Rubber Washer 1/4"	AI1571-00
F	1	Fender Seal	AI1550-00	T	2	Hose Clamp #64	AG1018-00
G	1	Box Plug	AI1559-00	U	1	Hose Clamp #72	AG1009-00
H	1	Lid	AI1664-00	V	4	Hose Clamp #10	AG1035-00
I	1	Lid Seal	AI1636-05	W	1	Filter Support Bracket	AI2110-00
J	2	Hoses	AI1039-09	X	1	Grommet	AI1368-00
K	4	M6 Washer	AI1535-00				
L	4	M6 Bolt	AI1545-00				
M	1	MAF Gasket	AI1637-00				
N	1	MAF Plate	AI1209-00				

Hi. Need any help?



## INSTALLATION STEPS

### STEP 1


With the ignition switched off and the parking brake set, disconnect the negative battery cable on the passenger's side.

**IMPORTANT:** Failure to disconnect the battery for a minimum of 2 hours may cause the Check Engine Light to illuminate upon completion of the installation or subsequent operation. **DO NOT SKIP THIS STEP!**




### STEP 2

The sensor must be removed from the factory intake cover using a Torx bit.

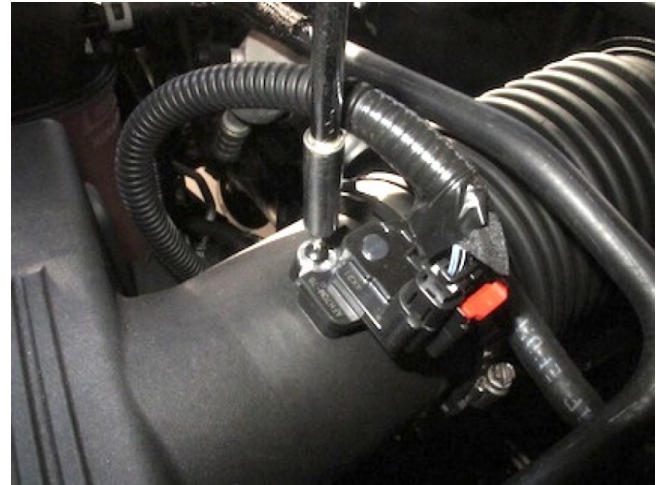

### STEP 3

Once the sensor is removed, disconnect the sensor from the harness by pulling the Red tab out and pressing down on the release button while pulling out. Place the sensor in a safe location for later install.

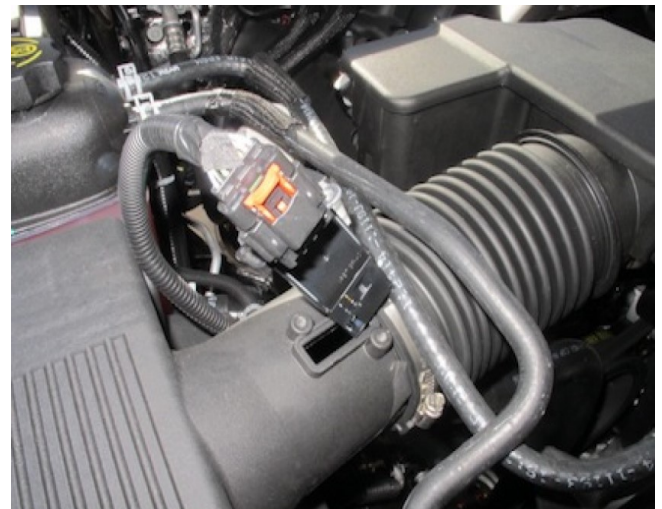

Hi. Need any help?





#### STEP 4

Use a nut driver to loosen the hose clamp on the factory airbox cover.



#### STEP 5

Once the hose clamp is loose, pull tube to the right to remove from factory airbox cover.



#### STEP 6A

Remove the factory hose from the OE resonator box by first pressing in the grey button up on the bottom.



#### STEP 6B

Continue from Step 6.



Hi. Need any help?



## STEP 6B (IMAGES 2)



## STEP 7

Loosen the hose clamp at the throttle body.



## STEP 8

Remove the resonator box off the throttle body and out of the vehicle.



## STEP 9

Remove both crankcase hoses from each valve cover by pressing in the grey button then lift up.



Hi. Need any help?





### STEP 10

Remove the top bolt from the front cross bar using a 10mm socket.




### STEP 10

Remove the 4 plastic push pins on the far left side of the front liner to gain access to the front crossbar. To remove the push pins use a flat blade screw driver to pop out the top head and pull out.



### STEP 12

Lift up on the liner and remove the lower bolt using a 10mm socket from the front crossbar. Remove from the vehicle, this part will be reinstalled later.

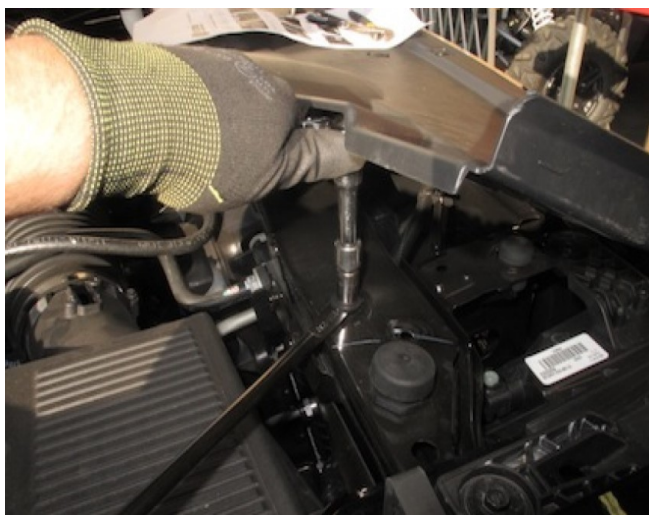

### STEP 13

Disconnect the clip securing the MAF harness to the airbox. Then remove the bottom portion of the factory airbox by pulling up and out.



Hi. Need any help?





### STEP 14

Remove all four bolts from the factory mounting plate then remove the factory mounting plate from the vehicle.



### STEP 14 (IMAGE 2)



### STEP 15

Install the Side Fender Seal (F) onto the airbox (A) and press on firmly.



### STEP 16

Determine if you want to install the Box Plug (G) onto the airbox (A) or leave it open. See the "Airbox Plug" note on Page 5 for more information. If the Box Plug is desired, simply press the Box Plug into the box opening until it snaps into place.




Hi. Need any help?



### STEP 17

Insert the Grommet (X) onto the Filter Support Bracket (W) and place inside the airbox (A).

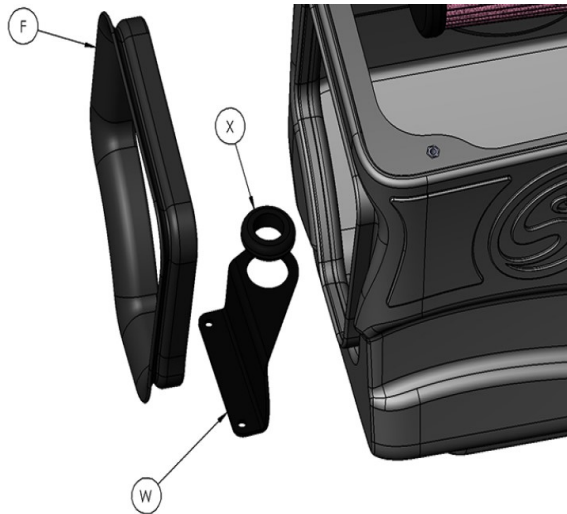

### STEP 18 (IMAGE 2)




### STEP 18

**Note:** If you have vehicles equipped with HID headlights proceed to Step 19, otherwise continue with Step 18. Install the Airbox (A) and remember to properly align the fender seal to the side fender opening. Secure the airbox and Filter Support Bracket (W) with the M6 Bolts (L) and Washers (K). Make sure all fasteners are tightened. Go to Step 22.



### STEP 19

If you have vehicles equipped with HID headlights there is an extra step that will be needed to install the Airbox (A) due to the headlights protrudes out the back more so than the regular headlights. Use a 10mm to remove the two fasteners securing the coolant reservoir in the front and behind the battery. Set the fasteners aside they will be reused in Step 20. Set the coolant reservoir on top of the engine.

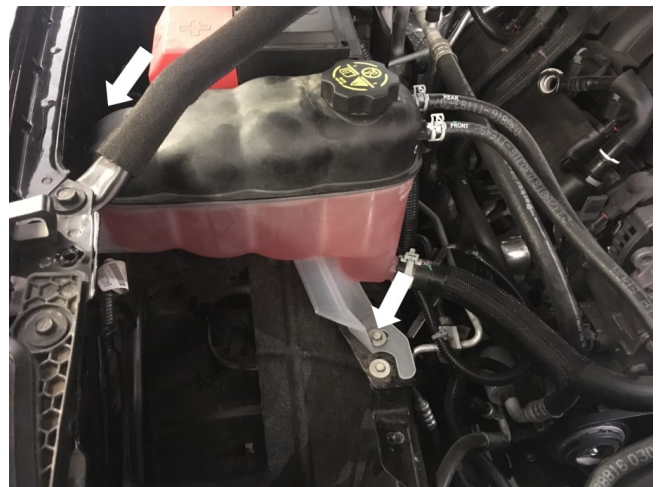

Hi. Need any help?





### STEP 19 (IMAGE 2)



### STEP 21

Before securing the Airbox (A) you will have to reinstall the coolant reservoir. Lift one side of the airbox slightly and slide the coolant reservoir into position. Reinstall the fasteners removed in Step 18 with a 10mm. Then secure the airbox and Filter Support Bracket (W) with the M6 Bolts (L) and Washers (K). Make sure all fasteners are tightened.




### STEP 20

Install the Airbox (A) and remember to properly align the fender seal to the side fender opening.



### STEP 21 (IMAGE 2)

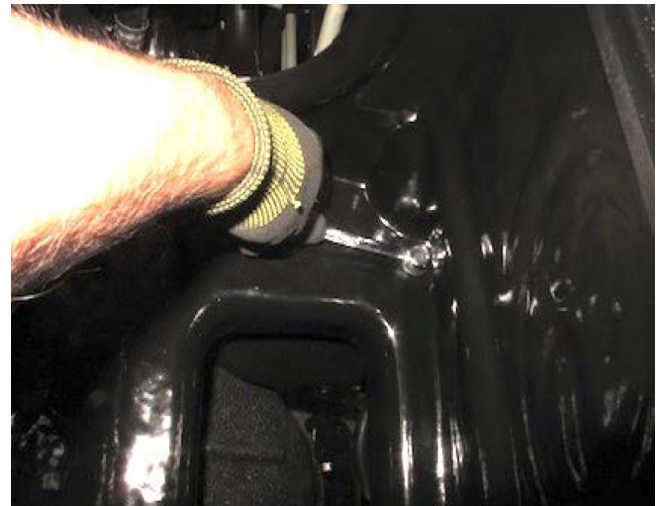


Hi. Need any help?



### STEP 22

Install the Air Filter (E) by pressing the filter tabs through the side of the Airbox (A). The filter should lock into place when the tabs are secured.

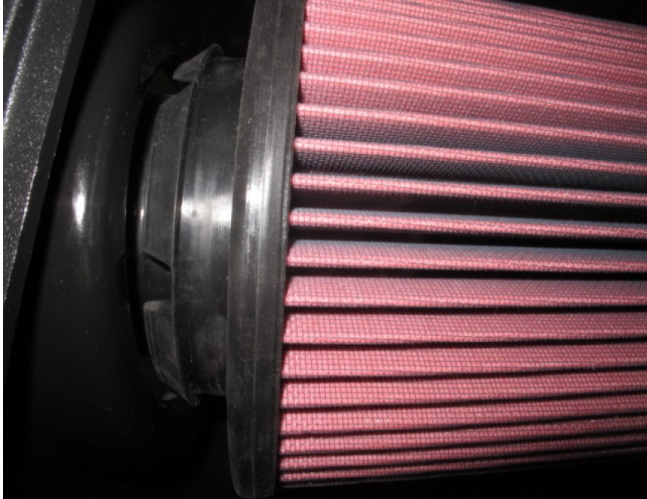


### STEP 23

Install the larger side of the Coupler (C or D) onto the Air Tube (B) with the #72 and #64 Hose Clamps (U & T). Tighten the #72 Hose Clamp at the intake tube. The coupler used is dependent on the vehicle engine liter you have **NOTE:** (5.3L use AI1665C-00, 6.2L use AI1542C-00)



### STEP 24

Use the provided Hardware (O) to install the MAF Plate (N) and Gasket (M) onto the Air Tube (B). The arrow on the plate should line up with the arrow on the tube.

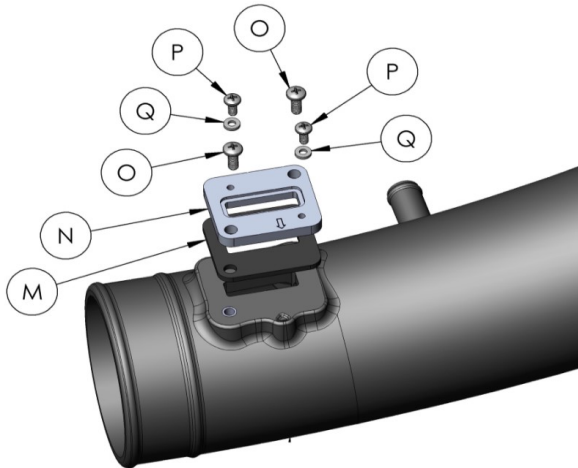

### STEP 25

Use the provided Hardware (P & Q) to install the MAF sensor onto the MAF Plate.



Hi. Need any help?





### STEP 26

Install the #64 Hose Clamp (T) loosely over the Air Filter (E) push the Intake Tube (B) into the filter then slide the intake tube and coupler onto the throttle body. Once positioned properly tighten all hose clamps.



### STEP 26 (IMAGE 2)



### STEP 27

Connect the MAF harness to the MAF sensor. Make sure the red locking latch is secure.



### STEP 28

Use the provided Hose Clamps (V) and Crankcase Hoses (J) to install onto the valve cover's intake tube. Once the hoses are secure to the Intake Tube, install onto the vehicle and tighten down with the provided Hose Clamps (V).



Hi. Need any help?



### STEP 28 (IMAGE 2)



### STEP 29

Remove the protective covering on the Clear Lid (H) and install the Lid Bumper (I).



### STEP 30

Install the Clear Lid (H) using the provided Hardware (R & S).



### STEP 31

Reinstall the front crossbar and push pins on the plastic liner.



Hi. Need any help?



## STEP 32

Reconnect the negative terminal on both batteries. Inspect your installation, make sure the kit is properly positioned and all fasteners are secure. Affix the ID label near the intake kit. The installation is now complete.



Hi. Need any help?

