



SHOP CATEGORIES

WHY S&B

SHOP BY VEHICLE



0

INSTALL INSTRUCTIONS FOR 75-5131-1



PRINT


BEFORE YOU START

Please read the entire product guide before proceeding. 8mm, 10mm, 11mm, 14mm Wrench or Socket, 5/16" Nut
 Ensure all components are present. If you are missing any Driver or Flat Blade Screwdriver, 1/4" Square Drive
 of the components, call our customer support at (909) 947-0015. Do not work on your vehicle while the engine
 is hot. Make sure the engine is turned off and the vehicle is in Park or the Parking Brake is set.

Note: Approximate Install Time: 1 Hr 00 Mins.

Note: This intake kit may not fit with the following
 Aftermarket Parts installed: Body Lift, Custom Hood,
 Turbo Upgrade, Intercooler Upgrades.

Cookie Preferences

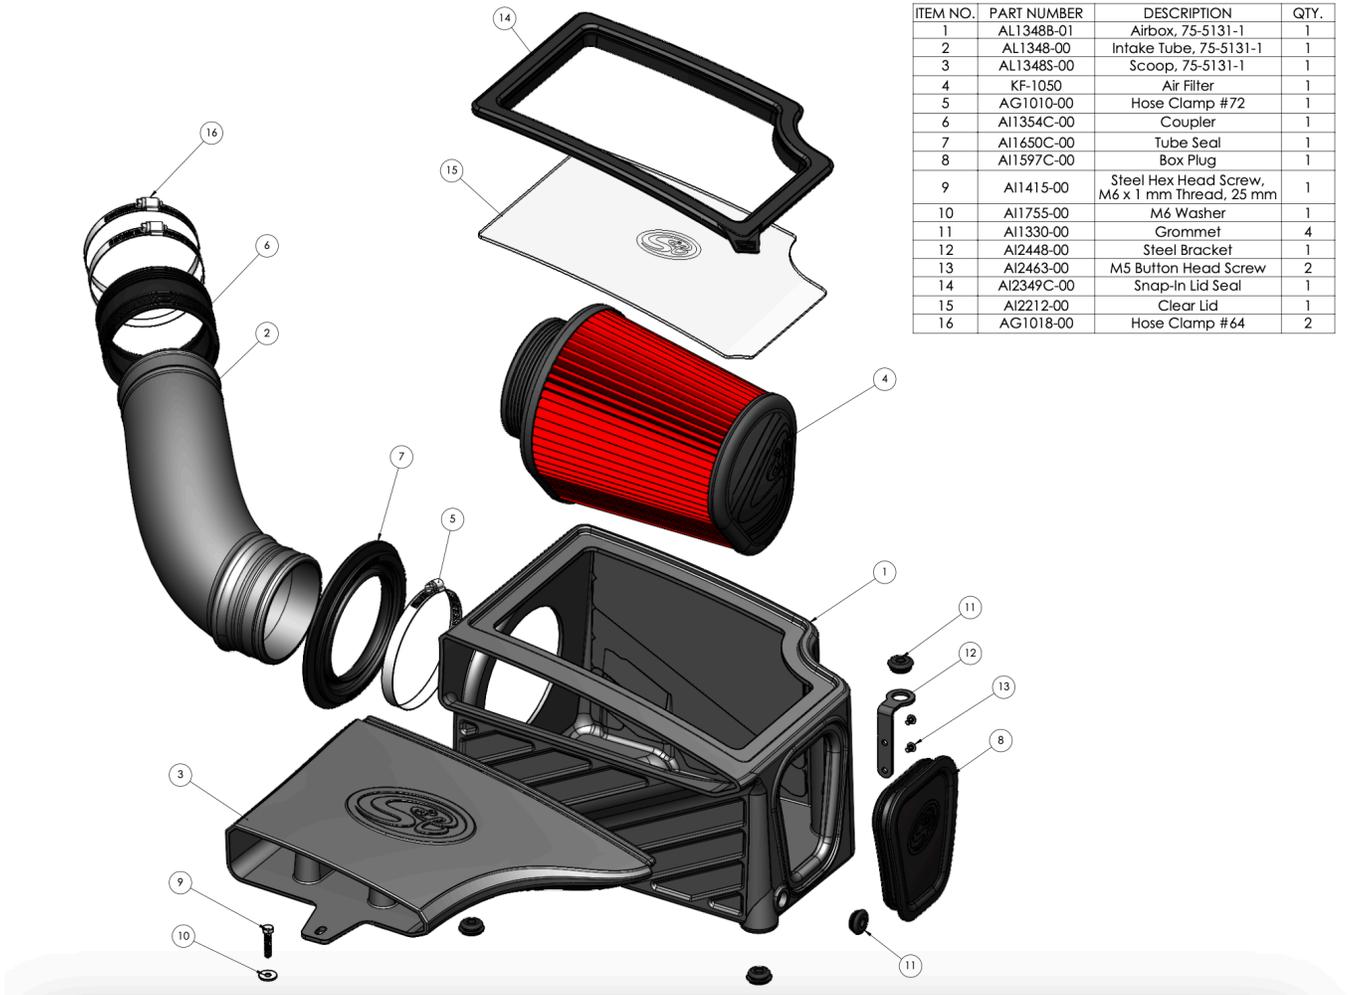

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	AL1348B-01	Airbox, 75-5131-1	1
2	AL1348-00	Intake Tube, 75-5131-1	1
3	AL1348S-00	Scoop, 75-5131-1	1
4	KF-1050	Air Filter	1
5	AG1010-00	Hose Clamp #72	1
6	AI1354C-00	Coupler	1
7	AI1650C-00	Tube Seal	1
8	AI1597C-00	Box Plug	1
9	AI1415-00	Steel Hex Head Screw, M6 x 1 mm Thread, 25 mm	1
10	AI1755-00	M6 Washer	1
11	AI1330-00	Grommet	4
12	AI2448-00	Steel Bracket	1
13	AI2463-00	M5 Button Head Screw	2
14	AI2349C-00	Snap-In Lid Seal	1
15	AI2212-00	Clear Lid	1
16	AG1018-00	Hose Clamp #64	2

STEP 1

Remove the bolt and washer from the stock intake scoop. Then remove the scoop from the vehicle.

Tool Needed: 8mm Wrench or Socket.



Cookie Preferences

STEP 2

With the ignition switched off and the parking brake set, disconnect the negative battery cable on the drivers side.

Note: Failure to disconnect the battery may cause the CEL to illuminate upon completion of the installation and subsequent operation. Do not skip this step!

Tool Needed: 14mm Wrench or Socket.



STEP 3

Loosen the hose clamp at the baffle.

Tool Needed: 5/16" Nut Driver or 8mm Wrench or Socket.



[Cookie Preferences](#)

STEP 4

Remove the 2 fasteners on the stock airbox lid.

Tool Needed: Flat head screwdriver or ¼” square drive depending upon OEM equipment.

STEP 5

Remove the stock airbox lid and tube, then remove the stock air filter.

STEP 6

[Cookie Preferences](#) ? stock airbox mounting nut and washer.

Tool Needed: 11mm Wrench or Socket.

STEP 7

Disconnect the electrical harness at the IAT sensor on the side of the stock airbox.

STEP 8

Pull up to remove the stock airbox.

Make sure to remove the grommets from the vehicle as well.

[Cookie Preferences](#)

STEP 9

Remove the IAT sensor from the side of the stock airbox, the sensor uses a quarter turn locking pattern.

STEP 10

Determine which type of IAT sensor you have.

STEP 11 A

If your stock sensor looks like **Type 'A'**, you will need to install the Grommet (M) into the side of the S&B Airbox

Cookie Preferences

STEP 11 B

If your stock sensor looks like **Type 'B'**, leave the hole empty and proceed to step 12B.

STEP 12 A

Install the IAT sensor into the side of the S&B Airbox (A), if the sensor is **Type 'A'**, push it through the Grommet (M).

STEP 12 B

If the sensor is **Type 'B'**, unscrew the sensor's ¼ turn adapter nut, place the sensor in the hole in the Airbox (A) and secure using the ¼ turn adapter nut.

STEP 13 A

Determine if you want to install the Box Plug (F) onto the Airbox (A) or leave it open. See the "Air Box Plug" note on Page 2 for more information. If the Box Plug (F) is desired, simply press the Box Plug (F) into the box opening until it snaps into place.

STEP 13 B

STEP 14

Install the other two Grommets (N) onto the S&B Airbox (A).

STEP 15

Install the Tube Seal (B) onto the Airbox (A).

STEP 15A

Install the grommet to the airbox mounting bracket then install the bracket to the airbox.

STEP 16

Slide the Coupler (E) and loose Hose Clamps (J) onto the Intake Tube (D) until the end of the Coupler (E) meets up with the end of the Intake Tube (D).

STEP 17

Push the Intake Tube (D) through the Tube Seal (B) until the stop bead meets up with the Tube Seal (B).

[Cookie Preferences](#)

STEP 18

Install the Air Filter (C)
loosely onto the Intake Tube
(D).

STEP 19

Slide the assembly in the
engine bay, reconnect the

electrical harness at the IAT sensor.

STEP 20

Reconnect the negative battery cable.

Tool Needed: 14mm Wrench or Socket

STEP 21

Align the Airbox Grommets with the engine bay prongs and push down on the assembly until the engine bay prongs are fully seated in the two Grommets (M).

[Cookie Preferences](#)

STEP 22

Slide the Coupler (E) onto the baffle and tighten both Hose Clamps (J).

Tool Needed: 5/16" Nut Driver or 8mm Wrench or Socket.

STEP 23

Tighten the hose clamp on the air filter (I).

Tool Needed: 5/16" Nut Driver or 8mm Wrench or Socket.

STEP 24

Cookie Preferences

Secure the scoop to the vehicle using the M6 Bolt (K) and M6 Washer (L).

Tool Needed: 10mm Wrench or Socket

STEP 25

Remove the protective covering from the Clear Lid (H).

STEP 26

Install the Clear Lid (H) into the Snap-In Lid Seal (G).

STEP 27

Press the lid assembly into the box opening until it snaps into place. Inspect your installation, make sure the kit is properly positioned and all fasteners are secured. Keep all stock parts in case you would ever need to reinstall the stock intake assembly. Affix the ID label near the intake kit.

The installation is now complete.

Cookie Preferences