




INSTALLATION INSTRUCTIONS

MAKE: Toyota
MODEL: Land Cruiser
YEAR: 2024-2026
ENGINE: L4-2.4L (t)

Cat-Back Exhaust
49-36076-B (Black Tip)
49-36076-P (Polished Tip)

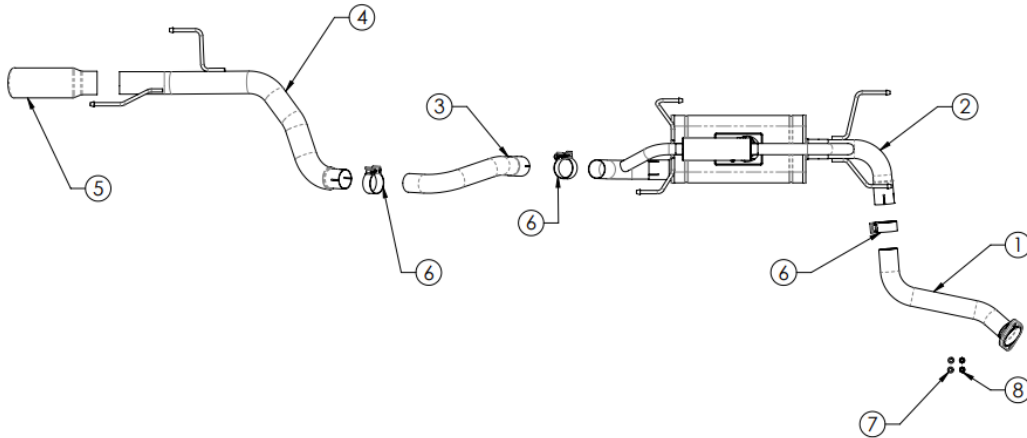

Item	Description	Part Number	Quantity
1	Front Pipe	05-245541	1
2	Muffler Assembly	05-245545	1
3	Over-Axle	05-245542	1
4	Tailpipe, 3" in, 4" out x 12"	05-245544	1
5	EXH Tip 3 In x 4 Out x 12L DBL, ANG, Bolt-On Blk	49T30404-B121	1
	EXH Tip 3 In x 4 Out x 12 L DBL, ANG, Bolt-On Pol	49T30404-P121	1
6	2-1/2" Band Clamp	05-41061	3
7	Washer, Flat M10: 20mm OD/ 10.5mm ID	03-50470	2
8	Nut, M10 x 1.25	03-50400	2

aFe POWER recommends professional installation on this product. Thoroughly inspect the aFe POWER exhaust system to make sure there is no damage from shipping (if damage is noted, immediately contact aFe POWER customer service). Allow time for your vehicle to cool down prior to installation. When working on your vehicle proceed with caution. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation.

Install band clamps to proper torque specifications of 40-45 ft-lb.

Install V-band clamps with anti-seize lubricant and hand tighten only to torque specifications of 10-15 ft-lb.



1



INSTALLATION INSTRUCTIONS

MAKE: Toyota
MODEL: Land Cruiser
YEAR: 2024-2026
ENGINE: L4-2.4L (t)

Cat-Back Exhaust
49-36076-B (Black Tip)
49-36076-P (Polished Tip)

1. **(Read instructions prior to installation.)** It is recommended to not fully tighten the exhaust until it has been fully installed. Leave loose for adjustability.
2. Secure vehicle on jacks/stands (refer to your manual for specified jack stand positions).
3. For faster installation, spread out the parts of the exhaust alongside your vehicle as shown in the diagram above.
4. Secure the factory exhaust with jacks/stands.
5. Remove the factory exhaust system. Retain hardware, it will be re-used.
6. Install the front pipe using the factory hardware. Support the front pipe to prevent excess stress on the turbo exhaust downpipe flex joint.
7. Install a 2-1/2" (in.) clamp onto the front of the muffler assembly and install it over the front pipe.
8. Hang the muffler assembly on the factory isolators.
9. Install the aFe POWER over-axle onto the aFe POWER muffler assembly with the supplied 2-1/2" (in.) clamp.
10. Install the aFe POWER over-axle into the factory isolator.
11. Install the aFe POWER tailpipe onto the aFe POWER over-axle with the supplied 2-1/2" clamp.
12. Install the tailpipe into the factory isolator.
13. Ensure that all the components of the aFe POWER exhaust system are aligned and are at a safe clearance from all wires, hoses, brake lines, body parts, and tires.
14. Start from the front of the aFe POWER exhaust system and evenly tighten all clamps and fasteners.
15. Start the vehicle and check for any leaks. If any leaks are found, determine cause and repair as necessary.
16. Remove vehicle from jacks/stands.
17. It is recommended to re-tighten all clamps and hardware after 50-100 miles.